


Valley Chrome / Wingmaster

11191 Fender Wing - Power Style

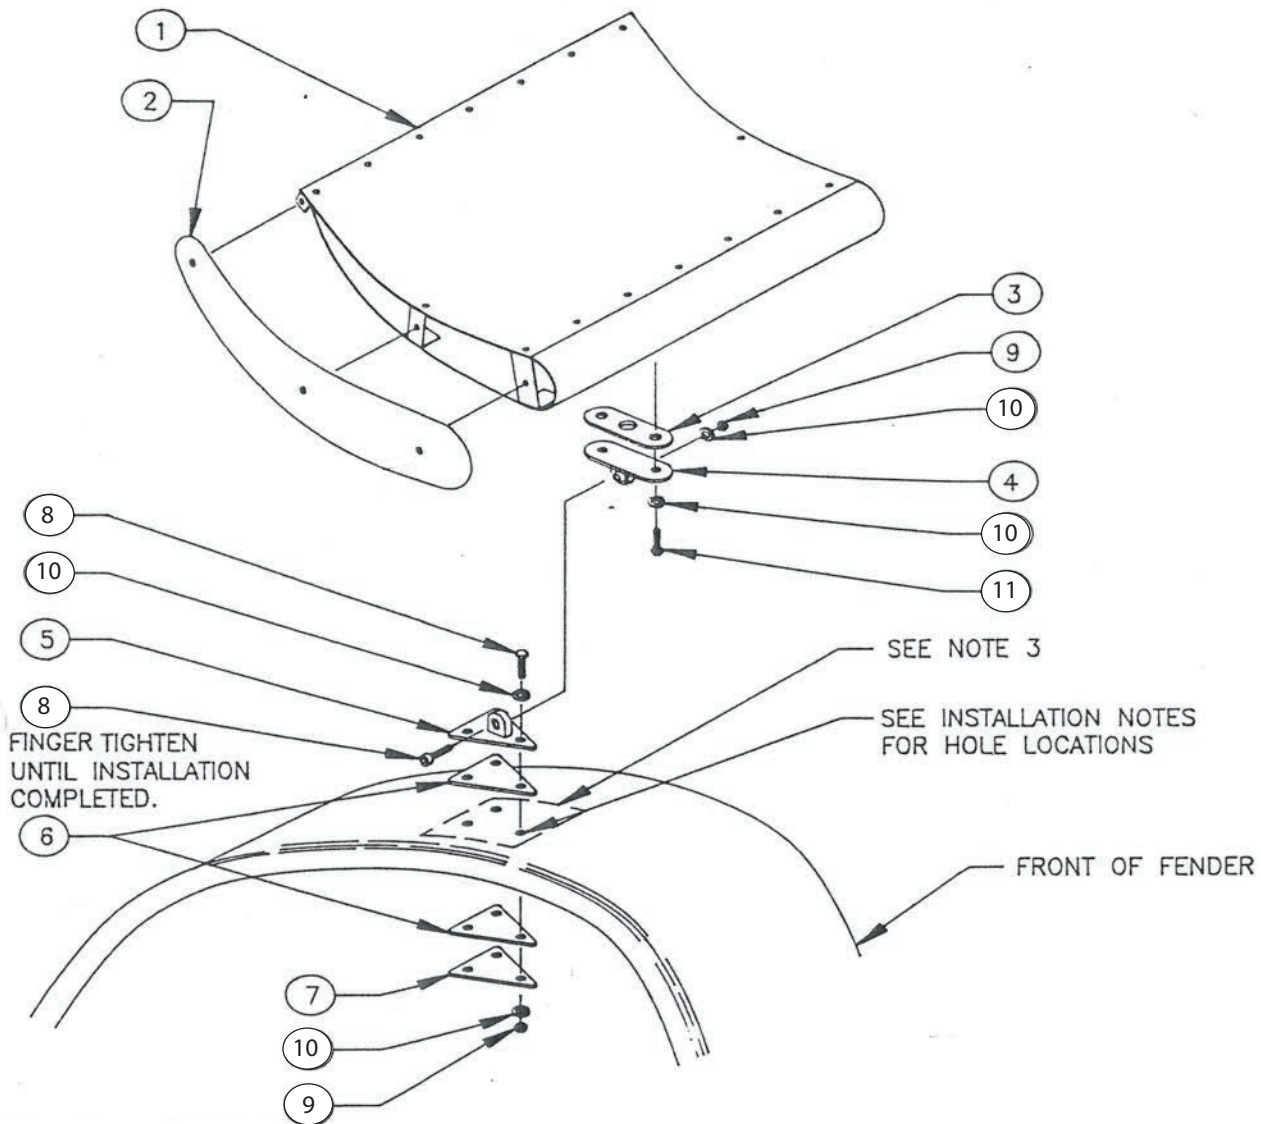

Installation Instructions

1. Assemble Wing and Legs as shown above.
2. Determine the location of the assembled wing on the fender. Place a 3" x 3" piece of masking tape on the fender to mark the location of the triangular mounting bracket.
3. Using the triangular mounting bracket as a template, mark the three hole locations onto the masking tape.
4. Drill three (3) 1/4" diameter holes through the fender. Remove tape.
5. Assemble the wing to fender as indicated above.
6. Tighten bolts securely, after adjusting bolts.

Packaged By:		Date:	Revised 5/15
Item	Qty	Description	
1	2	Wing Body	
2	4	End Plates - <i>Installed @ Factory</i>	
3	2	Oval Rubber Pad	
4	2	Top Leg	
5	2	Bottom Leg	
6	4	Triangular Rubber Pad	
7	2	Mounting Plate	
8	8	Round Head Screw	(1/4" - 20 x 1-1/4")
9	8	1/4" Nylock	
10	20	Flat Washers	
11	4	Round Head Screw	(1/4" - 20 x 1")

Wingmaster 1-800-354-0976

W/Wingmaster/Wing/Semitruckwing/universal/11191