




ET MOUNTING 2005 INTERNATIONAL MODEL 4300

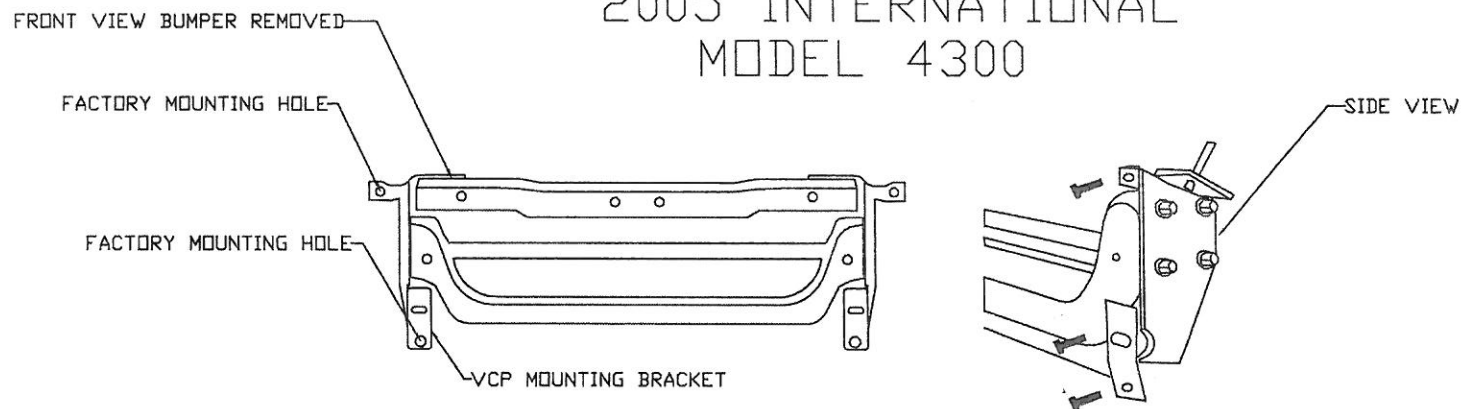

- 1.Remove front bumper.
- 2.Install VCP mounting brackets(Shown in diagram)
- 3.Tighten bolts in bracket.
- 4.Set bumper on frame and line up top two bolts.
- 5.Hand tighten bolts
- 6.Line up bottom bolts,hand tighten.
- 7.Adjust bumper to fit.
- 8.Tighten bolts(DO NOT USE IMPACT TO TIGHTEN BOLTS.)