


Kenworth T-680 Mounting Instructions

FV-15

Mounting Instructions (Requires 2 people)

Step 1:


Remove factory bumper

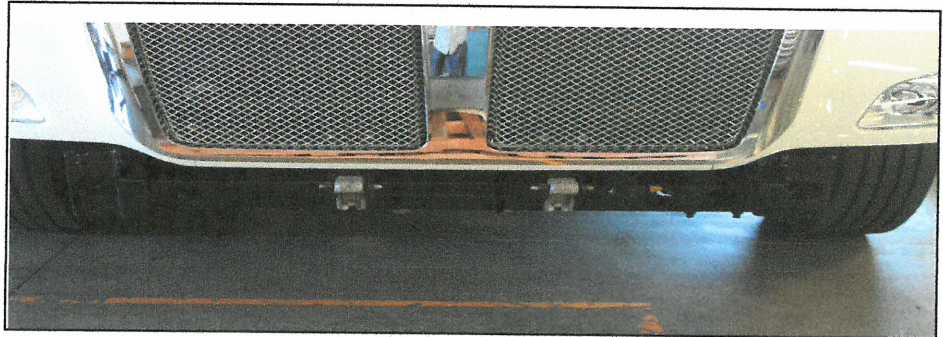

Remove factory bumper

Step 2:


Mount brackets to frame of truck. Tighten loosely.

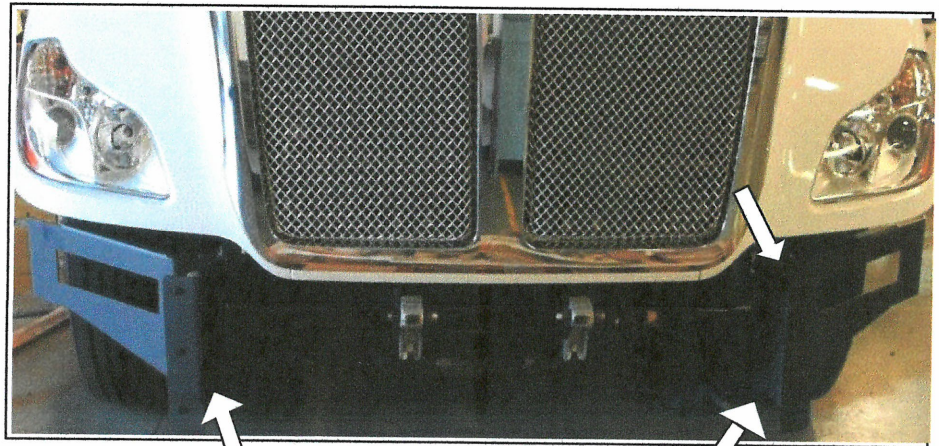

Mount brackets to truck

Step 3:

Attach bumpers to brackets. Tighten loosely and align bumper to desired location.

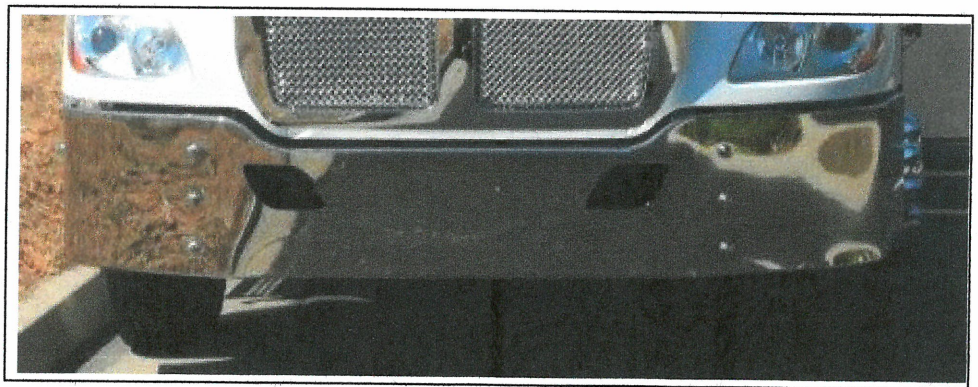

Step 4:

Tighten all bolts.