
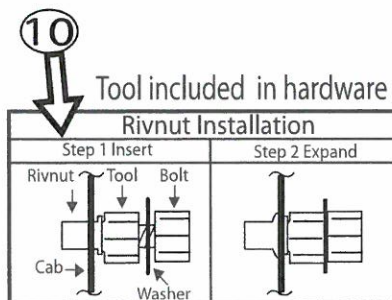
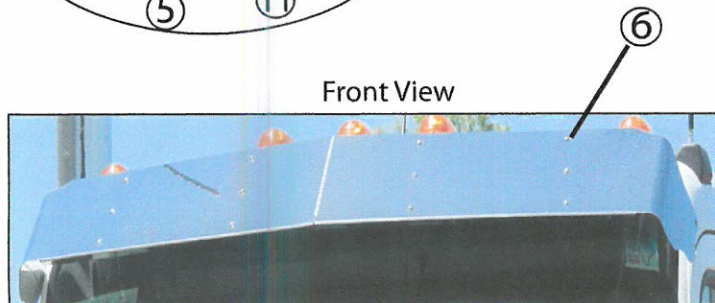
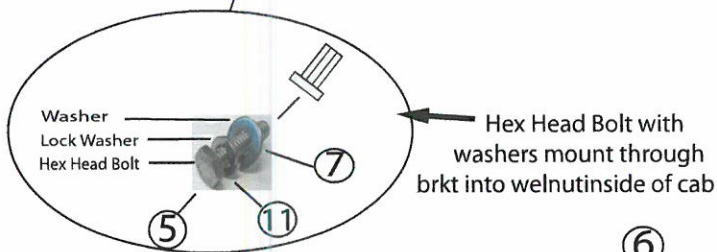


VP 130007

Peterbilt- 579 Day Cab

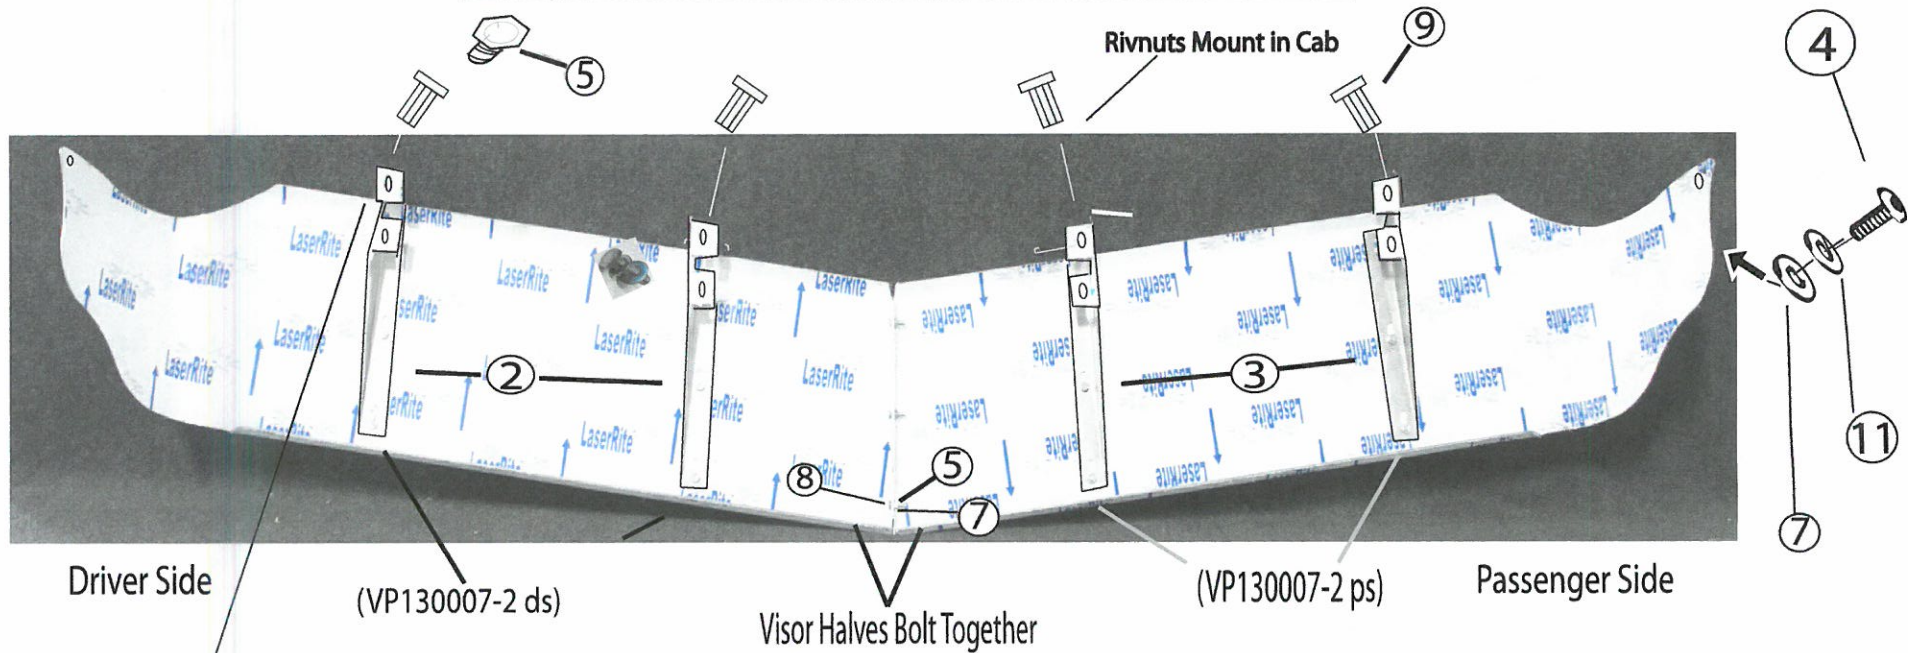

Inspected By:		Date:	REVISION 5/13
Item	QTY	Description	Size
①	2	Visor body Halve	13.5" x 35"
②	2	Outer Visor Brkt DS (VP130007-2 ds)	14" x 3"
③	2	Outer Visor Brkt PS (VP130007-2 ps)	14" x 3"
④	2	Truss Head Screws (ear mount)	1/4" x 20 x 1/2"
⑤	11	Hex Head Bolts	1/4" x 20 x 3/4"
⑥	12	Truss Head Machine Screws	1/4" x 20 x 3/4"
⑦	28	Washers	1/4" x 20
⑧	15	Nylock Nuts	1/4" x 20
⑨	10	Rivnuts (Hex Head)	1/4" x 20 x 1/2"
⑩	1	Rivnut Tool	1/4"
⑪	10	Lock Washers	1/4" x 20

VP 130007

PB 579 Day Cab Visor Instructions

Read Entire Instruction Sheet **Before** Beginning

Safety Glasses	10mm Metric Wrench
Silicone or Loctite®	7/16" Wrench
Masking Tape	Phillips Head Screw Driver
Rivnut Tool - provided	Drill bit - 19/64"

Steps:

1. Unpack the carton and make sure all parts are in the box.
2. Mount visor halves together.
3. Mount brackets to visor body.
4. Hold Visor up to cab at desired location (2 Persons needed). Mark holes in cab to drill @ bracket locations and at ears. **Holes Must not be drilled more than 1 ½" above rubber trim of windshield. (If holes are drilled above this dimension you may risk drilling through interior layer of cab.) Mark drill bit for top half holes @ ½".**
5. Use ¼" X 20 X ½" Rivnut – All 8 bracket holes.
6. Remove brackets from visor skin and mount brackets only. Do not **fully** tighten.
7. Using 19/64" drill bit (mark drill bit with tape @ ½" mark to prevent from drilling through interior cab).
8. Insert ¼" Rivnuts in holes using Rivnut tool provided.
9. Remount visor skin to brackets. Adjust to desired location – Mark end holes of visor (ears) to drill. Repeat step 8 for visor end (ear holes- rivnut installation).
10. Remove visor and tighten brackets.
11. Remount visor and align. Attach at all holes and tighten.
12. Remove the PVC coating from the visor.