

EY CHROME PLATING



QUALITY SINCE 1961 BUMPERS & ACCESSORIES

CATALOG

version 25.11







For **OVER 60 YEARS**, the trucking industry has put its trust in Valley Chrome Plating, Inc./STAINLESS. We are a hard working, family-owned American business. A huge THANK YOU to those who have helped us build our reputation for stellar aftermarket bumpers, visors, light panels, LED accessory lighting and more!

Please visit us on our website and join the excitement on our social media pages by posting pictures of our products on your trucks. Our knowledgeable staff is ready to serve you by phone as well, by calling 1.800.354.0976.

TABLE OF CONTENTS

BUMPERS		
Part Numbering Guide		7
Autocar		
Ford		
Freightliner		
GMC	27-2	9
Hino		
International		
Kenworth		
Mack	48-5	9
Peterbilt	60-7	4
Sterling	75-7	76
Volvo		
Western Star & White	83-8	88
Universal Mount Blank Bumpers	8	39
Blind Mount Bumpers	9	0
Bumper Customization Options	91-9	93
Bumper Mounting Bolt Kits		
, ,		
UNIVERSAL ACCESSORIES		
Flap Weights, Tank Straps & Tag Hanger	rs 9	7
Permit Panels		
Ridged Permit Panels & Beacon Light Bi		
99		
Airline Boxes	10	00
Deck Plates & Front Deck Plate Tool Box		
Rear Frame Tool Box		
Frame Steps		
Rear Window Visors		
Rear Frame Fillers		
Lower Rear Frame Fillers		
Retail Display - LEDs		
LED Light Option Chart		
Blank Light Cutout Options		
Universal LED Lights & Watermelon Light		
110-115	105	•••
Watermelon Light Brackets	11	4
Wire Harnesses		
vviie i laitiesses	۱ ۱	,
PETERBILT MODEL 359 ACCESSORIES		
Cab Panel 3.5" & Hood Extensions	11	Q
Misc. Trim Pieces		
Standard Mount Stainless Visors, Gangs	12 tar	-0
Stainless Visors & Wicked Visors		1
Air Deflectors, Fuel Tank Strap Covers &		
Trim Pieces		
IIIII I Ieces	12	
PETERBILT MODELS 365 & 367 ACCESSO	DIEC	
Cab Panel 4"		
Sleeper Panels 4"	10) F
Sleeper Extension Panels 4"	10	
Air Cleaner Light Boxes & Bug Shields		
All Cleaner Light Doxes & Bug Shields	I Z	_ /

PETERBILT MODEL 379 ACCESSORIES
One-Piece Cab/Hood Extension Panels 130
4" & 6" Cab Panels131
4" & 6" Hood Extension Panels132
4" & 6" Sleeper Panels133
4" & 6" Sleeper Extension Panels134
Air Cleaner Light Boxes Vortox135
Mirror Light Boxes136
Bumper/Grille Trim & Fender Guards 137
Bug Shields138
Blinker Bars & Fender Support Covers 139
Sleeper Filler Panels & Shock Covers140
Air Deflectors & Fuel Tank Strap Covers 141
Fuel Tank Fairings142
Emblems & Misc. Trim Pieces143-144
Battery Boxes & Tool Boxes145
Tool & Battery Box Covers146
PETERBILT MODEL 384
4" & 6" Cab Panels148
4" & 6" Sleeper Panels149
4" & 6" Sleeper Extension Panels
. ot o Group of Exterior of Father of States
PETERBILT MODEL 386
2.5" Cab Panels & Exhaust Filler Panel152
2.5" Sleeper Panels153
2.5" Sleeper Extension Panels, Bug Shields154
, ,
PETERBILT MODELS 388 & 389
4" & 6" Formed Cab Panels156
One-Piece Cab/Hood Extension Panels for DEF &
No DEF System 157-159
4" & 6" Cab Panels160

Table of Contents continued on next page

TABLE OF CONTENTS

Table of Contents continued from previous **PETERBILT MODEL 589** Fender Guards, Air Cleaner Light Bars, page Cab & Sleeper Panels......196 PETERBILT MODELS 388 & 389 (cnt'd) Universal Watermelon Light Brackets, Tag Hangers 4" & 6" Cab Panels for Def & No Def System161 & Panels......197 4" & 6" Sleeper Panels.......162 4" & 6" Hood Extension Panels 163-164 **ACCESSORIES FOR ALL PETERBILT MODELS** 388 Cab Panel DEF System165 Hood Emblems & Hood Latch Guards199-200 Key Guards & Misc. Trim Pieces201 4" & 6" Sleeper Extension Panels......166 Bug Shield for model 387, Window Trim & Sleeper Air Cleaner Light Boxes Donaldson 167 Mirror Light Boxes168 Window Lower Looks202 Bumper & Grille Trim, Fender Guards & Bug Sleeper Wraps & Rear Frame Covers207 Emblems, Fender Trim & Hood Trim 170 DEF Tank Covers & Fuel Tank Wraps......208 Blinker Bars & Fender Support Cover 171 Stainless Visors & Sleeper Filler Panels 172 **KENWORTH MODEL W900** Misc. Trim Pieces 173-174 Cab Panels210 Sleeper Shock Covers & Air Deflectors......175 Sleeper Panels.....211 Fuel Tank Strap Covers & Exhaust Covers . 176 Hood Extension Panels & Sleeper Extension Panels Tool & Battery Box Covers177212 Battery Boxes, Tool Boxes & Box Step High-Air Cleaner Light Boxes213 lights/Protectors......178 Air Cleaner Fairings......214 Exterior Window Trim, Exhaust Shields & Bug Shields PETERBILT MODEL 567215 Cab Panels, Sleeper Panels, Hood Extensions & Blinker Bars & Flap Weight.....216 Fender Guards180 Fender Guards, Battery & Tool Box Covers217 Bug Shields & Fuel Tank Strap Covers 181 Hood & Grille Trim218 Stainless Visors......182 Stainless Sun Visors219-221 Catalytic System Box Highlights, DEF Tank Cover & PETERBILT MODEL 579 Stainless Deck Plates222 Fuel Tank Fairings......223 Cab Panel & Sleeper Panels......185 Lower Hood Panels & Center Hood Trim...224 DEF System Panels......186 Misc. Trim Pieces......187-188 Stainless Visors......189 **KENWORTH MODEL T600** Sleeper Panels & Sleeper Extension Panels226 Sleeper Shock Covers, Tank Fairing Highlight & Stainless Grilles & Bug Shields......227 Kick Panel Trim190 Battery/Tool Box Covers & Side Marker Trim228 PETERBILT MODEL 587 Fender Trim & Stainless Visors192 **KENWORTH MODEL T660** Cab Panels, Bug Shields & Stainless Sun Visors 230 Gangster Visors & Boltless Wicked Visors .231 Battery & Tool Box Covers232



Table of Contents continued on next page

TABLE OF CONTENTS

page **KENWORTH T680** Cab & Cowl Panels, Sleeper Extension Panels & Door and Window Trim.....234 Bug Shields, Fender Guards & Stainless Sun-Visors.......235 DEF Tank Cover......236 **KENWORTH T800 & T880** Sleeper Panels & Sleeper Extension Panels 238 Bug Shields, Fender Guards & Stainless Sun-Visors......239 Gangster Visors & Boltless Wicked Visors . 240 Battery & Tool Box Covers241 Exterior Window Trim, Door Handle Trim, Lower Look.......241 & Air Deflectors 242 Emblem Accents & Hood Latch Guards 243 Sleeper Window Trim, Rear Frame Covers & Stainless Fuel Tank Wraps......244 FREIGHTLINER FLD/CLASSIC Cab Panels 4" & Sleeper Panels246 Hood Latch Guards, Hood Trim & Lowered Look Window Panels.....247 Misc. Trim Pieces & Air Cleaner Light Boxes248 Fender Guards, Stainless Trim For Plastic Bumpers & Headlight Visors......249 Bug Shields......250 Wicked Boltless Visors......252 FREIGHTLINER CENTURY & COLUMBIA Cab Panels 4", Sleeper Panels & Misc.-Trim Pieces......254 Stainless Trim for Plastic Bumpers & Bug Shields 255 Sun Visors.......256 FREIGHTLINER CORONADO 2002-2009 & **GLIDER KITS** Bug Shields & Sun Visors258 FREIGHTLINER CASCADIA 2017 & OLDER "P3" Cab Panels 4" & Sleeper Panels260 Fairing Panels261 Fender Trim, Hood & Door Trim & Lowered Window Panels......262 Stainless Trim For Plastic Bumpers & Bug Shields 263 Fuel Tank Covers, Battery Box Covers & Steps & Catalytic Covers265 Emblem Accents, Permit Panels & Fuel Tank-

Table of Contents continued from previous

INTERNATIONAL Sun Visors
VOLVO VNL Hood & Fender Trim, Bug Shield & Stainless Trim For Factory Visors
VOLVO VT SERIES Cab Panels & Sleeper Panels
WESTERN STAR 4700SF Cab Panels, Fender Guards & Panels 278 Bug Shields, Radiator Rock Guard & Sun Visors 279
WESTERN STAR 5700XE Sun Visors & Bug Shields(279 Cont'd)
WESTERN STAR 47X & 49 Sun Visors, Sleeper Extension Panels & Air Intake Screens
TURBOWINGS The Turbowing Advantage
Peterbilt Wings/Mounting Kits
NOTES
WARRANTY AND RETURN POLICIES291

Fairing......266


BUMPER PART NUMBERING & OPTIONS GUIDE

How our BUMPER part numbering system works:

We use a "smart" part number. Every digit has a meaning, which indicates how we build your bumper.

Make sure all digits are correct to have your bumper built correctly!

Example Part Number:

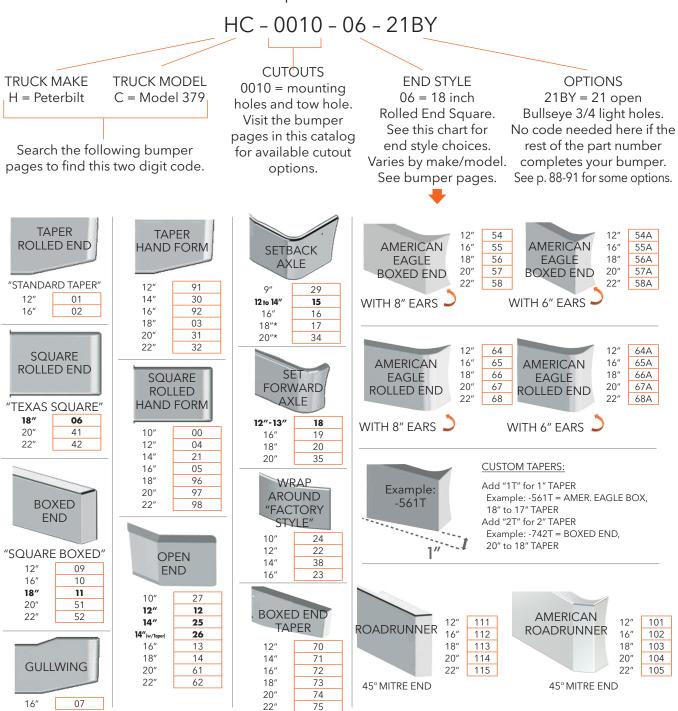

^{*} NOTE: No Warranty on setback bumpers 20" and wider, except COA, COB and LI series.

Standard sizes are in bold.


ALSO SEE OUR "BUILD A BUMPER" CONFIGURATION TOOL ON OUR WEBSITE



AUTOCAR BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



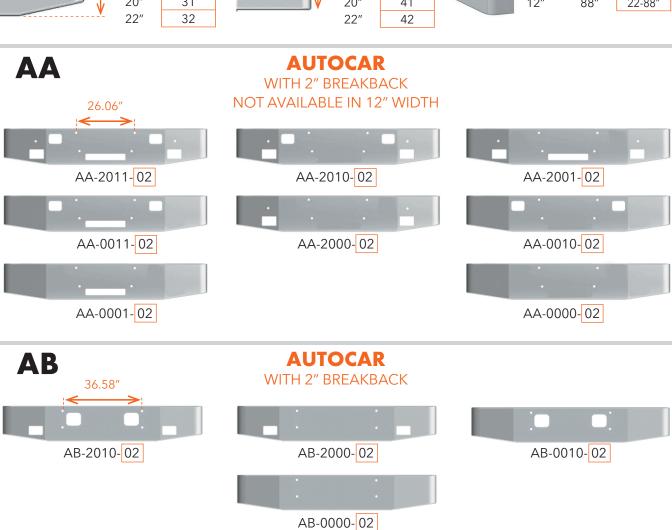


FORD BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




L, LN, LT, LTN, LTL -800-900-8000-9000 YEARS 1970-1998

ALSO MODELS LN7000 & STERLING LT9511 MUST BE 16" WIDE OR LARGER FOR 4 FOG LIGHT OPTION

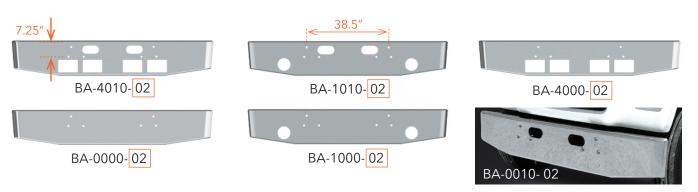

AEROMAX SETBACK AXLE - L, LS, LA, LTS, LTA YEARS 1988-1995

CHECK 'BG' SERIES PRIOR TO ORDERING

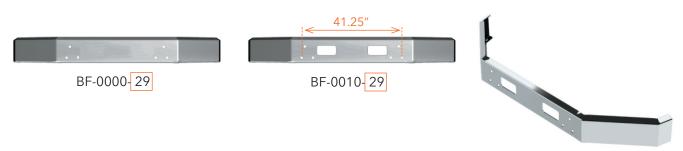

LST SET BACK AXLE YEARS 1988-1995

CHECK 'BF' SERIES PRIOR TO ORDERING



BA

BF

BG

FORD BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width		
13"		
16"		
18"		

*20"

Code	
15	
16	
17	
2.4	

End Style

* No warranty for 20" width

F-650 SUPER DUTY YEARS 2005-2018

WITH <u>CUMMINS 5.9L ENGINES</u>
MOUNTING BRACKETS INCLUDED
CHECK 'BJ' SERIES PRIOR TO ORDERING
NOTE LETTERS 'BI' IN PART NUMBER







BI-0011- 15

BI-0010-15






BI-0000- 15






BJ F-650 SUPER DUTY YEARS 2005-2018

WITH <u>CATERPILLAR C7 ENGINES</u>
MOUNTING BRACKETS INCLUDED
CHECK 'BI' SERIES PRIOR TO ORDERING









BJ-0000-15






EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



	End Style
Width	Code
12"	01
16"	02
18"	03
20"	31
22"	32



Width	End Style Code
12"	09
16"	10
18"	11
20"	51
22"	52




le

CABOVER AND CONVENTIONAL

YEARS 1980-1984



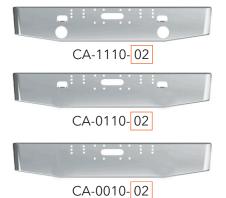








CABOVER AND CONVENTIONAL AND CLASSIC YEARS 1984-1999



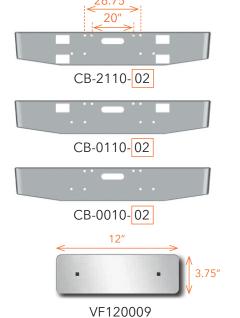


FL-TOW PIN COVER -CLASSIC FITS 'CA' & 'CB' SERIES BUMPERS

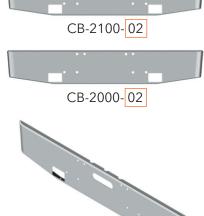

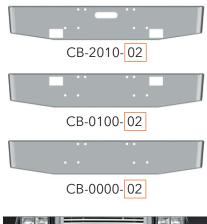





EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

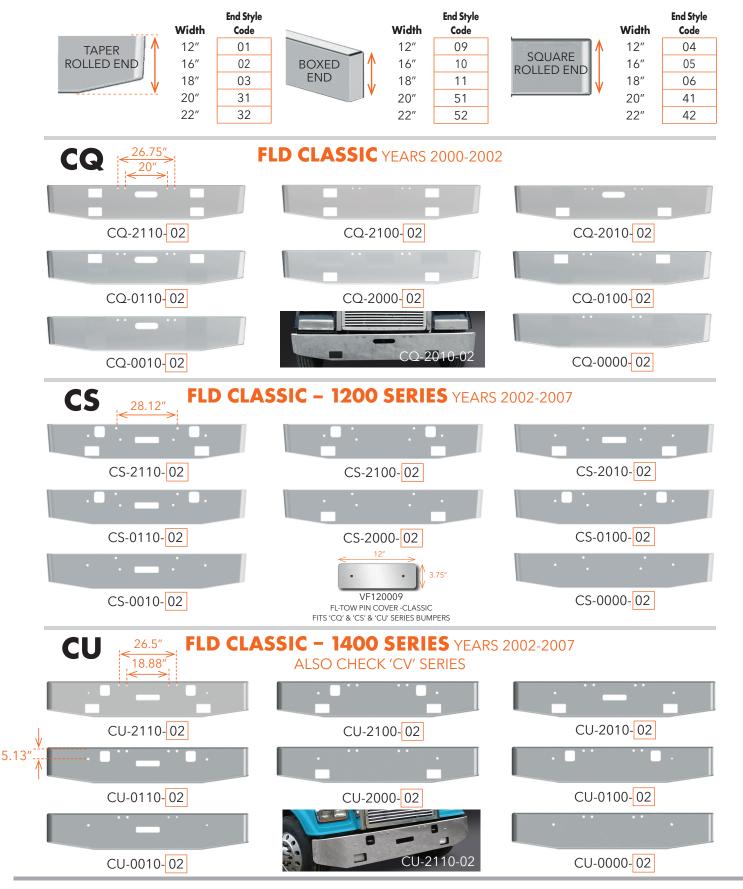

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

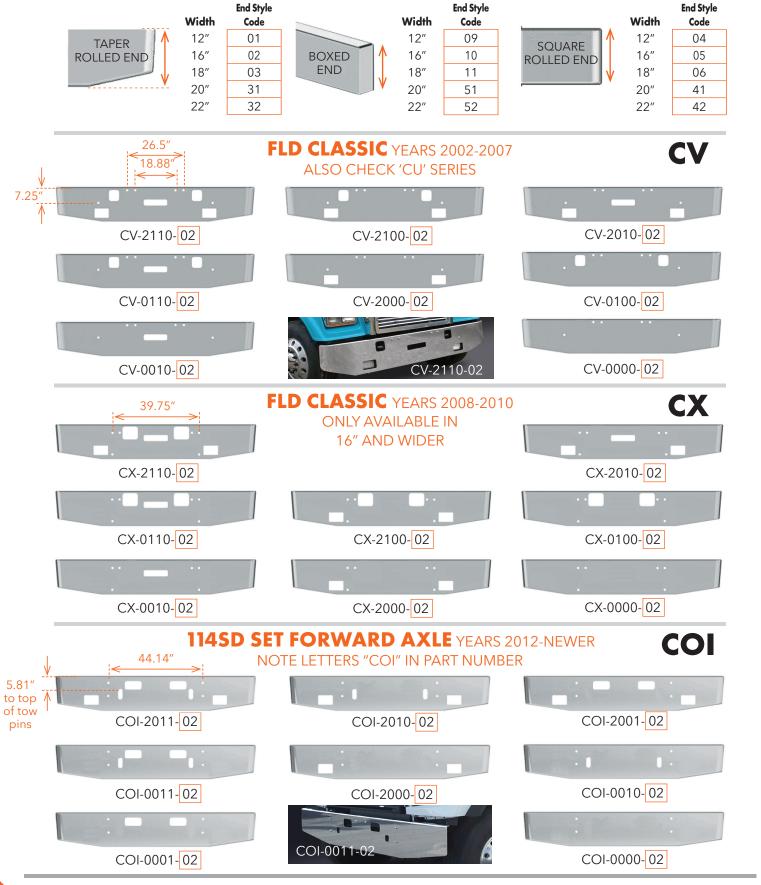

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width 19"





Width 12" 01 16" 02 18" 03 20" 31

22"

32




Width	End Style Code
12"	04
16"	05
18"	06
20"	41
22"	42
18" 20"	06 41

CZ

COC

CORONADO YEARS 2002-2009 & GLIDER CHASSIS DOES NOT USE FACTORY SUPPORT BRACKETS OR ENDS CAPS

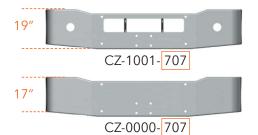












Stainless grille insert - CZ01GI Not included, available separately

CORONADO 122SD SET FORWARD YEARS 2010-NEWER

16" AND WIDER (SEE 'COE' SERIES FOR 12" BUMPERS)
NOTE LETTERS "COC" IN PART NUMBER

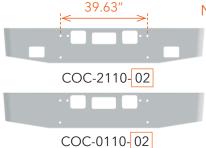

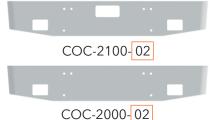

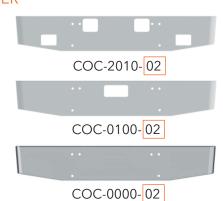






COE

CORONADO 122SD SET FORWARD YEARS 2010-NEWER

12" WIDE (SEE 'COC' SERIES FOR 16" AND WIDER BUMPERS)
NOTE LETTERS "COE" IN PART NUMBER

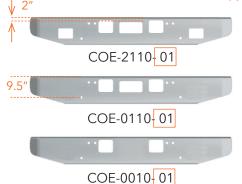





AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

SQUARE

ROLLED END


Width

12"


End Style


Code

04

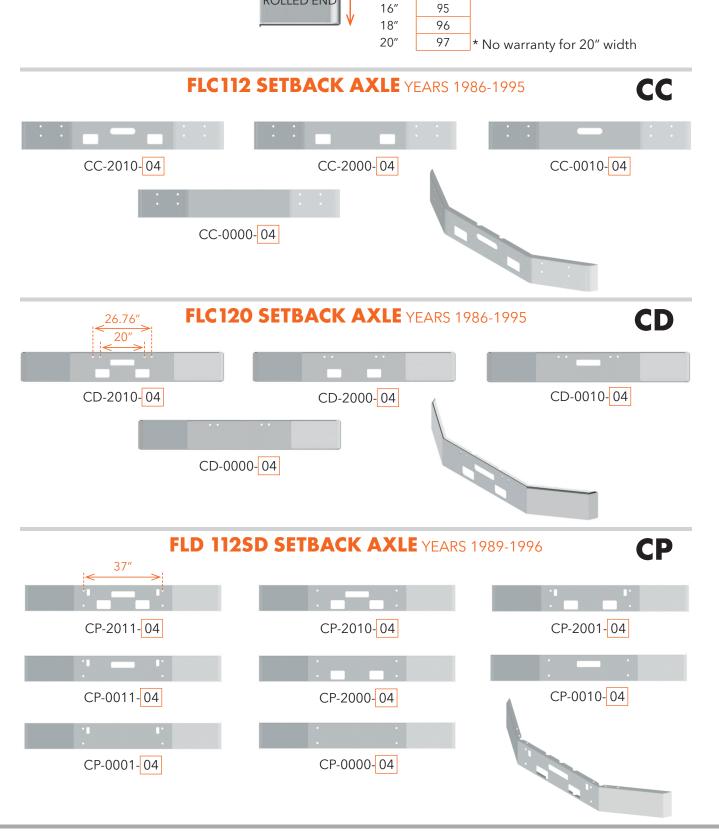

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

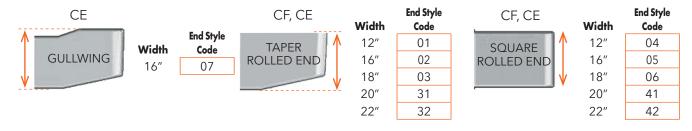

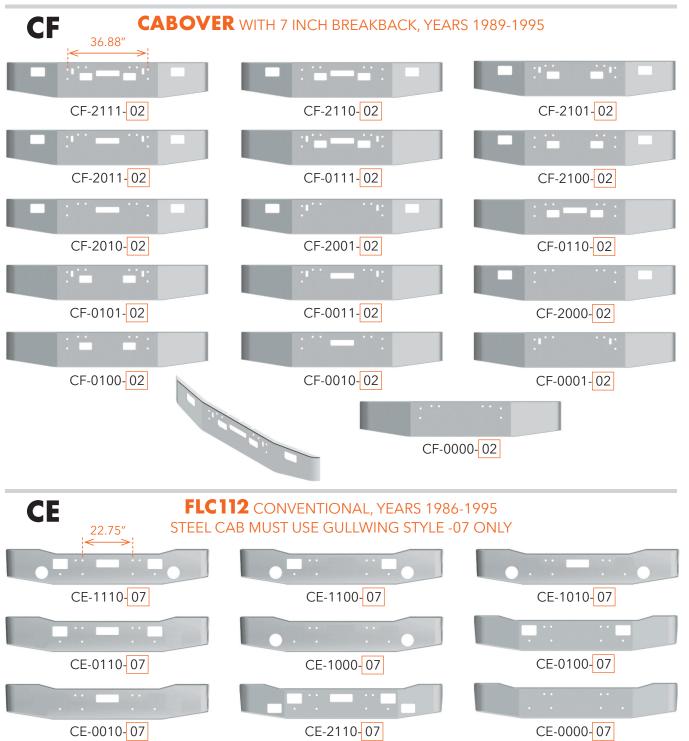

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



w	idi
1	2′
1	6"
1	8′
2	0"

Code	
04	
95	
96	
97	*

* No warranty for 20" width

FOR 92-INCH LONG BUMPERS WITHOUT PLASTIC END CAPS, ADD "92" TO END OF PART NUMBER. EXAMPLE: CG-2011-04-"92"

FLD 112 WITH 6 INCH BREAKBACK, YEARS 1989-1996 86.75" LONG STANDARD. PLASTIC ENDS NOT INCLUDED.









CG-0001-04



CG-2010-04



CG-2000-04











FLD 120 WITH 6 INCH BREAKBACK, YEARS 1989-1996 86.75" LONG STANDARD. PLASTIC ENDS NOT INCLUDED (ALSO SEE 'CJ' SERIES).



CH-2010-04











FLD 120 WITH 6 INCH BREAKBACK, YEARS 1989-1996 86.75" LONG STANDARD. PLASTIC ENDS NOT INCLUDED (ALSO SEE 'CH' SERIES).



CJ-2010- 04



CJ-0010-04






CJ-0000- 04



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

SQUARE ROLLED END

Width Code
12" 04
16" 95
18" 96
20" 97




Vidth	End Style Code
12"	15
16"	16
18"	17
*20"	34


* No warranty for 20" width


FOR 92 INCH LONG CM SERIES BUMPERS WITHOUT PLASTIC END CAPS, ADD "92" TO END OF PART NUMBER . EXAMPLE : CM-2011-04-"92"

CM


FLD 112 & FLD 120 WITH 6-INCH BREAKBACK, YEARS 1989-1996 86.75" LONG STANDARD. PLASTIC ENDS NOT INCLUDED. COMBO BOLT PATTERN

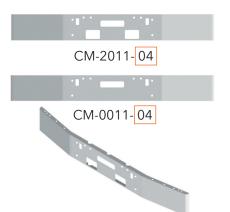


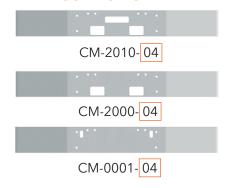

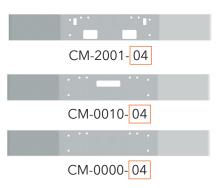


FLD 112 & FLD 120 SETBACK FULL WRAP. METAL BUMPER, YEARS 1989-2006 COMBO BOLT PATTERN, NOTE LETTERS 'CI' IN PART NUMBER

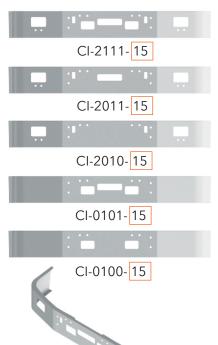

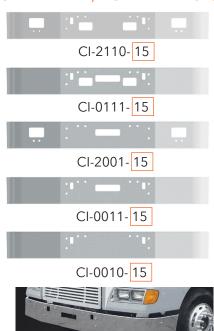

CI-0011-15

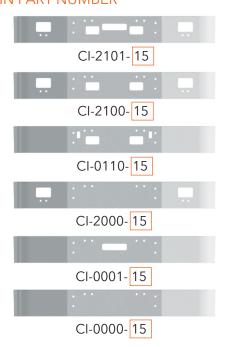

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
wiaiii	Code
14"	15
16"	16
18"	17
*20"	34


* No warranty for 20" width

CENTURY SETBACK AXLE, YEARS 1996-2004 MOUNTING BRACKETS INCLUDED


















COLUMBIA SETBACK AXLE, YEARS 1999-2007




CENTURY SETBACK AXLE, YEARS 2005-2007 MOUNTING BRACKETS INCLUDED

ALSO FITS NEWER MODEL GLIDERS - CHECK CHASSIS CONFIGURATION

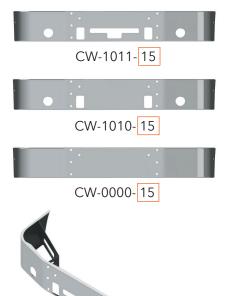

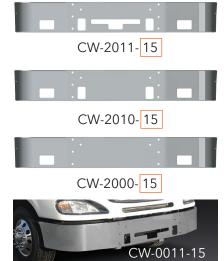

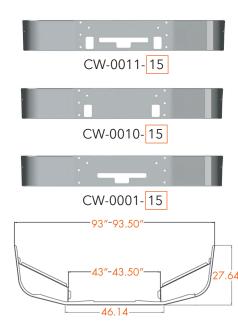



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




* No warranty for 20" width

COA

COLUMBIA SETBACK AXLE, YEARS 2008 & NEWER REPLACES STEEL CENTER/PLASTIC ENDS BUMPERS ONLY MOUNTING BRACKETS INCLUDED

NOTE LETTERS 'COA' IN PART NUMBER. FOR 2008 & NEWER GLIDERS SEE CW SERIES.

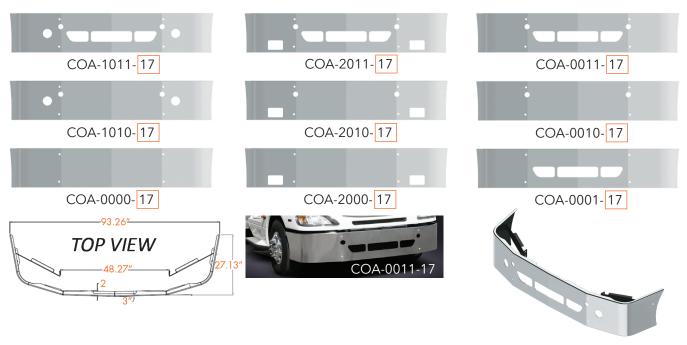


COB

COLUMBIA SETBACK AXLE, YEARS 2008 & NEWER


CENTURY SETBACK AXLE, YEARS 2008 & NEWER

REPLACES STAINLESS CLAD BUMPERS ONLY

MOUNTING BRACKETS INCLUDED. NOTE LETTERS 'COB' IN PART NUMBER.

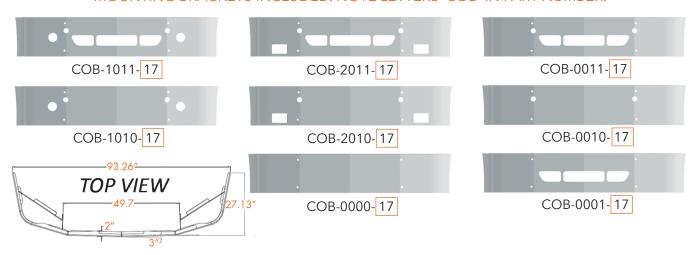

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



	End Style
Width	Code
14"	15X
16"	16X
18"	17X
*20"	34X

* No warranty for 20" width

CASCADIA "P3" YEARS 2008-2017



REPLACES PLASTIC BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS AND EXTENSIONS INCLUDED
SEE 'COH' SERIES FOR REPLACING P3 STAINLESS CLAD
SEE 'COJ' AND 'COK' SERIES FOR NEWER P4 BUMPERS



CY-5011- 15X 2 OEM fogs, tow pins, vent No radar



CY-2011- 15X 2 rect. fogs, tow pins, vent No radar



CY-0011- 15X Tow pins, vent, no radar



CY-0000-15X
No cutouts, mounting only






CY-5012- 15X 2 OEM fogs, tow pins, vent Accommodates radar



CY-0012-15X
Tow pins, vent
Accommodates radar



CY-0010-15X Tow pins

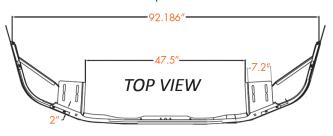

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



	End Style
Width	Code
14"	15X
*16"	16X

* 16" bumpers require customer to shim brackets

COH

CASCADIA "P3" YEARS 2008-2017

REPLACES STAINLESS CLAD BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
EXTENSIONS INCLUDED, MOUNTING BRACKETS NOT INCLUDED
MOUNTS TO EXISTING CLAD BUMPER BRACKETS
SEE 'CY' SERIES FOR REPLACING P3 PLASTIC BUMPERS
SEE 'COJ' AND 'COK' SERIES FOR NEWER P4 BUMPERS
NOTE LETTERS 'COH' IN PART NUMBER




COH-5011- 15X 2 OEM fogs, tow pins, vent No radar



COH-0011- 15X
Tow pins, vent, no radar



COH-0000- 15X No cutouts, mounting only

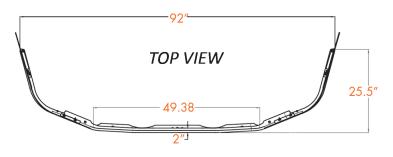



COH-5012- 15X 2 OEM fogs, tow pins, vent Accommodates radar



COH-0012- 15X

Tow pins, vent


Accommodates radar



COH-0010- 15X Tow pins



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14"	15Z
16"	16Z
18"	17Z
*20"	34Z

* No warranty for 20" wide bumpers

CASCADIA "P4" YEARS 2017 & NEWER

COJ

REPLACES PLASTIC BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'COJ' IN PART NUMBER
SEE 'COK' SERIES IF REPLACING STAINLESS CLAD BUMPERS



COJ-5011- 15Z -V6 2 OEM fogs, tow pins, vent, radar Radar requires plastic cover

TO TOP OF RADAR HOLE



COJ-5010-15Z-V6 2 OEM fogs, tow pins, radar Radar requires plastic cover



COJ-5010- 15Z 2 OEM fogs, tow pins




COJ-0011- 15Z Tow pins, vent









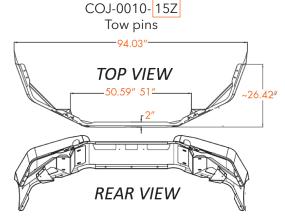



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14"	15Z
16"	16Z
18"	17Z
*20"	34Z

* No warranty for 20" wide bumpers

COK

CASCADIA "P4" YEARS 2017 & NEWER

REPLACES STAINLESS CLAD BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'COK' IN PART NUMBER
SEE 'COJ' SERIES IF REPLACING PLASTIC BUMPERS



COK-5011-157 -V6 2 OEM fogs, tow pins, vent, radar Radar requires plastic cover



COK-5010- 15Z -V6 2 OEM fogs, tow pins, radar Radar requires plastic cover



COK-5010-15Z 2 OEM fogs, tow pins



COK-0011- 15Z Tow pins, vent





COK-2010-157 -V6 2 rectangular aftermarket fogs, tow pins, radar Radar requires plastic cover



COK-0010-15Z-V6
Tow pins, radar
Radar requires plastic cover

COK-0010-15Z
Tow pins
94.03

TOP VIEW
51.76
26.42



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



	Width
١.	12"
,	16"
•	18"
	*20"

End Style Code		
	15	
	16	
	17	
	34	,

*No warranty for 20" wide bumpers

FL SERIES MEDIUM DUTY YEARS 2002 & OLDER




FL50, FL60, FL70, FL80 MOUNTS TO FACTORY BRACKETS ALSO CHECK 'CR' SERIES








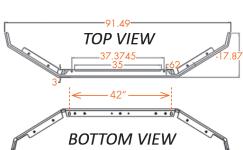



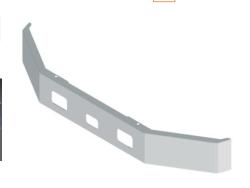

FL112 SERIES MEDIUM DUTY YEARS 2002 & OLDER




MOUNTS TO FACTORY BRACKETS
ALSO CHECK 'CK' SERIES

CR-0220- 15






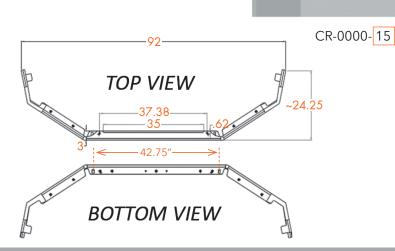



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



* No warranty for 20" wide bumpers

M2 106 BUSINESS CLASS YEARS 2003 & NEWER CT

FLUSH TOP FLANGE MOUNT. INCLUDES UPPER LICENSE PLATE HOLES. ALSO CHECK 'COG' SERIES




M2 112 BUSINESS CLASS YEARS 2003 & NEWER COF TOP FLANGE MOUNT ON INTEGRATED GUSSETS. INCLUDES UPPER LICENSE PLATE HOLES. NOTE LETTERS 'COF' IN PART NUMBER



M2 106 BUSINESS CLASS YEARS 2011 & NEWER COG

RECESSED TOP FLANGE MOUNT, BRACKETS INCLUDED


NOTE LETTERS 'COG' IN PART NUMBER CHECK 'CT' SERIES PRIOR TO ORDERING COG-0001- 15 COG-0000- 15

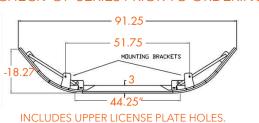



GMC BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

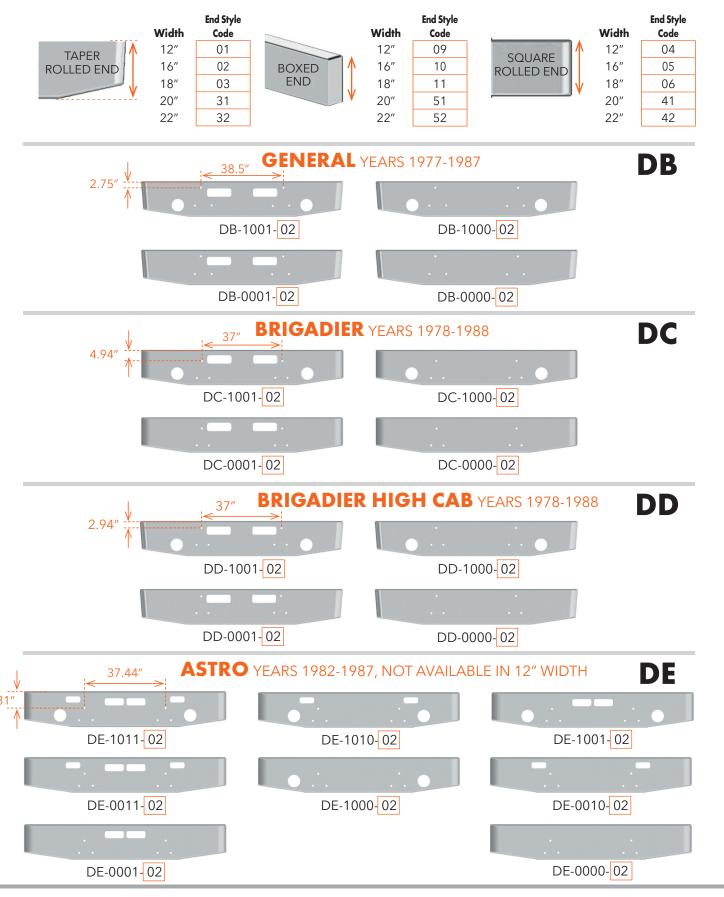


GMC BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:






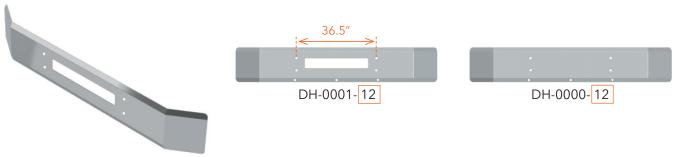


OF GMC TOPKICK/CHEVY KODIAK YEARS 1989-1990

NOT AVAILABLE IN 7-GAUGE STEEL OR STAINLESS STEEL

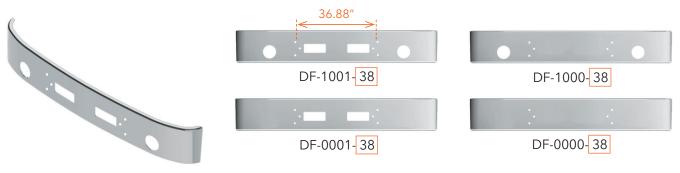


DG GMC TOPKICK/CHEVY KODIAK YEARS 1990-2003


C5500, C6500 NOT AVAILABLE IN 7-GAUGE STEEL OR STAINLESS STEEL

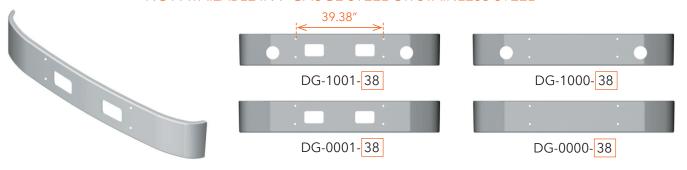

GMC BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



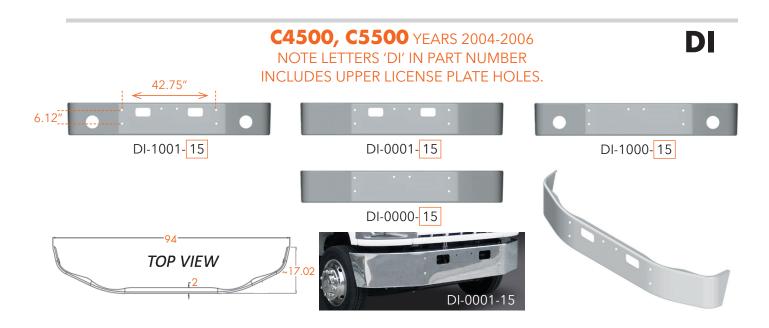



HINO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14"	15
16"	16
18"	17
*20"	34

* No warranty for 20" wide bumpers



268, 338 YEARS 2004 & NEWER MOUNTING BRACKETS INCLUDED NOTE LETTERS 'OA' IN PART NUMBER INCLUDES ONE SET UPPER LICENSE PLATE HOLES







OA-0010- 15



OA-0000- 15





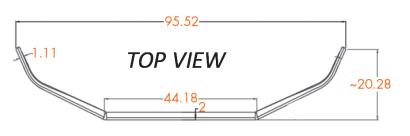



Bumpers and Stainless Accessories made in the USA




Add "P" to end of any bumper part number for black powder coated steel

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12"	01
16"	02
18"	03
20"	31
22"	32



Width	End Style Code
12"	09
16"	10
18"	11
20"	51
22"	52



Width	End Style Code
12"	04
16"	05
18"	06
20"	41
22"	42

4200, 4300 YEARS YEARS 1977-1990 CONVENTIONAL






















ED-0010-02 ED-0000-02



ΕI

9300, 9370 CONVENTIONAL, 9670 CABOVER

YEARS 1983-1996

SET FORWARD AXLE. SEE 'EJ' SERIES FOR SETBACK AXLE.
NOTE LETTERS 'EI' IN PART NUMBER





EI-2200-02



EI-0210-02







EI-2010-<mark>02</mark>




















AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12"	04
16"	05
18"	96
*20"	97
*22"	98




	End Sty
Width	Code
12"	09
16"	10
18"	11
20"	51
22"	52

* No warranty for 20" wide bumpers

EJ

9300 SERIES SET BACK AXLE YEARS 1983-1996

SEE 'EI' SERIES FOR SET FORWARD AXLE











EJ-2010- 96



EJ-2000- 96



EJ-0200-96




EJ-2200-96




EJ-0010-96




EJ-0000- 96

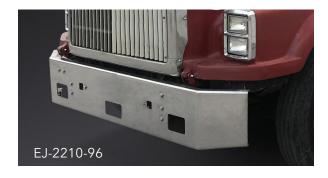

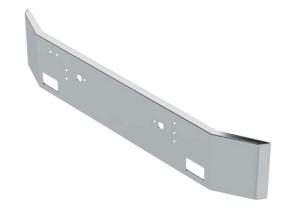



EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:






5900 SET FORWARD AXLE YEARS 2001-2011

ER-0210-06




ER-0000- 06

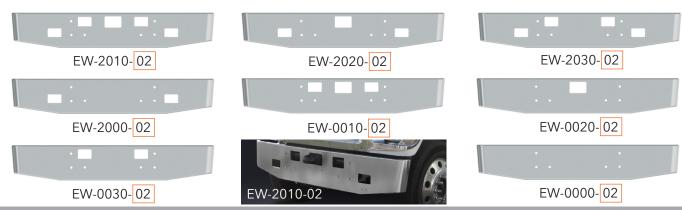


ER-0010-06

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

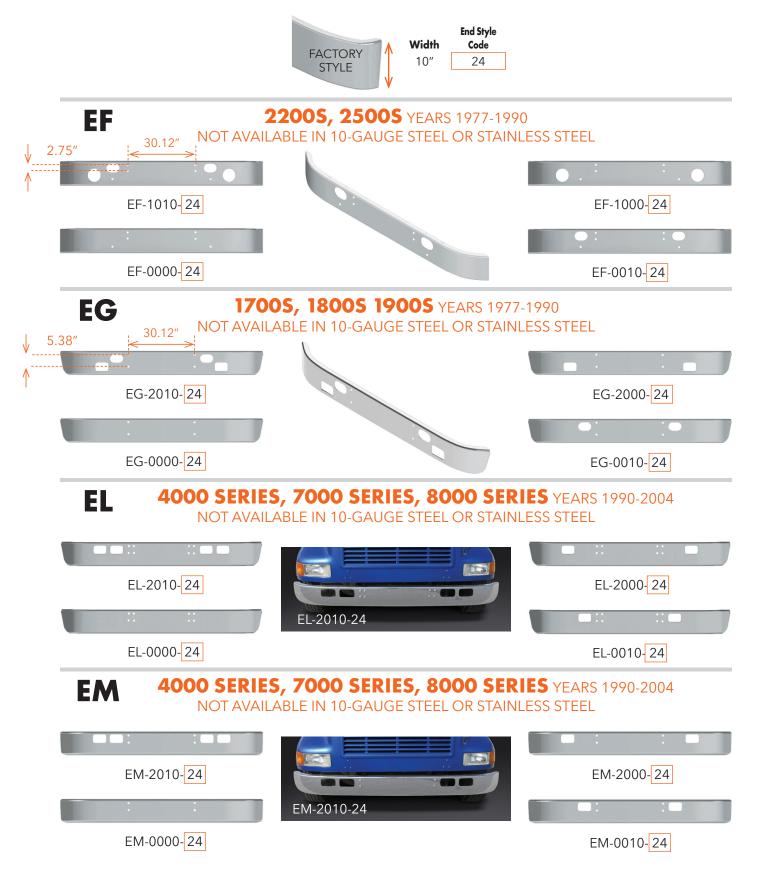


EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
13"	15
16"	16
18"	17
*20"	34


* No warranty for 20" wide bumpers

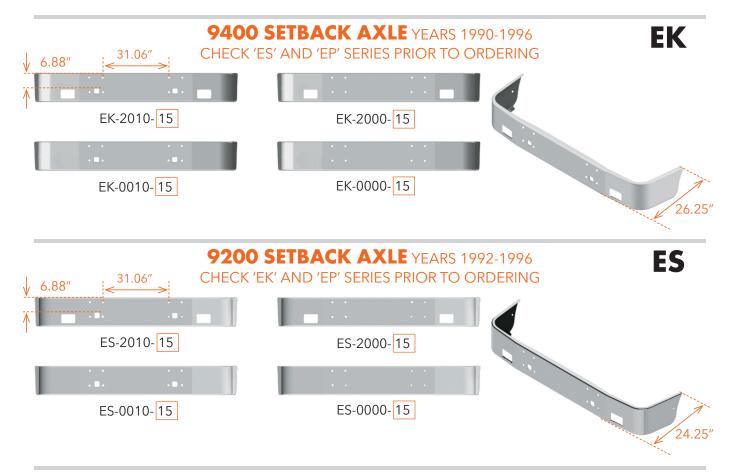

9100, 9200,9400 SETBACK AXLE YEARS 1997-2007



CHECK 'EK' AND 'ES' SERIES PRIOR TO ORDERING

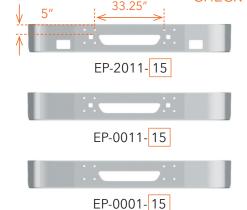








AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Vidth	End Style Code
16"	16X
18"	17X
*20"	3/1X

* No warranty for 20" wide bumpers

EU

PROSTAR YEARS 2008-2017 FIXED MOUNT / NON-TILT MOUNTING BRACKETS AND EXTENSIONS INCLUDED



EU-5011- 16X 2 OEM fogs, tow pins, vent





EU-0011- 16X Tow pins, vent



Tow pins





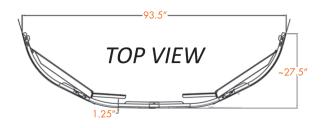



EU-5010-16X-V9 2 OEM fogs, tow pins, round radar Use option - V8 for rectangular radar




EU-5010-16X 2 OEM fogs, tow pins



EU-0000-16X No cutouts, mounting only



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
16"	16X
18"	17X
*20"	34X

* No warranty for 20" wide bumpers

LT SERIES YEARS 2017 & NEWER MOUNTING BRACKETS AND EXTENSIONS INCLUDED REPLACES PLASTIC BUMPERS ONLY



EZ



EY-5013-16X 2 OEM fogs, tow pins, slotted vent



EY-0013- 16X
Tow pins, slotted vent



EY-0010- 16X Tow pins



EY-0000- 16X Mounting Only




EY-2011-16X 2 rectangular fogs, tow pins, open vent



EY-0011-16X
Tow pins, open vent





MV607 SETBACK AXLE YEARS 2024 & NEWER

(-15) END STYLE FOR THIS SERIES IS 14" $\,$



12 to 14"	
16"	
18"	
20"*	Γ

15 16 17 34

* No warranty for 20" wide bumpers



EZ-5011-15 Fog, Tow, Vent

EZ-0011-15 Tow, Vent



SHOWN WITH FACTORY GRILL INSERT (GRILL INSERT NOT INCLUDED)

INTERNATIONAL BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:





Width	End Style Code
13"	15
16"	16
18"	17
*20"	34

* No warranty for 20" wide bumpers

ET 4000 SERIES MEDIUM DUTY / DURASTAR YEARS 2002 & NEWER

AUTOMATIC MUST INCLUDE VENT HOLE ADAPTER BRACKETS INCLUDED











TY 7000 SERIES MEDIUM DUTY / WORKSTAR YEARS 2006 & NEWER

AUTOMATIC MUST INCLUDE VENT HOLE INCLUDES ONE SET LICENSE PLATE HOLES






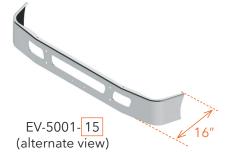

Bumpers and Stainless Accessories made in the USA






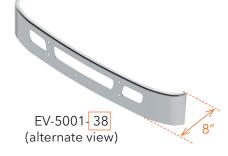





EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:





K100C CABOVER YEARS 1967-1983




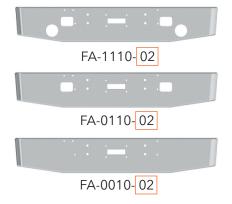


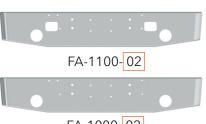

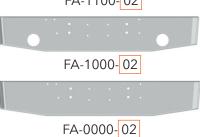


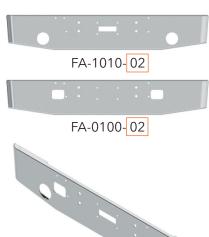

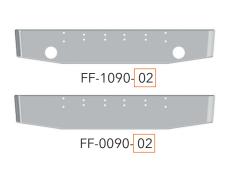


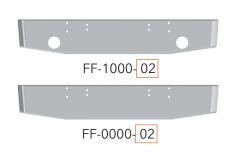

LOGGER YEARS 1967-1981

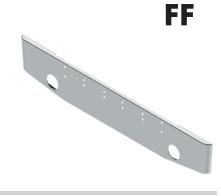




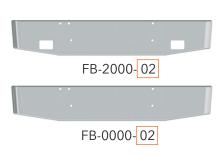

K100E YEARS 1984-1999



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:






W900A YEARS 1967-1981






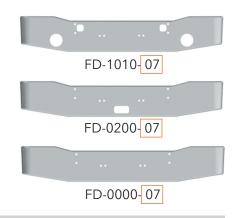






Fits FD,FE,FT & more

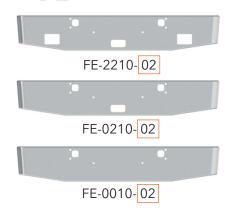

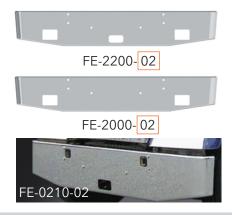





FT

FE


W900B YEARS 2011 & NEWER, DOES NOT FIT W900L

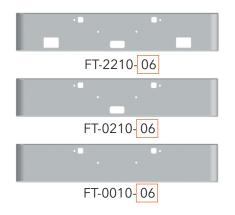



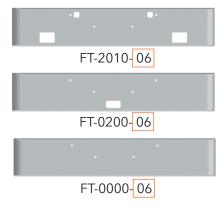

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

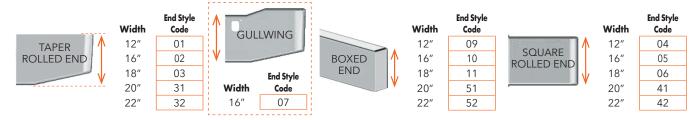


W9005 YEARS 1989-2007







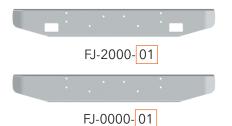





















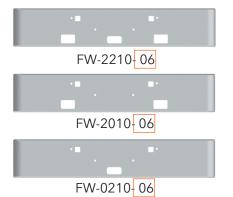


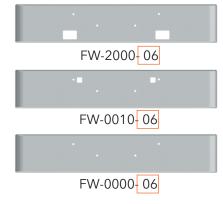


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

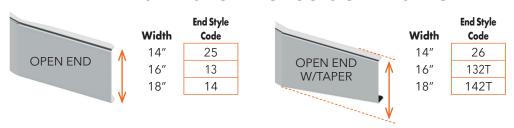

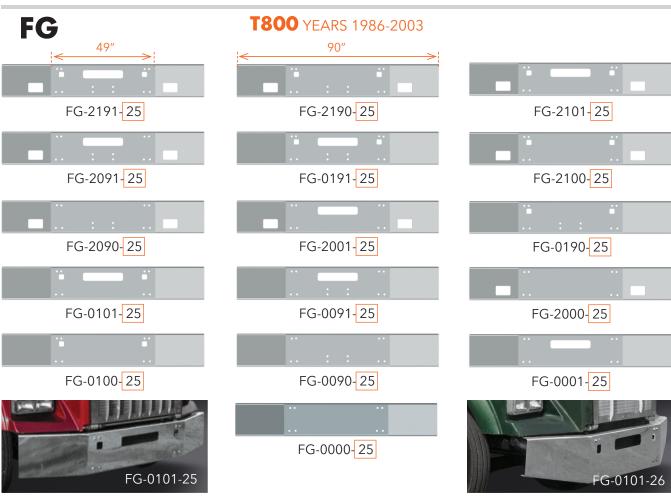

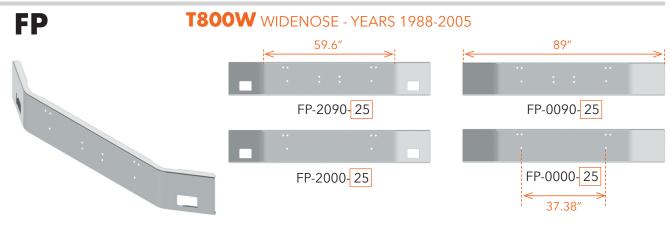

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

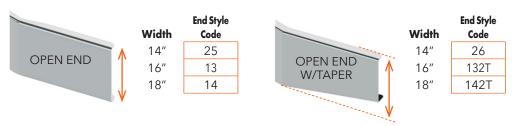

FN-0001-25

FN-0000-25

T800, T880 YEARS 2004 & NEWER 89.5" FN-2110-25 FN-2100-25 FN-2001-25 FN-0111-25 FN-0101-25 FN-0011-25



48.5"

FN-2111- 25

FN-2010-25

FN-2101-25

FN-0110-25

FN-0010-25


FN-2191-25



FN-0100-25


FN-0090-25

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

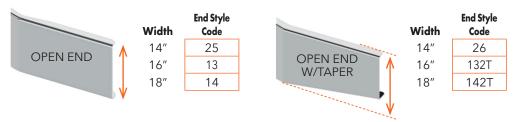

FK

T450B YEARS 1994-1997 SIMILAR BOLT PATTERN AS 'FG' SERIES BUT SHORTER BUMPER LENGTH

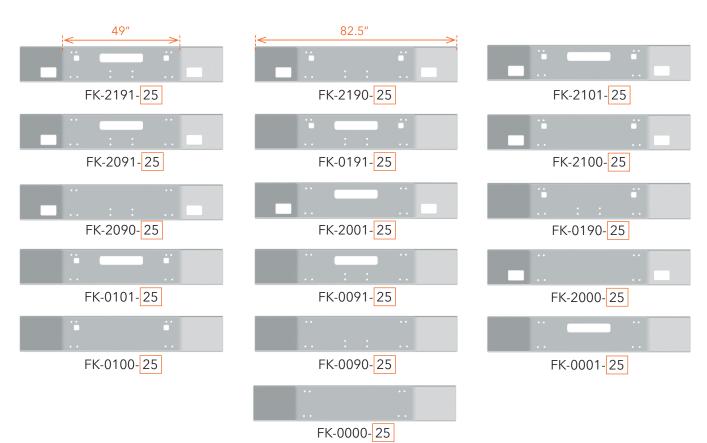




AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Styl Code
13"	18
16"	19
18"	20
*20"	35







End Style Width Code 15" 708 18" 709 *20" 711

* No warranty for 20" wide bumpers




T270, T370 SET BACK AXLE YEARS 2008 & NEWER

ADAPTER BRACKETS INCLUDED. 16" WIDTH ONLY. **NOW BOLTLESS**

FS

FL













T440 SET BACK AXLE YEARS 2011 & NEWER

NOT AVAILABLE IN STAINLESS STEEL











AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Styl Code
13"	15
16"	16
18"	17
*20"	34


* No warranty for 20" wide bumpers

FH

T600 YEARS 1987-2007 SPACERS INCLUDED. MUST INCLUDE VENT HOLES FOR WARRANTY.





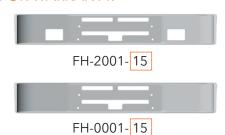

FR

T660 YEARS 2008-2017 MOUNTING BRACKETS INCLUDED

FH-0011- 15





FR-5001- 15



FR-5010- 15









FR-0010- 15
























T400 SET BACK AXLE YEARS 1989-2000







AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	E
14"	
16"	
18"	
*20"	

End Style Code	
708	
709	
711	
712	

* No warranty for 20" wide bumpers

T680 SET BACK AXLE YEARS 2013 & NEWER MOUNTING BRACKETS INCLUDED





FV-5210-708 2 OEM fogs, step, tow pins



FV-0010-708-V4 Tow pins, radar accommodation



FV-0210-708 Step, tow pins



FV-5010-708 2 OEM fogs, tow pins



FV-0010-708 Tow pins



Mounting only


FV-0000-708





FV-0010-708-V4 Tow pins, radar accommodation (ONE-PIECE - AVAILABLE FOR ALL FV BUMPERS)

TOP VIEW



T680 GEN II SET BACK AXLE YEARS 2021 & NEWER MOUNTING BRACKETS INCLUDED





FX-0000-708 Mounting only



FX-0010-708 Tow pins



FX-0010-708-V4 Tow pins, radar accommodation



FX-5210-708 2 OEM fogs, step, tow pins



FX-5010-708 2 OEM fogs, tow pins



FX-0210-708 Step, tow pins





FX-0011-708 Vent, tow pins



FX-5011-708 Vent, 2 OEM fogs, tow pins



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



12"	18
16"	19
18"	20
20"	35

^{*} No warranty for 20" wide bumpers

T280, T380 & T480 SET FORWARD AXLE YEARS 2021 & NEWER



MOUNTS TO FACTORY BRACKETS FOR STEEL REPLACEMENT (SEPARATE BRACKETS REQUIRED TO REPLACE FACTORY URETHANE)





FY-0000-18 Mount Only



FY-5001-18






FY-0001- 18 Vent

W990 YEARS 2021 & NEWER

FZ

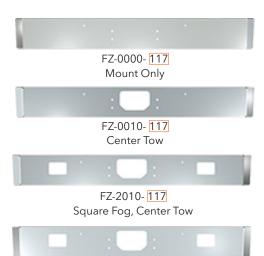







AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

T880S SET FORWARD AXLE YEARS 2017-2023












T880 SETBACK AXLE YEARS 2014 & NEWER







EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



 Width
 End Style


 12"
 01

 16"
 02


 18"
 03

 20"
 31


 22"
 32



Vidth	End Style Code
12"	09
16"	10
18"	11
20"	51
22"	52



	End Style
Vidth	Code
12"	04
16"	05
18"	06
20"	41
22"	42

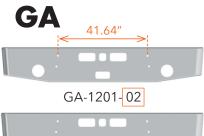








R, RL, F, FL, FS



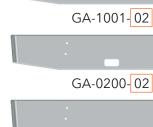






GB

SUPERLINER, CRUISELINER

NOT AVAILABLE IN 12" WIDTH SUPERLINER NOT AVAILABLE IN GULLWING STYLE-07











GB-1010-02



GB-0200-02










GB-1001-02



GB-0011-02



TOW PIN HOLES GB-0000-02










GB-0210-02



. - -






EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



End Style Width Code 12" 01 16" 02 18" 03 20" 31 22" 32



140° Id	End Style
Width	Code
12"	09
16"	10
18"	11
20"	51
22"	52



Width	End Style Code
12"	04
16"	05
18"	06
20"	41
22"	42

R-600, R-700

ADD- GG TO END OF ANY 'GC' PART NUMBER FOR GRILLE GUARD HOLES






















GRILLE GUARDS


FIT OEM BUMPERS AND OUR BUMPERS GC, GH, GS, GV DOES NOT FIT OUR 'GZ' BUMPERS (SEE PAGE 54) STAINLESS STEEL ONLY









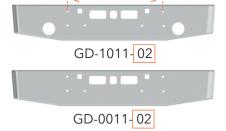







GD-1010-02 GD-1000-02












EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



End Style Width Code 12" 16" 18" 20" 22"


01

02

03

31


32



Width	End Style Code
12"	09
16"	10
18"	11
20"	51
22"	52



Width	End Style Code
12"	04
16"	05
18"	06
20"	41
22"	42

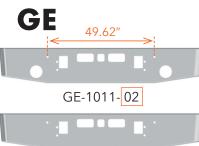
















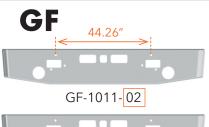




GF-0001-02














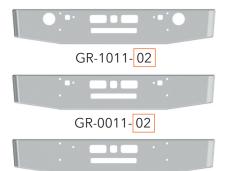


GR-0001- 02

R600 YEARS 1965 TO 1976






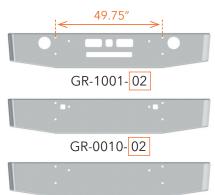




EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



End Style Width Code 12" 01 16" 02 18" 03 20" 31 22" 32



	End Style
Width	Code
12"	09
16"	10
18"	11
20"	51
22"	52



End Style Code
04
05
06
41
42

MH COE, SUPERLINER II, RW613


NOT AVAILABLE IN 12" WIDTH













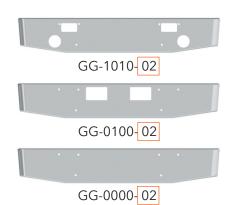


WESTERN CONTRACTOR, RD688, RD690 YEARS 1989-2001 ADD-GG TO END OF ANY 'GH' PART NUMBER FOR GRILLE GUARD HOLES



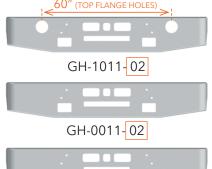


















GRILLE GUARDS

FIT OEM BUMPERS AND OUR BUMPERS GC, GH, GS, GQ, GV DOES NOT FIT OUR 'GZ' BUMPERS (SEE PAGE 54) STAINLESS STEEL ONLY







AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

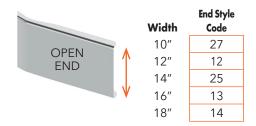




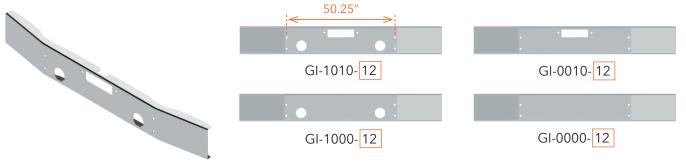

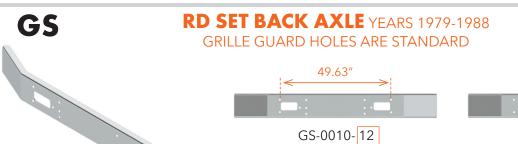


SEE PAGE 53 FOR GRILLE GUARDS


GP MR, MRU, MD SERIES YEARS 2018 & OLDER

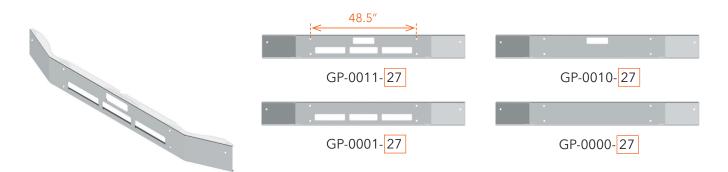

GS-0000- 12

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

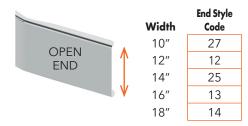

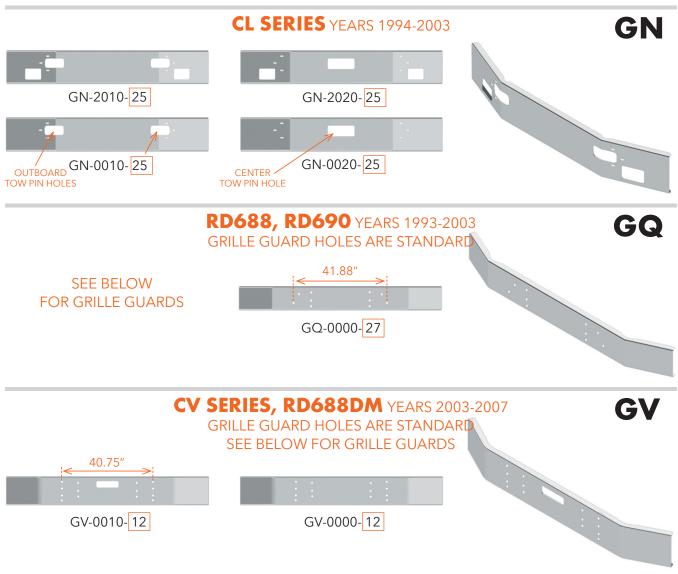

GRILLE GUARDS


FIT OEM BUMPERS AND OUR BUMPERS GC, GH, GS, GQ, GV DOES NOT FIT OUR 'GZ' BUMPERS (SEE PAGE 54) STAINLESS STEEL ONLY







AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

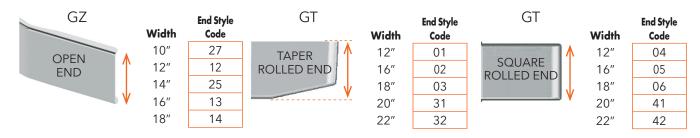

GZ

GRANITE, CTP713, GU713

YEARS 2007 & NEWER







GRILLE GUARDS

FITS GZ BUMPERS AND **OEM EQUIVALENTS ONLY** STAINLESS STEEL ONLY FOR OTHER MACK GRILLE **GUARDS SEE PAGE 53**




GT

GRANITE, BRIDGE FORMULA




AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



CH SERIES SET FORWARD AXLE YEARS 1994-2004

BRACKETS INCLUDED & BOLTED IN



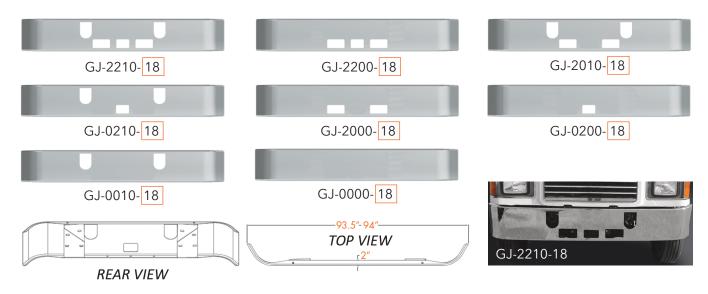


CH SERIES SET FORWARD AXLE YEARS 2005 & NEWER


ALSO FITS RAWHIDE




MOUNTS TO FACTORY BRACKETS, BRACKETS NOT INCLUDED. LICENSE PLATE HOLES INCLUDED.

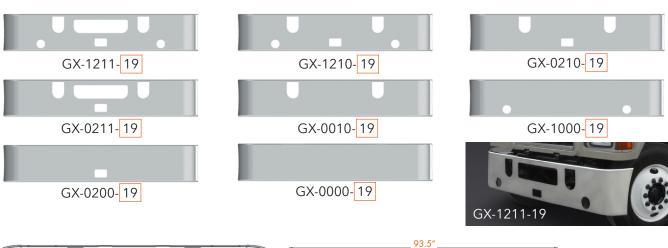





AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




*20" 34 * No warranty for 20" wide bumpers

GM

CH SERIES SET BACK AXLE YEARS 1988-1993


BRACKETS INCLUDED & BOLTED IN

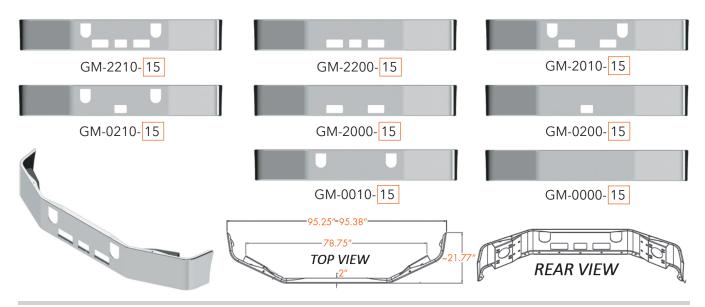


GL

CH SERIES SET BACK AXLE YEARS 1994-2004

BRACKETS INCLUDED & BOLTED IN

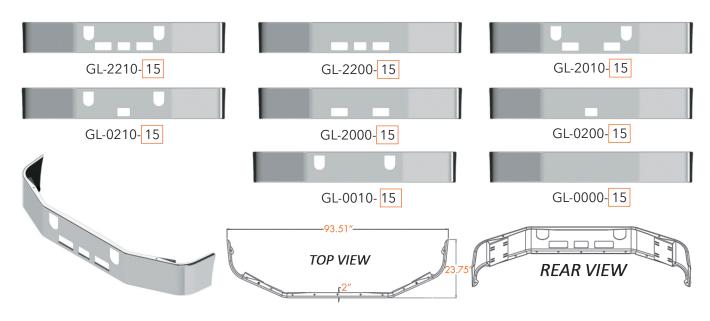


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



CX SERIES, VISION SET BACK AXLE YEARS 2001-2004

GU


MOUNTING BRACKETS INCLUDED

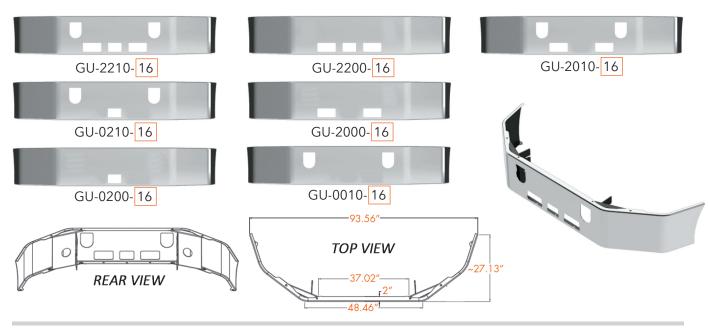

CXP, CXN SERIES SET BACK AXLE YEARS 2005 & NEWER

GW

MOUNTING BRACKETS INCLUDED
ONE SET UPPER LICENSE PLATE HOLES INCLUDED

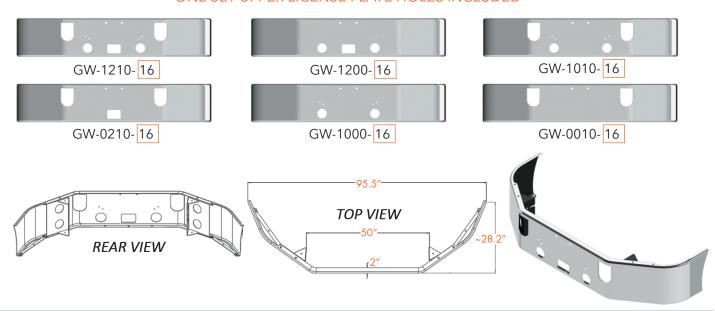

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	
16"	
18"	

*20"

Code	
16	
17	'
34	

* No warranty for 20" wide bumpers

GY

CXU SERIES SET BACK AXLE YEARS 2008 & NEWER

BRACKETS NOT INCLUDED. REPLACES STAINLESS CLAD BUMPERS. BRACKETS REQUIRED FOR URETHANE REPLACEMENT - SEE BELOW

ANTHEM SET BACK AXLE YEARS 2017 & NEWER BRACKETS NOT INCLUDED - REPLACES STAINLESS CLAD BUMPERS ONLY



GY-1211-16
Round fogs, step, tow, vent holes



GY-1200-16 Round fogs, step holes



GY-0211-16 Step, tow, vent holes




GY-0210-16 Step, tow holes








Brackets for CXU plastic veplacement: GY0116BK

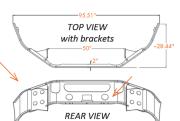

with brackets

GY-0200-16 Step hole

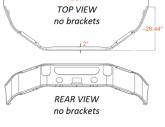

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:









GOA-0000-12 No Cutouts



GOA-0010-12 Center Tow



	End Style	
idth	Code	
1 / //	1/	

W 16 16 18" 17 *20"

* No warranty for 20" wide bumpers

ANTHEM SET BACK AXLE YEARS 2018 & NEWER BRACKETS INCLUDED - REPLACES URETHANE BUMPERS ONLY



GOA



GOB-0000- 16 Mount Only



GOB-0011- 16 Tow Holes, Vent Hole



GOB-0001-16 Vent Hole



GOB-0211-16






GOB-0010- 16 Tow Holes



GOB-2001- 16 2 Square Fogs, Vent Hole




EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

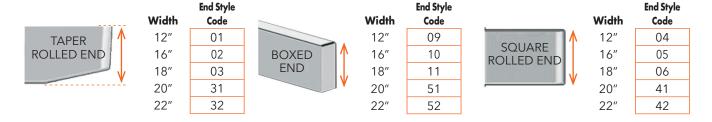

352 CABOVER YEARS 1967-1980


HA

359 CONVENTIONAL YEARS 1967-1986

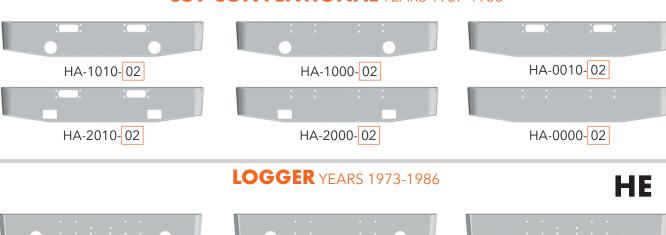




Bumpers and Stainless Accessories made in the USA

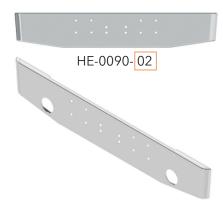

362 CABOVER YEARS 1981 & NEWER NOT AVAILABLE IN 12" WIDTH (-01,-04,-09,-91)

HK

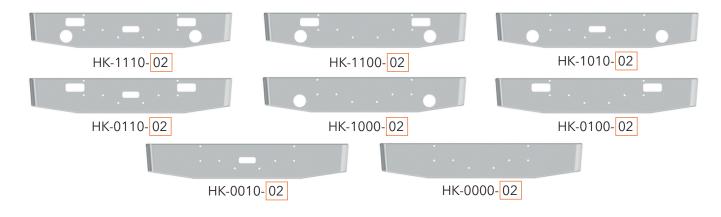

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width Code


12" 01

16" 02

18" 03

20" 31

22" 32




Width Code
12" 09
16" 10
18" 11
20" 51
22" 52





Width Code
12" 04
16" 05
18" 06
20" 41
22" 42

HD

375 CONVENTIONAL YEARS 1987-1994

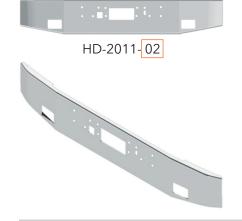

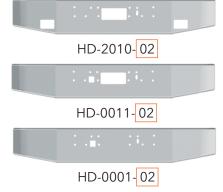

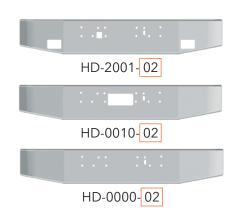

HC

379, 378, 357 YEARS 1987-2007

HC-2000- 02








HC-0010-06

SEE PAGE 61 FOR SUPPORT BRACKETS

HF

LOGGER YEARS 1987-2007



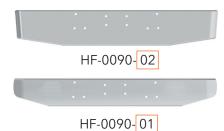

BUMPER SUPPORT BRACKETS - MODEL 379

VP15-06333L-22





ADD THESE BRACKETS FOR A MORE RIGID INSTALLATION.
POWDER-COATED STEEL.
FASTENERS NOT INCLUDED.
SOLD AS A PAIR.

BUMPER SUPPORT BRACKETS - MODEL 389 & 589






SAME BRACKET USED FOR DRIVER & PASSENGER SIDES



EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code	
12"	01	
16"	02	
18"	03	
20"	31	
22"	32	



	End Style	
Width	Code	
12"	09	
16"	10	
18"	11	
20"	51	
22"	52	




Vidth	End Style Code	
12"	04	
16"	05	
18"	06	
20"	41	
22"	42	


HV

365, 367, 388, 389, 567, YEARS 2007 & NEWER **589,** YEARS 2024 & NEWER






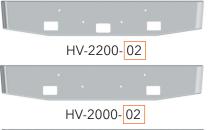







SEE PAGE 61 FOR SUPPORT BRACKETS

HOB


388 HIGH CLEARANCE YEARS 2007 & NEWER NOTE LETTERS 'HOB' IN PART NUMBER










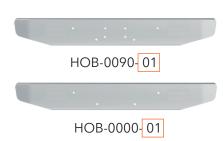




AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



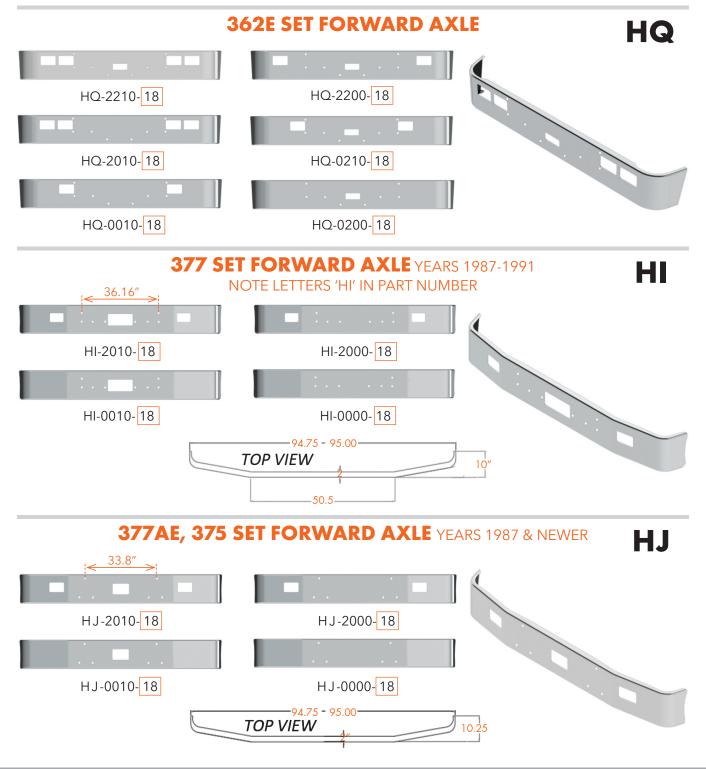


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

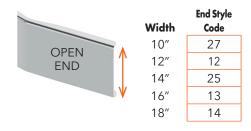

HG


357, 378 SETBACK AXLE YEARS 1987-2004

SEE BELOW FOR TOP FLANGE STEP PLATES CHECK 'HOD' SERIES PRIOR TO ORDERING

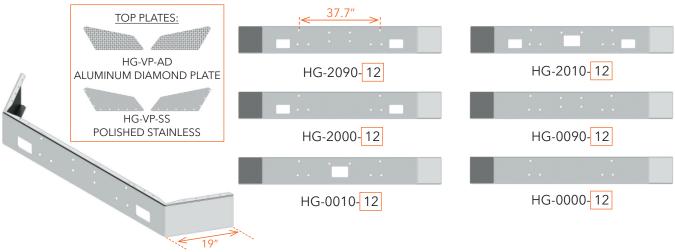


HM

320, 520 CABOVER YEARS 1990 & NEWER AVAILABLE IN 14" ONLY (-25)

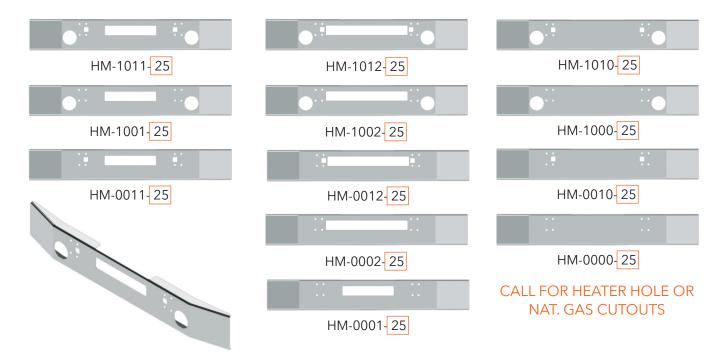

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




377 WITH 119" BBC, SET BACK AXLE YEARS 1987-1997



377AE SET BACK AXLE YEARS 1990 & OLDER

MOUNTING BRACKETS **NOT** INCLUDED, CHECK 'HN' SERIES PRIOR TO ORDERING FOG LIGHT BRACKETS INCLUDED WITH ELIGABLE BUMPERS

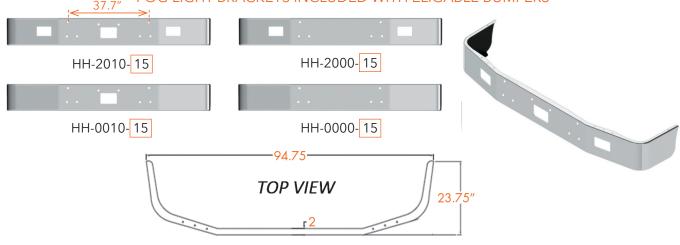


377 WITH 120" BBC / 122"BBC, SET BACK AXLE




385 WITH 120" BBC, SET BACK AXLE YEARS 1997-2007


MOUNTING BRACKETS INCLUDED, CHECK 'HH' SERIES PRIOR TO ORDERING

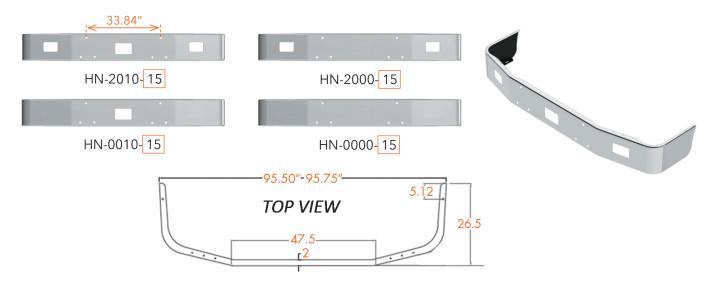


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



HL 385 WITH 112" BBC, SET BACK AXLE YEARS 1995-2007 CHECK 'HY' SERIES PRIOR TO ORDERING

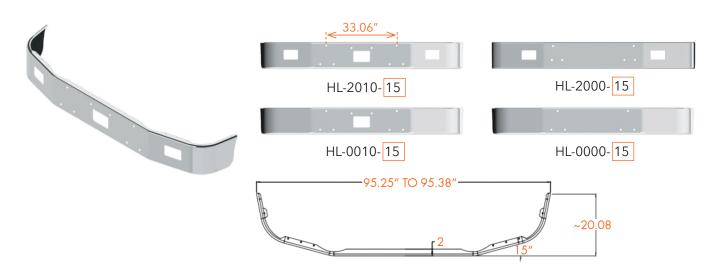

HY 385 WITH 120" BBC, SET BACK AXLE YEARS 1995-2007 CHECK 'HL' SERIES PRIOR TO ORDERING

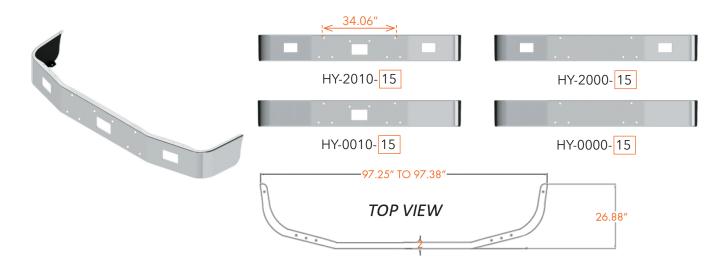


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width

End Style

Code

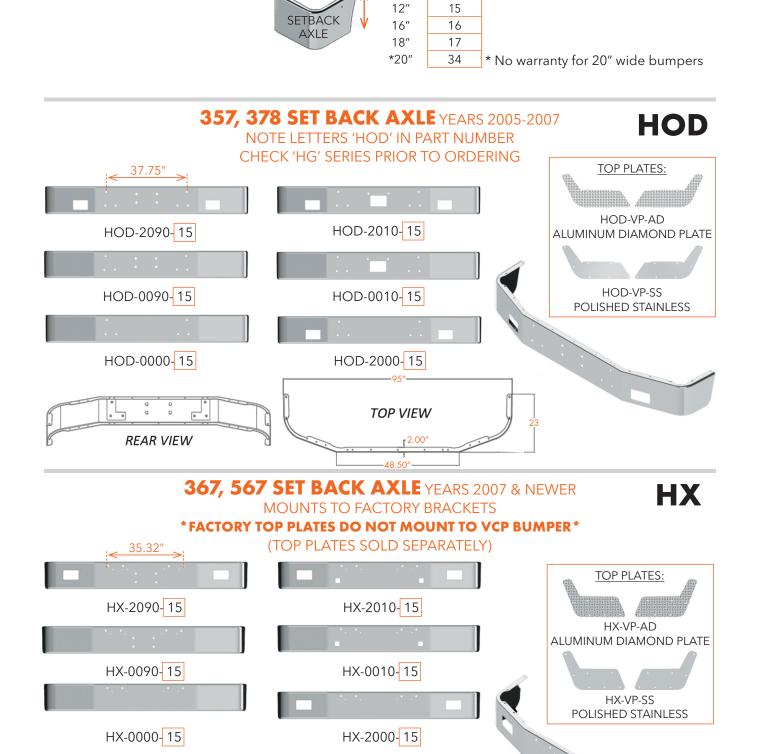

TOP VIEW

REAR VIEW

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




HP


HT	Width	End Style Code
	14"	15
SETBACK V	16"	16
AALE	18"	17
	*20"	34

^{*} No warranty for 20" wide bumpers

330 SET FORWARD AXLE YEARS 1998-2005

12K/14K RATED FRONT AXLE CHECK 'HOF' SERIES PRIOR TO ORDERING ONE SET LICENSE PLATE HOLES INCLUDED

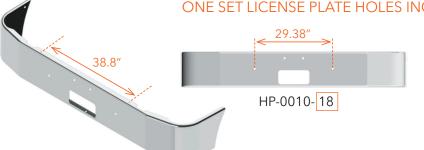




HOF 335HD, 340HD SET FORWARD AXLE YEARS 2006-2014

16K RATED FRONT AXLE

BRACKETS NOT INCLUDED. MOUNTS TO FACTORY BRACKETS.


NOTE LETTERS 'HOF' IN PART NUMBER. CHECK 'HP' SERIES PRIOR TO ORDERING.

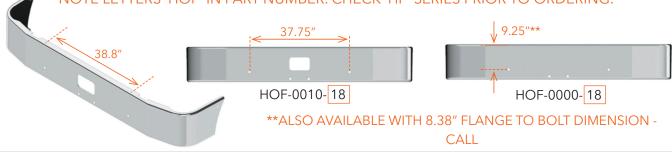

HT 330, 335, 337, 340, 348 SET BACK AXLE YEARS 2006-2014

12K/14K RATED FRONT AXLE MOUNTING BRACKETS INCLUDED


CHECK 'HOC' SERIES PRIOR TO ORDERING. ONE SET LICENSE PLATE HOLES INCLUDED.

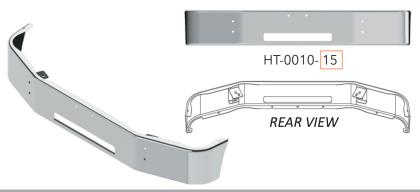






AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



337 SET FORWARD AXLE YEARS 2015 & NEWER

HOC

MOUNTING BRACKETS INCLUDED NOTE LETTERS 'HOC' IN PART NUMBER CHECK 'HT' SERIES PRIOR TO ORDERING

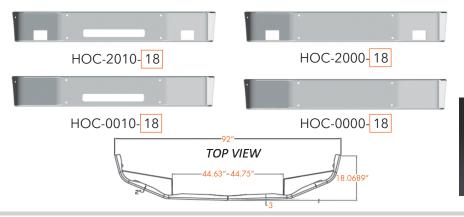




HOC-0010-18

348 SET FORWARD AXLE YEARS 2010 & NEWER NOTE LETTERS 'HOE' IN PART NUMBER

HOE

HOG

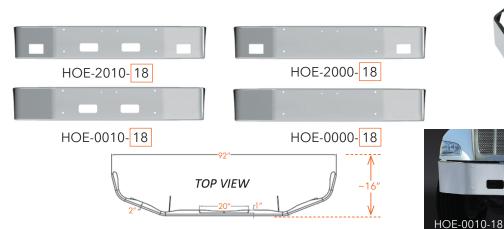



536 & 537 SET FORWARD AXLE YEARS 2021-NEWER

MOUNTS TO FACTORY BRACKETS FOR STEEL REPLACEMENT (SEPARATE BRACKETS REQUIRED TO REPLACE FACTORY URETHANE)













AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




* No warranty for 20" wide bumpers

HR

387 SET BACK AXLE YEARS 1999-2001


MOUNTING BRACKETS INCLUDED AVAILABLE IN 16" TO 20" WIDTHS ONLY

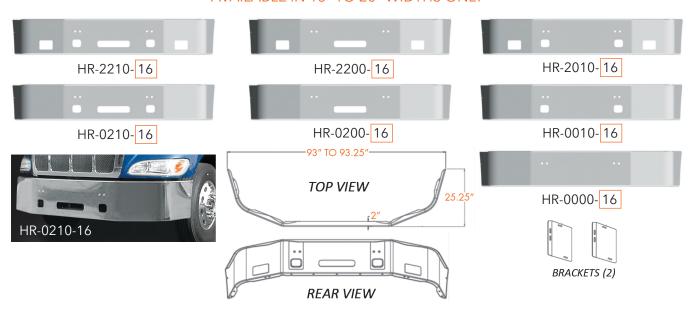

HS

387 SET BACK AXLE YEARS 2002-2011

MOUNTING BRACKETS INCLUDED AVAILABLE IN 16" TO 20" WIDTHS ONLY

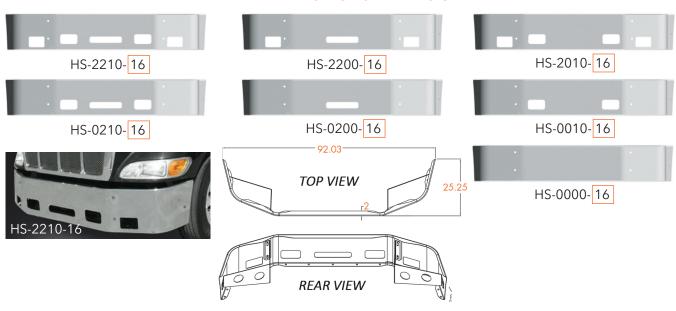

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width				
1	3″			
1	6"			
1	8"			

*20"

End Style Code		
15		
16		
17		
3.4	4	


SEE DESCRIPTIONS BELOW FOR AVAILABLE WIDTHS

* No warranty for 20" wide bumpers

386 SET BACK AXLE YEARS 2006-2015

REPLACES PLASTIC BUMPERS ONLY
MOUNTING BRACKETS INCLUDED
AVAILABLE IN 16" TO 20" WIDTHS ONLY



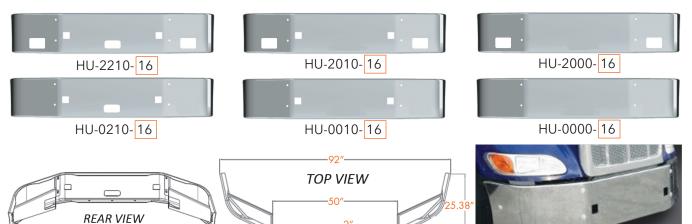


384 SET BACK AXLE YEARS 2008-2015

HW

HU-0010-16

REPLACES STAINLESS CLAD BUMPERS - MOUNTS TO CLAD BRACKETS
CLAD REPLACEMENT AVAILABLE IN 13" WIDTH ONLY
PLASTIC REPLACEMENT REQUIRES MOUNTING BRACKETS:
HW0115BK (13") OR HW0116BK (16")

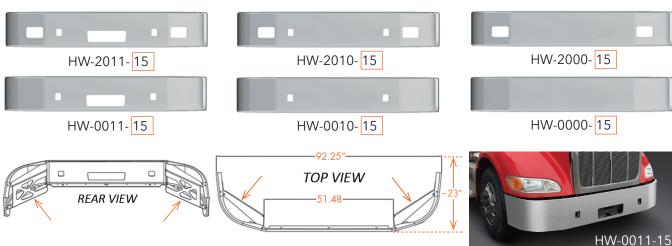

Brackets only for plastic bumper replacement. Sold separately.




PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
16.5"	16Y
18"	17Y



End St		
Width	Code	
16"	16	
18"	17	
*20"	34	

* No warranty for 20" wide bumpers

HZ

579 SET BACK AXLE YEARS 2012-2020

MOUNTING BRACKETS INCLUDED




















587 SET BACK AXLE YEARS 2012 & NEWER

NOTE LETTERS 'HOA' IN PART NUMBER. MOUNTING BRACKETS INCLUDED.

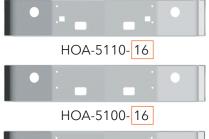





HOA-0010-16





















PETERBILT BUMPERS

HZA

579 GEN II SET BACK AXLE

YEARS 2021 & NEWER MOUNTING BRACKETS INCLUDED SIMILAR OPTIONS AS 'HZ' SERIES ON PREVIOUS **PAGE**



HZA-0010- 16Y



HZA-0000- 16Y




HZA-5010- 16Y






GEN II SET BACKAXLE

YEARS 2021 & NEWER **GRILL INSERTS** (SET OF 2)

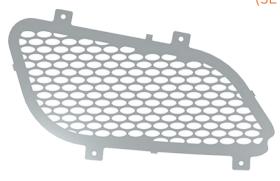


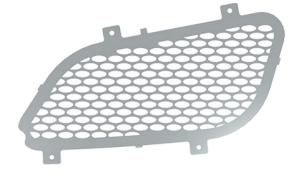

STERLING BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



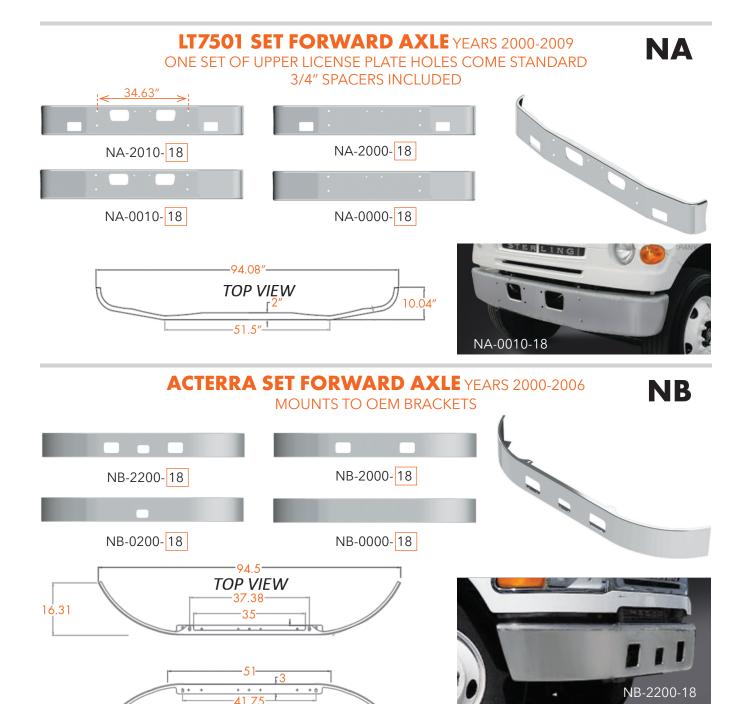

BOTTOM VIEW

STERLING BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



ND	1
SETBACK-AXLE WITH TOP EXTENSIONS	\


	End Style			
Width	Code			
12"	15X			
16"	16X			
18"	17X			
*20"	34X			

^{*} No warranty for 20" wide bumpers

NC STERLING LT9500, LT9513, FORD L-SERIES

YEARS 1996-2009

MOUNTING BRACKETS INCLUDED. ONE SET LICENSE PLATE HOLES STANDARD.

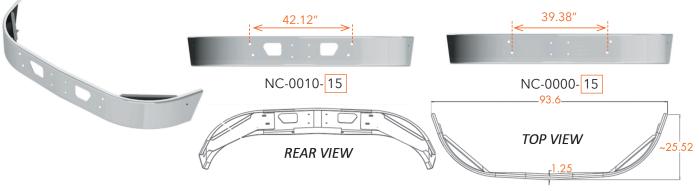






Add "P" to the end of our part number for a black powder coated bumper



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

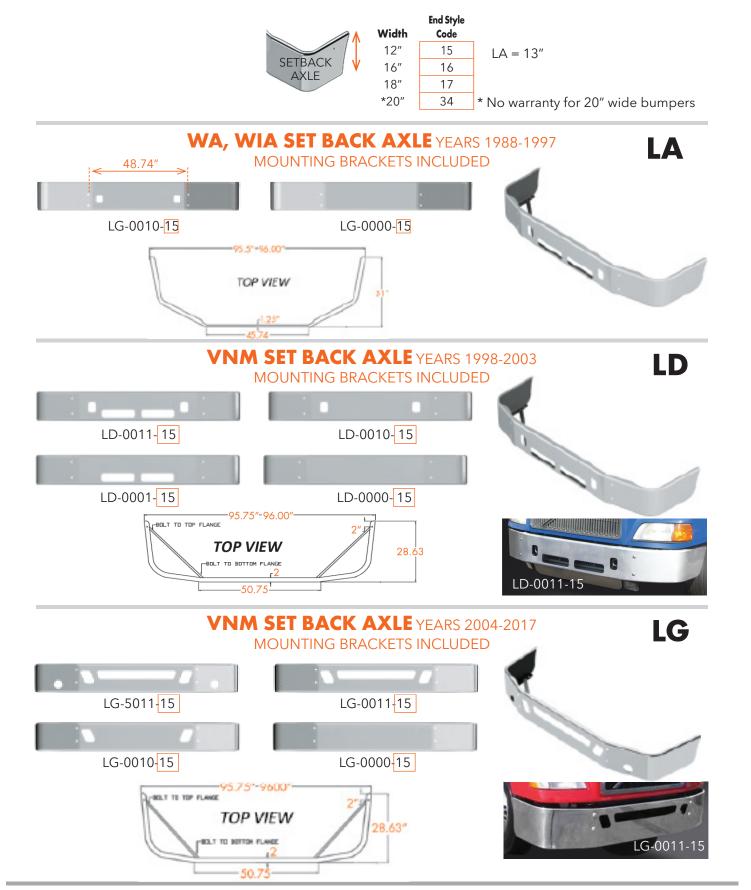


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




WG DAYCAB SET FORWARD AXLE YEARS 1991-2001

SEE 'LC' SERIES FOR NON-DAYCAB

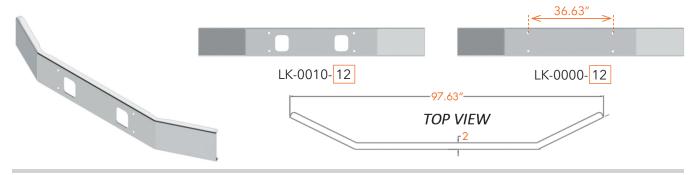


WG SET BACK AXLE YEARS 1991-2001

MOUNTING BRACKETS INCLUDED SEE 'LK' SERIES FOR DAYCAB

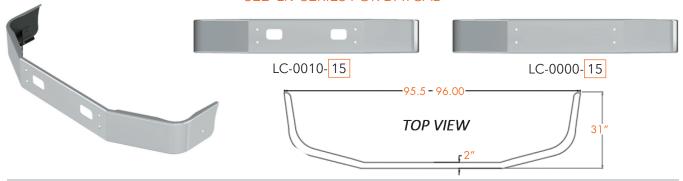

VT SERIES SET BACK AXLE YEARS 2006-2008

NOTE LETTERS 'LI' IN PART NUMBER
ONLY AVAILABLE IN 18" AND 20" WIDTHS
ONE SET UPPER LICENSE PLATE HOLES COME STANDARD

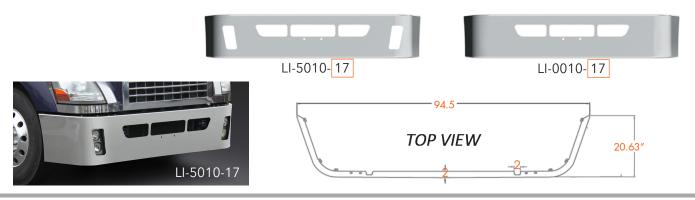


LC

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
16"	02
18"	03
20"	31
22"	32

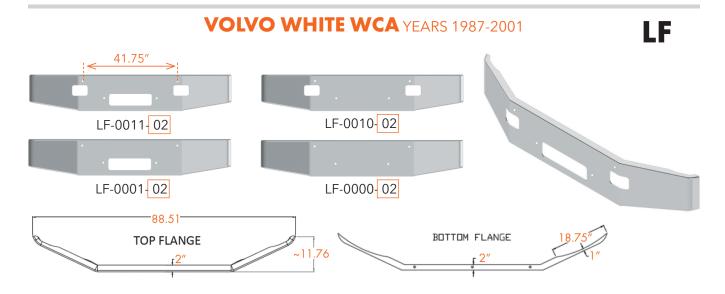


VHD SERIES SET FORWARD AXLE YEARS 2005-2021

MOUNTING BRACKETS AND BLACK POWDER COATED GRILLE FILLER INCLUDED NOT AVAILABLE WITHOUT VENT HOLES FITS 14,600LB FRONT AXLE ONLY








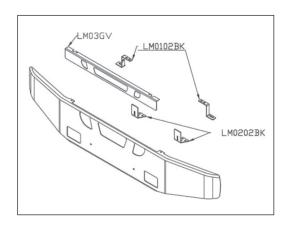






AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




VNL SET BACK AXLE YEARS 1996-2003

REPLACES PLASTIC/FIBERGLASS BUMPERS ONLY
MOUNTING BRACKETS INCLUDED
SEE 'LE' SERIES FOR REPLACING STAINLESS CLAD BUMPERS
MUST BE 16" (16) FOR FOG LIGHT OPTIONS

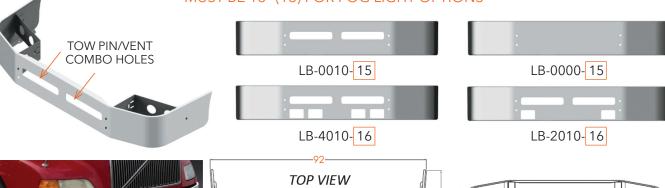








VNL SET BACK AXLE YEARS 1996-2003

REPLACES STAINLESS CLAD BUMPERS ONLY MOUNTING BRACKETS INCLUDED

SEE 'LB' SERIES FOR REPLACING PLASTIC/FIBERGLASS BUMPERS

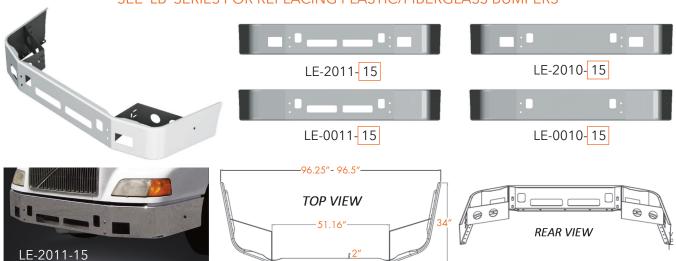

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14"	15
16"	16
18"	17
*20"	34

* No warranty for 20" wide bumpers

VNL SET BACK AXLE YEARS 2004-2017

MOUNTING BRACKETS INCLUDED





LH-5011- 15 OEM fog lights, tow pins, vent holes



LH-5010- 15 OEM fog lights, tow pin holes




LH-0011- 15 Tow pin holes, vent hole



LH-2011- 15 Rectangular fog lights, tow pins, vent holes




LH-2010- 15 Rectangular fog lights, tow pin holes



LH-0010- 15 Tow pin holes



LH-0000- 15 Mounting bolts only

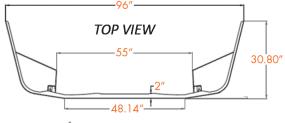







AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14"	15
16"	16
18"	17
*20"	34

* No warranty for 20" wide bumpers




VNR SET BACK AXLE YEARS 2018 & NEWER

MOUNTING BRACKETS INCLUDED



















LL


VNL SET BACK AXLE YEARS 2018 & NEWER MOUNTING BRACKETS INCLUDED


LL-5011-15





















EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

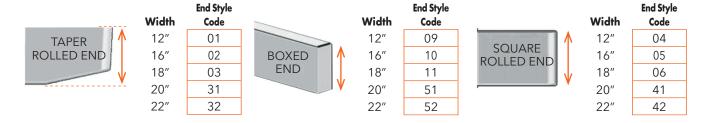








IB

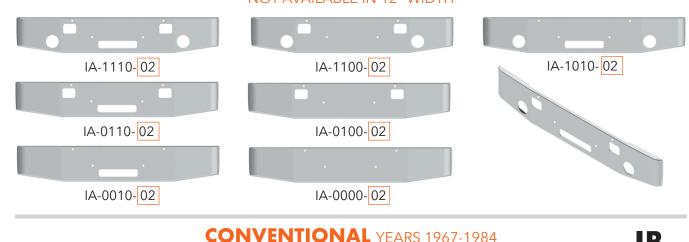


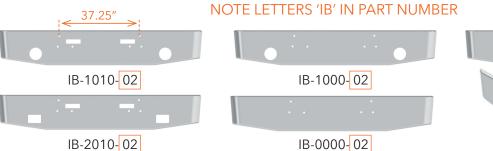

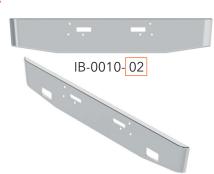


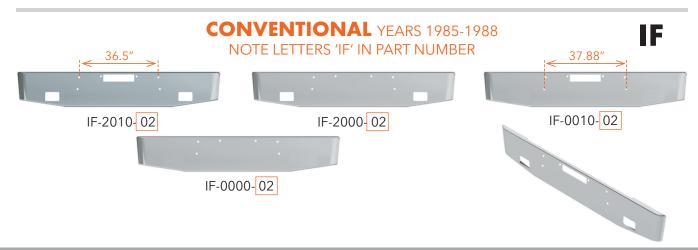

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12"	01
16"	02
18"	03
20"	31
22"	32



Width Code
12" 09
16" 10
18" 11
20" 51
22" 52




	End Style		
Vidth	Code		
12"	04		
16"	05		
18"	06		
20"	41		
22"	42		

IC


4900SF, 4900EX, CONSTELLATION, LOWMAXX, HERITAGE

YEARS 1989-2007 AND SIMILAR CHASSIS. NOTE LETTERS 'IC' IN PART NUMBER.

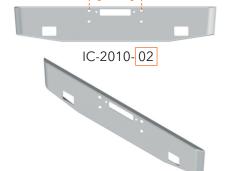






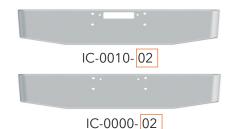



4900SF YEARS 2008 & NEWER

NOT AVAILABLE IN 12" WIDTH. NOTE LETTERS 'IH' IN PART NUMBER.
















IM

IM-2110-06

4700SF YEARS 2008 & NEWER

NOT AVAILABLE IN 12" WIDTH. NOTE LETTERS 'IM' IN PART NUMBER.

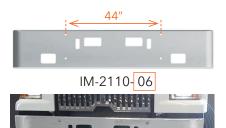


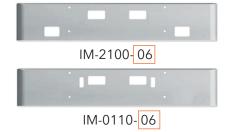





AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

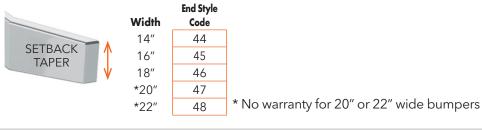

4900\$A YEARS 1989-2007 NOTE LETTERS 'II' IN PART NUMBER

II-2010-44

II-0010-44


II-0000-44

II-0000-44


II-0000-44

II-0010-44

4900SA YEARS 2008 & NEWER NOTE LETTERS 'IJ' IN PART NUMBER ALSO CHECK 'IK' AND 'IL' SERIES PRIOR TO ORDERING

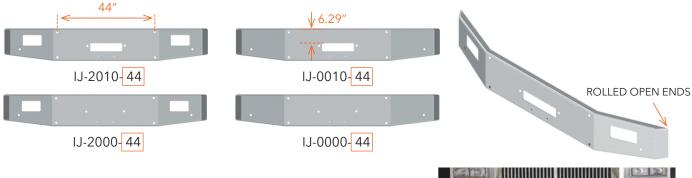






IJ


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



^{*} No warranty for 20" or 22" wide bumpers

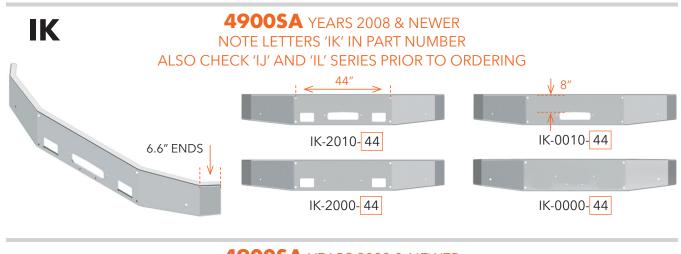



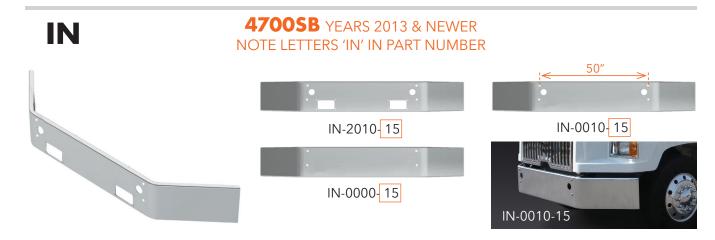

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



5700XE YEARS 2015 & NEWER

10

ONLY FITS STANDARD WIDTH FRAMES WITH ~1400 SQ. INCH RADIATORS MOUNTING BRACKETS AND TOP FLANGE STAINLESS EXTENSIONS INCLUDED NOTE LETTERS 'IO' IN PART NUMBER



IO-5010-708 -V5

Fogs, tow pins, radar accommodation

IO-0000- 708 -V5



Fogs, radar accommodation



IO-0010-708 -V5 Tow pins, radar accommodation



Tow pin holes

IO-0010-708



IO-0000- 708 Mounting holes only









Width	Code	, w, (ib) (bbb 5)	YLES FOR PROL	OUCISIN End Style	THIS SECTION	Width	Code	
		IR, IS		Code	10,11	- 12"	01	
16"	45	OPEN END	SQUARE 16"	05	TAPER	16"	02	
18"	46	W/TAPER	ROLLED END 18"	06 41	ROLLED END	18"	03	
*20"	47	**********	<u> </u>	42	The state of the s	/ 20"	31	
*22"	48	V	* No warranty for 20" or 2	2" wide humpers		22"	32	

47X SET FORWARD AXLE YEARS 2022-NEWER









49X SETBACK AXLE SD YEARS 2021-NEWER

Only (-45) End Style Mounts to Factory Brackets











47X SETBACK AXLE YEARS 2022-NEWER

IS

Only (-45) End Style Mounts to Factory Brackets













AVAILABLE STYLES FOR PRODUCTS IN THIS SECTION: 16" 18"



IP

5700XE YEARS 2015 & NEWER
ONLY FITS WIDER FRAMES WITH HIGH-CAPACITY RADIATOR
MOUNTING BRACKETS AND TOP FLANGE STAINLESS EXTENSIONS INCLUDED
NOTE LETTERS 'IP' IN PART NUMBER








WHITE BUMPERS


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:






ROAD BOSS 2, ROAD COMMANDER 2

YEARS 1972-1983 NOT AVAILABLE IN 12" WIDTH

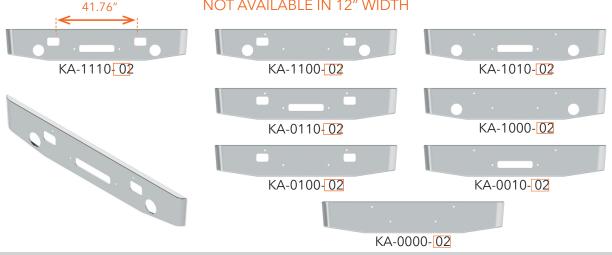


KB

XPEDITOR YEARS 2003-2010 NOTE OUTSIDE SHAPE & BOLT PATTERN PRIOR TO ORDERING






Add "P" to end of any bumper part number for black powder coated steel

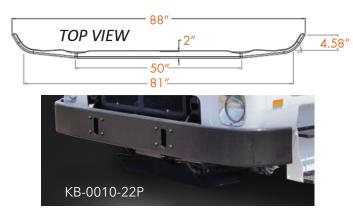


"UNIVERSAL" MOUNT BLANK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

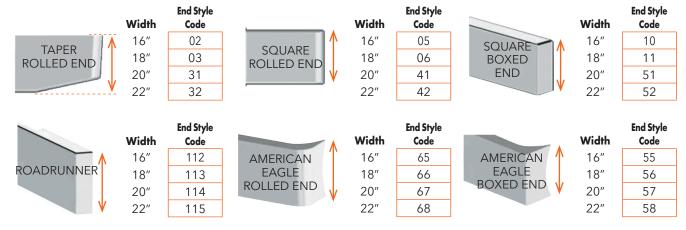


SEE MORE BUMPER STYLES ON PAGE 7

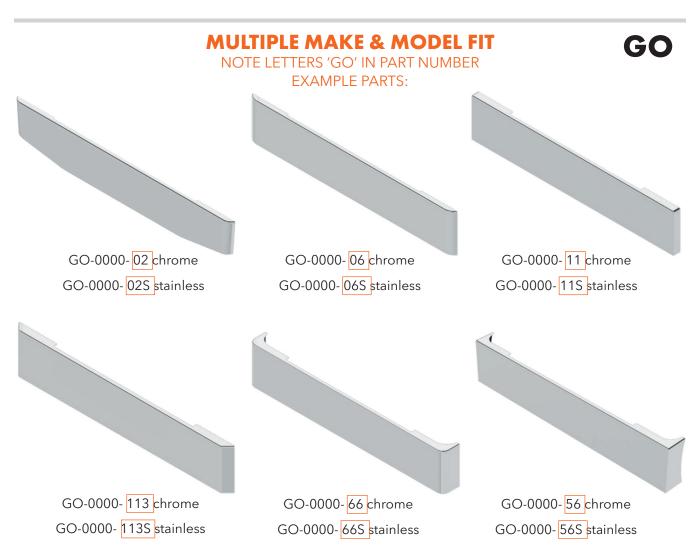


NOTE: DRILLING INTO A CHROME BUMPER IMMEDIATELY VOIDS ALL WARRANTIES. WE RECOMMEND STAINLESS BUMPERS IF PLANNING TO DRILL INTO A BUMPER.

BLIND MOUNT BUMPERS

BLIND MOUNT BRACKETS:

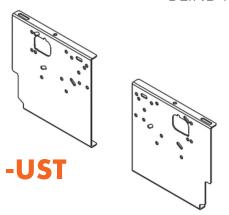

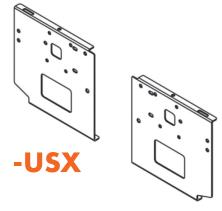

FITS THESE VALLEY CHROME MODEL CODES:

CB, CQ, FD, FE, HA, HC, GO

FITS THESE VALLEY CHROME MODEL CODES:

CU, CV, HC, HV, IC, GO

UST TOP FLANGE

USX TOP FLANGE

HOW TO CREATE A BLIND MOUNT BUMPER:

- 1. IDENTIFY YOUR MAKE & MODEL CODE FROM OUR CATALOG (EXAMPLE: PETE 389= 'HV')
- 2. CHOOSE YOUR CUTOUTS:

XXXX = no cutouts/no mounting bolts will show

2XXX = rectangular fog light cutouts only

2X1X = rectangular fog light and tow pin cutouts only

XX1X = tow pin cutouts only

XX10 = tag hanger bolt holes only ('HC' Peterbilt 379 only)

- 3. PICK YOUR END STYLE FROM PAGE 7
- 4. ADD ANY LIGHT OPTION CODES, IF DESIRED (SEE PAGES 89-90)
- 5. ADD LICENSE PLATE OPTION CODES, IF DESIRED (SEE PAGE 89)
- 6. APPLY 'UST' OR 'USX' SUFFIX ACCORDING TO BRACKETS SHOWN IN SECTION ABOVE



FROM THE ORIGINATORS OF THE BOLTLESS LOOK!








BUMPER MARKER LIGHT OPTIONS

SOME POPULAR OPTIONS SHOWN MIX & MATCH YOUR OWN COMBINATIONS SEE PAGE 106 FOR LED LIGHT OFFERINGS

GRANITE EXAMPLES: GRANITE MINI EXAMPLES: 34" BULLSEYE EXAMPLES: KITS INCLUDE LIGHTS, BEZELS, WIRE HARNESS KITS INCLUDE LIGHTS, BEZELS, WIRE HARNESS KITS INCLUDE LIGHTS, BEZELS, WIRE HARNESS MAX BULLSEYE FOR FLAT BUMPERS MAX GRANITES FOR TX SQ BUMPERS MAX GRANITE MINI FOR TX SQ BUMPERS WITH 1.25" SPACING 000000 -9GCA -25GMCA -74BYCA -8GCA -20GMCA -46BYCA -6GCA -8GMCA -20BYCA -4GCA -6GMCA -6BYCA MAX BULLSEYE FOR FLAT BUMPERS MAX GRANITES FOR TX SQ BUMPERS MAX GRANITE MINI FOR TX SQ BUMPERS WITH 1.25" SPACING -9GA -25GMA -74BYA -8GA -20GMA -25BYA -6GA -8GMA -15BYA on boxed end bumper -6GMA -2BYA STANDARD LICENSE TOP TWO LICENSE 'FRENCHED' INSET **PLATE HOLES:** PLATE HOLES: LICENSE PLATE BOX: -FL01 -L01 -L2 PLACEMENT DEPENDS ON **BUMPER DESIGN** -L02

BUMPER MARKER LIGHT OPTIONS

SOME POPULAR OPTIONS SHOWN MIX & MATCH YOUR OWN COMBINATIONS SEE PAGES 106 FOR LED LIGHT OFFERINGS

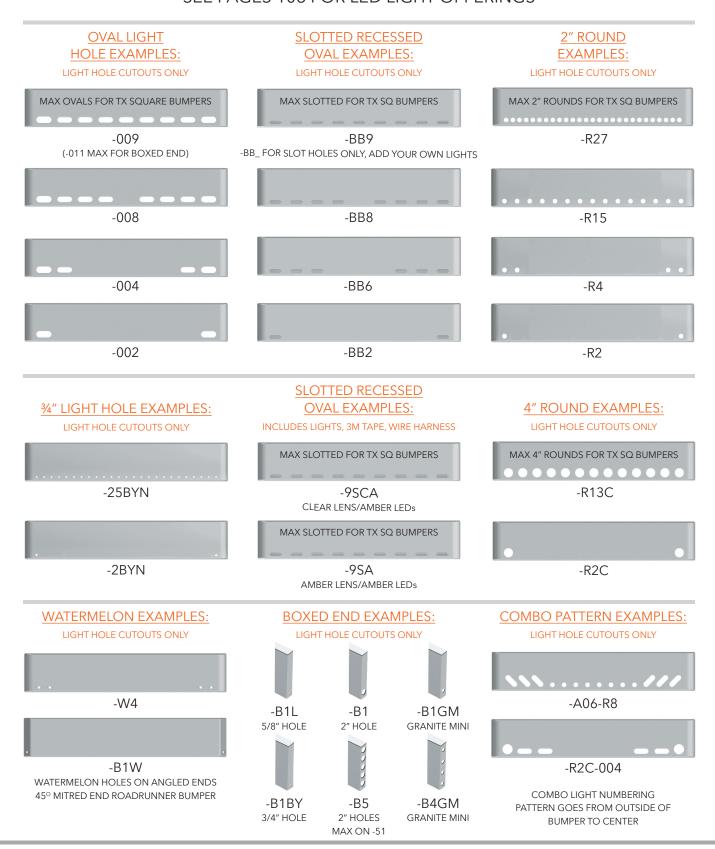



BUMPER LASER-CUT TEXT OPTIONS



LIGHT BOXES TO MOUNT BEHIND YOUR GRAPHIC



LX-24 MOUNTED BEHIND DUPONT LOGO - ACTUAL NASCAR HAULER -





BUMPER MOUNTING BOLT KITS


'UNIVERSAL' HEX BOLT SERIES

PACKAGED FOR RETAIL POLISHED STAINLESS STEEL BOLTS SIZE: #12 - 1.75 x 50 PARTIAL THREAD ZINC PLATED WASHERS AND LOCKNUTS

WHITE NYLON WASHERS PROTECT CHROME SURFACE AFTER INSTALLATION





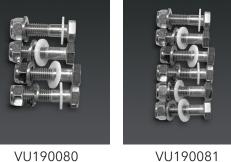



4 PCS KIT

VU190081 6 PCS KIT

VU190082 8 PCS KIT





PACCAR SERIES

PACKAGED FOR RETAIL FITS PETERBILT 389 & KENWORTH W990 & SIMILAR CHASSIS ZINC PLATED WASHERS AND LOCKNUTS WHITE NYLON WASHERS PROTECT CHROME





NOTES

UNIVERSAL ACCESSORIES SECTION

LED LIGHTING AND STAINLESS PARTS TO FIT MOST TRUCK MAKES



UNIVERSAL

FLAP WEIGHTS

WEIGHTS INCLUDE MOUNTING HARDWARE EACH SOLD AS A PAIR



UNIVERSAL FLAP WEIGHT 24" - BOTTOM - ANY MAKE - 11GA. STAINLESS - GIRLS



VU190003 UNIVERSAL FLAP WEIGHT - 24"- U SHAPED BOTTOM - 11GA. STAINLESS



UNIVERSAL FLAP WEIGHT 24" - BOTTOM - ANY MAKE - 11GA. STAINLESS



VU190102 UNIVERSAL FLAP WEIGHT - 24" - BOTTOM - ANY MAKE - 11GA. STAINLESS - STEER HEAD





VU190109 UNIVERSAL FLAP WEIGHT - 24"- U SHAPED BOTTOM - 11GA. STAINLESS - STEER HEAD

STRAPS






VU190061 AIR TANK WRAP - FITS 9.75 STAINLESS AIR TANK - 1 PC COVER ONLY



TAG HANGERS


EACH INCLUDE MOUNTING HARDWARE. FOAM PROTECTORS & TAG MOUNTING PLASTIC INSERTS



VP120000 HINGED 1 TAG HANGER 18 GA. STAINLESS **PFTF 389**



VP120001 VP120017 HINGED 1 TAG HANGER 24 GA. STAINLESS HINGED 1 TAG HANGER 18 GA. STAINLESS PETE 379 & SIMILAR PETE 379 & SIMILAR



VU190007 HINGED 2 TAG HANGER (PB, KW, FL)




VU190035-2W SINGLE TAGE HANGER W/2 WATERMELON CUTOUTS MOUNTS UNDER



VU190035 TAG HANGER - SINGLE TAG - 90 DEGREE



VU190036 TAG HANGER - SINGLE 2 TAG - 90 DEGREE MOUNTS UNDER



MOUNTS UNDER

VU190037 TAG HANGER - SINGLE 3 TAG - 90 DEGREE



VU190008 HINGED 3 TAG HANGER (PB, KW, FL)

TAG HANGERS WITH WATERMELONS INSTALLED







VU190007-2WA DUAL TAG HANGER W/2 AMBER WATERMELONS



VU 190008-2WA TRIPLE TAG HANGER W/2 AMBER WATERMELONS



UNIVERSAL

PERMIT PANELS

HINGED PANELS INCLUDES MOUNTING HARDWARE



VU190090 HINGED PERMIT PANEL 4 X 4



VU190091 HINGED PERMIT PANEL 4 X 8



VU190092 HINGED PERMIT PANEL 4 X 10



VU190093 HINGED PERMIT PANEL 4 X 12



VU190094 HINGED PERMIT PANEL 5 X 4



VU190095 HINGED PERMIT PANEL 5 X 8



VU190096 HINGED PERMIT PANEL 5 X 10



VU190097 HINGED PERMIT PANEL 5 X 12

FLAT PANELS INCLUDE STRONG 3M DOUBLE SIDED TAPE



VU190098 FLAT PERMIT PANEL 4 X 4 - TAPE MOUNT



VU190099 FLAT PERMIT PANEL 4 X 8 - TAPE MOUNT



VU190103 FLAT PERMIT PANEL 4 X 10 - TAPE MOUNT



VU190104 FLAT PERMIT PANEL 4 X 12 - TAPE MOUNT



VU190105 FLAT PERMIT PANEL 5 X 4 - TAPE MOUNT



VU190106 FLAT PERMIT PANEL 5 X 8 - TAPE MOUNT



VU190107 FLAT PERMIT PANEL 5 X 10 - TAPE MOUNT



VU190108 FLAT PERMIT PANEL 5 X 12 - TAPE MOUNT

UNIVERSAL

RIDGED PERMIT PANELS

90-DEGREE BEND AT TOP, NO-HINGE INCLUDES MOUNTING HARDWARE CUSTOMER DRILLS TO FIT



VU190110 RIDGED PERMIT PANEL 4 X 4



VU190111 RIDGED PERMIT PANEL 4 X 8



VU190112 RIDGED PERMIT PANEL 4 X 10



VU190113 RIDGED PERMIT PANEL 4 X 12



VU190114 RIDGED PERMIT PANEL 5 X 4



VU190115 RIDGED PERMIT PANEL 5 X 8



VU190116 RIDGED PERMIT PANEL 5 X 10



VU190117 RIDGED PERMIT PANEL 5 X 12

BEACON LIGHT BRACKETS

INCLUDES MOUNTING HARDWARE



VU190100 BECON LIGHT BRACKET 8" X 8" - PR

UNIVERSALAIRLINE BOXES

MOUNTING HARDWARE INCLUDED AIR LINE BOXES ARE 32" LONG - CLOSED BACK

NOT AVAILABLE IN 430 STAINLESS.

VU190015 AIR LINE BOX - STANDARD


VU190016R AIR LINE BOX - 2-PLUG







VU190015D AIR LINE BOX - RECESSED

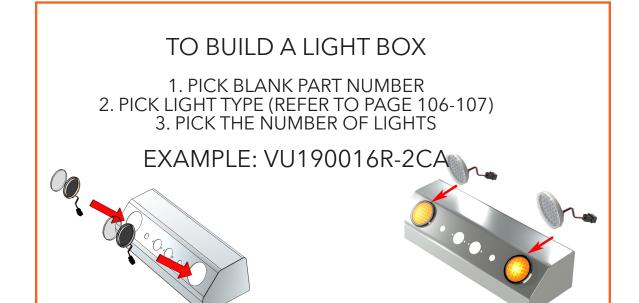

UNIVERSAL

DECK PLATES



VU190017

DECK PLATE - 36" X 34"
SMOOTH

STAINLESS - OVER FRAME RAILS



VU192010 FRONT DECK PLATE - 83" X 27" 11G, SS - BETWEEN FRAME RAILS



VU190018
DECK PLATE - 48" X 34" SMOOTH
STAINLESS - OVER FRAME RAILS



VU192011 MID DECK PLATE - 44" X 27" 11G, SS - BETWEEN FRAME RAILS



MID DECK PLATE - 77" X 27" 11G, SS - BETWEEN FRAME RAILS




VU190017 REAR DECK PLATE - 29" X 34" -SMOOTH ROLLED EDGES - OVER FRAME RAILS



VU192012 REAR DECK PLATE - 48" X 27" 11G, SS - BETWEEN FRAME RAILS

FRONT DECK PLATE TOOL BOX

VU192021 UNIVERSAL FRONT DECK PLATE TOOL BOX W/LOCK - 24" X 24"

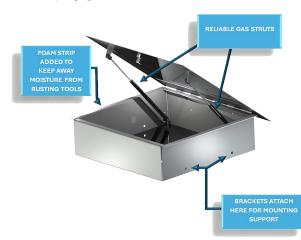








UNIVERSAL

REAR FRAME TOOL BOX



VP150119

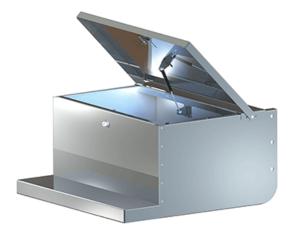

- Highly polished 304 non-directional stainless steel
- All makes fit, anywhere frame space and ground clearance is available
- Lock and keys included
- Direct raised lid with gas shock
- Brackets and hardware not included, fit to your custom location





UNIVERSAL

FRAME STEPS

INCLUDES SLIP RESISTANT GRIP TAPE



VU191103 FRAME STEPS - 12" STAINLESS STEPS & SIDES

VU191104 FRAME STEPS - 18" STAINLESS STEPS & SIDES

VU191105 FRAME STEPS - 24" STAINLESS STEPS & SIDES






VU191106 FRAME STEPS - 12" ALUMINUM STEPS & SIDES

VU191107 FRAME STEPS - 18" ALUMINUM STEPS & SIDES

VU191108 FRAME STEPS - 24" ALUMINUM STEPS & SIDES

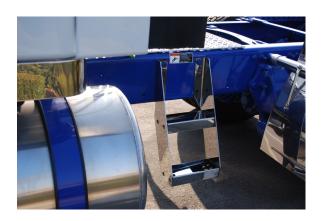





UNIVERSAL

REAR WINDOW VISORS

NOT AVAILABLE ON DAYCAB

INCLUDES STRONG 3M DOUBLE-SIDED TAPE AND MOUNTING HARDWARE



VU193020-BT **REAR VISOR GANGSTER-BOWTIE**



VU195020 **REAR VISOR WICKED -ONE-PIECE**



REAR VISOR GANGSTER



EXAMPLE VU193020P REAR VISOR GANGSTER



FOR PAINTABLE **RAW18 GAUGE STEEL** COLORS SHOWN EXAMPLES ONLY



EXAMPLE VU193020P-BT **REAR VISOR - GANGSTER BOWTIE**

REAR FRAME FILLERS

BOXES COME WITH VU190201 BACK COVER 18-GAUGE STAINLESS STEEL MOUNTING HARDWARE INCLUDED



VU190203 REAR FRAME FILLER 2, 4" RND LEDS & 3, GRANITE **RED LEDS**







REAR FRAME FILLER 4, 4" RND LEDS & 5, 2" **RND**



REAR FRAME FILLER 12, 2" RND LEDS



VU190201 REAR FRAME FILLER **BACK COVER**



REAR FRAME FILLER 4, 4" RND LEDS & 5, 2" RND LEDS, W/STEERHEAD





UNIVERSAL

REAR FRAME FILLERS

NOT AVAILABLE ON DAYCAB

INCLUDES STRONG 3M DOUBLE-SIDED TAPE AND MOUNTING HARDWARE



VU190208 REAR FRAME FILLER - 2 - 4" RD / 3 - GRANITE- LEDS -W / STEERHEAD



VU190209 REAR FRAME FILLER - 4 - 4" RD - LEDS - CLEAR LENS / EACH CORNER



VU190210 REAR FRAME FILLER - 4 - 4" RD / 5 - 2" RD - LEDS -CLEAR LENS



VU190211

REAR FRAME FILLER - 12 - 2"

RD - LEDS - CLEAR LENS /

OVAL



VU190212 REAR FRAME FILLER - 2 - 4" RD / 8 - 2" RD - LEDS -CLEAR LENS



VU190213 REAR FRAME FILLER - 2 - 4" RD / 3 - GRANITE - LEDS -CLEAR LENS



VU190214

REAR FRAME FILLER - 4 -4"

RD / 5 - 2" RD - LEDS - CLEAR

LENS - W / STEERHEAD



VU190214-4CR-5RR (chrome light bezels not included)

Mud flap weights VU190109 also shown

UNIVERSAL

LOWER REAR FRAME FILLERS



VU199002 LOWER REAR FRAME FILLER



VU199002-4CN LOWER REAR FRAME FILLER -4 ROUND CUTOUTS



VU199005 LOWER REAR FRAME FILLER -379 - BLANK



VU199002-5CN LOWER REAR FRAME FILLER -5 ROUND CUTOUTS



VU199002-5CR shown, includes lights and harness CHROME LIGHT BEZELS NOT INCLUDED WILL NOT WORK ON ALUMINUM FRAMES

UNIVERSAL

RETAIL DISPLAY - LEDs

For authorized distributors



2 PACKAGES AVAILABLE:

PART# VULIGHTKIT3 FOR 12 OF EACH LIGHT AND DISPLAY BOARD PART# VULIGHTKIT4 FOR 24 OF EACH LIGHT AND DISPLAY BOARD

Actual light display board may vary from illustration above.



UNIVERSAL

LED LIGHT OPTION CHART

Use the following light chart to build your rear light bars, cab and sleeper panels, hood extension panels, and so on. Use the first letter in the name of the light and the form you wish the light to be.

Solid Accessory Part Number	Dash	Amount of Lights	Lights name - 1st letter	Lights Color		Complete Part Number with Lights
Vxxxxxx	-	×	×	×	=	Vxxxxxxx-XXX
VP142007	-	7	G	СА	=	VP142007-7GCA

EXAMPLE:



VP142007-7GCA

Peterbilt 379 cab panel VP142007, with seven Granite clear lens amber LED light assemblies & wire harness

LIGHT OFFERINGS WITH LETTER AND LIGHT COLOR CODES:



OVAL 6" Amber lens, Amber LEDs = O A Clear lens, Amber LEDs = O CA Red lens, Red LEDs = O R Clear lens, Red LEDs = O CR



GRANITE Amber lens, Amber LEDs = G A Clear lens, Amber LEDs = G CA Red lens, Red LEDs = G R Clear lens, Red LEDs = G CR



GRANITE MINI

Amber Iens, Amber LEDs = GM A

Clear Iens, Amber LEDs = GM CA

Red Iens, Red LEDs = GM R

Clear Iens, Red LEDs = GM CR



Amber lens, Amber LEDs = R A Clear lens, Amber LEDs = R CA

Red lens, Red LEDs = R R Clear lens, Red LEDs = R CR



CORAL 4" ROUND

Amber lens, Amber LEDs = C A
Clear lens, Amber LEDs = C CA
Red lens, Red LEDs = C R
Clear lens, Red LEDs = C CR



BULLSEYE ¾" ROUND

Amber lens, Amber LEDs = BY A Clear lens, Amber LEDs = BY CA Red lens, Red LEDs = BY R Clear lens, Red LEDs = BY CR



UNIVERSAL

BLANK LIGHT CUTOUT OPTIONS


Add your own lights to our accessories, but first get the correct cutouts:

Solid Accessory Part Number	Dash	Amount of Lights	Lights name - 1st letter	Lights Color		Complete Part Number with Lights
Vxxxxxx	-	X	X	×	=	Vxxxxxx-XXX
VP142007	-	10	BY	N	=	VP142007-10BYN



Peterbilt 379 cab panel VP142007, with ten open ¾" light holes

CUTOUT CODES:

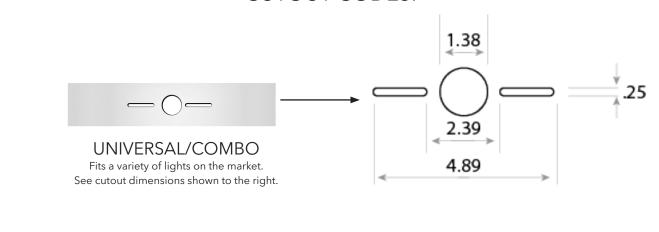



"N" LIGHT COLOR INDICATES NO LIGHTS/OPEN CUTOUT



3-YEAR WARRANTY

VU-860L

2" Round



UNIVERSAL LED LIGHTS

- 9 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes a rubber grommet when ordered as a kit with bumper or accessory


Part Numbers	Lens Color	LED Color
VU-860L-A	Amber	Amber
VU-860L-CA	Clear	Amber
VU-860L-R	Red	Red
VU-860L-CR	Clear	Red

3-YEAR **WARRANTY**

VU-924-11


4" ROUND "CORAL"

- 40 LEDs
- IP67 Rated
- 12 volt or 24 volt
- Chrome reflector for brilliant light emission
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes a rubber grommet when ordered as a kit with bumper or accessory

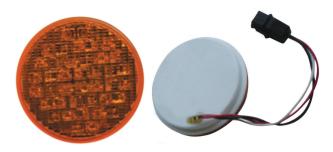

Part Numbers	Lens Color	LED Color
VU-924-1L-A	Amber	Amber
VU-924-1L-CA	Clear	Amber
VU-924-1L-R	Red	Red
VU-924-1L-CR	Clear	Red
VU-924-1L-CW	Clear	White

VU-924-1L-A shown

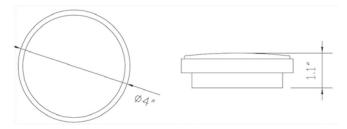



UNIVERSAL

SIGNATURE MARKER LIGHTS

3-YEAR WARRANTY



VU-1080L GRANITE

VU-1080L-A shown



Part Numbers	Lens Color	LED Color
VU-1080L-A	Amber	Amber
VU-1080L-CA	Clear	Amber
VU-1080L-R	Red	Red
VU-1080L-CR	Clear	Red


- 6 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel



VU-7160L-A shown

Part Numbers	Lens Color	LED Color
VU-7160L-A	Amber	Amber
VU7160L-CA	Clear	Amber
VU7160L-R	Red	Red
VU7160L-CR	Clear	Red

VU-7160L GRANITE MINI



• 3 LEDs

• IP67 Rated

3-YEAR WARRANTY

- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel

UNIVERSAL

SIGNATURE MARKER LIGHTS

3-YEAR WARRANTY



VU-1094L GRANITE SLIM



- 3 LEDs
- 12 volt
- Sonically sealed polycarbonate leans & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel
- IP67 rated

Part Numbers Lens Color VU-1094L-A Amber Amber VU-1094L-CA Clear Amber VU-1094L-R Red Red VU-1094L-CR Clear Red

GRANITE COLLECTION COUNTERTOP DISPLAYS AVAILABLE





VU-LDG3-BK FOR BLACK POWDER COATED DISPLAY
VU-LDG3-SS FOR POLISHED STAINLESS STEEL DISPLAY



UNIVERSAL

3-YEAR WARRANTY

LED LIGHTS

- 3 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel





VU-998-1L-CA shown

VU-998-1L

34" ROUND

"BULLSEYE"

Part Numbers	Lens Color	LED Color
VU-998-1L-A	Amber	Amber
VU-998-1L-CA	Clear	Amber
VU-998-1L-R	Red	Red
VU-998-1L-CR	Clear	Red

3-YEAR WARRANTY

VU-968-1L 6" OVAL

- 21 Super LEDs
- IP67 Rated
- 12 volt
- Chrome reflector for brilliant light emission
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes an ABS plastic snap-ring and rubber grommet when ordered as a kit with bumper or accessory



VU-968-1L-R shown



Part Numbers	Lens Color	LED Color
VU-968-1L-A	Amber	Amber
VU-968-1L-CA	Clear	Amber
VU-968-1L-R	Red	Red
VU-968-1L-CR	Clear	Red
VU-968-1L-CW	Clear	White



VU-968-1L-A shown with ABS snap ring



VU-968-1L-CW shown





UNIVERSAL

LED LIGHTS

3-YEAR WARRANTY




"TORPEDO" CAB MARKER





• IP67 Rated

- 12 volt
- Chrome reflector for brilliant light emission
- Bright chrome outer housing
- Rubber mounting pad
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel












VU-855L-A shown


Part Numbers	Lens Color	LED Color
VU-855L-A	Amber	Amber
VU-855L-CA	Clear	Amber

VU-855L VINTAGE CAB MARKER

- 36 LEDs
- IP67 Rated
- 3-YEAR WARRANTY

- 12 volt
- Bright chrome outer housing
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel







UNIVERSAL

3-YEAR WARRANTY

PETE TURN/PARK/CLEARANCE LIGHT & WATERMELON LIGHTS

VU-951L


6" x 5" CLEARANCE



- 31 Super LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light

Part Numbers	Lens Color	LED Color
VU-951L-A	Amber	Amber
VU-951L-CA	Clear	Amber







Amber (VU-1110L-A)



Blue (VU-1110L-B)



Purple (VU-1110L-P)



Red (VU-1110L-R)



Clear (VU-1110L-C)



Green (VU-1110L-G)

UNIVERSAL WATERMELON LIGHT BRACKETS

1-YEAR WARRANTY



VU190123 **DUAL WATERMELON FRAME BRACKET CUTOUTS ONLY**



W/SWITCH HOLE (CUTOUTS ONLY)



DUAL WATERMELON INTERIOR BRACKETINGLE WATERMELON INTERIOR BRACKET W/SWITCH HOLE (CUTOUTS ONLY)



VU190120 SINGLE WATERMELON MIRROR BRACKET **CUTOUTS ONLY**



SINGLE WATERMELON INTERIOR BRACKET W/SWITCH HOLE (CUTOUTS ONLY)



SINGLE WATERMELON INTERIOR BRACKET W/SWITCH HOLE (CUTOUTS ONLY)



VWM002 SINGLE WATERMELON FRAME BRACKET SINGLE WATERMELON BUMPER BRACKET **CUTOUTS ONLY**



VWM014 **UNIVERSAL**




VU-1110L-A AMBER WATERMELON LIGHT (EXPLODED VIEW)



VU190121 UNIVERSAL UNDER-FRAME MOUNT SINGLE WATERMELON LIGHT BRACKET

UNIVERSAL

WIRE HARNESSES

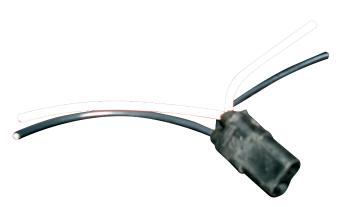

VU-877F

FEMALE HARNESS

- 2 female bullets
- 100 ft. length
- Available in 4", 6", 8" or 10" spacing see part numbers

Part Numbers	Bullet spacing
VU-877F-4	4"
VU-877F-6	6"
VU-877F-8	8"
VU-877F-10	10"



VHMS3007

AIR CLEANER LIGHT BOX HARNESS

- See pages 126, 134, 166 for air cleaner light boxes
- One PACCAR female end
- Two PACCAR male ends



PETERBILT MODEL 359



PETERBILT MODEL 359

CAB PANEL 3.5"

MOUNTING HARDWARE INCLUDED

VP110235

PB CAB PANELS - 359 -STANDARD BLANK - PAIR

VP110238

PB CAB PANEL, EXT. PANEL FORMED 359 2PC. STANDARD WRAP BLANK - PAIR



VP110236

PB CAB PANELS - 359 -STANDARD WRAP BLANK - PAIR



ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

HOOD EXTENSIONS



VP110319
PB - 359 HOOD EXTENSION
PANEL - FACTORY



PETERBILT MODEL 359

MISC. TRIM PIECES



VP110023
PB 359 TOP OF DOOR TRIM - LOWERED LOOK - 359

CUSTOM HEIGHTS AVAILABLE



VP110023-P FOR PAINTABLE



VP110027
PB 359 WINDSHIELD WIPER ARM COVERS



VP120113
PB BUG SHIELD - STAINLESS
- 359
MOUNTING HARDWARE INCLUDED



VP120504
PB 359 FENDER SUPPORT
COVER - FRONT - BLANK

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED



PETERBILT MODEL 359

STANDARD MOUNT STAINLESS VISORS



VP130001
PB - 359 12" DROP VISOR - ANY YEAR 359



JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP130001-P RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107

FOR MORE PETE VISORS SEE PAGES 198-201 GANGSTER STAINLESS VISORS



VP132001

PB - 12" GANGSTER VISOR - 359 2 PC

VP132001-BT

PB - 12" GANGSTER BOWTIE VISOR - 359 2 PC

VP132001-BF

PB - 12" GANGSTER BUTTERFLY VISOR - 359 2 PC



VP132001-RBF

PB - 12" GANGSTER VISOR - 359 2 PC, REVERSE BUTTERFLY

VP132001P-RBF

PB - 12" GANGSTER VISOR - 359 - PAINTABLE 2 PC, REVERSE BUTTERFLY

WICKED VISORS



VP135001

PB - 12" WICKED - DROP VISOR -ANY YEAR 359 - 2 PC

VISOR FOR 350 SERIES, YEARS 1970 & OLDER



VP130016

PB - 9" STANDARD VISOR 350 SERIES YEARS 1970 & OLDER

PETERBILT MODEL 359

AIR DEFLECTORS



VP110016

PB 359 - 379, 389 WINDOW AIR DEFLECTORS



VP110031

PB 359 - 379, 389 WINDOW AIR DEFLECTORS W/LOWER LOOKS(VP110017)WINDOW TRIM 37.25" X 20.375"

FUEL TANK STRAP COVERS BRACKETS & MOUNTING HARDWARE INCLUDED



VP150039

PB 359 - FUEL TANK STRAP COVERS - 2PCS



MISC. TRIM PIECES



VP110024

PB WINDSHIELD TRIM - 3 PC 359 - STANDARD - 430 STAINLESS



VP110012 359, 379 DOOR FLAME

TRIM - PAIR

PETERBILT MODELS 365 & 367



PETERBILT MODEL 365 & 367


CAB PANELS 4"


MOUNTING HARDWARE INCLUDED



PB CAB PANELS - 2005 & NEWER - 367, 365 - BLANK WRAP - SET BACK ONLY

ADD LIGHT OPTIONS TO A PART NUMBER

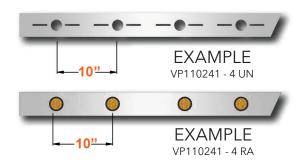

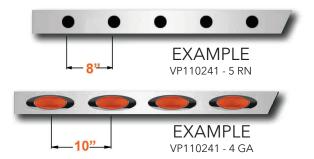



PETERBILT MODEL 365 & 367

SLEEPER PANELS 4"

MOUNTING HARDWARE INCLUDED MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



PB SLEEPER PANELS - 367, 365 - 36"/44" - BLANK

VP142065

PB SLEEPER PANELS - 367, 365 - 48"/58" - BLANK


VP142066

PB SLEEPER PANELS - 367, 365 - 63"/72" - BLANK

VP142067

PB SLEEPER PANELS - 367, 365 - 70"/78" - BLANK

ADD LIGHT OPTIONS:

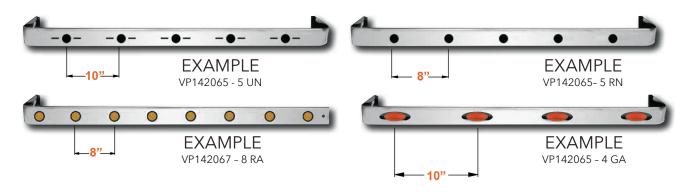

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
	36"	44"
365, 367, 379, 384, 386, 388,	48"	58"
389	63"	72"
	70"	78"



PETERBILT MODEL 365 & 367

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED



VP142101
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 384,
379, 388, 389 - 63"/72" - BLANK,
365, 367



VP142103
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 384,
379, 388, 389 - 70"/78" - BLANK,
365, 367



ADD LIGHT OPTIONS:



EXAMPLE VP142101-1UN



EXAMPLE VP142101-1RN



EXAMPLE VP142101-1GA

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 365 & 367

AIR CLEANER LIGHT BOXES

CONNECTS TO AIR CLEANER STRAP



VP112118

PB - AIR CLEANER LIGHTS - BLANK 367, 365 - 2005 & NEWER - SET BACK
AXLE ONLY - PAIR

CUSTOM EXAMPLE:

VP112118-4RA
PB - AIR CLEANER LIGHTS - 4 ROUND
AMBERS - 367, 365 - 2005 & NEWER - SET
BACK AXLE ONLY - PAIR

Don't Forget the Light Harness:



VHMS3007

1 - PACCAR - FEMALE 2 - PACCAR - MALE
- FOR CONNECTING FRONT & REAR AIR
CLEANER LIGHTS

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

BUG SHIELDS



MOUNTING HARDWARE INCLUDED



PETERBILT MODELS 379 & 389



1 VP132002P Gangster visor, 12", paintable

VP110018 Windshield trim kit -large

VP120502 Front blinker bars (pair) with LEDs Similar: VP120501 for model 379

4 VP110228 Cab panels -extended wrap Shown with four slotted light holes (VP110228-4S)

5 VP110308 Hood extension panel - wide replacement Shown with three slotted light holes (VP110308-3S)

6 VP150011R Fuel tank fairings (pair), rounded style, 64" long

VP142000 4" sleeper panels (pair) for 63"/72" sleeper Shown with five slotted light holes (VP142000-5S),

6" wide also available

Rear tool box with locks, smooth stainless, rounded look

9 911 Turbowing for flat top / cabover

10 HV-XXXX-58-6BB-L01-UST Front chrome bumper, boltless, 22" American Eagle, 6 slotted light hole Multiple other stock & custom bumpers available



SEE PAGES 155-177 FOR MODEL 389 ACCESSORIES



PETERBILT MODEL 379









PETERBILT MODEL 379 ONE-PIECE CAB/HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VP116401

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 379 -4" - BLANK

VP116402

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - WRAP -379 -4" - BLANK



VP116201

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 379 - 6" -BLANK

VP116202

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - WRAP - 379 - 6" - BLANK



PETERBILT MODEL 389 ONE-PIECE CAB/HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VP110368
PB 389, NO DEF, WIDE HOOD PAN-EL ('08-NEW)

PETERBILT MODEL 379



CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

VP110203

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR

VP110207

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR

VP110227

PB CAB PANELS - 1987 &
NEWER - 379, 388, 389 STANDARD WRAP - BLANK - PAIR

VP110228

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED WRAP- BLANK - PAIR

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

CAB PANELS 6"

MOUNTING HARDWARE INCLUDED

VP110250

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR

VP110251

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR


VP110254


PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED WRAP - BLANK - PAIR

VP110253

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 -STANDARD WRAP - BLANK - PAIR

ADD LIGHT OPTIONS:

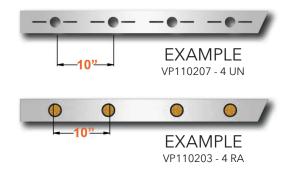

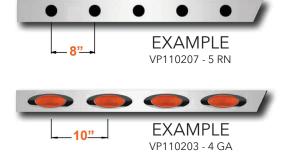



PETERBILT MODEL 379

HOOD EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED (excl. VP110310)



VP110300
PB 379 - HOOD EXTENSION
PANEL - FACTORY
REPLACEMENT



VP110310
PB 379 - HOOD EXTENSION
PANEL - FACTORY
LAYOVER
TAPE MOUNT



VP110301
PB 379 - HOOD EXTENSION
PANEL - WIDE REPLACEMENT
- BLANK - PAIR



VP110303
PB 379 - HOOD EXTENSION
PANEL -WIDE REPLACEMENT
NOTCHED - BLANK - PAIR

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

HOOD EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED



VP110350
PB 379 - HOOD EXTENSION
PANEL - FACTORY
REPLACEMENT



VP110352
PB 379 - HOOD EXTENSION
PANEL - WIDE REPLACEMENT
- BLANK - PAIR



VP110358
PB 379 - HOOD EXTENSION
PANEL -WIDE REPLACEMENT
NOTCHED - BLANK - PAIR

ALL NOTCHED HOOD EXTENSION PANELS TAKE A STANDARD CAB PANEL ALL WIDE HOOD EXTENSION PANELS TAKE AN EXTENDED CAB PANEL

PETERBILT MODEL 379

SLEEPER PANELS 4"

MOUNTING HARDWARE INCLUDED MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



PB SLEEPER PANELS - 1987 &
NEWER - 379, 388, 389 - 36"/44"
- BLANK - PAIR

VP142007

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48"/58" - BLANK - PAIR

VP142000

PB SLEEPER PANELS - 1987 &
NEWER - 379, 388, 389 - 63"/72"
- BLANK - PAIR

VP142002

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK - PAIR

ADD LIGHT OPTIONS






ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

SLEEPER PANELS 6"

MOUNTING HARDWARE INCLUDED MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR

VP142051

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48" - BLANK - PAIR

VP142052

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR

VP142053


PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/80" - BLANK - PAIR

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 379

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

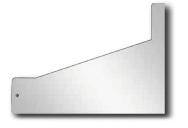

VP142101
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 63"/72" - BLANK




VP142103
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 70"/78" - BLANK



ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

SLEEPER EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

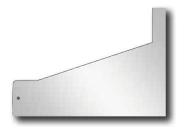

VP142150
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 63"/72" - BLANK



VP142151
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 70"/78" - BLANK




Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"


PETERBILT MODEL 379

AIR CLEANER LIGHT BOXES VORTOX

CONNECT TO AIR CLEANER STRAPS:



VP110109
PB - AIR CLEANER
LIGHTS - BLANK - 377, 378,
379 - 1987 & NEWER - PAIR VORTOX - FRONT



VP113108
PB - AIR CLEANER
LIGHTS - REAR BLANK - 377, 378, 379 1987 & NEWER- PAIR VORTOX - REAR

FOR STRAPLESS LOOK:



VP112209
PB - AIR CLEANER SUPPORT - BLANK - 379, 388, 389 - 2007 & NEWER - PAIR

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

EXAMPLE







Don't Forget the Light Harness:



VHMS3007

1 - PACCAR - FEMALE 2 - PACCAR - MALE
- FOR CONNECTING FRONT & REAR AIR
CLEANER LIGHTS

PETERBILT MODEL 379

MIRROR LIGHT BOXES



VP114011 MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - BLANK



ADD -SM WITH BUILT IN SPOT MIRRORS

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

EXAMPLES:



VP114011-2GA
MIRROR LIGHT BOXES - 379,
388, 389 - CAB MOUNTED
MIRRORS - 2 - GRANITE AMBER LEDS



VP114011-5RCA
MIRROR LIGHT BOXES - 379,
388, 389 - CAB MOUNTED
MIRRORS - 5 - 2" ROUNDS CLEAR AMBER LEDS



VP114011-2SCA
MIRROR LIGHT BOXES - 379,
388, 389 - CAB MOUNTED
MIRRORS - 2 - SLOTTED CLEAR AMBER LEDS



VP114011-5RA
MIRROR LIGHT BOXES - 379,
388, 389 - CAB MOUNTED
MIRRORS - 5 - 2" ROUNDS AMBER LEDS

PETERBILT MODEL 379

BUMPER & GRILLE TRIM



VP120001

PB 1 TAG HANGER
INCLUDES HARDWARE, FOAM
PROTECTORS AND PLASTIC
LICENSE PLATE BOLT INSERTS



VP120004
PB TOW PIN COVER - 378, 379 1987 & NEWER
MOUNTING HARDWARE
INCLUDED



VP120201
PB 379 LONG NOSE GRILL HORIZONTAL - RIVETED
MOUNTING HARDWARE
INCLUDED



VP120012 PB SIDE GRILL DEFLECTOR 379, 388, 389

SEE PAGE 95 FOR MORE TAG HANGERS

FENDER GUARDS



VP120005PB FENDER GUARDS - FITTED - 379 - 1987 & NEWER - 2PC



VP120006
PB FENDER GUARDS ROLLED, BOLT - THROUGH 379 - 1987 & NEWER - 2PC



VP120007
PB FENDER GUARDS - PLAIN 378, 379 - 1987 & NEWER



VP120009
PB FENDER GUARDS PLAIN - 378, 379 - 1987 &
NEWER W/JJ CUTOUT



VP120010
PB FENDER GUARDS - PB DOUBLE HEAD LIGHT MOUNT - 378, 379
- 1987 & NEWER - 2PC



VP120011
PB FENDER GUARDS-SINGLE
HEAD LIGHT MOUNT 378, 379 - 1987 & NEWER

PETERBILT MODEL 379

BUG SHIELDS

MOUNTING HARDWARE INCLUDED



VP120103
PB BUG SHIELD TRIM ONLY
(HIGHLIGHT) - 379 ONLY
STAINLESS STEEL



VP120105
PB BUG SHIELD TRIM ONLY
(FLAMES) - 379 ONLY
STAINLESS STEEL



VP120106
PB BUG SHIELD - STAINLESS - 379 - LONG HOOD



VP120107
PB BUG SHIELD - STAINLESS
- 357, 378, 385, 379 SHORT HOOD



PETERBILT MODEL 379

BLINKER BARS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED



VP120501

PB 379 FRONT BLINKER BARS
- W/ LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD CUSTOM



VP100501

PB 379 REAR BLINKER BARS - W/ LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD CUSTOM



VP120501BL

PB 379 FRONT BLINKER BARS
- W/ LEDS - PAIR
NO LIGHT HOLES
ADD LIGHTS TO YOURS,
SEE PAGES 106 -107

FENDER SUPPORT COVERS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED



VP120505 PB 379 FENDER SUPPORT COVER - FRONT - BLANK

PETERBILT MODEL 379

SLEEPER FILLER PANELS

MOUNTING HARDWARE INCLUDED





VP140021
PB SPEEPER REAR CORNER
FILLER PANELS 70" ONLY 379, 389 - 4 - 4" LEDS - PAIR

SLEEPER SHOCK COVERS

RUBBER STRIP & HARDWARE INCLUDED



VP140034

PB SLEEPER SHOCK COVERS
- 379, 389 - 2 PCS (L+R)

ANGLED

TAPE MOUNT





VP140022
PB 379, 389 SLEEPER SHOCK
COVERS - 2 PAIR
TAPE MOUNT



VP140032
PB SLEEPER SHOCK COVERS
- 379,389 - 1 LG FULL COVER
TAPE MOUNT



PB SLEEPER SHOCK COVERS
- 379,389 - 1 LG CURVED FULL COVER







RUBBER STRIP & HARDWARE INCLUDED



PETERBILT MODEL 379

AIR DEFLECTORS



PB 359 - 379, 389 WINDOW AIR DEFLECTORS TAPE MOUNT



VP110031

PB 359 - 379, 389 WINDOW AIR DEFLECTORS W/LOWER LOOKS(VP110017)WINDOW TRIM 37.25" X 20.375" TAPE MOUNT



BRACKETS & MOUNTING HARDWARE INCLUDED



VP150020 PB - FUEL TANK STRAP COVERS - 4PCS



VP150029
PB - FUEL TANK STRAP
COVERS - 2PCS
NOT 359



VP150029R
PB - FUEL TANK STRAP
COVERS - ROUND - 2PCS
ALL BUT 359







PETERBILT MODEL 379

FUEL TANK FAIRINGS

BRACKETS & HARDWARE INCLUDED NOT AVAILABLE 430 STAINLESS

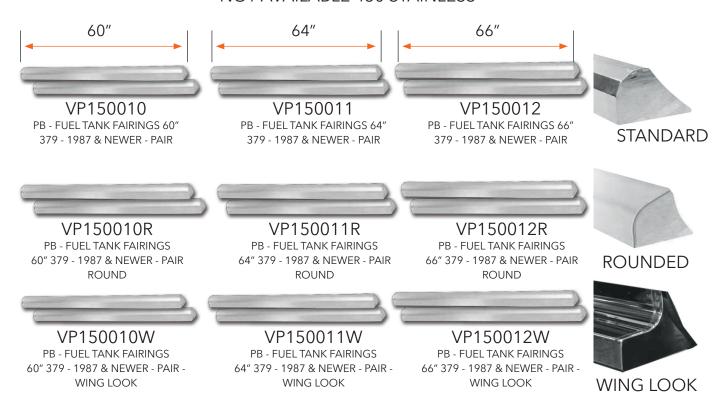



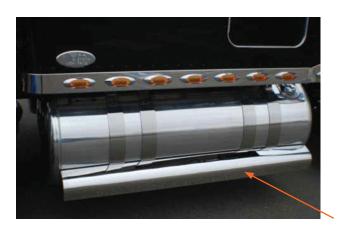

PETERBILT MODEL 379

EMBLEMS



VP100009 **EMBLEM ACCENT PB 379** RACING STRIPE - 2PC



VP100028 EMBLEM ACCENT PB 379 -RACING STRIPE - LONG - PAIR

MISC. TRIM PIECES



INNER WELL - 2PC



VP100020 PB LOWER HOOD PANEL EXTENDED HOOD - 379 1987 & NEWER - 2PC



VP100025 PB 379 CENTER HOOD TRIM **EXTENDED HOOD**



VP110012 359, 379 DOOR FLAME TRIM - PAIR



VP110018 PB WINDSHIELD TRIM - 5 PC 379, 389 - LARGE



VP110015 PB CENTER EX T WINDSHIELD TRIM - 377, 378, 379

PETERBILT MODEL 379

MISC TRIM PIECES



PB 379 TOP OF DOOR TRIM - LOWERED LOOK - 73-04 - DOOR MOUNTED MIRRORS - PR TAPE MOUNT

CUSTOM HEIGHTS AVAILABLE



VP110022P FOR PAINTABLE

VPTFI8021
PB OUTER FENDER
TRIM - 379
INCLUDES SET SCREWS
SOLD AS SET OF 3 PAIR

VPTFI8021S FOR ONE PAIR





VP110025
PB 379, 388, 389 WINDSHIELD WIPER
ARM COVERS
TAPE MOUNT



146

PETERBILT MODEL 379

BATTERY BOXES & TOOL BOXES

STANDARD WIDTH 30" / CUSTOM WIDTHS AVAILABLE UP TO 48"



 $VP150112 - \mathsf{PB-379,388,389} \ \mathsf{REAR\ TOOL\ BOX-STAINLESS\ W/LOCKS-ROUNDED\ MOULDED\ LID} \\ VP150113 - \mathsf{PB-379,388,389} \ \mathsf{BATTERY\ BOX-STAINLESS\ W/LOCKS-ROUNDED\ MOULDED\ LID} \\$



 $VP150109R - \texttt{PB} - 379, 388, 389 \text{ REAR TOOL BOX} - \texttt{STAINLESS W/LOCKS} - \texttt{ROUNDED} \\ \texttt{SMOOTH LOOK}$

VP150110R - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK



 $VP150115 - \text{PB} - 379,388,389 \text{ REAR TOOL BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150116 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150116TM - \text{PB} - 379,388,389 \text{ BATT, BOX} - \text{STAINLESS W/TIE DOWNS} - 18" \text{ TALL} \\ \text{MOULDED LID} \\$

ADD -36 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 36" BOX ADD -48 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 48" BOX



VP150103
PB - 379, 388, 389 BATTERY
BOX - ALUMINUM



VP150104
PB - 379, 388, 389 BATTERY
BOX - ALUMINUM




BOX STEP HIGHLIGHTS/PROTECTORS



VP150031
PB TOOL BOX/BATTERY BOX
- STEP PROTECTOR- (30")
WICKED PAIR

PAINTED OPTIONS SHOWN



PETERBILT MODEL 379

TOOL & BATTERY BOX COVERS



VP150002 PB TOOL & BATTERY BOX COVER 1993 & NEWER - 2 PC.



VP150003 PB BATTERY BOX COVER 378, 379 - 12" X 30" - 1993 & NEWER



VP150004 PB TOOL BOX COVER 378, 379 - 10" X 30" - 1993 & NEWER



VP150015 PB TOOL BOX COVER -W/ 1" LIP ON TOP - 378, 379




VP150016 PB 379 BATTERY BOX COVER -W/ 1" LIP ON TOP

PETERBILT MODEL 379

TAG & LICENSE PLATE HANGERS **ALSO FITS MODEL 389**

VP120021

PB WIDE TAG/LIC PLATE HANGER INCLUDES HARDWARE, FOAM PROTECTORS & PLASTIC LICENSE PLATE BOLT INSERTS

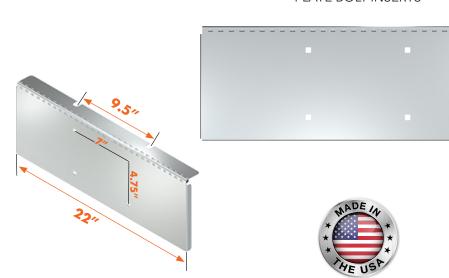

Bumpers and Stainless Accessories made in the USA



(VP120021-2WA SHOWN)



PETERBILT MODEL 384



PETERBILT MODEL 384

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VP110338

PB CAB PANELS - 384 - STANDARD -BLANK - WRAP PAIR

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

CAB PANELS 6"

MOUNTING HARDWARE INCLUDED




PB CAB PANELS - 384 -STANDARD - BLANK - PAIR




VP110353

PB CAB PANELS - 384 - STANDARD -BLANK - WRAP - PAIR

ADD LIGHT OPTIONS:

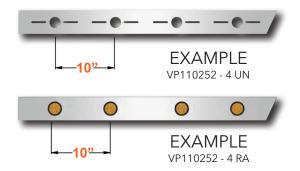

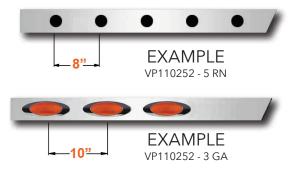

PETERBILT MODEL 384

SI FEPER PANELS 4"

MOUNTING HARDWARE INCLUDED MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE

VP142060

PB SLEEPER PANELS - 384 - 36"/44" - NOTCHED FOR EXHAUST - BLANK

VP142061

PB SLEEPER PANELS - 384 - 48"/58" - NOTCHED FOR EXHAUST - BLANK

VP142062

PB SLEEPER PANELS - 384 - 63"/72" - NOTCHED FOR EXHAUST - BLANK

VP142063

PB SLEEPER PANELS - 384 - 70"/78" - NOTCHED FOR EXHAUST - BLANK

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

SLEEPER PANELS 6"

MOUNTING HARDWARE INCLUDED MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE

VP142160

PB SLEEPER PANELS - 384 - 36"/44" - NOTCHED FOR EXHAUST - BLANK

VP142161

PB SLEEPER PANELS - 384 -48"/58" - NOTCHED FOR EXHAUST - BLANK


VP142162

PB SLEEPER PANELS - 384 - 63"/72" - NOTCHED FOR EXHAUST - BLANK

VP142163

PB SLEEPER PANELS - 384 - 70"/78" - NOTCHED FOR EXHAUST - BLANK

ADD LIGHT OPTIONS




Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 384

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

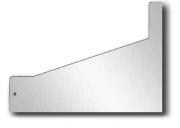

VP142101
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 63"/72" - BLANK




VP142103
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 70"/78" - BLANK



ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

SLEEPER EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

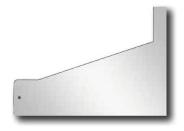

VP142150
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 63"/72" - BLANK



VP142151
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 70"/78" - BLANK



Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

BUG SHIELDS





PETERBILT MODEL 386



PETERBILT MODEL 386

CAB PANELS 2.5"

MOUNTING HARDWARE INCLUDED



VP110200

PB CAB PANELS - 2005 & NEWER - 386 - BLANK

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

EXHAUST FILLER PANEL 2.5"

MOUNTING HARDWARE INCLUDED



VP110205
PB EX HAUST FILLER PANEL 386 - BLANK - PAIR

ADD LIGHT OPTIONS:







386 PANELS ARE ONLY 2.5" WIDE AND CAN ONLY USE GRANITE, PETERBILT AND UNIVERSAL CUT OUTS.

PETERBILT MODEL 386

SLEEPER PANELS 2.5"

MOUNTING HARDWARE INCLUDED MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



VP142008

PB SLEEPER PANELS - 1987 & NEWER - 386 - 36"/44" - BLANK - PR

VP142009

PB SLEEPER PANELS - 1987 & NEWER - 386 - 48"/58" - BLANK - PR

VP142010


PB SLEEPER PANELS - 1987 & NEWER - 386 - 63"/72" - BLANK - PR

VP142011

PB SLEEPER PANELS - 1987 & NEWER - 386 - 70"/78" - BLANK - PR

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

ADD LIGHT OPTIONS

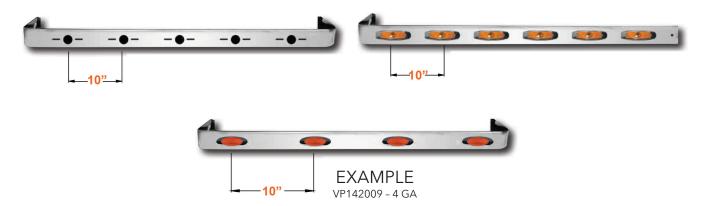


386 PANELS ARE ONLY 2.5" WIDE AND CAN ONLY USE GRANITE, PETERBILT AND UNIVERSAL CUT OUTS.

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 386

SLEEPER EXTENSION PANELS 2.5"

MOUNTING HARDWARE INCLUDED

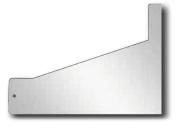

VP142111
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 386 - 2.5" WIDE - 70"/78" - BLANK



VP142112
PB SLEEPER EXTENSION PANEL
- 1987 & NEWER - 386 - 2.5" WIDE - 36,48,63"/72" - BLANK



ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

ADD LIGHT OPTIONS



EXAMPLE VP142112-1UN



EXAMPLE VP142112-1GA



EXAMPLE VP142112-1PA

386 PANELS ARE ONLY 2.5" WIDE AND CAN ONLY USE GRANITE, PETERBILT AND UNIVERSAL CUT OUTS.

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

BUG SHIELDS



PB BUG SHIELD - STAINLESS - 384/386 MOUNTING HARDWARE INCLUDED

PETERBILT MODELS 388 & 389



FOR 388 & 389 VISORS SEE PAGES 198-201

PETERBILT MODEL 388 & 389

FORMED CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

4" WIDE DRIVER SIDE, ALSO AVAILABLE IN 6" WIDTH 2.25" ONLY ON PASSENGER SIDE

VP114207

PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED - BLANK - PR

VP114228

PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED WRAP- BLANK - PR

VP114267

PB CAB PANELS - 389 - 2010 &
NEWER - FORMED EXTENDED
- W / UREA SYSTEM - 2.1/4"
PASSANGER SIDE - 4" DRIVERS
SIDE - BLANK

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

FORMED CAB PANELS 6"

VP114251

PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED - BLANK - PR

VP114253

PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED WRAP- BLANK - PR

ADD LIGHT OPTIONS:






PETERBILT MODEL 388 & 389

ONE-PIECE CAB/HOOD EXTENSION PANELS, NO DEF SYSTEM

MOUNTING HARDWARE INCLUDED




VP116400

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4" CAB PANELS - BLANK

VP116411

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4" CAB PANELS - WRAP - BLANK




VP116200

PB CAB & WIDE
REPLACEMENT PANEL - ONE
PIECE - 389 2009-2011 - NON
UREA - WIDE REPLACEMENT
DRIVERS SIDE - SMALL
REPLACEMENT PASSENGERS
SIDE - 6" CAB PANELS - BLANK

VP116211

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6" CAB PANELS - WRAP - BLANK



VP116420

PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - ONE PIECE - 389 2008 -NON UREA - 4" CAB PANELS - BLANK



VP116420-6

PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - ONE PIECE - 389 2008 -NON UREA - 6" CAB PANELS - BLANK



VP116420-8

PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - ONE PIECE - 389 2008 -NON UREA - 8" CAB PANELS - BLANK


2008-2010 WITH CAT ENGINES USE WIDE PANELS BOTH SIDES 2009-2010 CUMMINS ENGINES USE WIDE DRIVER SIDE, NARROW PASSENGER



PETERBILT MODEL 388 & 389

ONE-PIECE CAB/HOOD EXTENSION PANELS DEF SYSTEM

MOUNTING HARDWARE INCLUDED



PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 - 2010 & NEWER W/UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4" CAB PANEL DRIVERS SIDE - 4" CAB PANEL PASSENGERS SIDE - BLANK



PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 - 2010 & NEWER W/ UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4" CAB PANEL DRIVERS SIDE - 6" CAB PANEL PASSENGERS SIDE - BLANK

2008-2010 WITH CAT ENGINES USE WIDE PANELS BOTH SIDES 2009-2010 CUMMINS ENGINES USE WIDE DRIVER SIDE, NARROW PASSENGER

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

ONE-PIECE CAB/HOOD EXTENSION PANELS, NO DEF SYSTEM

FORMED PANELS • HARDWARE INCLUDED



VP114400

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA -WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4" CAB PANELS - BLANK

VP114411

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA -WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4" CAB PANELS - WRAP - BLANK




VP114200

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA -WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6" CAB PANELS - BLANK

VP114211

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA -WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6" CAB PANELS - WRAP - BLANK



VP114420

PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES
- FORMED ONE PIECE - 389 2008 - NON UREA 4" CAB PANELS - BLANK



VP114420-6

PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES
- FORMED ONE PIECE - 389 2008 - NON UREA 6" CAB PANELS - BLANK



PETERBILT MODEL 388 & 389

ONF-PIECE CAB/HOOD EXTENSION PANELS DEF SYSTEM

FORMED PANELS • HARDWARE INCLUDED



CORNER FOLLOWS
CONTOUR OF TRUCK




VP114421

PB CAB & WIDE REPLACEMENT PANEL FORMED ONE PIECE - 389 - 2010 & NEWER
W/ UREA SYSTEM - WIDE REPLACEMENT
DRIVERS SIDE - SMALL REPLACEMENT
PASSENGERS SIDE - 2.1/4" CAB PANEL
DRIVERS SIDE - 4" CAB PANEL
PASSENGERS SIDE - BLANK



VP114422

PB CAB & WIDE REPLACEMENT PANEL
- FORMED - ONE PIECE - 388, 389 - 2010
& NEWER W/ UREA SYSTEM - WIDE
REPLACEMENT DRIVERS SIDE - SMALL
REPLACEMENT PASSANGERS SIDE - 4"
CAB PANEL DRIVERS SIDE - 2.1/4" CAB
PANEL PASSANGERS SIDE - WRAPPED - BLANK



VP114425

PB CAB & WIDE REPLACEMENT PANEL FORMED ONE PIECE - 389 - 2010 & NEWER
W/ UREA SYSTEM - WIDE REPLACEMENT
DRIVERS SIDE - SMALL REPLACEMENT
PASSENGERS SIDE - 2.1/4" CAB PANEL
DRIVERS SIDE - 6" CAB PANEL
PASSENGERS SIDE - BLANK



VP114426

PB CAB & WIDE REPLACEMENT PANEL FORMED - ONE PIECE - 388, 389 - 2014 &
NEWER W/ UREA SYSTEM AND DYNAFLEX
KIT - WIDE REPLACEMENT DRIVERS SIDE SMALL REPLACEMENT PASSANGERS SIDE
- 4" CAB PANEL DRIVERS SIDE - 2.1/4" CAB
PANEL PASSANGERS SIDE - BLANK



VP114427

PB CAB & WIDE REPLACEMENT PANEL FORMED - ONE PIECE - 388, 389 - 2014 &
NEWER W/ UREA SYSTEM AND DYNAFLEX
KIT - WIDE REPLACEMENT DRIVERS SIDE SMALL REPLACEMENT PASSANGERS SIDE
- 4" CAB PANEL DRIVERS SIDE - 2.1/4" CAB
PANEL PASSANGERS SIDE - WRAPPED - BLANK

2008-2010 WITH CAT ENGINES USE WIDE PANELS BOTH SIDES 2009-2010 CUMMINS ENGINES USE WIDE DRIVER SIDE, NARROW PASSENGER

PETERBILT MODEL 388 & 389

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

VP110203

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR

VP110207

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR

VP110227

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 -STANDARD WRAP - BLANK - PAIR

VP110228

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 -EXTENDED WRAP- BLANK - PAIR

CAB PANELS 6"

MOUNTING HARDWARE INCLUDED

VP110250

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR

VP110251


PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR

VP110254

PB CAB PANELS - 1987 & NEWER - 379, 388, 389 -STANDARD WRAP - BLANK - PAIR

VP110253

PB CAB PANELS - 1987 &
NEWER - 379, 388, 389 STANDARD WRAP - BLANK - PAIR

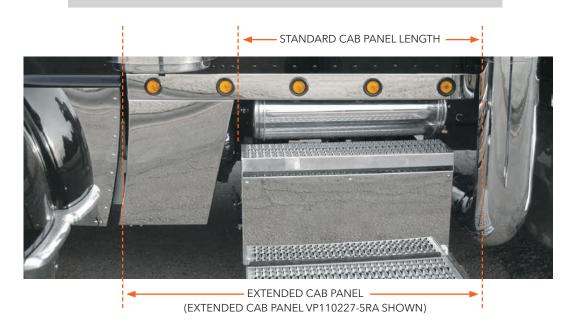

PETERBILT MODEL 388 & 389

CAB PANELS NO DEF SYSTEM

MOUNTING HARDWARE INCLUDED

VP113890

PB CAB PANELS - 1987 & NEWER - 389 - STANDARD - BLANK - PR - 44.38" LONG

VP113891

PB CAB PANELS - 1987 & NEWER - 389 - STANDARD WRAP - BLANK - PR

CAB PANELS DEF SYSTEM

MOUNTING HARDWARE INCLUDED

VP110263

PB CAB PANELS - 388,389 - 2010 & NEWER - STANDARD - W / UREA SYSTEM - 2.1/4" PASSENGER SIDE - 4" DRIVERS SIDE - BLANK

VP110264

PB CAB PANELS - 388,389 - 2010 & NEWER - WRAP -W / UREA SYSTEM - 2.1/4" PASSENGER SIDE - 4" DRIVERS SIDE - BLANK

VP110267

PB CAB PANELS - 389 - 2010 &
NEWER - EXTENDED - W / UREA
SYSTEM - 2.1/4" PASSENGER
SIDE - 4" DRIVERS SIDE - BLANK

4" WIDE DRIVER SIDE, ALSO AVAILABLE IN 6" WIDTH 2.25" ONLY ON PASSENGER SIDE

PETERBILT MODEL 388 & 389

SI FEPER PANELS 4"

MOUNTING HARDWARE INCLUDED MATCH TO SLEEPER EXTENSION PANELS ON PAGE 165



VP142004

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR

VP142007

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48"/58" - BLANK - PAIR

VP142000

PB SLEEPER PANELS - 1987 &
NEWER - 379, 388, 389 - 63"/72"
- BLANK - PAIR

VP142002

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK - PAIR

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

SI FEPER PANELS 6"

MOUNTING HARDWARE INCLUDED



VP142050

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR

VP142051

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48"/58" - BLANK - PAIR


VP142052

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR

VP142053

PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK - PAIR

ADD LIGHT OPTIONS



Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"



PETERBILT MODEL 388 & 389

HOOD EXTENSION PANELS 4"


MOUNTING HARDWARE INCLUDED (EXCEPT VP110314 TAPE MOUNT)



VP110313
PB 389 - HOOD EXTENSION
PANEL - FACTORY
REPLACEMENT - PAIR



VP110314
PB 389 - HOOD EXTENSION
PANEL - FACTORY LAYOVER
- PAIR, TAPE MOUNT

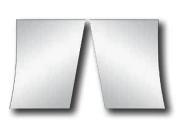

VP110308
PB 389 - HOOD EXTENSION
PANEL - WIDE REPLACEMENT
- BLANK - PAIR



VP110309
PB 389 - HOOD EXTENSION
PANEL -WIDE REPLACEMENT
NOTCHED - BLANK - PAIR



VP110311
PB 389 - HOOD EXTENSION
PANEL - WIDE REPLACEMENT
- BLANK - W/DEF - PAIR




VP110312
PB 389 - HOOD EXTENSION PANEL
-WIDE REPLACEMENT NOTCHED BLANK - W/DEF - PAIR

HOOD EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED



VP110364
PB 389 - HOOD EXTENSION
PANEL - FACTORY
REPLACEMENT - PAIR

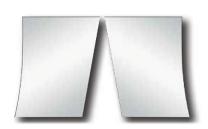

VP110366
PB 389 - HOOD EXTENSION
PANEL - WIDE REPLACEMENT
- BLANK - PAIR



VP110367
PB 389 - HOOD EXTENSION
PANEL -WIDE REPLACEMENT
NOTCHED - BLANK - PAIR


PETERBILT MODEL 388 & 389

HOOD EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED



VP110307
PB 389 - HOOD EXTENSION
PANEL - WIDE REPLACEMENT
- BLANK - W/PICKETT
EXHAUST ELBOWS - PAIR

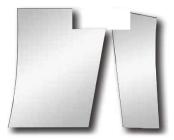

VP110397

PB 389 - HOOD EXTENSION


PANEL - WIDE REPLACEMENT

- NOTCHED- BLANK - W/

PICKETT EXHAUST ELBOWS - PAIR

HOOD EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

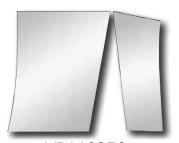

VP110379
PB 389 - HOOD EXTENSION
PANEL - WIDE REPLACEMENT
- BLANK - W/PICKETT
EXHAUST ELBOWS - PAIR



VP110398

PB 389 - HOOD EXTENSION

PANEL - WIDE REPLACEMENT

- NOTCHED- BLANK - W/

PICKETT EXHAUST ELBOWS - PAIR

ADD LIGHT OPTIONS



PETERBILT MODEL 388 & 389

388 CAB PANEL DEF SYSTEM

MOUNTING HARDWARE INCLUDED



VP110229

2012 AND NEWER 388 W/DEF WITH VERTICAL EXHAUST PASSENGER SIDE 35", DRIVER SIDE 40"

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

PETERBILT MODEL 388 & 389

DEF BOX LOWERING KIT


(VP150123)



PETERBILT MODEL 388 & 389

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

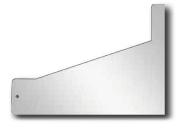

VP142101
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 63"/72" - BLANK




VP142103
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 70"/78" - BLANK



SLEEPER EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

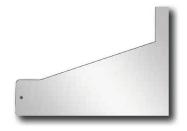


VP142150
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 63"/72" - BLANK



VP142151
PB SLEEPER EXTENSION
PANEL - 1987 & NEWER - 379,
388, 389 - 70"/78" - BLANK



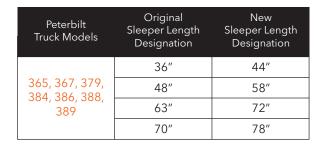





PETERBILT MODEL 388 & 389

AIR CLEANER LIGHT BOXES DONALDSON

CONNECT TO AIR CLEANER STRAPS:



VP112109
PB - AIR CLEANER LIGHTS - BLANK
- 388, 389 - 2007 & NEWER - PR DONALDSON/PREMIUM - FRONT



VP113109
PB - AIR CLEANER LIGHTS - BLANK REAR - 388, 389 - 2007 & NEWER - PR
- DONALDSON/PREMIUM - REAR

FOR STRAPLESS LOOK:




VP112209
PB - AIR CLEANER SUPPORT - BLANK - 379, 388, 389 - 2007 & NEWER - PAIR

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107





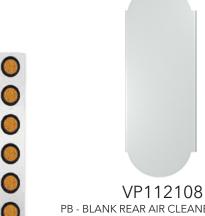

PB - BLANK REAR AIR CLEANER BRACKET 388, 389 - 2007 & NEWER - PAIR -DONALDSON/PREMIUM Don't Forget the Light Harness:



VP112109-7RA
PB - AIR CLEANER LIGHTS - 8 ROUND
AMBERS - 388, 389 - 2007 & NEWER - PAIR DONALDSON/PREMIUM

VHMS3007

1 - PACCAR - FEMALE 2 - PACCAR - MALE - FOR CONNECTING FRONT & REAR AIR CLEANER LIGHTS



PETERBILT MODEL 388 & 389

MIRROR LIGHT BOXES



VP114011 MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - BLANK



ADD -SM WITH BUILT IN SPOT MIRRORS

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

EXAMPLES:



VP114011-2GA
MIRROR LIGHT BOXES - 379,
388, 389 - CAB MOUNTED
MIRRORS - 2 - GRANITE AMBER LEDS



VP114011-5RCA
MIRROR LIGHT BOXES - 379,
388, 389 - CAB MOUNTED
MIRRORS - 5 - 2" ROUNDS CLEAR AMBER LEDS



VP114011-2SCA
MIRROR LIGHT BOXES - 379,
388, 389 - CAB MOUNTED
MIRRORS - 2 - SLOTTED CLEAR AMBER LEDS



VP114011-5RA

MIRROR LIGHT BOXES - 379,
388, 389 - CAB MOUNTED

MIRRORS - 5 - 2" ROUNDS AMBER LEDS

PETERBILT MODEL 388 & 389

BUMPER & GRILLE TRIM



VP120000

PB TAG HANGER
(388, 389)

INCLUDES HARDWARE, FOAM
PROTECTORS AND PLASTIC
LICENSE PLATE BOLT INSERTS



VK120003 TOW PIN COVER FITS 389



DEFLECTOR 379, 388, 389

SEE PAGE 95 FOR MORE TAG HANGERS

FENDER GUARDS



VP120013
PB FENDER GUARDS HEAD LIGHT MOUNT - 388,
389 - 2007 & NEWER



VP120014
PB FENDER GUARDS - PB HEAD LIGHT MOUNT
- 389 - W/BLINKER BAR - PR

BUG SHIELDS



MOUNTING HARDWARE INCLUDED



PETERBILT MODEL 388 & 389

EMBLEMS



VP100032

PB 389 EMBLEM ACCENT RACING STRIPE LONG HOOD
INCLUDES MOUNTING HARDWARE



VP100033

PB 389 EMBLEM ACCENT -RACING STRIPE - SHORT HOOD TAPE MOUNT



VP100040

PB 389 HOOD LATCH GUARD - PAIR INCLUDES MOUNTING HARDWARE

FENDER TRIM





VP100123

PB 389 FENDER TRIM - INNER WELL - 2PC TAPE MOUNT



VP100122

PB389 FENDER TRIM - 2PC TAPE MOUNT

HOOD TRIM



VP100124
PB 389 CENTER HOOD TRIM
2PC FLAME



VP100121
PB CENTER HOOD TRIM - 389
SCREW ON



VP100125

PB 389 CENTER HOOD TRIM 3PC FLAME (VP100121, VP100124)

PETERBILT MODEL 388 & 389

BLINKER BARS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED



VP120502

PB 389 FRONT BLINKER BARS
- W/LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD AS CUSTOM



VP100502

PB 389 REAR BLINKER BARS - W/LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD AS CUSTOM



VP120506M

PB 389 FRONT BLINKER BARS
- W/LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD AS CUSTOM

FENDER SUPPORT COVERS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED



VP120503

PB 389 FENDER SUPPORT

COVER - FRONT

TOO NARROW FOR LIGHT OPTIONS



VP100503

PB 389 FENDER SUPPORT COVER - REAR TOO NARROW FOR LIGHT OPTIONS







PETERBILT MODEL 388 & 389

STAINLESS VISORS



VP130013

PB - 389 14" - DROP VISOR - 2007 - NEWER STANDARD W/ CAB MTD. MIRRORS CURVED WINDOW, ONE PIECE WINDSHIELD ALSO FITS MODEL 348



ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107 FOR LIGHT OPTIONS

VP130013-P RAW 18 GAUGE STEEL

FOR MORE PETE VISORS SEE PAGES 198-201

SLEEPER FILLER PANELS

MOUNTING HARDWARE INCLUDED





VP140021
PB SPEEPER REAR CORNER
FILLER PANELS 70" ONLY 379, 389 - 4 - 4" LEDS - PAIR

PETERBILT MODEL 388 & 389

MISC. TRIM PIECES



VP101001 PB 389 LOWER HOOD PANEL -2007 & NEWER - PAIR



VP100038 PB - 389 FRONT FLAP WEIGHTS - 11GA - PAIR



VP110018 PB WINDSHIELD TRIM - 5 PC 379, 389 - LARGE



VPTFI8022S FOR ONE PAIR



VP110017 PB 388/389 TOP OF DOOR TRIM - LOWERED LOOK - PAIR WILL ONLY FIT DOORS WITHOUT VENT WINDOW

VP110017P



ADD -P FOR PAINTABLE

PETERBILT MODEL 388 & 389

MISC. TRIM PIECES







VP110025 PB 379, 388, 389 WINDSHIELD WIPER ARM COVERS TAPE MOUNT



VP110019 PB 389 OUTSIDE DOOR TRIM -**CORNER ANGLE - PAIR** TAPE MOUNT









VP110090 PB EXHAUST SHIELDS -388, 389 - W/NO LOGO **BRACKETS & HARDWARE INCLUDED**

PETERBILT MODEL 388 & 389

SLEEPER SHOCK COVERS



VP140034
PB SLEEPER SHOCK COVERS
- 379, 389 - 2 PCS (L+R)
ANGLED
TAPE MOUNT



VP140035

PB SLEEPER SHOCK COVER 379,389 ANGLED FULL COVER




VP140022
PB 379, 389 SLEEPER SHOCK
COVERS - 2 PAIR
TAPE MOUNT




VP140032
PB SLEEPER SHOCK COVERS
- 379,389 - 1 LG FULL COVER
TAPE MOUNT



PB SLEEPER SHOCK COVERS
- 379,389 - 1 LG CURVED FULL COVER

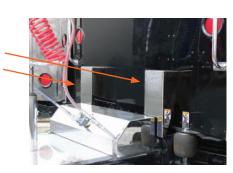

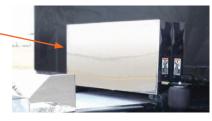



RUBBER STRIP & HARDWARE INCLUDED

AIR DEFLECTORS



VP110016
PB 359 - 379, 389 WINDOW
AIR DEFLECTORS
TAPE MOUNT



VP110031

PB 359 - 379, 389 WINDOW

AIR DEFLECTORS W/LOWER

LOOKS(VP110017)WINDOW

TRIM 37.25" X 20.375"

TAPE MOUNT

PETERBILT MODEL 388 & 389

FUEL TANK STRAP COVERS

BRACKETS & MOUNTING HARDWARE INCLUDED



VP150020 PB - FUEL TANK STRAP COVERS - 4PCS



VP150029 PB - FUEL TANK STRAP COVERS - 2PCS **NOT 359**



VP150029R PB - FUEL TANK STRAP COVERS - ROUND - 2PCS ALL BUT 359



EXHAUST COVERS



VP150021 PB - 389 EXHAUST COVER -PASSENGER SIDE - FITS 06 FITS 06 - JULY 07



VP150022 FITS 06 - JULY 07



VP150023 PB - 389 EXHAUST COVER - PB - 388, 389 EXHAUST COVER DRIVERS SIDE - FITS 06 - JULY - PASSENGER & DRIVERS SIDE FITS 06 - JULY 07





PETERBILT MODEL 388 & 389

TOOL & BATTERY BOX COVERS



VP150000
PB BATTERY BOX STAINLESS
COVER KIT - 389 - 2013-OLDER
- 4 PCS



VP150009
PB TOOL BOX STAINLESS
COVER KIT - 389 - 2013-OLDER
- CATALYTIC COVER PASS
SIDE - 7 PCS



VP150005 PB TOOL BOX COVER - 389



VP150006
PB BATTERY BOX COVER - 389
WITH 1" LIP



VP150007
PB TOOL & BATTERY BOX
COVERS - 389 WITH 1" LIP - 2 PCS



VP150008
PB TOOL & BATTERY BOX
STEP TRIMS - 389 - 4 PCS



VP150014
PB 389 TOOL BOX FILLER
BLOCK FOR BOTTOM STEP



VP150018
PB 389 BATTERY BOX COVER
MOLDED - 3PCS



VP150019
PB 389 BATTERY BOX LOWER
STEP COVER W/SIDES - 3PCS



VP150024
PB - 389 UREA CATALYTIC
COVER 3PC COVER - '12 AND
OLDER



VP150025
PB - 389 UREA CATALYTIC
COVER HIGHLIGHT - UPPER '12 AND OLDER



VP150042
PB - 389 - 2014 UREA
CATALYTIC COVER HIGHLIGHT
- SIDES - 2PCS



VP150027
PB - 389 - 2013-OLDER UREA
CATALYTIC COVER HIGHLIGHT
- SIDES - 2PCS



VP150026
PB - 389 UREA CATALYTIC
COVER HIGHLIGHT - LOWER

ADD "P" FOR PAINTABLE

PETERBILT MODEL 388 & 389

BATTERY BOXES & TOOL BOXES

STANDARD WIDTH 30" / CUSTOM WIDTHS AVAILABLE UP TO 48"



 $VP150112 - \text{PB} - 379,388,389 \text{ REAR TOOL BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150113 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{PB} - 379,$



VP150109R - PB - 379, 388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK

 $VP150110R - \text{PB} - 379, 388, 389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{ROUNDED} \\ \text{SMOOTH LOOK}$



 $VP150115 - \text{PB} - 379,388,389 \text{ REAR TOOL BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150116 - \text{PB} - 379,388,389 \text{ BATTERY BOX} - \text{STAINLESS W/LOCKS} - \text{MOULDED LID} \\ VP150116TM - \text{PB} - 379,388,389 \text{ BATT, BOX} - \text{STAINLESS W/TIE DOWNS} - 18" \text{ TALL} \\ \text{MOULDED LID} \\$

ADD -36 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 36" BOX ADD -48 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 48" BOX



VP150103
PB - 379, 388, 389 BATTERY
BOX - ALUMINUM



VP150104
PB - 379, 388, 389 BATTERY
BOX - ALUMINUM



BOX STEP HIGHLIGHTS/PROTECTORS





PETERBILT MODEL 567



PETERBILT MODEL 567

CAB PANEL

MOUNTING HARDWARE INCLUDED



VP110277

PB CAB PANELS - 567 - BLANK

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED



VP140283

PB SLEEPER PANELS -567 - 80" - BLANK W/REAR EXHAUST

VP142079

PB SLEEPER PANELS - 567 & 579 - 80" - EXAUST BEHIND SLEEPER

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
567, 579	36"	44"
	63"	72"
	(N/A)	80"

HOOD EXTENSION PANELS

FENDER GUARDS



VP110401

PB 567 - HOOD EXTENSION

PANEL - FILLER PANEL



VP110402

PB 567 - HOOD EXTENSION PANEL - FACTORY LAYOVER TAPE MOUNT VP110403

PB 567 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR



VP120019

PB FENDER GUARD - 567 FITTED 4PCS. UPPER & LOWER



PETERBILT MODEL 567

BUG SHIELDS



FUEL TANK STRAP COVERS

BRACKETS & MOUNTING HARDWARE INCLUDED







PETERBILT MODEL 567

STAINLESS VISORS

VP130007
PB - 12" - DROP VISOR 2013 579 DAY CAB
ALSO FITS MODEL 567



VP130007P RAW 18 GAUGE STEEL



PAINTABLE CUSTOM VISOR SHOWN VP130007P-16-10BYA

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107

FOR MORE PETE VISORS SEE PAGES 198-201



PETERBILT MODEL 579



PETERBILT MODEL 579





16 HZ-SP

Front bumper air dam

PETERBILT MODEL 579

CAB PANELS

MOUNTING HARDWARE INCLUDED
ULTRA AND ULTRA LOFT CABS USE SAME PANELS

VP110270

PB CAB PANELS - 579 - BLANK - 2 PCS

VP110272

PB CAB PANELS - 579 DAY CAB OR VERT EXHAUST BLANK - 2 PCS

VP110271

PB CAB PANELS - 579 - BLANK W/HEATER PLUG HOLE - 2 PCS

VP110273

PB CAB PANELS - 579 DAY CAB OR VERT EXHAUST- BLANK W/HEATER PLUG HOLE - 2 PCS

VP110276

PB CAB PANELS - 579 - BLANK -SHORT HOOD - 2016

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED

VP142075

PB SLEEPER PANELS - 579 - 36"/44" - EXAUST BEHIND SLEEPER

VP142077

PB SLEEPER PANELS - 579 - 63"/72" - BLANK

VP142079

PB SLEEPER PANELS - 579 - 80" - EXAUST BEHIND SLEEPER

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
567, 579	36"	44"
	63"	72"
	(N/A)	80″

VP142078

PB SLEEPER PANELS - 579 - 80" - BLANK W/FRONT EXHAUST

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107



VP110271-4GMA

PETERBILT MODEL 579

DEF SYSTEM PANELS

BRACKETS & MOUNTING HARDWARE INCLUDED



VP150043 PB - 579 DEF CATALYTIC COVER HIGHLIGHT - UPPER




VP150044 PB - 579 DEF CATALYTIC COVER HIGHLIGHT - LOWER



LOWER STEP COVER - WING STYLE



VP150046 PB - 579 DEF CATALYTIC **EXHAUST COVER -**DYNAFLEX EXHAUST

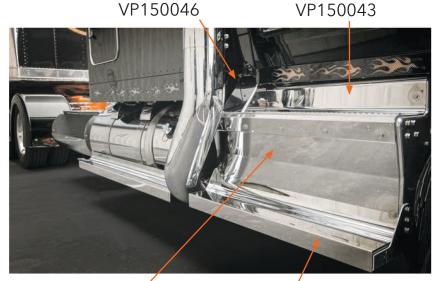

VP150044

VP150045W




PETERBILT MODEL 579

MISC. TRIM PIECES





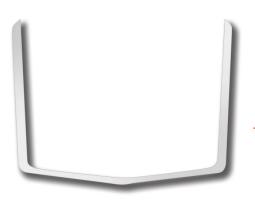

VP100034
PB 579 FRONT HOOD GRILLE SURROUND
TAPE MOUNT





VP110028
PB 579 TOP OF DOOR TRIM LOWERED LOOK - PAIR
TAPE MOUNT





VP110030
PB 579 TOP OF DOOR TRIM LOWERED LOOK - PAIR - W/MIRROR
HOLES PASS. SIDE



PETERBILT MODEL 579

MISC. TRIM PIECES

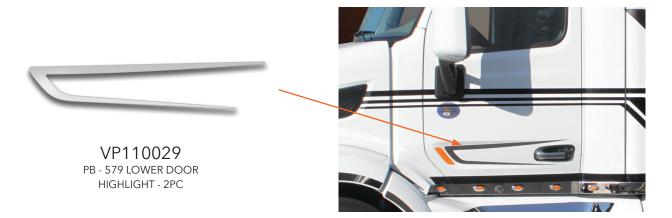

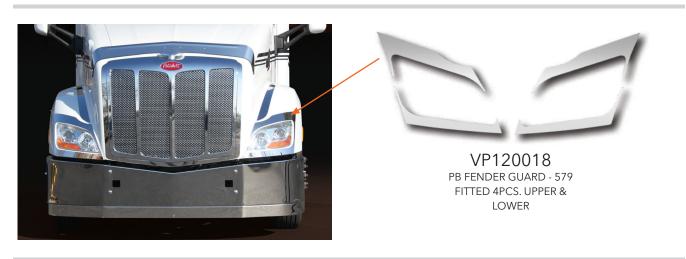





PETERBILT MODEL 579

STAINLESS VISORS



VP130007

PB - 12" - DROP VISOR 2013 TO 2019 579 DAY CAB ONLY ALSO FITS MODEL 567, DOES NOT FIT ULTRA LOFT

VP130008

PB - 14" - DROP VISOR 2013 TO 2019 579 RAISED ROOF ULTRACAB NOTE: MOUNTS TO EXISTING FACTORY VISOR BRACKETS NO OTHER MOUNTING BRACKETS PROVIDED



JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP130008-P RAW 18 GAUGE STEEL



VP130008-10GMA SHOWN

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107



VP132008

PB - 18" GANGSTER VISOR - FITS 579 ULTRA CAB ONLY, DOES NOT FIT ULTRA LOFT

VP132008-BF

PB - 18" GANGSTER VISOR -BUTTERFLY - FITS 579 ULTRA CAB ONLY, DOES NOT FIT ULTRA LOFT

VP130014

PB - 16" STD MOUNT DROP VISOR 579 ULTRA LOFT ONLY

FOR MORE PETE VISORS SEE PAGES 198-201



PETERBILT MODEL 579

SLEEPER SHOCK COVERS



VP140037 PB SLEEPER SHOCK/

BREATHER COVER - 579 FULL COVER RUBBER STRIP & MOUNTING HARDWARE INCLUDED



VP140036

PB SLEEPER BREATHER COVERS - 579 - 2 PCS ANGLED TAPE MOUNT



VP140038

PB SLEEPER SHOCK COVER -579 FULL COVER RUBBER STRIP & MOUNTING HARDWARE INCLUDED

TANK FAIRING HIGHLIGHT



PB - 579 FUEL TANK FAIRING UPPER HIGHLIGHT - 2PCS TAPE MOUNT



KICK PANEL TRIM





PB - 579 DOOR ENTRY KICK PANELS - 2PCS

PETERBILT MODEL 587




VALLEY CHROME PLATING

PETERBILT MODEL 587

FENDER TRIM





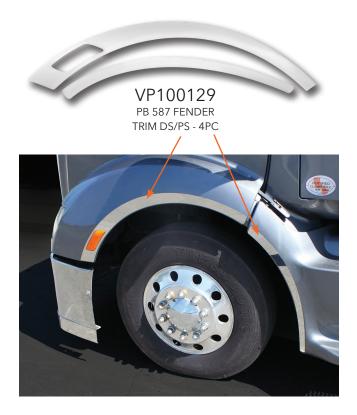


STAINLESS VISORS

VP130011
PB - 587 16" DROP VISOR - 2011 AND NEWER RAISED ROOF



VP130011P RAW 18 GAUGE STEEL

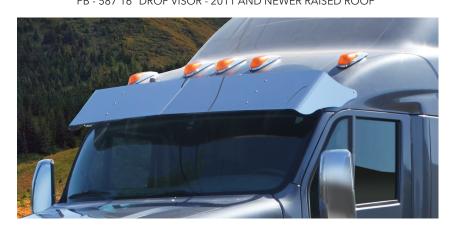

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107

PETERBILT MODEL 587

MISC. TRIM PIECES





VP150038
PB - 587 0 STEP HIGHLIGHTS
- 4 PCS



PETERBILT MODEL 589



- 1. VP130017 12" DROP VISOR (MOUNTS TO FACTORY BRACKETS)
- 2. VP112120 7GSCA FRONT AIRCLEANER LITE BAR W/7 GRANITE SLIM CLEAR AMBERS
- 3. VP110420 4GSCA HOOD EXTENSION W/4 GRANITE SLIM CLEAR AMBERS
- 4. VP110221 3GSCA DRIVER-SIDE CAB PANEL W/3 GRANITE SLIM CLEAR AMBERS
- 5. VP113120 7GSCR REAR AIRCLEANER LITE BAR W/7 GRANITE SLIM CLEAR REDS
- 6. VP142045 5GSCA 63" SLEEPER PANEL W/5 GRANITE SLIM CLEAR AMBERS

PETERBILT MODEL 589

FENDER GUARDS, AIR CLEANER LIGHT BARS, CAB & SLEEPER PANELS



PETERBILT MODEL 589 YEARS 2024 & NEWER

VISORS



VP133017

12" WICKED VISOR (FITS TRUCKS W/FACTORY VISOR)



VP135017

12" WICKED VISOR (FITS TRUCKS W/FACTORY VISOR)

PETERBILT

WATERMELON LIGHT BRACKETS & PLATES



VWM005

SINGLE WATERMELON INTERIOR PLATE W/SWITCH HOLE (389 CENTER DOME LIGHT)



VWM001

DUAL WATERMELON INTERIOR PLATE W/SWITCH HOLE (389 DOME LIGHT)



VU-11101-A

AMBER WATERMELON LIGHT (EXPLODED VIEW)

(SOLD SEPARATELY)



VWM009

SINGLE WATERMELON INTERIOR PLATE W/SWITCH HOLE



VWM012

SINGLE WATERMELON FRAME BRACK-

FT

CUTOUTS ONLY



ACCESSORIES FOR ALL PETERBILT MODELS





ALL PETERBILT MODELS

HOOD EMBLEMS

PETERBILT LOGO EMBLEM NOT INCLUDED



VP100004

EMBLEM ACCENT PB TEAR DROP - 2PC TAPE MOUNT



VP100005

EMBLEM ACCENT PB
TEAR DROP W/CUTOUTS - 2PC
TAPE MOUNT



VP100006

EMBLEM ACCENT PB ELLIPSE W/CUTOUT - PAIR INCLUDES MOUNTING HARDWARE



VP100007

EMBLEM ACCENT PB
SKULL & CROSSBONES - PAIR
TAPE MOUNT



VP100008

EMBLEM ACCENT PB
CHECKERED FLAG - PAIR
INCLUDES MOUNTING HARDWARE



VP100010

EMBLEM ACCENT PB WILD FIRE - PAIR TAPE MOUNT



VP100011

EMBLEM ACCENT PB FLAMES - 2PC INCLUDES MOUNTING HARDWARE



VP100013

EMBLEM ACCENT PB OVAL - PAIR TAPE MOUNT



VP100012

EMBLEM ACCENT PB CHEVRON - PAIR TAPE MOUNT

ALL PETERBILT MODELS

HOOD EMBLEMS

PETERBILT LOGO EMBLEM NOT INCLUDED



VP100014
EMBLEM ACCENT PB
OVAL - W/CUTOUTS - PAIR
INCLUDES MOUNTING
HARDWARE



VP100015
EMBLEM ACCENT PB
OVAL - W/SPADES - PAIR
TAPE MOUNT



VP100016
EMBLEM ACCENT PB
OVAL - W/2-EXTENSIONS - PAIR
TAPE MOUNT



VP100017
EMBLEM ACCENT PB
OVAL - W/3-EXTENSIONS - PAIR
TAPE MOUNT



VP100018
EMBLEM ACCENT PB
SWIRL - 2PC
INCLUDES MOUNTING
HARDWARE



VP100027
EMBLEM ACCENT PB FISH - PAIR
INCLUDES MOUNTING
HARDWARE



VP100029
EMBLEM ACCENT PB FLAMES - 2PCS.
INCLUDES MOUNTING
HARDWARE



VP100019
EMBLEM ACCENT PB
SWIRL - W/CUTOUTS - 2PC
INCLUDES MOUNTING
HARDWARE

HOOD LATCH GUARDS



VP100022
PB HOOD LATCH TRIM
STANDARD HOOD - 2PC



VP100024
PB HOOD LATCH TRIM
EXTENDED HOOD - 2 PC



VU190011
PB, FL, KW, HOOD LATCH
ACCENT TRIM - PAIR

ALL PETERBILT MODELS

KEY GUARDS

STRONG 3M DOUBLE-SIDED TAPE INCLUDED



VP110001
PB KEY GUARD
FLAME - PAIR



VP110002
PB KEY GUARD
TEAR DROP- PAIR



VP110003
PB KEY GUARD
CHECKERED FLAG - PAIR



VP110004
PB KEY GUARD
TRIANGLE - PAIR



VP110005
PB KEY GUARD
OVAL -PAIR



VP110006 PB KEY GUARD ELLIPSE W/CUTOUT - PAIR




VP110007
PB KEY GUARD
WILDFIRE - PAIR



VP110008 PB KEY GUARD - FISH

MISC. TRIM PIECES

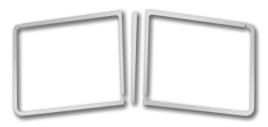

VP110014
PB WINDSHIELD TRIM 3 PC





VP110021
PB WINDSHIELD TRIM 5 PC



VP110011
PB CAB MOUNTED MIRRORS
DOOR LATCH/KEY HOLE
COVERS - 2PC



ALL PETERBILT MODELS

BUG SHIELD - MODEL 387




PETE - 387 MOUNTING HARDWARE INCLUDED

WINDOW TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



SLEEPER WINDOW LOWER LOOKS



VP140117
PB TOP OF DOOR TRIM - LOWERED LOOK - PR
WILL ONLY FIT DOORS WITHOUT VENT WINDOW

ADD -P FOR PAINTABLE



PETERBILT SUN VISORS BY CAB TYPE

STANDARD MOUNT STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED AVAILABLE IN 304 STAINLESS STEEL - CALL FOR PRICING



VP130000

PB-14"- DROP VISOR 1996-98 ULTRA CAB

VP130001

PB - 359 12" DROP VISOR - ANY YEAR 359

VP130002

PB-14" - DROP VISOR - STANDARD CAB 2005 & OLDER WITH DOOR MOUNTED MIRRORS

VP130002-16

PB - 16" - DROP VISOR - STANDARD CAB 2005 & OLDER, NOTE 04 AND OLDER DOOR MNT MIRRORS

VP130005



VP130003

PB - 14" - DROP VISOR -1999-2001 ONLY, ULTRACAB

VP130003-16

PB-16" - DROP VISOR 1999 - 2001 ULTRACAB



PB - 14" - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS

VP130004-16

PB - 16" - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS

VP130005

PB - 14" - DROP VISOR - 2005 - NEWER ULTRACAB - W/CAB MOUNTED MIRRORS

VP130005-16

PB - 16" - DROP VISOR - 2005 - NEWER ULTRACAB W/CAB MOUNTED MIRRORS



PB - 13.5" - DROP VISOR - 2005 - NEWER STANDARD CAB W/CAB MOUNTED MIRRORS, ALSO FITS MODEL 348

VP130006-16

PB - 16" - DROP VISOR - 2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS ALSO FITS MODEL 348

VP130017

PB-12"- DROP VISOR 2025-NEW



JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP130002-P RAW 18 GAUGE STEEL



PETERBILT SUN VISORS BY CAB TYPE

BOLTLESS MOUNT STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED AVAILABLE IN 304 STAINLESS STEEL - CALL FOR PRICING



VP131002

PB-14" - BOLTLESS - DROP VISOR - STAN-DARD CAB 2005 & OLDER -DOOR MOUNTED MIRRORS - 1PC

VP131002-16

PB-16" - BOLTLESS - DROP VISOR - STAN-DARD CAB 2005 & OLDER -DOOR MOUNTED MIRRORS - 1PC



VP131003

PB-14" - BOLTLESS - DROP VISOR - 1999 - 2001 - ULTRACAB - 1PC

VP131003-16

PB-16" - BOLTLESS - DROP VISOR - 1999 - 2001 - ULTRACAB - 1PC



VP131004

PB - 14" - BOLTLESS - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS - 1 PC

VP131004-16

PB - 16" - BOLTLESS - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS - 1 PC



VP131005

PB - 14" - BOLTLESS DROP VISOR 2005 + ULTRACAB ONE PIECE W/CAB MT MIRRORS

VP131005-16

PB - 16" - DROP VISOR 2005 + ULTRACAB ONE PIECE W/CAB MT MIRRORS



VP131006

PB - 14" - BOLTLESS - DROP VISOR -2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS - 1 PC

VP131006-16

PB - 16" - BOLTLESS DROP VISOR -2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS - 1 PC



VP130005

COOL
BOLTLESS
LOOK!



JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP131002-P RAW 18 GAUGE STEEL



PETERBILT WICKED VISORS

BOITI ESS STAINI ESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED AVAILABLE IN 304 STAINLESS STEEL - CALL FOR PRICING



VP135000

PB - 15" WICKED - DROP VISOR 1996-98 ULTRA CAB - 2 PC

VP135001

PB - 12" WICKED - DROP VISOR - ANY YEAR 359 - 2PC



VP135002

PB - 15" WICKED - DROP VISOR -STANDARD CAB 2005 & OLDER W/DOOR MOUNTED MIRRORS - 2 PC



PB - 15" WICKED - DROP VISOR 1999-2001 ULTRA CAB - 2PC



VP135004

PB - 15" WICKED - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS - 2 PC



PB - 15" WICKED - DROP VISOR - 2005 - NEWER ULTRACAB W/CAB MOUNTED MIRRORS - 2 PC



VP135006

PB - 15" WICKED - DROP VISOR - 2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS - 2 PC



VP136002

PB - 13" WICKED GANGSTER VISOR - FITS ANY - 370 SERIES & 380 SERIES - 2 PC



VP135006



COOL BOLTLESS LOOK!






PETERBILT SUN VISORS

GANGSTER STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED MADE WITH 16 GAUGE GRADE 430

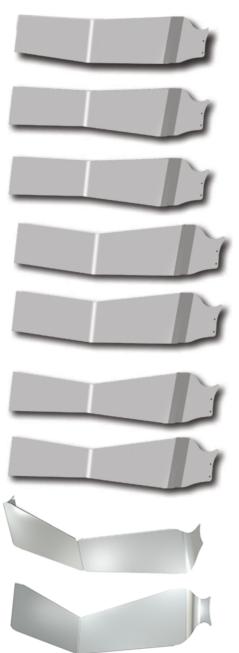

VP132002

PB - 12" GANGSTER VISOR - FITS ANY - 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002-BF

PB - 12" GANGSTER BUTTERFLY VISOR - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002P-BF

PB - 12" GANGSTER BUTTERFLY VISOR PAINTABLE - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002-RBF

PB - 12" GANGSTER REVERSE BUTTERFLY VISOR - FITS ANY - 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002P-RBF

PB - 12" GANGSTER REVRSE BUTTERFLY VISOR PAINTABLE -FITS ANY - 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002-BT

PB - 12" GANGSTER BOWTIE VISOR - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002P-BT

PB - 12" GANGSTER BOWTIE VISOR PAINTABLE - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132017

PB-14" - GANGSTER REVERSE BOWTIE VISOR - FITS ULTRA CAB

VP132018
PB-14" - BOLTLESS - GANGSTER FLAT BOTTOM VISOR - FITS ULTRA CAB



VP132002P-BT shown





JUST ADD "P" TO THE END FOR PAINTABLE

RAW 18 GAUGE STEEL
COLORS SHOWN EXAMPLES ONLY

PETERBILT STAINLESS TRIM

SLEEPER WRAPS

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VP140005 PB SLEEPER WRAP -FLAG - LG

VP140006
PB SLEEPER WRAP - FLAG SM - UNIBILT STAND-UP



VP140023
PB SLEEPER WRAP GIRLS - LG


VP140024
PB SLEEPER WRAP - GIRLS SM - UNIBILT STAND-UP





VP140007
PB SLEEPER WRAP FLAMES - LG

VP140008
PB SLEEPER WRAP - FLAMES SM - UNIBILT STAND-UP



VP140018

PB SLEEPER WRAP PLAIN - LG - FLAT TOP CAB

VP140019
PB SLEEPER WRAP - PLAIN SM - ULTRA CAB



VP140015
PB SLEEPER WRAP - PLAIN SM - SIDES - 2PCS



VP140009
PB SLEEPER WRAP - STEER
HEAD - LG

VP140010
PB SLEEPER WRAP - STEER
HEAD - SM - UNIBILT STAND-UP



VP140011

PB SLEEPER WRAP PLAIN - LG - FLAT TOP - 3PC

VP140012
PB SLEEPER WRAP - PLAIN SM - 3PC - UNIBILT STAND-UP



VP140016
PB SLEEPER WRAP - PLAIN LG - SIDES - 2PCS

REAR FRAME COVERS

MOUNTS USING EXISTING FRAME BOLTS



PB - REAR FRAME COVER -379



VP160003
PB - REAR FRAME COVER - WILDFIRE

WILL NOT WORK WITH ALUMINUM FRAMES



VP160004
PB - REAR FRAME COVER - ELLIPSE



PB - REAR FRAME COVER -STEER HEAD



VP160005
PB - REAR FRAME COVER - OVAL - W/CUTOUTS



PB - REAR FRAME COVER -GIRLS



PETERBILT STAINLESS TRIM

DEF TANK COVERS

MOUNTS TO EXISTING HARDWARE





FUEL TANK WRAPS

MOUNTS BEHIND FUEL TANK STRAPS STRONG 3M DOUBLE-SIDED TAPE ALSO INCLUDED



VP150041 DRIVER SIDE PB -2012 FUEL TANK WRAP -75 GALLON

VP150041-PS PASSENGER SIDE PB -2012 FUEL TANK WRAP 75 GALLON

Bumpers and Stainless Accessories made in the USA



VP150040 DRIVER SIDE PB - 2012 FUEL TANK WRAP -150 GALLON

VP150040-PS PASSENGER SIDE PB - 2012 FUEL TANK WRAP 150 GALLON

SPECIFY TANK LENGTH, INSIDE WELD TO INSIDE WELD WHEN ORDERING

KENWORTH W900



KENWORTH W900

CAB PANELS

MOUNTING HARDWARE INCLUDED





W900L - 2014 - HIGHLIGHT - BLANK - W/ LIGHT HOLE -HEATER PLUG HOLE



W900L - AEROCAB - CAB PANELS - 50.25" - BLANK

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107









EXAMPLE VK110200-4RA

EXAMPLE VK110200-4GA



VK110200-3GA shown

KENWORTH W900

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED

VK142035

KW SLEEPER PANELS - T600 (1995 & NEWER, NO FAIRINGS) T800 (1986 & NEWER), W900 (1986 & NEWER) - 42" - BLANK

VK142008

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING -T600, T800, W900 - 60" - BLANK - 1995 & NEWER WRAPS ON BOTH ENDS

VK142030

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING, PASS SIDE NOTCHED FOR EXH -T600, T800, W900 - 62"- BLANK

VK142015

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING -T600, T800, W900 - 72" - BLANK

VK142023

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 86" -BLANK

30 VK142100

KW SLEEPER PANELS -AEROCAB - W/EXHAUST -W900 L - 62" - BLANK

VK142101

KW SLEEPER PANELS -AEROCAB - W/EXHAUST - W900 L - 72" - BLANK

VK142105

KW SLEEPER PANELS -AEROCAB - W/FUEL DOOR -W900 L - 86" - BLANK

VK142200

KW SLEEPER PANELS - 2014 AEROCAB - 62" - BLANK - 2 PCS

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107



EXAMPLE VK142008-3UN











EXAMPLE VK142023-8GA

KENWORTH W900

HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VK110300 HOOD EXTENSION PANELS -W900L - BLANK - 1997-2004 -2 PCS



VK110305 HOOD EXTENSION PANELS -W900L - BLANK - 2014 - 2 PCS


ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107



EXAMPLE VK110300-3UN



EXAMPLE VK110300-4GA

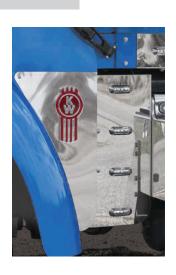

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK -1992 - 2012



KENWORTH W900

AIR CLEANER LIGHT BOXES

MOUNTING HARDWARE INCLUDED

ADD LIGHTS TO YOUR PANEL **SEE PAGES 106-107 EXAMPLE:**

> 0 0 0

0

0



VK113000 AIR CLEANER LIGHT BOXES -W900 - FRONT - BLANK



VK113001 AIR CLEANER LIGHT BOXES - W900 - CENTER MOUNT - FRONT - BLANK



VK110020 AIR CLEANER LIGHT BOXES -W900 - REAR - BLANK



W900L - 2014 - PAIR

VK112209 KW - AIR CLEANER SUPPORT - BLANK -W900 - FRONT - 8 ROUND AMBERS

VK113000-8RA AIR CLEANER LIGHT BOXES -

KENWORTH W900 &W990

BUMPER SUPPORT BRACKETS



VK15-06333L-18 SUPPORT BRACKET FOR 18" BUMPERS



VK15-06333L-22 SUPPORT BRACKET FOR 22" BUMPERS



VK15-06333LW-18 SUPPORT BRACKET FOR 18" BUMPERS



VK15-06333LW-20 SUPPORT BRACKET FOR 20" BUMPERS



VK15-06333LW-22 SUPPORT BRACKET FOR 22" BUMPERS (WITH WATERMELON LIGHT CUTOUT) (WITH WATERMELON LIGHT CUTOUT) (WITH WATERMELON LIGHT CUTOUT)



KENWORTH W900

AIR CLEANER FAIRINGS





VK100013 AIR CLEANER FAIRING W9L PR





AIR CLEANER FAIRING W9L PR 2014



VK100022 AIR CLEANER FAIRING W9L PAIR 2014 - SLIM VERSION



KENWORTH W900

EXTERIOR WINDOW TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VK110021 2014 KW WINDSHIELD TRIM - 4 PC - W900 CURVED WINDSHIELD



VK110018 2014 KW WINDSHIELD TRIM - 6 PC - W900 - CURVED WINDSHIELD - LARGE

EXHAUST SHIELDS

BRACKETS AND MOUNTING HARDWARE INCLUDED



VK110090 KW EXHAUST SHIELD W/NO LOGO W900B



BUG SHIELDS

MOUNTING HARDWARE INCLUDED



VK120023 HIGHLIGHT ONLY STAINLESS HIGHLIGHT



KW BUGSHIELD TRIM - W900L - KW BUGSHIELD TRIM - W900L -FLAME - ONLY STAINLESS HIGHLIGHT





KENWORTH W900

BLINKER BARS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED



VK120501 KW - W900L FRONT BLINKER BARS W/LIGHTS



VK100501 KW - W900L REAR BLINKER BARS W/LIGHTS



VK120501BL KW - W900L FRONT BLINKER BARS BLANK

ADD LIGHTS TO YOUR BLINKER BAR - SEE PAGES 106-107



FLAP WEIGHTS



VK190001 2014 W900 L - FRONT FENDER FLAP WEIGHTS - 2 PCS

KENWORTH W900

FENDER GUARDS



VK120019



VK120016 KW - FENDER GUARDS -W900L - 1989 & NEWER - PAIR



VK120017 KW - FENDER GUARDS -W900L - FLUSH MOUNT 1989 & NEWER - PAIR



VK120019 KW - FENDER GUARDS -W900B - FLUSH MOUNT 1989 & NEWER - PAIR

BATTERY & TOOL BOX COVERS



VK150004 KW - BATTERY BOX COVER -T600, T800, W900 - 39.5" X 9.0"



VK150005 KW - BATTERY BOX COVER -T600, T800, W900 - 45" X 9"



VK150006 KW - TOOL BOX COVER - T600, T800, W900 - 39.5" X 8.5"



VK150007 KW - TOOL BOX COVER - T600, T800, W900 - 45" X 8.5"



VK150030 2014- W900 L - BATTERY BOX STEP COVER



VK150031 2014- W900 L - BATTERY COVER HIGHLIGHT - 2 PCS



VK150032 2014- W900 L - BATTERY BOX STEP HIGHLIGHT - 5 PCS

KENWORTH W900

HOOD & GRILLE TRIM





22281 SIDE HOOD WINGS




VK120007
KW SIDE GRILL DEFLECTOR FULL LENGTH - W900L



VK120008 KW SIDE GRILL DEFLECTOR -FOR USE WITH BLINKER BAR - W900L



VK120004 KW SIDE GRILL DEFLECTORS

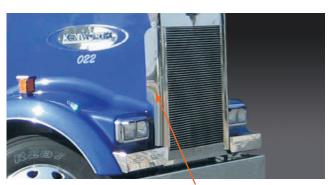

VK120008

KENWORTH W900

STAINLESS SUN VISORS

MOUNTING HARDWARE INCLUDED




VK130001

VK-13" - DROP VISOR - W900 AEROCAB CURVED - 1995 - 2006

VK131001

KW - 13" - DROP VISOR - W900 AEROCAB CURVED 1995 & 2006 -1PC - BOLTLESS

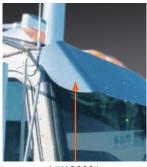

VK130001



VK130002

KW - 13" - DROP VISOR - W900 - CABS W/ SPLIT FLAT WINDSHIELDS 1984 TO 1998

VK131002

KW - 13" - DROP VISOR - W900 - CABS W/ SPLIT FLAT WINDSHIELDS 1984 TO 1998 - 1PC - BOLTLESS



VK130002



VK130003

KW - 11" - DROP VISOR - (W900 2007-2013) - (T660, T800 2007-2024)-CURVED WINDSHIELD

VK131003

KW - 11" - DROP VISOR - W900 - T660 -CURVED WINDSHIELD - 2007 & NEWER - 1PC - BOLTLESS



 $\rm KW$ - $13^{\prime\prime}$ - DROP VISOR - W900 - CABS W/ SPLIT FLAT WINDSHIELD 1999 TO 2004

VK131004

KW - 13" - DROP VISOR - W900 - CABS W/ SPLIT FLAT WINDSHIELD 1999 TO 2004 -1PC - BOLTLESS



VK130003



KENWORTH W900

GANGSTER VISORS

MOUNTING HARDWARE INCLUDED



VK132001

KW - 12" - GANGSTER VISOR - DROP - W900 - CURVED WINDSHIELD - 1995 - 2006 - 2 PC

VK132003

KW - 12" - GANGSTER VISOR -DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC





VK132001P

KW - 12" - GANGSTER VISOR PAINTABLE - DROP - W900 - CURVED WINDSHIELD - 1995 - 2006 - 2 PC RAW 18-GAUGE STEEL



VK132001-BF

KW - 12" - GANGSTER BUTTERFLY VISOR - DROP - W900 - CURVED WINDSHIELD - 1995 - 2006 - 2 PC



VK132001P-BF

KW - 12" - GANGSTER BUTTERFLY VISOR PAINTABLE - DROP - W900 -CURVED WINDSHIELD - 1995 - 2006- 2 PC RAW 18-GAUGE STEEL







VK132003-BF



VK132003-BF

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107 FOR LIGHT OPTIONS



KENWORTH W900

BOLTLESS WICKED VISORS

MOUNTING HARDWARE INCLUDED



VK135001

KW - 13" - WICKED - DROP - W900 AEROCAB CURVED 1995-2006 - 2 PIECE



VK135002

KW - 13" - WICKED - DROP - W900 - CABS W/ SPLIT FLAT WINDSHIELDS 1984 TO 1998 - 2 PIECE



VK135003

KW - 14" - WICKED -DROP - W900, T660, T800 - CURVED WINDSHIELD -2007 & NEWER - 2 PIECE



VK135004

KW - 13" - WICKED -DROP - W900 - CABS W/ SPLIT FLAT WINDSHIELD 1999 & NEWER - 2PIECE



VK136001

KW - 14" - WICKED GANGSTER - W900 -CURVED WINDSHIELD -1995-2006 - 2 PIECE



VK136003

KW - 14" - WICKED GANGSTER - W900, T660, T800 - CURVED WINDSHIELD -2007-NEWER - 2 PIECE



JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VK135002-P RAW 18 GAUGE STEEL

COOL BOLTLESS LOOK!



VK135001



ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107



KENWORTH W900

CATALYTIC SYSTEM BOX HIGHLIGHT



VK150020 2014- W900 L - CATALYTIC STEP COVER



VK150021 2014- W900 L - CATALYTIC COVER HIGHLIGHT - 2 PCS



VK150022 2014- W900 L - CATALYTIC STEP HIGHLIGHTS - 5 PCS

DEF TANK COVER



VK150028 KW - 2014 W900 L - DEF TANK COVER



STAINLESS DECK PLATES



VK192010 FRONT DECK PLATE FLUSH MOUNT - W/ AIR LINE BOX CUTOUT - 2014 W900 L



VK192011 MID DECK PLATE FLUSH MOUNT -2014 W900 L - 66"X27"



VK192012 REAR DECK PLATE - FLUSH MOUNT -2014 W900 L

KENWORTH W900

FUEL TANK FAIRINGS

BRACKETS & MOUNTING HARDWARE INCLUDED NOT AVAILABLE IN 430 STAINLESS FAIRINGS FOR STANDARD WIDTH TANK STRAPS SHOWN



KW - FUEL TANK FAIRINGS 60" - W900 - 1998 & NEWER - PAIR

66"

VK150002 KW - FUEL TANK FAIRINGS 66" - W900 - 1998 & NEWER - PAIR



KW - FUEL TANK FAIRINGS 73"- W900 - 1998 & NEWER - PAIR





VK150001R

KW - FUEL TANK FAIRINGS 60" - ROUND - W900 - 1998 & **NEWER**




KW - FUEL TANK FAIRINGS 14" 66" - ROUND - W900 - 1998 & **NEWER**



KW - FUEL TANK FAIRINGS 73" - ROUND - W900 - 1998 & **NEWER**



ROUNDED

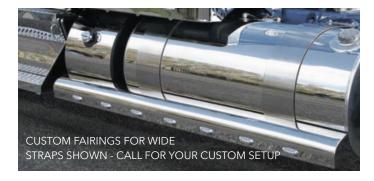



ADD LIGHTS TO YOUR FAIRING - SEE PAGES 106-107



KENWORTH W900

LOWER HOOD PANELS

KENWORTH LOGO NOT INCLUDED



KW - LOWER HOOD PANELS -W900 1989 & NEWER - PR

CENTER HOOD TRIM



VK100021 KW - W900L CENTER HOOD TRIM TAPE MOUNT

KENWORTH T600



KENWORTH T600

SI FEPER PANELS

VK142035

KW SLEEPER PANELS - T600 (1995 & NEWER, NO FAIRINGS) T800 (1986 & NEWER), W900 (1986 & NEWER) - 42" - BLANK

VK142008

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING -T600, T800, W900 - 60" - BLANK - 1995 & NEWER

VK142015

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING -T600, T800, W900 - 72" - BLANK

VK142023

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 86" -BLANK

VK142030

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING , PASS SIDE NOTCHED FOR EXH - T600, T800, W900 - 62" - BLANK

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107







VK142008-5RA



VK142023-8GA

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VK143001 SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK -

1992 - 2012





KENWORTH T600

STAINLESS GRILLES

MOUNTING HARDWARE INCLUDED



VK120600 KW GRILL T600B -HORIZONTAL - RIVETED

BUG SHIELDS

MOUNTING HARDWARE INCLUDED





KENWORTH T600

BATTERY & TOOL BOX COVERS



VK150004 KW - BATTERY BOX COVER -T600, T800, W900 - 39.5" X 9.0"



VK150005 KW - BATTERY BOX COVER -T600, T800, W900 - 45" X 9"



VK150006 KW - TOOL BOX COVER -T600, T800, W900 - 39.5" X 8.5"



VK150007 KW - TOOL BOX COVER - T600, T800, W900 - 45" X 8.5"

SIDE MARKER TRIM



VK140001
T600 SIDE MARKER LIGHT
ACCENT TRIM - PAIR



KENWORTH T660



KENWORTH T660

CAB PANELS

MOUNTING HARDWARE INCLUDED



VK110201

T660 - CAB PANELS - BLANK"

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

BUG SHIELDS

MOUNTING HARDWARE INCLUDED





STAINLESS SUN VISORS

MOUNTING HARDWARE INCLUDED



VK130003

KW - 13" - DROP VISOR - (W900 2007-2013) - (T660, T800 2007-2015)-CURVED WINDSHIELD

VK131003


KW - 13" - DROP VISOR - W900 - T660 - CURVED WINDSHIELD - 2007 & NEWER - 1PC - BOLTLESS



KENWORTH T660

GANGSTER VISORS

MOUNTING HARDWARE INCLUDED

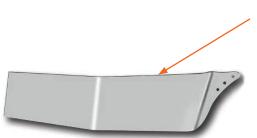

VK132003

KW - 12" - GANGSTER VISOR DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC

VK132003 - BF

KW - 12" - GANGSTER VISOR - BUTTERFLY DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC



VK132003-BF

ABOVE VISORS ARE ONLY AVAILABLE IN 12"

BOLTLESS WICKED VISORS

MOUNTING HARDWARE INCLUDED



VK135003

KW - 14" - WICKED -DROP - W900, T660, T800 - CURVED WINDSHIELD -2007 & NEWER - 2 PIECE

COOL BOLTLESS LOOK!



VK136003

KW - 14" - WICKED GANGSTER - W900, T660, T800 - CURVED WINDSHIELD -2007-NEWER - 2 PIECE



KENWORTH T660

BATTERY & TOOL BOX COVERS



KENWORTH T680





(other options available)

KENWORTH T680

CAB & COWEL PANELS

MOUNTING HARDWARE INCLUDED







VK110308 2021-2023 COWEL PANEL (FITS HIGH-ROOF TRUCKS)





VK110308-4GSCA 2021-2023 COWEL PANEL W/4 GRANITE SLIM CLEAR AMBER LIGHTS (FITS HIGH-ROOF TRUCKS)

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VK143001 SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK -1992 - 2012

DOOR AND WINDOW TRIM



VK110222 KW - T680 DOOR ENTRY KICK PANELS - 4PCS UPPER & LOWER



KW T680 LOWERED LOOK - 2015

KENWORTH T680

BUG SHIELDS

MOUNTING HARDWARE INCLUDED





FENDER GUARDS



VK120018
KW - T680 FENDER GUARDS
- FITTED - 4PCS. UPPER &
LOWER

STAINLESS SUN VISORS



VK130007

KW - 13" - DROP - T680, T880 CURVED WINDSHIELD - 2015
REPLACES FACTORY VISOR ONLY



VK130008 KW - 15" DROP VISOR T680 MID-ROOF STANDUP SLEEPER WITH NO EXISTING FACTORY VISOR

KENWORTH T680

DEF TANK COVER



VK 150029 KW - UREA TANK COVER 2015 T680





KENWORTH T800 & T880



KENWORTH T800 & T880

SI FEPER PANELS

MOUNTING HARDWARE INCLUDED

VK142035

KW SLEEPER PANELS - T600 (1995 & NEWER, NO FAIRINGS) T800 (1986 & NEWER), W900 (1986 & NEWER) - 42" - BLANK

VK142008

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING -T600, T800, W900 - 60" - BLANK - 1995 & NEWER

VK142015

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING -T600, T800, W900 - 72" - BLANK

VK142023

KW SLEEPER PANELS -AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 86" -**BLANK**

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107







VK142008-5RA



EXAMPLE VK142023-8GA

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VK143001 SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK -1992 - 2012



KENWORTH T800 & T880

BUG SHIELDS

MOUNTING HARDWARE INCLUDED



FENDER GUARDS



VK120022 KW - FENDER GUARDS - T-800 AERO CAB -1996 & NEWER - PAIR

STAINLESS SUN VISORS



VK130003

KW - 13" - DROP VISOR - (W900 2007-2013) - (T660, T800 2007-2015)- CURVED WINDSHIELD MOUNTING HARDWARE INCLUDED



VK130007

KW - 13" - DROP - T680, T880 -CURVED WINDSHIELD - 2015 DAY CAB ONLY NO MOUNTING HARDWARE INCLUDED REPLACES FACTORY VISOR ONLY




VK130003

KENWORTH T800 & T880

GANGSTER VISORS

MOUNTING HARDWARE INCLUDED

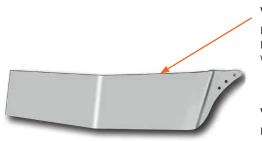

VK132003

KW - 12" - GANGSTER VISOR -DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC

VK132003 - BF

KW - 12" - GANGSTER VISOR -DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC

ABOVE VISORS ARE ONLY AVAILABLE IN 12"



VK132003-BF

BOLTLESS WICKED VISORS

MOUNTING HARDWARE INCLUDED



VK135003

KW - 14" - WICKED -DROP - W900, T660, T800 - CURVED WINDSHIELD -2007 & NEWER - 2 PIECE

COOL BOLTLESS LOOK!



VK136003

KW - 14" - WICKED GANGSTER - W900, T660, T800 - CURVED WINDSHIELD -2007-NEWER - 2 PIECE



ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107

KENWORTH T800 & T880

BATTERY & TOOL BOX COVERS



VK150004

KW - BATTERY BOX COVER - T600, T800, W900 - 39.5" X 9.0"



VK150005

KW - BATTERY BOX COVER -T600, T800, W900 - 45" X 9"



VK150006

KW - TOOL BOX COVER - T600, T800, W900 - 39.5" X 8.5"



VK150007

KW - TOOL BOX COVER - T600, T800, W900 - 45" X 8.5"



ALL KENWORTH MODELS

EXTERIOR WINDOW TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VK110002 KW DAYLIGHT DOOR OUTER TRIM - 6PC



VK110012

KW EXTERIOR WINDOW TRIM
- PASSENGER DOOR VIEW DAYLIGHT DOOR



VK110013 KW EXTERIOR WINDOW TRIM PASSENGER DOOR VIEW

DOOR HANDLE TRIM



VK110003

PB, KW STAINLESS DOOR

HANDLE TRIM - PAIR

LOWER LOOK



VK110017 KW WINDOW LOWERED LOOK 4.5" FITS DAYLIGHT DOOR ONLY

AIR DEFLECTORS



VK110001 T300 T600 T800 W900 WINDOW AIR DEFLECTORS PAIR

ALL KENWORTH MODELS

EMBLEM ACCENTS

KENWORTH LOGO NOT INCLUDED



VK100001 EMBLEM ACCENT OLD GLORY - PAIR TAPE MOUNT



VK10005

EMBLEM ACCENT
3 POINT - PAIR

HARDWARE INCLUDED



VK10002

EMBLEM ACCENT
3 POINT SLOTTED - PAIR
HARDWARE INCLUDED -PAIR



VK10006 EMBLEM ACCENT SATURN - PAIR HARDWARE INCLUDED



VK100003 EMBLEM ACCENT FLAMES - PAIR TAPE MOUNT



VK10007
EMBLEM ACCENT
SHORT SATURN - PAIR
HARDWARE INCLUDED



VK10004

EMBLEM ACCENT
HIGH LIGHT - PAIR
HARDWARE INCLUDED



VK10008
EMBLEM ACCENT
3-D LOOK - PAIR
HARDWARE INCLUDED



VK100009 EMBLEM ACCENT VICTORY LANE - PAIR HARDWARE INCLUDED



VK100012 EMBLEM ACCENT U SHAPED UNDERLINE HARDWARE INCLUDED



VK100015
EMBLEM ACCENT
OVAL W/ UPWARD FLAME
TAPE MOUNT

HOOD LATCH GUARDS




VK100017 KW - HOOD LATCH GUARDS T222, T800, W900 1989 & NEWER - PAIR



VK100018 KW - HOOD LATCH GUARDS ALL MODELS W/ BALL LATCH 1968 - 1989 - PAIR



VU190011
PB, FL, KW, HOOD LATCH
ACCENT TRIM - PAIR

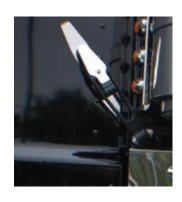

ALL KENWORTH MODELS

SLEEPER WINDOW TRIM



VK140002 W9L SLEEPER WINDOW TRIM - PAIR



VK140003 KW 72" SLEEPER UPPER WINDOW TRIM (SLIDING OR SWING) PAIR



VK140004 KW 86" STUDIO SLEEPER UPPER SLIDING WINDOW TRIM PAIR

REAR FRAME COVERS



VK160001 KW - REAR FRAME COVER -1992 & NEWER



VK160002 KW - REAR FRAME COVER -STEER HEAD - 1992 & NEWER

STAINLESS FUEL TANK WRAPS



VK150040 KW - 2014 FUEL TANK -HYDRAULIC TANK COMBO WRAP - 72"



VK150041 KW - 2014 FUEL TANK WRAP -75 GALLON - 57"



FREIGHTLINER FLD/CLASSIC



FREIGHTLINER FLD / CLASSIC

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VF110015

FL - CAB PANEL - BLANK -PAIR - 1991 NEWER CLASSIC

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107



SLEEPER PANELS

MOUNTING HARDWARE INCLUDED



VF142003

2001 CLASSIC XL INTEGRAL SLEEPER NO AERO WINGS - 48" SLEEPER PANELS - PAIR- BLANK

FREIGHTLINER FLD / CLASSIC

HOOD LATCH GUARDS



VF100001 FL - HOOD LATCH GUARDS -CLASSIC 1993 & NEWER - PAIR



VF10005
FL - HOOD LATCH GUARDS CLASSIC X L 1993 & NEWER - PAIR



VU190011
PB, FL, KW, HOOD LATCH
ACCENT TRIM - PAIR

HOOD TRIM



VF100010
FL CLASSIC FRONT SIDE OF HOOD
TRIM W/ FLAMES PAIR



VF100011
FL - LOWER HOOD PANELS CLASSIC X L - 1993 & NEWER PAIR

LOWERED LOOK WINDOW PANELS



VF110018
FLD & CLASSIC 5.75" LOWERED LOOK WINDOW PANELS

FREIGHTLINER FLD / CLASSIC

MISC. TRIM PIECES



VF110013
FL- DOOR LATCH TRIM CENTURY / COLUMBIA /
CLASSIC FLD - PAIR



VF114001
FREIGHTLINER CLASSIC - HOOD
EXTENSION PANEL - LAY-OVER - PAIR

AIR CLEANER LIGHT BOXES



VF112001
FL - CLASSIC - FRONT - AIR
CLEANER LIGHT BOXES BLANK - PAIR



VF113001
FL - CLASSIC - REAR - AIR
CLEANER LIGHT BOXES BLANK - PAIR

ADD LIGHTS TO YOUR LIGHT BOX - SEE PAGES 106-107

FREIGHTLINER FLD / CLASSIC

FENDER GUARDS



VF120003
FL CLASSIC & X L UPPER
FENDER GUARDS (SHORT &
LONG HOOD) PAIR



VF120004
FL - FENDER GUARDS EXTENDED HOOD - CLASSIC
- 1993 & NEWER - PAIR



VF120007 FL - FENDER GUARDS - FLD 120 - 1989 & NEWER

STAINLESS TRIM FOR PLASTIC BUMPERS



ALSO CHECK OUT OUR
EXTENSIVE LINE OF FULL METAL
REPLACEMENT BUMPERS:
CLASSIC, PAGES 11-13
FLD SETBACKS, PAGES 15-18



FREIGHTLINER FLD / CLASSIC

BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED

VF120010
FL - BUG SHIELD - STAINLESS
- CLASSIC & CLASSIC XL







FREIGHTLINER FLD / CLASSIC

SUN VISORS



VF130001

FL - 18" DROP VISOR - CLASSIC RAISED ROOF CONDO - 9 - 2" ROUND -NO LIGHTS INCLUDED

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VF130002

FL - 18" DROP VISOR - CLASSIC MID ROOF - 9 - 2" RD - NO LIGHTS INCLUDED

VF130001P RAW 18 GAUGE STEEL



FL-13" - DROP VISOR - CLASSIC XL FLAT
TOP - REPLACES FACTORY STAINLESS ONLY DOES NOT REPLACE FIBERGLASS.
DOES NOT WORK WITH TRUCKS WITHOUT EXISTING VISOR.

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107



FREIGHTLINER FLD / CLASSIC

WICKED BOLTLESS VISORS



VF135001

FL - 18" - WICKED - DROP VISOR - CLASSIC RAISED ROOF CONDO - 9 - 2" ROUND -NO LIGHTS INCLUDED - 2 PC

VF135002

FL - 18" - WICKED - DROP VISOR - CLASSIC MID-ROOF -9 - 2" RD - NO LIGHTS INCLUDED -2 PC



FL - 13" - WICKED - DROP VISOR - CLASSIC XL - FLAT TOP UP TO 2001 REPLACES STAINLESS FACTORY VISOR - 2 PC



VF135006



COOL BOLTLESS LOOK!

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107



FREIGHTLINER CENTURY & COLUMBIA



FREIGHTLINER CENTURY & COLUMBIA

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VF110020

FL - CAB PANEL - 4" - 2005 AND NEWER CENTURY/COLUMBIA

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

SLEEPER PANELS



VF140020

2005 AND NEWER CENTURY/ COLUMBIA SLEEPER PANEL + EXTENSION - 1PC - 70" - BLANK

MISC. TRIM PIECES

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VF110013
FL- DOOR LATCH TRIM CENTURY / COLUMBIA /
CLASSIC FLD - PAIR



VF110014
FL - VIEW WINDOW TRIM RING
- CENTURY / COLUMBIA



VF110019
FL - CENTURY / COLUMBIA UPPER CAB
HIGHLIGHT - 2PCS

FREIGHTLINER CENTURY & COLUMBIA

STAINLESS TRIM FOR PLASTIC BUMPERS



ALSO CHECK OUT OUR
EXTENSIVE LINE OF FULL METAL
REPLACEMENT BUMPERS:
CENTURY, PAGES 19-20
COLUMBIA, PAGES 19-20







BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED







FREIGHTLINER CENTURY & COLUMBIA

SUN VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED AVAILABLE IN 304 STAINLESS STEEL - CALL FOR PRICING



VF130003

FL-18" - DROP VISOR - RAISED ROOF CENTURY - 2003 & OLDER - 10 - 2" ROUND -HOLES - NO LIGHTS INCLUDED ALSO FITS 2009 & OLDER CORONADO



VF130007

FL-18" DROP VISOR - RAISED ROOF CENTURY & COLUMBIA - 2004 & NEWER - 10 - 2" RD HOLES - NO LIGHTS INCLUDED



FL - 14" DROP VISOR - 04 CORONADO DAY CAB 06 -NEWER & COLUMBIA- NO LIGHTS ONLY FOR TRUCKS WITHOUT EXISTING FACTORY VISOR



FL - 16" DROP VISOR - 04 CENTURY/05 COLUMBIA MID ROOF - NO LIGHTS



JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VF130003P RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107



VF135003

FL - 18" - WICKED - DROP VISOR - CENTURY-RAISED ROOF - UP TO 2003 - 2 PC

VF135007

FL- 18" - WICKED - DROP VISOR
- CENTURY & COLUMBIA 2004 NEWER - 2 PC - 10 2" ROUND HOLES
NO LIGHTS INCLUDED



FL - 16" WICKED - DROP VISOR -04 CENTURY/05 COLUMBIA MID ROOF - NO LIGHTS



COOL BOLTLESS LOOK!



FREIGHTLINER CORONADO 2002-2009 & GLIDER KITS



FREIGHTLINER CORONADO 2002-2009/GLIDERS

BUG SHIELDS


RUBBER TRIM & MOUNTING HARDWARE INCLUDED





SUN VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED AVAILABLE IN 304 STAINLESS STEEL - CALL FOR PRICING

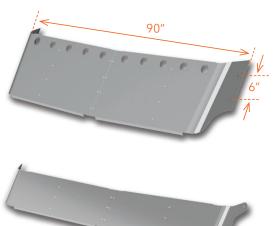

VF130003

FL-18" - DROP VISOR - RAISED ROOF CENTURY - 2003 & OLDER - 10 - 2" ROUND -HOLES - NO LIGHTSINCLUDED ALSO FITS 2009 & **OLDER CORONADO**



FL - 14" DROP VISOR - 04 CORONADO DAY CAB 06 -**NEWER & COLUMBIA- NO LIGHTS**

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107

FREIGHTLINER CASCADIA 2017 & OLDER "P3"



FREIGHTLINER CASCADIA 2017 & OLDER "P3"

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VF110200 CAB PANEL 4" - CASCADIA -BLANK PAIR



ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

SLEEPER PANELS


MOUNTING HARDWARE INCLUDED



VF140010 CASCADIA SLEEPER PANEL 48"



VF142101
FL SLEEPER EXTENSION PANEL CASCADIA - 48" - BLANK

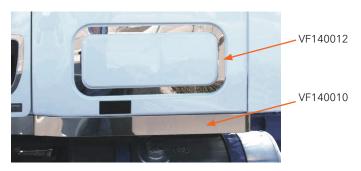

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

FAIRING PANELS

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

MID FAIRING KIT:

LOWER FAIRING KIT:

VF142009

2008 CASCADIA MID FAIRING PANELS - 6 PCS - BLANK VF142012

2008 CASCADIA LOWER FAIRING PANELS - 6 PCS - BLANK

UNDER FAIRING KIT:

UNDER FAIRING INDIVIDUAL PIECES:

VF142014

2008 CASCADIA MID FAIRING PANELS - 6 PCS - BLANK

VF142014-1

2008 CASCADIA UNDER FAIRING PANEL -FRONT PASS SIDE

VF142014-2

2008 CASCADIA UNDER FAIRING PANEL - MIDDLE PASS SIDE

VF142014-3

2008 CASCADIA UNDER FAIRING PANEL - REAR PASS SIDE

VF142014-4

2008 CASCADIA UNDER FAIRING PANEL - FRONT DRIVERS SIDE

VF142014-5

2008 CASCADIA UNDER FAIRING PANEL - MIDDLE DRIVERS SIDE

VF142014-6

2008 CASCADIA UNDER FAIRING PANEL - REAR DRIVERS SIDE



Mid Fairing

Lower Fairing

Under Fairing

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

FENDER TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



HOOD & DOOR TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



LOWERED LOOK WINDOW PANELS



CASCADIA LOWERED LOOK
WINDOW PANELS
ALSO FITS 2018 & NEWER P4 MODEL CASCADIAS

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

STAINLESS TRIM FOR PLASTIC BUMPERS



VF120017
CASCADIA FENDER TRIM ABOVE BUMPER - PAIR



VF120006
CASCADIA FT BUMPER TRIM
- 4PC - TAPE MOUNT







BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED





FREIGHTLINER CASCADIA 2017 & OLDER "P3"

SUN VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED AVAILABLE IN 304 STAINLESS STEEL - CALL FOR PRICING



VF130017

FL - 18" STD MOUNT DROP VISOR CASCADIA "P3" YRS. 2017 OLDER CONDO/MID SLEEPER FOR TRUCKS WITH OR WITHOUT FACTORY VISOR





JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

> VF130017-P **RAW 18 GAUGE STEEL**

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107



VF135017

FL - 18" WICKED DROP VISOR - 2PC CASCADIA "P3" YRS. 2017 & OLDER CASCADIA "P4" YRS. 2018 & NEWER CONDO, MID ROOF REPLACES FACTORY VISOR



FL - 18" STD MOUNT BUTTERFLY VISOR CASCADIA "P3" YRS. 2017 & OLDER CONDO, MID ROOF FOR TRUCKS WITH OR WITHOUT FACTORY VISOR



VF131017

FL - CASCADIA, 18" 1-PIECE VISOR (2010-2017) (FITS CONDO SLEEPER)






FREIGHTLINER CASCADIA 2017 & OLDER "P3"

FUEL TANK COVERS



FL - CASCADIA FUEL TANK COVER W/STEPS - PASS SIDE

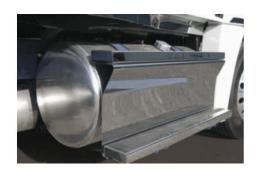



FL - CASCADIA BATTERY BOX/ FUEL TANK COVER - 2011 DAY CAB 34"

BATTERY BOX COVERS & STEPS




VF150000 FL - CASCADIA BATTERY BOX COVER



FL - CASCADIA BATTERY BOX UPPER - 2011 DAY CAB 34"



VF 150005 FL - CASCADIA UNDER BATTERY BOX STEP- 3PC.



FL - CASCADIA BATTERY BOX UPPER - 2011 DAY CAB 40"



CATALYTIC COVERS





VF150009 FL - CASCADIA CATALYTIC COVER - UPPER 2011 DAY CAB 40"

FREIGHTLINER ACCESSORIES - ALL MODELS

EMBLEM ACCENTS



VF10002

FL - EMBLEM ACCENTS W/ CUTOUTS - PAIR
INCLUDES MOUNTING HARDWARE



VF100004
FL - EMBLEM ACCENTS 16" - PAIR
TAPE MOUNT

PERMIT PANELS



VF110007
FL - PERMIT PANEL - EMBLEM
& CUTOUT - LEFT 1998 & NEWER



VF110008
FL - PERMIT PANEL - PLUG
CUTOUT - LEFT 1998 & NEWER



VF110009
FL - PERMIT PANEL - EMBLEM
CUTOUT - LEFT 1998 & NEWER



VF110010 FL - PERMIT PANEL - BLANK -LEFT - 1998 & NEWER



VF110011

FL - PERMIT PANEL - EMBLEM

CUTOUT - RIGHT
1998 & NEWER



VF110012
FL - PERMIT PANEL - BLANK - RIGHT - 1998 & NEWER

FUFI TANK FAIRING

BRACKETS AND MOUNTING HARDWARE INCLUDED NOT AVAILABLE IN 430 STAINLESS



VF150001 FL - FUEL TANK FAIRINGS -82" - PAIR



VF150002 FL - FUEL TANK FAIRINGS -87" - PAIR



INTERNATIONAL






VI130003

INTL - 12" DROP VISOR 2PC FITS PROSTAR & LONESTAR



VI135003

INTL - 12" TAPERED TO 16" IN CENTER WICKED DROP VISOR - 2PC FITS PROSTAR & LONESTAR

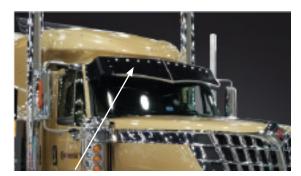

VI135003-10BYCA

ADD LIGHTS TO YOUR VISOR OR PANEL - SEE PAGES 106-107

VI120107

INTL - BUG SHIELD FITS MODEL 9900 STAINLESS STEEL RUBBER TRIM & MOUNTING HARDWARE INCLUDED



VI110200

INTL - CAB PANELS - FITS MODELS 9200,9300,9400 STAINLESS STEEL



VOLVO VNL



VOLVO VNL

HOOD & FENDER TRIM



VV120002 FENDER GUARD - UPPER -780 SERIES TAPE MOUNT



VV10003
FENDER GUARD - UPPER 780 SERIES
TAPE MOUNT



BUG SHIELD

MOUNTING HARDWARE INCLUDED





STAINLESS TRIM FOR FACTORY VISORS



VISOR INSERT - 700, 800 SERIES







VOLVO VNL

FAIRING HIGHLIGHTS

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

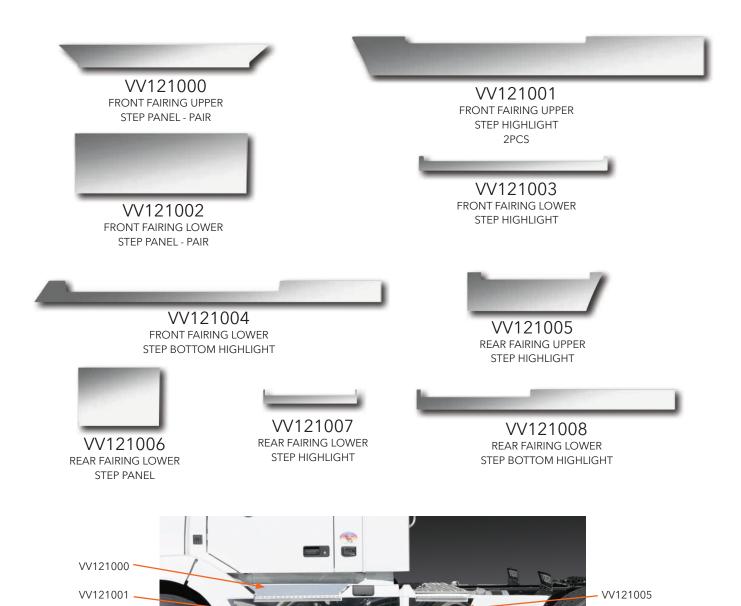

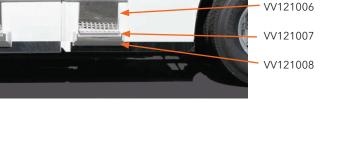

VV121002

VV121003

VV121004

VOLVO VT SERIES



VOLVO VT SERIES

CAB PANELS

MOUNTING HARDWARE INCLUDED



SLEEPER PANELS

MOUNTING HARDWARE INCLUDED



VOLVO VT SERIES

HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED





VV110300 HOOD EXTENSION PANEL - BLANK



EXAMPLE VV110300-4GA

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

HOOD & FENDER TRIM







TOP FENDER TRIM - 830, 880 SERIES TAPE MOUNT



VOLVO VT SERIES

HOOD & FENDER TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



BUG SHIELD

MOUNTING HARDWARE INCLUDED



SUN VISORS

MOUNTING HARDWARE INCLUDED





VOLVO VT SERIES

BATTERY BOX COVER



FUEL TANK FAIRINGS



VV150001 FUEL TANK FAIRINGS - 68"





WESTERN STAR 4700SF





IM-2110-06 Chrome Bumper (Call for Options & Price)

VW120005 Fender Guards (Fitted)

VW120006 Upper Fender Guards (Rolled)

VW110200-8GMA Cab Panel Line

(Cab Panels with Granite Amber Lights Shown)

Blank Cab Panels w/Heater Plug Holes (Not Pictured) VW110200

VW110201 Blank Cab Panels (Not Pictured)

VW130001 12" Visor - 2013 & Newer

VW120010 Bug Shield - Stainless Steel 6

VW120011 Bug Shield - Stainless Steel - "W" Look

VW120201 Lower Radiator Rock Guard



WESTERN STAR 4700SF YEARS 2013 & NEWER

CAB PANELS

MOUNTING HARDWARE INCLUDED



VW110200

WS CAB PANELS - 2013 AND NEWER - 4700 SF - BLANK W/ HEATER PLUG HOLE



VW110201

CAB PANELS - BLANK - NO SIDE FAIRING - 4PCS

ADD LIGHTS TO YOUR PANEL - SEE PAGES 106-107

FENDER GUARDS



VW120005

WS FENDER GUARDS - FITTED -4700 SF 2013 AND NEWER HARDWARE INCLUDED

VW120006 WS UPPER FENDER GUARD - FITTED 4700 SF 2013

AND NEWER TAPE MOUNT

BUG SHIELDS BRACKETS & MOUNTING HARDWARE INCLUDED



VW120010

PB BUG SHIELD - STAINLESS - 4700 SF 2013 AND NEWER



VW120011

WS BUG SHIELD - "W" STYLE - STAINLESS - 4700 SF 2013 AND NEWER

RADIATOR ROCK GUARD





VW120201

WS LOWER RADIATOR
GUARD - 2013 AND NEWER
4700 SF

SUN VISORS

BRACKETS & MOUNTING HARDWARE INCLUDED



VW130001

WS 12" VISOR 2013 AND NEWER 4700 SF





5700XE YEARS 2015 & NEWER

SUN VISORS

BRACKETS & MOUNTING HARDWARE INCLUDED



VW130002 WS SUNVISOR - 13.5" WIDE 5700XE STAINLESS

ADD LIGHTS TO YOUR VISOR - SEE PAGES 106-107

For more info on bumpers for this model, see page 85

BUG SHIELDS MOUNTING HARDWARE INCLUDED



VW120014 WS BUGSHIELD 5700XE STAINLESS





47X/49X SETBACK AXLE YEARS 2021-NEWER

VISORS



49X SETBACK AXLE YEARS 2022-NEWER

SLEEPER EXTENSION PANEL






VW142100 SLEEPER EXTENSION PANEL

49X SETBACK AXLE YEARS 2022-NEWER

AIR INTAKE SCREEN





49X SETBACK AXLE YEARS 2021 & NEWER CAB PANELS

WW110202
CAB PANELS-BLANK
(FITS TRUCKS WITH CAB MOUNTED EXHAUST)



60" SLEEPER PANEL-BLANK (FITS TRUCKS WITH CAB MOUNTED EXHAUST)

WW110203 COWELPANEL

THE ORIGINAL TURBOWING BY





TURBOWING







THE TURBOWING ADVANTAGE

"The Original Turbowing" is the Grand-Daddy of all air deflectors. This size, shape and design is today's air deflector of choice and will be for another 30 years. Impeccable over the road performance records make it one of the most popular accessories in the industry today, because Turbowing works. Proven efficiency saves truckers thousands of dollars in fuel costs each year. Get started today!

DURABILITY:

Turbowing "Tough" is the term unmatched in the trucking industry today. A rugged over-the-road environment remains a real-life "Tell-tale" test for big rig accessories. Some air deflectors are giving in to this harsh reality, Turbowings remain solid and continue to prove their worth, trip after trip!

FUNCTIONAL:

Testimonials from owner operators have shown consistent fuel savings of approximately **10% up to 19%**. for the average owner/operator, this means payback for their Turbowing investment in less than six months.

EXAMINE THIS LIST OF FEATURES OFFERED ONLY BY STAINLESS COMPANY:

- Highest quality materials and hardware.
- Pre-formed body panels to reduce undue stress on rivets.
- Sleeper specific brackets attach to the strongest points of the sleeper at the factory-built supports.
- Fixed angle brackets ensure the correct angle for deflection of air, no fooling around.

- Full application range to fit all popular sleeper sizes in flat-top and raised roofs.
- Paccar approved, one of the only wingstyled air deflectors available through Paccar's parts division.
- Tested and proven so you gain every time.



TURBOWING

PICKUP TRUCK WINGS

HIGHLIGHTS OF THE STAINLESS LINE OF AIR DEFLECTORS

- 30% reduction in drag.
- Wings are available in mirror polished stainless steel.
- Reduced "bug splatter" on the front of the trailer.
- Enhances stability in windy situations.
- Increased towing speed.
- The ability to pass other large vehicles without getting bogged down or blown around from on-coming wind.
- No drilling required with easy on and off clip mount system. (For most full size domestic pickup trucks 3/4 ton and up)

TURBOWING UNIVERSAL CLIP-ON/BOLT-ON WING



DODGE, CHEVY, FORD - POWER
*SEE UNIVERSAL MOUNTING KITS

DESIGNED TO IMPROVE YOUR TOW PACKAGE

Towing a 5th wheel trailer, gooseneck race car trailer with a pickup truck or big rig semi truck means you are fighting the wind. STAINLESS builds a stylish wing to deflect air over the trailer and maximize fuel economy every time you tow.

Going camping? Want to get better fuel mileage towing on the way to and from your destination but just want the most economical way to save fuel? Use STAINLESS air deflectors.

HIGH PROFILE UPGRADE KIT



11603 11600 UPGRADE KIT, MINI WING, END PLATES, BOLT KITS

APPLICATION	CAB STYLE	CLIP-ON KIT	BOLT-ON KIT
2001 - 2006 Chevy & GMC (2500-3500)	Extended w/4-door	10244	11703
2001 - 2006 Chevy & GMC (2500-3500)	Extended w/ small door	10244	11703
2001 - 2006 Chevy & GMC (2500-3500)	Crew cab	10249	11704
2007 & Newer Chevy & GMC (2500-3500)	Extended cab	17249	11703
2007 & Newer Chevy & GMC (2500-3500)	Crew cab	17249	11704
2010-2014 Chevy	Crew cab	10258	(N/A)
2015 Chevy	Crew cab	10256	(N/A)
1980 -1997 Ford	All cabs w/rain gutters	11230	CALL
1998 & Newer Ford Standard,	Extended w/4-door, Crew	10237	10601
2015 Ford 3/4 ton to 1 ton	Super Crew	10257	(N/A)
1994-2002 Dodge (1500-3500)	All cabs	10251	(N/A)
2003-2010 Dodge	All cabs	10252	11706
2013 & Newer Dodge	All cabs	10254	(N/A)

TURBOWING

AEROLIGHT 700 SERIES



- 38" Rail
- 76"L X 26"D X 20"H
- Ideal size and function for all stand-up high-roof sleepers
- Downsized, identical design/function as the Turbowing 1.
- Conforms to industry height restrictions.
- Preset wing angle for optimum performance.
- Polished stainless bracketry.
- Polished stainless available for most standups.



900 SERIES

The Turbowing 900 Series was originally developed for the lower roof flat-top style sleepers where the height of the trailer was significantly taller than the roof of the truck. This design boasts bold, sharp looks, and works extremely well at increasing fuel mileage.

Standard 900 Series

- Weight 125 lbs.
- 76"L X 30"D X 30"H
- Wing body: mirror polished stainless
- Brackets: polished stainless steel
- Adjustment: preset per sleeper/trailer height
- Fuel mileage increase: approx. 10%
- Drag/wing resistance reduction: 30%
- For most flat-top sleepers
- Warranty: 3 year limited





TURBOWING

PETERBILT WINGS



711
HIGH ROOF/STANDUP SLEEPERS



FLAT TOP/ C/O CABOVER

MOUNTING KITS

AEROLIGHT 700 - PETERBILT

48700 48" HR - HIGH ROOF/ STANDUP SLEEPER 63700 63"/72" HR - HIGH ROOF/ STANDUP SLEEPER 70700 70" HR - HIGH ROOF/STANDARD OR UNIBILT SLEEPER

AEROLIGHT 900 - PETERBILT

63900 63"/72" STD FT - STANDARD FLATTOP NON-UNIBILT 50900 48" STD FT - STANDARD NON-UNIBILT 36900 36" STD FT - STANDARD NON-UNIBILT

63900U 63"/72" STD FT - STANDARD FLATTOP UNIBILT 90900 90" C/O CAB OVER



VU190021 TURBOWING BRACKET STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS



11131 HOOD WINGS - POWER STYLE -UNIVERSAL (EXCEPT KW) 42" X 9" X 6"

TURBOWING

KENWORTH WINGS



711
ALL HIGH ROOF SLEEPERS



AEROCAB INTEGRAL/ STANDARD FLATTOP/ CAB OVERS

MOUNTING KITS

AEROLIGHT 700 - KENWORTH

KW700

ALL HR - HIGH ROOF SLEEPERS 60", 62", 72", 74", & 86" AERODYNE I, II, STUDIO SLEEPERS & STAND UP AEROCAB

AEROLIGHT 900 - KENWORTH

62900 62" ING - AEROCAB INTEGRAL FLATTOP

72900 72" ING - AEROCAB INTEGRAL FLATTOP 60900 60" STD FT -STANDARD FLATTOP

49900 50" STD FT -STANDARD FLATTOP 42900 42" STD FT -STANDARD FLATTOP

37900 36" STD FT -STANDARD FLATTOP



VU190021
TURBOWING BRACKET
STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS



11151 HOOD WINGS POWER STYLE 42" X 9" X 3"



TURBOWING

FREIGHTLINER WINGS



711 HI-STYLE/STANDARD RAISED **ROOF/MID ROOF INTEGRAL**



911 STANDARD INTEGRAL/STANDARD FLATTOP/CAB OVER

MOUNTING KITS

AEROLIGHT 700 - FREIGHTLINER

FX711

BUSINESS CLASS FL50, FL60, FL70, FL80, FL106, FL112, M2(72") WING & BRKTS SOLD TOGETHER

56700

69700

58" MR ING - MID ROOF INTEGRAL 70" MR ING - MID ROOF INTEGRAL

TURBOWING 900 - FREIGHTLINER

70900

47900

49900

70" ING - STANDARD INTEGRAL SLEEPER CAB

48" ING - STANDARD INTEGRAL SLEEPER CAB

50" STD FT - STANDARD FLATTOP SLEEPER BOX

57900

58900

39900

86900

SLEEPER CAB

SLEEPER BOX

58" ING - STANDARD INTEGRAL 60" STD FT - STANDARD FLATTOP 40" STD FT - STANDARD FLATTOP SLEEPER BOX

86" C/O - CAB OVER



VU190021 TURBOWING BRACKET STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS



11131

HOOD WINGS - POWER STYLE -UNIVERSAL (EXCEPT KW) 42" X 9" X 6"

TURBOWING

INTERNATIONAL WINGS



711 HIGH ROOF/STANDUP SLEEP-ERS



911 FLAT TOP/ C/O CABOVER

MOUNTING KITS

51700 51" H/R - HI-RISE INTEGRAL PRO SLEEPER 72700 72" H/R - HI-RISE INTEGRAL PRO SLEEPER

TURBOWING 900 - INTERNATIONAL

73900 72" ING - LO-ROOF INTEGRAL PRO SLEEPER 59900 60" STD FT -STANDARD FLATTOP 41900 42" STD FT -STANDARD FLATTOP

51700 51" ING - LO-ROOF INTEGRAL PRO SLEEPER

86900

86" C/O - CAB OVER

48900

48" STD FT -STANDARD FLATTOP

10900 110" C/O - CAB OVER

HOOD WINGS



11131 HOOD WINGS - POWER STYLE - UNI-VERSAL (EXCEPT KW) 42" X 9" X 6"

TURBOWING

WESTERN STAR WINGS



AEROLIGHT 700 - WESTERN STAR

WESTERN STAR WINGS HAVE DIFFERENT C-C DIM. 60" SOLID WING & MOUNTING

WC711
70" CONST - CONSTELLATION SERIES



VU190021 TURBOWING BRACKET STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS



11131 HOOD WINGS - POWER STYLE -UNIVERSAL (EXCEPT KW) 42" X 9" X 6"



TURBOWING

PRO TAIL WINGS



VU194000 PRO TAIL 72" X 18" HIGH ROOF FLAT TOPS ONLY



VU194001 PRO TAIL 70" X 11" HIGH ROOF FLAT TOPS ONLY





WARRANTY & RETURNS

Thank you for choosing Valley Chrome bumpers and STAINLESS, a division of Valley Chrome Plating, Inc., as your source for chrome and stainless steel custom truck accessories. Our family of products is fully guaranteed for fit, appearance and quality. Our mission is to provide you with the finest products at a fair price. Our reputation has been built in the trucking industry on our commitment to you, the trucking industry professional.

LIMITED WARRANTY

STAINLESS extends a warranty against defects in material and workmanship for a period of one year. LED light assemblies come with a three year limited warranty. This warranty is void by damage or defects in appearance due to accident, abuse, alterations to the product, improper installation, corrosive environments or any other abnormal conditions. This warranty applies only to the original purchaser of the product and covers only the defective part, whether it is a single item or component part of a purchased group. The warranty year begins upon purchase of the product by the end user. All requests for warranty must include the original invoice. Serial numbers must be provided for bumpers, wings and any other serialized parts. There is no warranty for setback axle bumpers ("break-backs") 20" and wider. Flat bumpers 20" and wider may require additional brackets and bracing (not included) to avoid cracking, and may not be warranted if our company determines the bracing is insufficient.

RETURN POLICY

Products must be returned to our Clovis, Ca. facility with a Returned Goods Authorization number, freight prepaid. Items sent without an R.G.A. number or freight collect will be refused. STAINLESS reserves the right to repair or replace the item at our discretion. Warranted items will be returned freight prepaid upon acceptance of our responsibility of the defect. Please contact our customer service staff for the R.G.A. number. Items may not be returnable due to age or stored condition, which is at our company's discretion.

FREIGHT POLICY

All freight is F.O.B. from our Clovis, Ca. facility unless prepaid conditions are met.

Dealers/Distributors: see your published price list for the freight policy that applies to you. Bumpers, Turbowings, battery boxes and tool boxes can be combined to achieve prepaid status.

Accessories may be combined with bumper and/or wing orders at our discretion.

IMAGES IN THIS CATALOG

The images shown in this catalog are best representations of our products, however, they are representative only and may sometimes not match actual product. Add-on items shown in images, such as external tow apparatus, fog lamps and other non-Valley Chrome/STAINLESS items attached to bumpers and accessories are not included in the product offered.

UPDATED INFORMATION

Information in this catalog, when printed by our company, is made as accurate as possible at the time of printing. For the most current information, including error corrections, see the most current catalog posted on our website. Because of the truck and automotive industry's aftermarket publishing inconsistencies, some model years and vehicle models indicated in this publication may vary slightly from the actual model. Obtain product drawings and photos from our customer service staff to verify product fit prior to ordering.





Call for a Dealer Near You 1.800.354.0976

www.valleychrome.com • 1028 HOBLITT AVE. • CLOVIS, CA 93612 • USA

FOLLOW US









