Valley Chrome Plating
QUALITY TRUCK PARTS

VALLEY CHROME PLATING



QUALITY SINCE 1961

BUMPERS & ACCESSORIES CATALOG

version 25.3

ABS Quality Evaluations, Inc. MANAGEMENT SYSTEM CERTIFICATION

ISO 9001
ISO 14001

1961-2021

60 YEARS

Valley Chrome Plating

QUALITY TRUCK PARTS



For **OVER 60 YEARS**, the trucking industry has put its trust in Valley Chrome Plating, Inc./STAINLESS. We are a hard working, family-owned American business. A huge THANK YOU to those who have helped us build our reputation for stellar aftermarket bumpers, visors, light panels, LED accessory lighting and more!

Please visit us on our website and join the excitement on our social media pages by posting pictures of our products on your trucks.
Our knowledgeable staff is ready to serve you by phone as well, by calling 1.800.354.0976.

TABLE OF CONTENTS

BUMPERS
Part Numbering Guide 7
Autocar 8
Ford 9-10
Freightliner 11-26
GMC 27-29
Hino 30
International 31-38
Kenworth 39-48
Mack 48-59
Peterbilt 60-74
Sterling 75-76
Volvo 77-82
Western Star & White 83-88
Universal Mount Blank Bumpers 89
Blind Mount Bumpers 90
Bumper Customization Options 91-93
Bumper Mounting Bolt Kits 94

UNIVERSAL ACCESSORIES
Flap Weights, Tank Straps & Tag Hangers 97
Permit Panels 98
Ridged Permit Panels & Beacon Light Brackets 99
Airline Boxes 100
Deck Plates & Front Deck Plate Tool Box 101
Rear Frame Tool Box 102
Frame Steps 103
Rear Window Visors 104
Rear Frame Fillers 105
Lower Rear Frame Fillers 106
Retail Display - LEDs 107
LED Light Option Chart 108
Blank Light Cutout Options 109
Universal LED Lights & Watermelon Lights 110-115
Watermelon Light Brackets 116
Wire Harnesses 117

PETERBILT MODEL 359 ACCESSORIES
Cab Panel 3.5" & Hood Extensions 119
Misc. Trim Pieces 120
Standard Mount Stainless Visors, Gangster Stainless Visors & Wicked Visors 121
Air Deflectors, Fuel Tank Strap Covers & Misc. Trim Pieces 122

PETERBILT MODELS 365 & 367 ACCESSORIES
Cab Panel 4" 124
Sleeper Panels 4" 125
Sleeper Extension Panels 4" 126
Air Cleaner Light Boxes & Bug Shields 127

PETERBILT MODEL 379 ACCESSORIES
One-Piece Cab/Hood Extension Panels 130
4" & 6" Cab Panels 131
4" & 6" Hood Extension Panels 132
4" & 6" Sleeper Panels 133
4" & 6" Sleeper Extension Panels 134
Air Cleaner Light Boxes Vortox 135
Mirror Light Boxes 136
Bumper/Grille Trim & Fender Guards 137
Bug Shields 138
Blinker Bars & Fender Support Covers 139
Sleeper Filler Panels & Shock Covers 140
Air Deflectors & Fuel Tank Strap Covers 141
Fuel Tank Fairings 142
Emblems & Misc. Trim Pieces 143-144
Battery Boxes & Tool Boxes 145
Tool & Battery Box Covers 146

PETERBILT MODEL 384
4" & 6" Cab Panels 148
4" & 6" Sleeper Panels 149
4" & 6" Sleeper Extension Panels 150

PETERBILT MODEL 386
2.5" Cab Panels & Exhaust Filler Panel 152
2.5" Sleeper Panels 153
2.5" Sleeper Extension Panels, Bug Shields 154

PETERBILT MODELS 388 & 389
4" & 6" Formed Cab Panels 156
One-Piece Cab/Hood Extension Panels for DEF & No DEF System 157-159
4" & 6" Cab Panels 160

Table of Contents continued on next page

TABLE OF CONTENTS

Table of Contents continued from previous page

PETERBILT MODELS 388 & 389 (cnt'd)

4" & 6" Cab Panels for Def & No Def System..... 161
4" & 6" Sleeper Panels..... 162
4" & 6" Hood Extension Panels 163-164
388 Cab Panel DEF System..... 165
4" & 6" Sleeper Extension Panels..... 166
Air Cleaner Light Boxes Donaldson 167
Mirror Light Boxes..... 168
Bumper & Grille Trim, Fender Guards & Bug Shields ... 169
Emblems, Fender Trim & Hood Trim..... 170
Blinker Bars & Fender Support Cover 171
Stainless Visors & Sleeper Filler Panels..... 172
Misc. Trim Pieces..... 173-174
Sleeper Shock Covers & Air Deflectors 175
Fuel Tank Strap Covers & Exhaust Covers 176
Tool & Battery Box Covers..... 177
Battery Boxes, Tool Boxes & Box Step Highlights/Protectors..... 178

PETERBILT MODEL 567

Cab Panels, Sleeper Panels, Hood Extensions & Fender Guards..... 180
Bug Shields & Fuel Tank Strap Covers 181
Stainless Visors..... 182

PETERBILT MODEL 579

Cab Panel & Sleeper Panels..... 185
DEF System Panels..... 186
Misc. Trim Pieces..... 187-188
Stainless Visors..... 189
Sleeper Shock Covers, Tank Fairing Highlight & Kick Panel Trim 190

PETERBILT MODEL 587

Fender Trim & Stainless Visors..... 192
Misc. Trim Pieces..... 193

PETERBILT MODEL 589

Fender Guards, Air Cleaner Light Bars, Cab & Sleeper Panels 196
Universal Watermelon Light Brackets, Tag Hangers & Panels.....197

ACCESSORIES FOR ALL PETERBILT MODELS

Hood Emblems & Hood Latch Guards..... 199-200
Key Guards & Misc. Trim Pieces..... 201
Bug Shield for model 387, Window Trim & Sleeper Window Lower Looks..... 202
Stainless Visors..... 203-206
Sleeper Wraps & Rear Frame Covers..... 207
DEF Tank Covers & Fuel Tank Wraps 208

KENWORTH MODEL W900

Cab Panels..... 210
Sleeper Panels..... 211
Hood Extension Panels & Sleeper Extension Panels 212
Air Cleaner Light Boxes..... 213
Air Cleaner Fairings..... 214
Exterior Window Trim, Exhaust Shields & Bug Shields 215
Blinker Bars & Flap Weight..... 216
Fender Guards, Battery & Tool Box Covers..... 217
Hood & Grille Trim..... 218
Stainless Sun Visors..... 219-221
Catalytic System Box Highlights, DEF Tank Cover & Stainless Deck Plates 222
Fuel Tank Fairings..... 223
Lower Hood Panels & Center Hood Trim..... 224

KENWORTH MODEL T600

Sleeper Panels & Sleeper Extension Panels..... 226
Stainless Grilles & Bug Shields 227
Battery/Tool Box Covers & Side Marker Trim 228

KENWORTH MODEL T660

Cab Panels, Bug Shields & Stainless Sun Visors... 230

Gangster Visors & Boltless Wicked Visors..... 231
Battery & Tool Box Covers..... 232

Table of Contents continued on next page

TABLE OF CONTENTS

Table of Contents continued from previous page

KENWORTH T680
Cab & Cowl Panels, Sleeper Extension Panels & Door and Window Trim 234
Bug Shields, Fender Guards & Stainless Sun-Visors 235
DEF Tank Cover 236

KENWORTH T800 & T880
Sleeper Panels & Sleeper Extension Panels 238
Bug Shields, Fender Guards & Stainless Sun-Visors 239
Gangster Visors & Boltless Wicked Visors 240
Battery & Tool Box Covers 241
Exterior Window Trim, Door Handle Trim, Lower Look. 241 & Air Deflectors 242
Emblem Accents & Hood Latch Guards 243
Sleeper Window Trim, Rear Frame Covers & Stainless Fuel Tank Wraps 244

FREIGHTLINER FLD/CLASSIC
Cab Panels 4" & Sleeper Panels 246
Hood Latch Guards, Hood Trim & Lowered Look Window Panels 247
Misc. Trim Pieces & Air Cleaner Light Boxes 248
Fender Guards, Stainless Trim For Plastic Bumpers & Headlight Visors 249
Bug Shields 250
Drop Visors 251
Wicked Boltless Visors 252

FREIGHTLINER CENTURY & COLUMBIA
Cab Panels 4", Sleeper Panels & Misc.-Trim Pieces 254
Stainless Trim for Plastic Bumpers & Bug Shields 255
Sun Visors 256

FREIGHTLINER CORONADO 2002-2009 & GLIDER KITS
Bug Shields & Sun Visors 258

FREIGHTLINER CASCADIA 2017 & OLDER "P3"
Cab Panels 4" & Sleeper Panels 260
Fairing Panels 261
Fender Trim, Hood & Door Trim & Lowered Look-Window Panels 262
Stainless Trim For Plastic Bumpers & Bug Shields 263
Sun Visors 264
Fuel Tank Covers, Battery Box Covers & Steps & Catalytic Covers 265
Emblem Accents, Permit Panels & Fuel Tank-Fairing 266

INTERNATIONAL
Sun Visors 268

VOLVO VNL
Hood & Fender Trim, Bug Shield & Stainless Trim For Factory Visors 270
Fairing Highlights 271

VOLVO VT SERIES
Cab Panels & Sleeper Panels 273
Hood Extension Panels & Hood & Fender Trim 274
Hood & Fender Trim, Bug Shield & Sun Visors 275
Battery Box Cover & Fuel Tank Fairings 276

WESTERN STAR 4700SF
Cab Panels, Fender Guards & Panels 278
Bug Shields, Radiator Rock Guard & Sun Visors 279

WESTERN STAR 5700XE
Sun Visors & Bug Shields ..... (279 Cont'd)

WESTERN STAR 47X & 49
Sun Visors, Sleeper Extension Panels & Air Intake Screens 279

TURBOWINGS
The Turbowing Advantage 281
Pickup Truck Wings/Mounting Kits 282
Aerolight 700 Series Intro & 900 Series Intro 283
Peterbilt Wings/Mounting Kits 284
Kenworth Wings/Mounting Kits 285
Freightliner Wings/Mounting Kits 286
International Wings/Mounting Kits 287
Western Star Wings/Mounting Kits 288
Pro Tail Wings 289

NOTES 290

WARRANTY AND RETURN POLICIES 291

How our BUMPER part numbering system works:

We use a "smart" part number. Every digit has a meaning, which indicates how we build your bumper. Make sure all digits are correct to have your bumper built correctly!

Example Part Number:

HC – 0010 – 06 – 21BY

TRUCK MAKE
H = Peterbilt

TRUCK MODEL
C = Model 379

Search the following bumper pages to find this two digit code.

CUTOUTS
0010 = mounting holes and tow hole. Visit the bumper pages in this catalog for available cutout options.

END STYLE
06 = 18 inch Rolled End Square. See this chart for end style choices. Varies by make/model. See bumper pages.

OPTIONS
21BY = 21 open Bullseye 3/4 light holes. No code needed here if the rest of the part number completes your bumper. See p. 88-91 for some options.




"STANDARD TAPER"

12"	01
16"	02



"TEXAS SQUARE"

18"	**06**
20"	41
22"	42

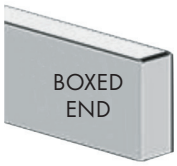

"SQUARE BOXED"

12"	09
16"	10
18"	**11**
20"	51
22"	52




16"	07



12"	91
14"	30
16"	92
18"	03
20"	31
22"	32



10"	00
12"	04
14"	21
16"	05
18"	96
20"	97
22"	98

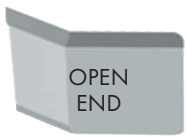

10"	27
12"	**12**
14"	**25**
14" (w/Taper)	**26**
16"	13
18"	14
20"	61
22"	62




9"	29
12 to 14"	**15**
16"	16
18"*	17
20"*	34




12"-13"	**18**
16"	19
18"	20
20"	35



10"	24
12"	22
14"	38
16"	23

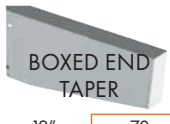

12"	70
14"	71
16"	72
18"	73
20"	74
22"	75

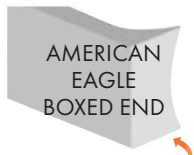

12"	54
16"	55
18"	56
20"	57
22"	58

WITH 8" EARS



12"	54A
16"	55A
18"	56A
20"	57A
22"	58A

WITH 6" EARS




12"	64
16"	65
18"	66
20"	67
22"	68

WITH 8" EARS



12"	64A
16"	65A
18"	66A
20"	67A
22"	68A

WITH 6" EARS

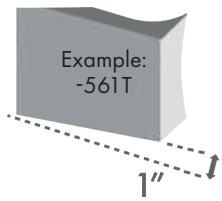

CUSTOM TAPERS:

Add "1T" for 1" TAPER
Example: -561T = AMER. EAGLE BOX, 18" to 17" TAPER
Add "2T" for 2" TAPER
Example: -742T = BOXED END, 20" to 18" TAPER



12"	111
16"	112
18"	113
20"	114
22"	115

45° MITRE END



12"	101
16"	102
18"	103
20"	104
22"	105

45° MITRE END

* NOTE: No Warranty on setback bumpers 20" and wider, except COA, COB and LI series.

Standard sizes are in bold.

ALSO SEE OUR "BUILD A BUMPER" CONFIGURATION TOOL ON OUR WEBSITE

AUTOCAR BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

AA, AB



Width	End Style Code
16″	02
18″	03
20″	31
22″	32

AA, AB



Width	End Style Code
16″	05
18″	06
20″	41
22″	42


KB



Width	Bumper Length	End Style Code
12″	94″	22
12″	88″	22-88″

AA

AUTOCAR
WITH 2″ BREAKBACK
NOT AVAILABLE IN 12″ WIDTH

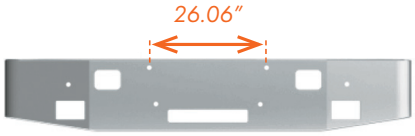

AA-2011-02



AA-2010-02



AA-2001-02



AA-0011-02



AA-2000-02



AA-0010-02




AA-0001-02



AA-0000-02

AB

AUTOCAR
WITH 2″ BREAKBACK

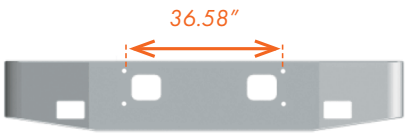

AB-2010-02



AB-2000-02



AB-0010-02



AB-0000-02

FORD BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

BA



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

BA



Width	End Style Code
10″	00
12″	04
16″	05
18″	06
20″	41
22″	42

BF, BG



Width	End Style Code
9″	29
12″	15
16″	16
* 18″	17

** No warranty for 18″ width on models BF & BG*

L, LN, LT, LTN, LTL -800-900-8000-9000 YEARS 1970-1998


BA

ALSO MODELS LN7000 & STERLING LT9511

MUST BE 16″ WIDE OR LARGER FOR 4 FOG LIGHT OPTION



BA-4010- 02

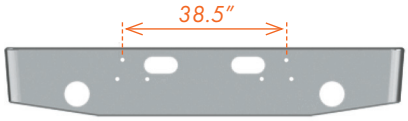

BA-1010- 02



BA-4000- 02



BA-0000- 02



BA-1000- 02



BA-0010- 02

AEROMAX SETBACK AXLE – L, LS, LA, LTS, LTA YEARS 1988-1995

BF


CHECK 'BG' SERIES PRIOR TO ORDERING



BF-0000- 29



BF-0010- 29

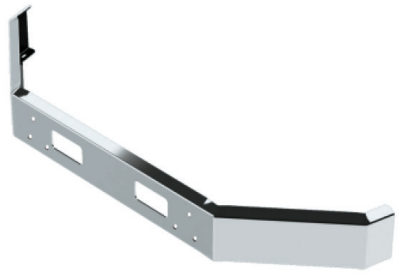

LST SET BACK AXLE YEARS 1988-1995

BG


CHECK 'BF' SERIES PRIOR TO ORDERING



BG-0000- 29



BG-0010- 29

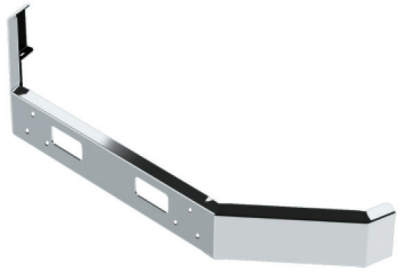

FORD BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

** No warranty for 20″ width*

BI

F-650 SUPER DUTY YEARS 2005-2018

WITH CUMMINS 5.9L ENGINES
MOUNTING BRACKETS INCLUDED
CHECK 'BJ' SERIES PRIOR TO ORDERING
NOTE LETTERS 'BI' IN PART NUMBER



BI-0011-15



BI-0010-15



BI-0001-15



BI-0000-15





BJ

F-650 SUPER DUTY YEARS 2005-2018

WITH CATERPILLAR C7 ENGINES
MOUNTING BRACKETS INCLUDED
CHECK 'BI' SERIES PRIOR TO ORDERING



BJ-0011-15



BJ-0010-15



BJ-0001-15




BJ-0000-15






FREIGHTLINER BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

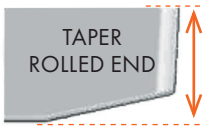

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

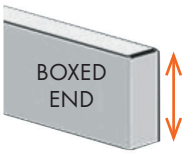

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52




Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42


CABOVER AND CONVENTIONAL — CA

YEARS 1980-1984


CA-1110-02



CA-1100-02


CA-1010-02


CA-0110-02


CA-1000-02


CA-0100-02



CA-0010-02




CA-0000-02

CABOVER AND CONVENTIONAL AND CLASSIC — CB

YEARS 1984-1999

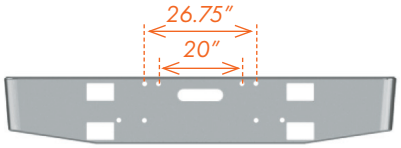

CB-2110-02


CB-2100-02



CB-2010-02


CB-0110-02



CB-2000-02


CB-0100-02


CB-0010-02

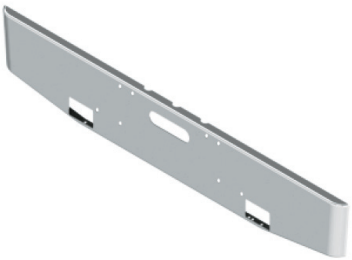


CB-0000-02

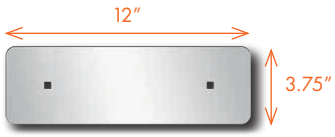

VF120009
FL-TOW PIN COVER -CLASSIC
FITS 'CA' & 'CB' SERIES BUMPERS



CB-2010-02

FREIGHTLINER BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

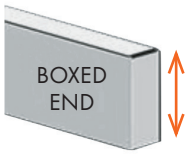


Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

CQ — FLD CLASSIC YEARS 2000-2002

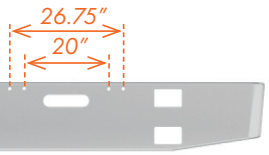

CQ-2110-02



CQ-2100-02



CQ-2010-02



CQ-0110-02



CQ-2000-02



CQ-0100-02




CQ-0010-02





CQ-0000-02

CS — FLD CLASSIC – 1200 SERIES YEARS 2002-2007

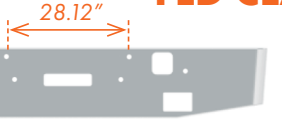

CS-2110-02



CS-2100-02



CS-2010-02



CS-0110-02



CS-2000-02



CS-0100-02



CS-0010-02




VF120009
FL-TOW PIN COVER -CLASSIC
FITS 'CQ' & 'CS' & 'CU' SERIES BUMPERS



CS-0000-02

CU — FLD CLASSIC – 1400 SERIES YEARS 2002-2007

ALSO CHECK 'CV' SERIES

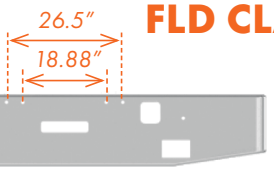


CU-2110-02



CU-2100-02



CU-2010-02

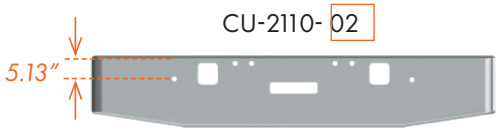

CU-0110-02




CU-2000-02



CU-0100-02



CU-0010-02

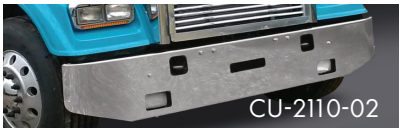




CU-0000-02

FREIGHTLINER BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

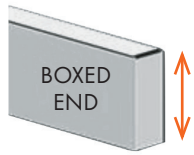


Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

FLD CLASSIC YEARS 2002-2007 — CV

ALSO CHECK 'CU' SERIES

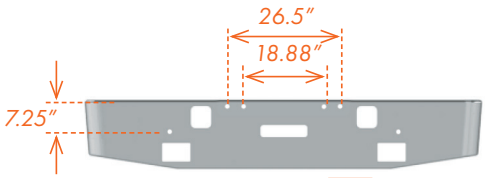

CV-2110- 02



CV-2100- 02



CV-2010- 02



CV-0110- 02



CV-2000- 02



CV-0100- 02



CV-0010- 02





CV-0000- 02

FLD CLASSIC YEARS 2008-2010 — CX

ONLY AVAILABLE IN
16″ AND WIDER



CX-2110- 02



CX-2010- 02



CX-0110- 02



CX-2100- 02



CX-0100- 02



CX-0010- 02




CX-2000- 02



CX-0000- 02

114SD SET FORWARD AXLE YEARS 2012-NEWER — COI

NOTE LETTERS "COI" IN PART NUMBER

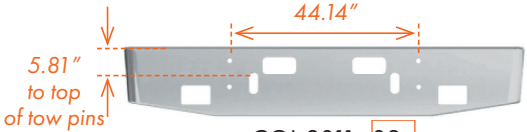

COI-2011- 02



COI-2010- 02



COI-2001- 02



COI-0011- 02



COI-2000- 02



COI-0010- 02



COI-0001- 02





COI-0000- 02

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating QUALITY TRUCK PARTS

www.valleychrome.com


FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

CZ



Width	End Style Code
19″	707

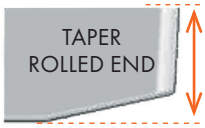

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32




Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

CZ — CORONADO YEARS 2002-2009 & GLIDER CHASSIS

DOES NOT USE FACTORY SUPPORT BRACKETS OR ENDS CAPS

19″



CZ-1001-707



CZ-1000-707




CZ-0001-707

17″



CZ-0000-707





Stainless grille insert – CZ01GI
Not included, available separately

COC — CORONADO 122SD SET FORWARD YEARS 2010-NEWER

16″ AND WIDER (SEE 'COE' SERIES FOR 12″ BUMPERS)
NOTE LETTERS "COC" IN PART NUMBER

39.63″



COC-2110-02



COC-2100-02



COC-2010-02



COC-0110-02



COC-2000-02



COC-0100-02



COC-0010-02





COC-0000-02


COE — CORONADO 122SD SET FORWARD YEARS 2010-NEWER

12″ WIDE (SEE 'COC' SERIES FOR 16″ AND WIDER BUMPERS)
NOTE LETTERS "COE" IN PART NUMBER

2″



COE-2110-01



COE-2100-01



COE-2010-01

9.5″



COE-0110-01



COE-2000-01



COE-0100-01



COE-0010-01





COE-0000-01

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	04
16″	95
18″	96
20″	97

* *No warranty for 20″ width*

FLC112 SETBACK AXLE YEARS 1986-1995 — CC



CC-2010-04




CC-2000-04




CC-0010-04



CC-0000-04

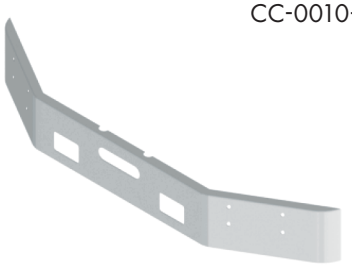

FLC120 SETBACK AXLE YEARS 1986-1995 — CD

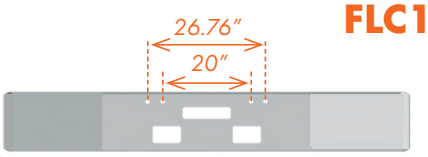

CD-2010-04




CD-2000-04



CD-0010-04



CD-0000-04

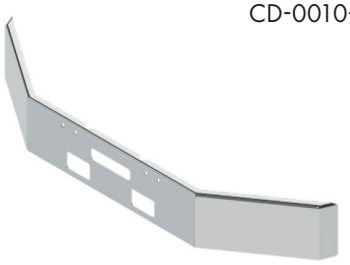

FLD 112SD SETBACK AXLE YEARS 1989-1996 — CP



CP-2011-04



CP-2010-04



CP-2001-04



CP-0011-04



CP-2000-04




CP-0010-04



CP-0001-04



CP-0000-04

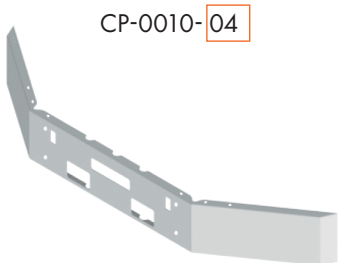

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

CE



Width	End Style Code
16″	07

CF, CE




Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

CF, CE



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

CF CABOVER WITH 7 INCH BREAKBACK, YEARS 1989-1995

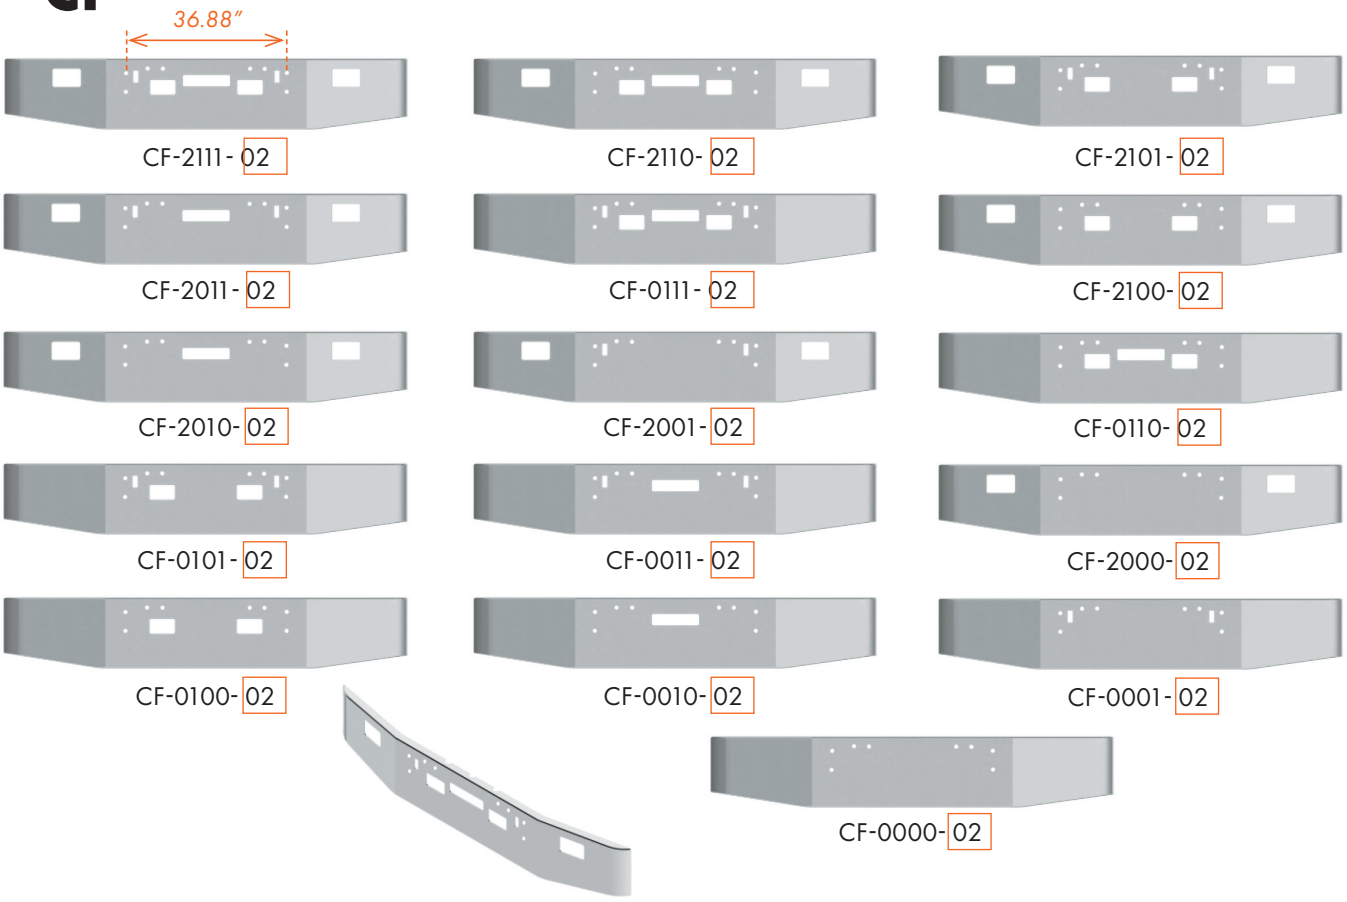

CE FLC112 CONVENTIONAL, YEARS 1986-1995

STEEL CAB MUST USE GULLWING STYLE -07 ONLY



FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12"	04
16"	95
18"	96
20"	97

* *No warranty for 20" width*

FOR 92-INCH LONG BUMPERS WITHOUT PLASTIC END CAPS, ADD "92" TO END OF PART NUMBER.
EXAMPLE: CG-2011-04-"92"

FLD 112 WITH 6 INCH BREAKBACK, YEARS 1989-1996 — CG

86.75" LONG STANDARD. PLASTIC ENDS NOT INCLUDED.


CG-2011-04


CG-2010-04


CG-2001-04



CG-0011-04


CG-2000-04


CG-0010-04


CG-0001-04


CG-0000-04

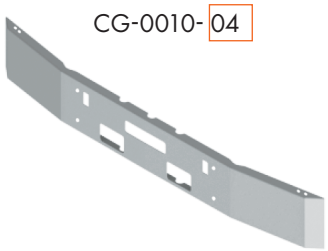

FLD 120 WITH 6 INCH BREAKBACK, YEARS 1989-1996 — CH

86.75" LONG STANDARD. PLASTIC ENDS NOT INCLUDED (ALSO SEE 'CJ' SERIES).



CH-2010-04


CH-2000-04


CH-0010-04


CH-0000-04



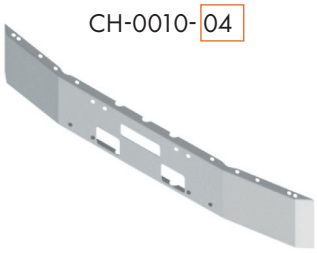


FLD 120 WITH 6 INCH BREAKBACK, YEARS 1989-1996 — CJ

86.75" LONG STANDARD. PLASTIC ENDS NOT INCLUDED (ALSO SEE 'CH' SERIES).


CJ-2010-04


CJ-2000-04

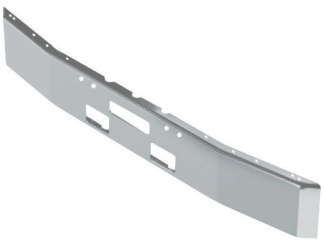


CJ-0010-04


CJ-0000-04

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

CM



Width	End Style Code
12"	04
16"	95
18"	96
20"	97

CI



Width	End Style Code
12"	15
16"	16
18"	17
*20"	34

** No warranty for 20" width*

FOR 92 INCH LONG CM SERIES BUMPERS WITHOUT PLASTIC END CAPS, ADD "92" TO END OF PART NUMBER . EXAMPLE : CM-2011-04-"92"

CM

FLD112 & FLD120 WITH 6-INCH BREAKBACK, YEARS 1989-1996


86.75" LONG STANDARD. PLASTIC ENDS NOT INCLUDED.
COMBO BOLT PATTERN


CM-2011-04


CM-2010-04


CM-2001-04


CM-0011-04

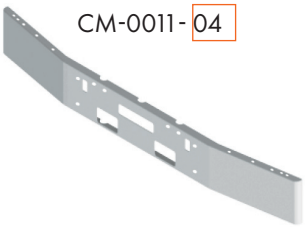


CM-2000-04


CM-0010-04


CM-0001-04


CM-0000-04

CI

FLD112 & FLD120 SETBACK FULL WRAP. METAL BUMPER, YEARS 1989-2006

COMBO BOLT PATTERN, NOTE LETTERS 'CI' IN PART NUMBER


CI-2111-15


CI-2110-15


CI-2101-15


CI-2011-15


CI-0111-15


CI-2100-15


CI-2010-15


CI-2001-15


CI-0110-15


CI-0101-15



CI-0011-15


CI-2000-15


CI-0100-15


CI-0010-15


CI-0001-15

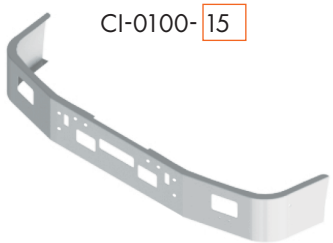


CI-0011-15


CI-0000-15

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

** No warranty for 20″ width*

CENTURY SETBACK AXLE, YEARS 1996-2004 — CL
MOUNTING BRACKETS INCLUDED


CL-2210- 15


CL-2200- 15



CL-2010- 15


CL-0210- 15




CL-0200- 15


CL-0010- 15

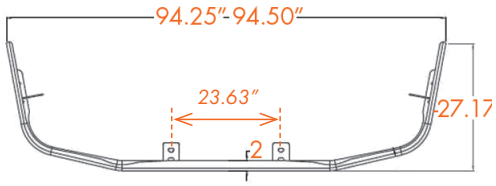


CL-0000- 15

COLUMBIA SETBACK AXLE, YEARS 1999-2007 — CW

CENTURY SETBACK AXLE, YEARS 2005-2007
MOUNTING BRACKETS INCLUDED

ALSO FITS NEWER MODEL GLIDERS - CHECK CHASSIS CONFIGURATION


CW-1011- 15


CW-2011- 15


CW-0011- 15


CW-1010- 15



CW-2010- 15


CW-0010- 15



CW-0000- 15


CW-2000- 15


CW-0001- 15

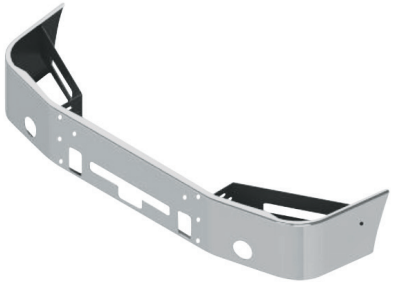



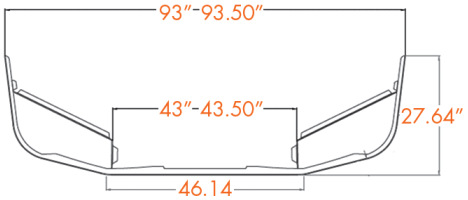

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
18″	17
*20″	34

** No warranty for 20″ width*

COA

COLUMBIA SETBACK AXLE, YEARS 2008 & NEWER

REPLACES STEEL CENTER/PLASTIC ENDS BUMPERS ONLY

MOUNTING BRACKETS INCLUDED

NOTE LETTERS 'COA' IN PART NUMBER. FOR 2008 & NEWER GLIDERS SEE CW SERIES.


COA-1011- 17


COA-2011- 17


COA-0011- 17


COA-1010- 17



COA-2010- 17


COA-0010- 17


COA-0000- 17


COA-2000- 17


COA-0001- 17

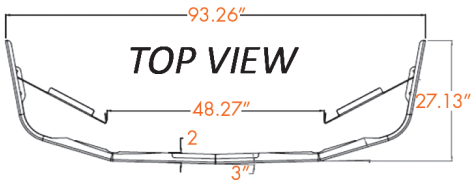





COB

COLUMBIA SETBACK AXLE, YEARS 2008 & NEWER

CENTURY SETBACK AXLE, YEARS 2008 & NEWER

REPLACES STAINLESS CLAD BUMPERS ONLY

MOUNTING BRACKETS INCLUDED. NOTE LETTERS 'COB' IN PART NUMBER.


COB-1011- 17



COB-2011- 17


COB-0011- 17


COB-1010- 17


COB-2010- 17


COB-0010- 17

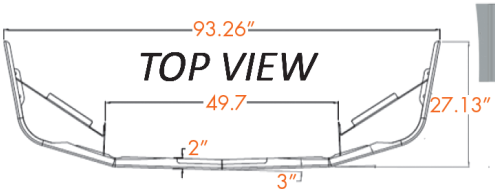



COB-0000- 17


COB-0001- 17

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

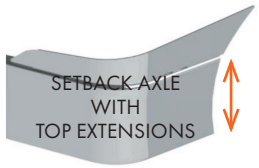

Width	End Style Code
14″	15X
16″	16X
18″	17X
*20″	34X

* No warranty for 20″ width

CASCADIA "P3" YEARS 2008-2017

CY

REPLACES PLASTIC BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS AND EXTENSIONS INCLUDED
SEE 'COH' SERIES FOR REPLACING P3 STAINLESS CLAD
SEE 'COJ' AND 'COK' SERIES FOR NEWER P4 BUMPERS



CY-5011-15X
2 OEM fogs, tow pins, vent
No radar



CY-2011-15X
2 rect. fogs, tow pins, vent
No radar



CY-5012-15X
2 OEM fogs, tow pins, vent
Accommodates radar



CY-0011-15X
Tow pins, vent, no radar



CY-0012-15X
Tow pins, vent
Accommodates radar




CY-0000-15X
No cutouts, mounting only



CY-0010-15X
Tow pins



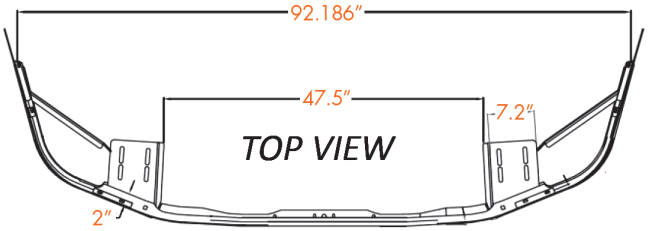


Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

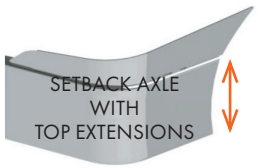

Width	End Style Code
14″	15X
*16″	16X

** 16″ bumpers require customer to shim brackets*

COH

CASCADIA "P3" YEARS 2008-2017

REPLACES STAINLESS CLAD BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
EXTENSIONS INCLUDED, MOUNTING BRACKETS NOT INCLUDED
MOUNTS TO EXISTING CLAD BUMPER BRACKETS
SEE 'CY' SERIES FOR REPLACING P3 PLASTIC BUMPERS
SEE 'COJ' AND 'COK' SERIES FOR NEWER P4 BUMPERS
NOTE LETTERS 'COH' IN PART NUMBER



COH-5011- 15X
2 OEM fogs, tow pins, vent
No radar



COH-5012- 15X
2 OEM fogs, tow pins, vent
Accommodates radar



COH-0011- 15X
Tow pins, vent, no radar




COH-0012- 15X
Tow pins, vent
Accommodates radar



COH-0000- 15X
No cutouts, mounting only




COH-0010- 15X
Tow pins

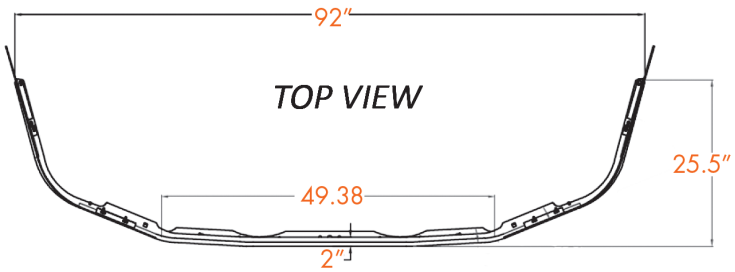



FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

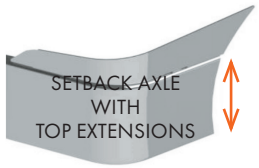

Width	End Style Code
14″	15Z
16″	16Z
18″	17Z
*20″	34Z

* No warranty for 20″ wide bumpers

CASCADIA "P4" YEARS 2017 & NEWER

COJ

REPLACES PLASTIC BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'COJ' IN PART NUMBER
SEE 'COK' SERIES IF REPLACING STAINLESS CLAD BUMPERS




COJ-5011-15Z-V6
2 OEM fogs, tow pins, vent, radar
Radar requires plastic cover



COJ-5010-15Z-V6
2 OEM fogs, tow pins, radar
Radar requires plastic cover



COJ-2010-15Z-V6
2 rectangular aftermarket fogs, tow pins, radar
Radar requires plastic cover

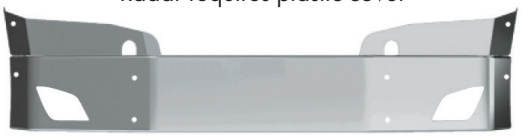


COJ-5010-15Z
2 OEM fogs, tow pins



COJ-0010-15Z-V6
Tow pins, radar
Radar requires plastic cover




COJ-0011-15Z
Tow pins, vent

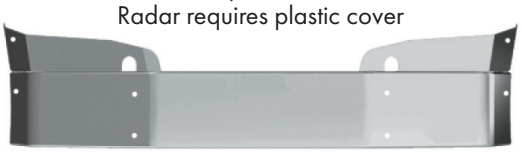


COJ-0010-15Z
Tow pins



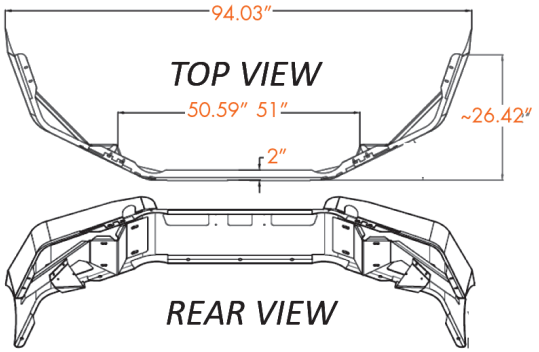

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

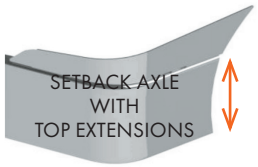

Width	End Style Code
14"	15Z
16"	16Z
18"	17Z
*20"	34Z

* *No warranty for 20" wide bumpers*


COK

CASCADIA "P4" YEARS 2017 & NEWER

REPLACES STAINLESS CLAD BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'COK' IN PART NUMBER
SEE 'COJ' SERIES IF REPLACING PLASTIC BUMPERS




COK-5011- 15Z -V6
2 OEM fogs, tow pins, vent, radar
Radar requires plastic cover

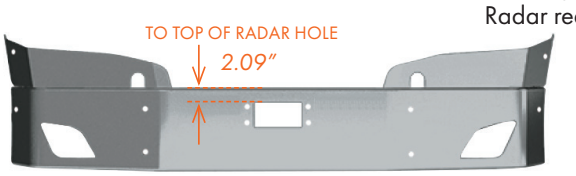


COK-5010- 15Z -V6
2 OEM fogs, tow pins, radar
Radar requires plastic cover



COK-2010- 15Z -V6
2 rectangular aftermarket fogs, tow pins, radar
Radar requires plastic cover

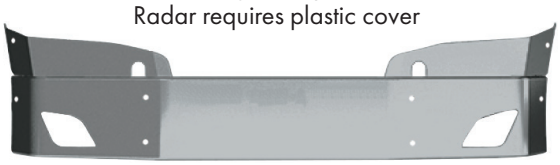


COK-5010- 15Z
2 OEM fogs, tow pins

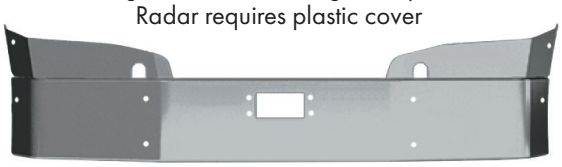

COK-0010- 15Z -V6
Tow pins, radar
Radar requires plastic cover




COK-0011- 15Z
Tow pins, vent

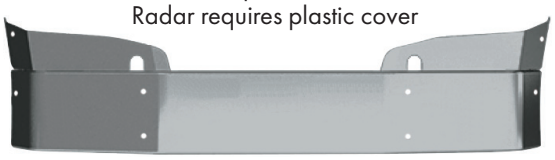

COK-0010- 15Z
Tow pins



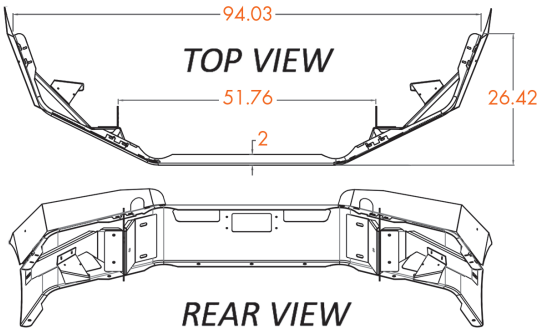

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

*No warranty for 20″ wide bumpers

FL SERIES MEDIUM DUTY YEARS 2002 & OLDER

CK

FL50, FL60, FL70, FL80
MOUNTS TO FACTORY BRACKETS
ALSO CHECK 'CR' SERIES




CK-0220-15



CK-0020-15





CK-0200-15

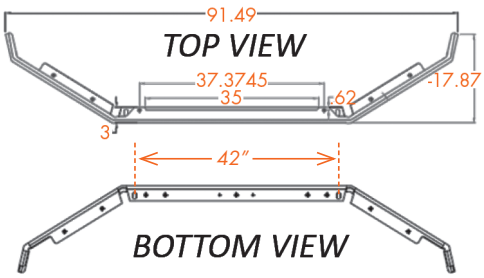



CK-0000-15

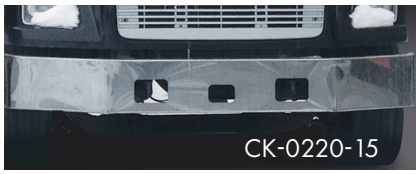

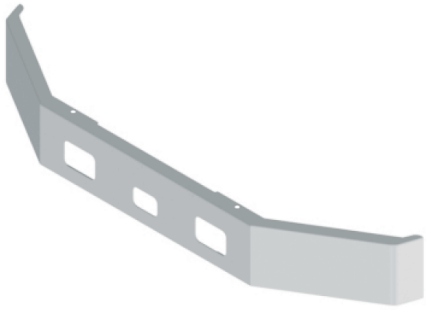

FL112 SERIES MEDIUM DUTY YEARS 2002 & OLDER

CR

MOUNTS TO FACTORY BRACKETS
ALSO CHECK 'CK' SERIES



CR-0220-15




CR-0020-15




CR-0200-15



CR-0000-15

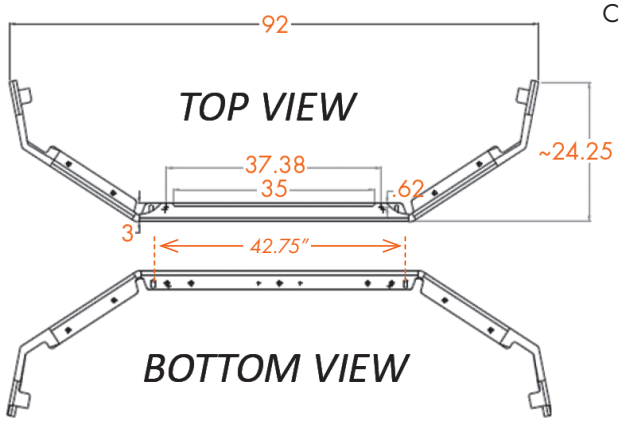

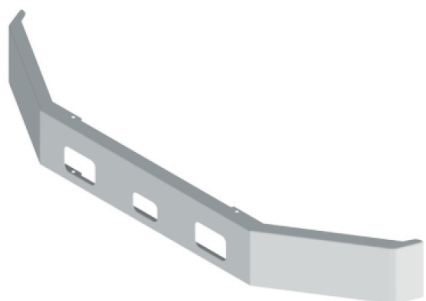

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

* *No warranty for 20″ wide bumpers*


CT

M2 106 BUSINESS CLASS YEARS 2003 & NEWER

FLUSH TOP FLANGE MOUNT. INCLUDES UPPER LICENSE PLATE HOLES.
ALSO CHECK 'COG' SERIES





CT-0001-15

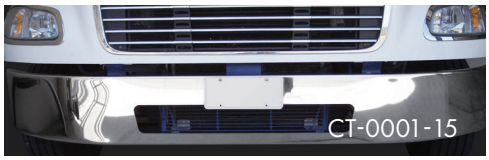



CT-0000-15

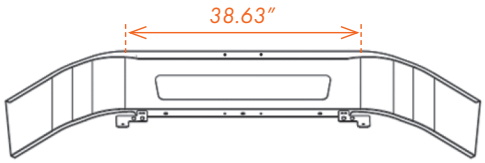

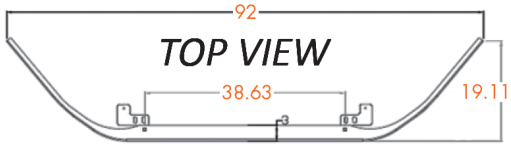



COF

M2 112 BUSINESS CLASS YEARS 2003 & NEWER

TOP FLANGE MOUNT ON INTEGRATED GUSSETS. INCLUDES UPPER LICENSE PLATE HOLES.
NOTE LETTERS 'COF' IN PART NUMBER



COF-0011-15



COF-0010-15




COF-0001-15



COF-0000-15



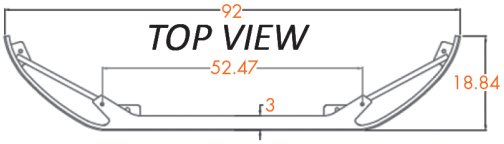



COG

M2 106 BUSINESS CLASS YEARS 2011 & NEWER


RECESSED TOP FLANGE MOUNT, BRACKETS INCLUDED
NOTE LETTERS 'COG' IN PART NUMBER
CHECK 'CT' SERIES PRIOR TO ORDERING



COG-0001-15



COG-0000-15

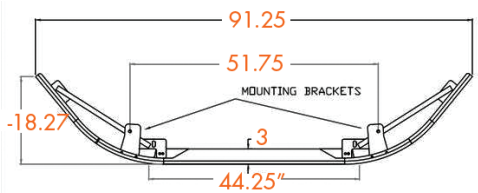

INCLUDES UPPER LICENSE PLATE HOLES.




GMC BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

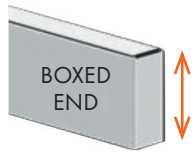


Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

GENERAL YEARS 1977-1987 — DB

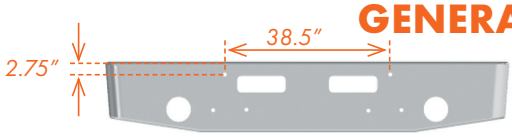

DB-1001-02



DB-1000-02




DB-0001-02



DB-0000-02

BRIGADIER YEARS 1978-1988 — DC

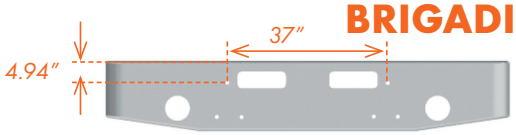

DC-1001-02



DC-1000-02




DC-0001-02




DC-0000-02

BRIGADIER HIGH CAB YEARS 1978-1988 — DD

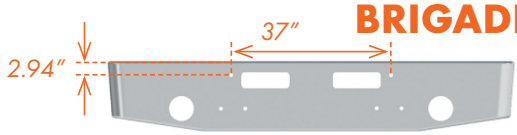

DD-1001-02



DD-1000-02




DD-0001-02




DD-0000-02

ASTRO YEARS 1982-1987, NOT AVAILABLE IN 12″ WIDTH — DE

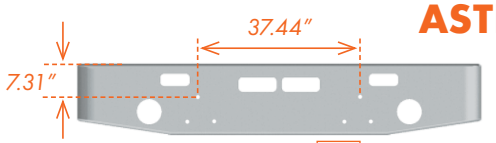

DE-1011-02




DE-1010-02




DE-1001-02



DE-0011-02



DE-1000-02



DE-0010-02



DE-0001-02




DE-0000-02

GMC BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




Width	End Style Code
14″	38

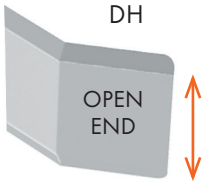

Width	End Style Code
12″	12
16″	13
18″	14

DH — GMC 7000/CHEVY C60, C65, C70 YEARS 1981-1988

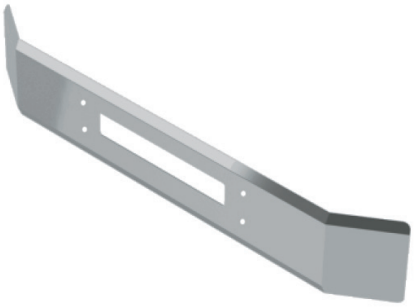




DH-0001-12



DH-0000-12

DF — GMC TOPKICK/CHEVY KODIAK YEARS 1989-1990

NOT AVAILABLE IN 7-GAUGE STEEL OR STAINLESS STEEL

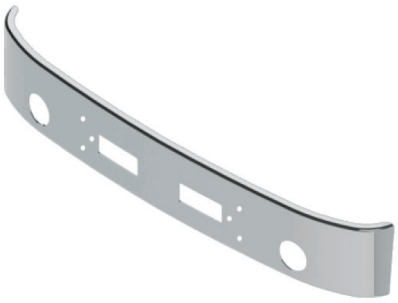



DF-1001-38



DF-1000-38



DF-0001-38





DF-0000-38

DG — GMC TOPKICK/CHEVY KODIAK YEARS 1990-2003

C5500, C6500

NOT AVAILABLE IN 7-GAUGE STEEL OR STAINLESS STEEL

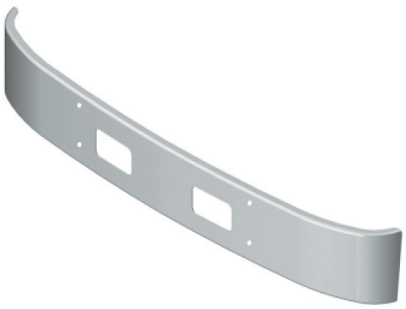



DG-1001-38



DG-1000-38



DG-0001-38



DG-0000-38

GMC BUMPERS


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	15
16″	16
18″	17

C4500, C5500 YEARS 2004-2006 — DI

NOTE LETTERS 'DI' IN PART NUMBER
INCLUDES UPPER LICENSE PLATE HOLES.

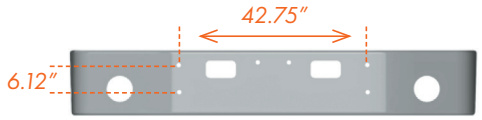

DI-1001-15




DI-0001-15




DI-1000-15



DI-0000-15

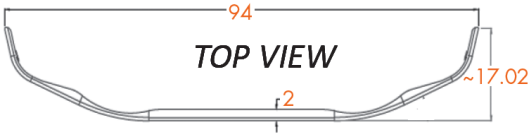




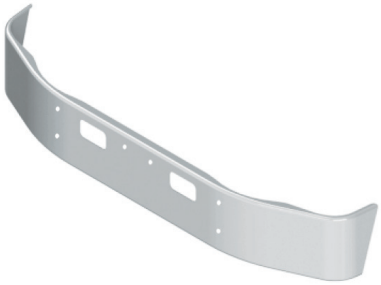

C6500, C7500 YEARS 2004-2009 — DJ


INCLUDES UPPER LICENSE PLATE HOLES.

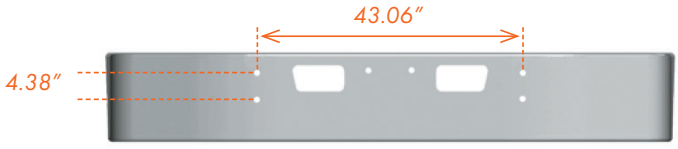

DJ-0001-15



DJ-0000-15

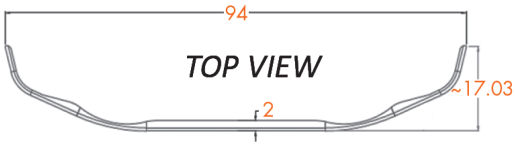





HINO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

** No warranty for 20″ wide bumpers*

OA

268, 338 YEARS 2004 & NEWER
MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'OA' IN PART NUMBER
INCLUDES ONE SET UPPER LICENSE PLATE HOLES



OA-0011- 15




OA-0010- 15




OA-0001- 15



OA-0000- 15

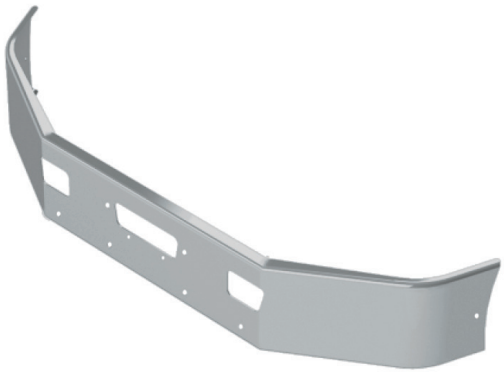

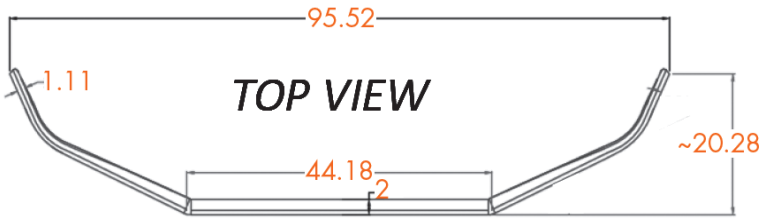



OA-0011-15




OA-0011-15P


Add "P" to end of any bumper part number for black powder coated steel

INTERNATIONAL BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

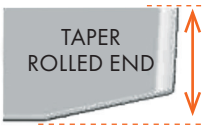

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

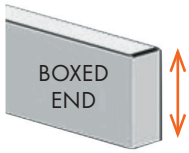

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

4200, 4300 YEARS YEARS 1977-1990 CONVENTIONAL

ED


ED-1210-02


ED-1200-02


ED-1010-02


ED-0210-02


ED-1000-02


ED-0200-02


ED-0010-02


ED-0000-02

9300, 9370 CONVENTIONAL, 9670 CABOVER

EI

YEARS 1983-1996

SET FORWARD AXLE. SEE 'EJ' SERIES FOR SETBACK AXLE.

NOTE LETTERS 'EI' IN PART NUMBER


EI-2110-02


EI-2210-02


EI-2100-02


EI-2200-02


EI-2010-02


EI-0110-02


EI-0210-02


EI-2000-02



EI-0100-02


EI-0200-02


EI-0010-02


EI-0010-02


EI-0210-06

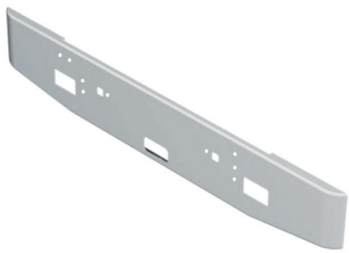


INTERNATIONAL BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	04
16″	05
18″	96
*20″	97
*22″	98

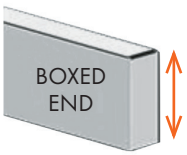

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

** No warranty for 20″ wide bumpers*

EJ

9300 SERIES SET BACK AXLE YEARS 1983-1996

SEE 'EI' SERIES FOR SET FORWARD AXLE


EJ-2210-96


EJ-2000-96


EJ-0010-96


EJ-0210-96



EJ-0200-96


EJ-0000-96


EJ-2010-96


EJ-2200-96


EJ-2210-96

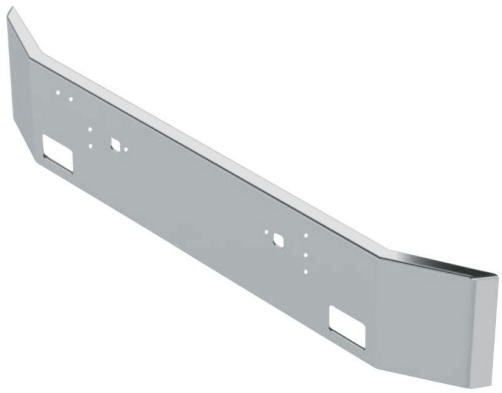


Valley Chrome Plating
QUALITY TRUCK PARTS

INTERNATIONAL BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

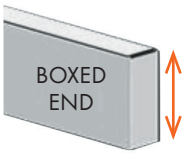


Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

9900 YEARS 1998-1999 — EN

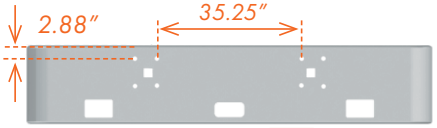

EN-2210-06



EN-2200-06



EN-2000-06



EN-0210-06



EN-0200-06



EN-0010-06



EN-2010-06



EN-0000-06

9900 YEARS 2000 & NEWER — ER




ER-2210-06




ER-2200-06



ER-2010-06

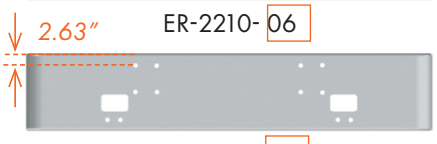

ER-2000-06

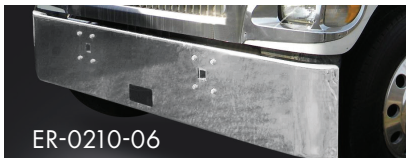




ER-0200-06



ER-0010-06



ER-0000-06

5900 SET FORWARD AXLE YEARS 2001-2011 — EW



EW-2010-02



EW-2020-02



EW-2030-02



EW-2000-02



EW-0010-02




EW-0020-02



EW-0030-02





EW-0000-02

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating QUALITY TRUCK PARTS

www.valleychrome.com

INTERNATIONAL BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




Width	End Style Code
10″	24

EF

2200S, 2500S YEARS 1977-1990

NOT AVAILABLE IN 10-GAUGE STEEL OR STAINLESS STEEL

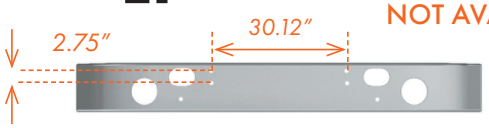

EF-1010-24



EF-0000-24





EF-1000-24




EF-0010-24

EG

1700S, 1800S 1900S YEARS 1977-1990


NOT AVAILABLE IN 10-GAUGE STEEL OR STAINLESS STEEL

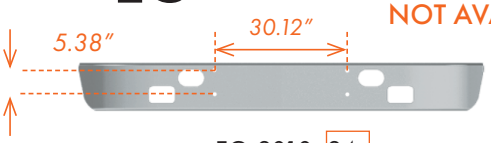

EG-2010-24



EG-0000-24

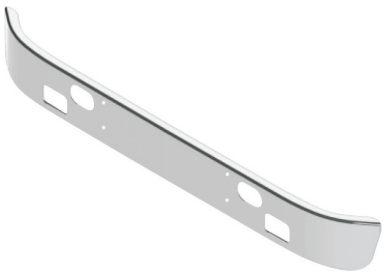



EG-2000-24



EG-0010-24

EL

4000 SERIES, 7000 SERIES, 8000 SERIES YEARS 1990-2004

NOT AVAILABLE IN 10-GAUGE STEEL OR STAINLESS STEEL



EL-2010-24



EL-0000-24





EL-2000-24



EL-0010-24

EM

4000 SERIES, 7000 SERIES, 8000 SERIES YEARS 1990-2004

NOT AVAILABLE IN 10-GAUGE STEEL OR STAINLESS STEEL



EM-2010-24



EM-0000-24





EM-2000-24



EM-0010-24

INTERNATIONAL BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:




Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

9400 SETBACK AXLE YEARS 1990-1996

EK

CHECK 'ES' AND 'EP' SERIES PRIOR TO ORDERING

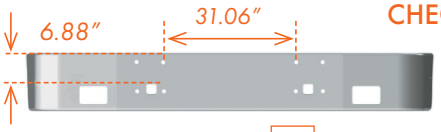

EK-2010- 15




EK-2000- 15



EK-0010- 15




EK-0000- 15

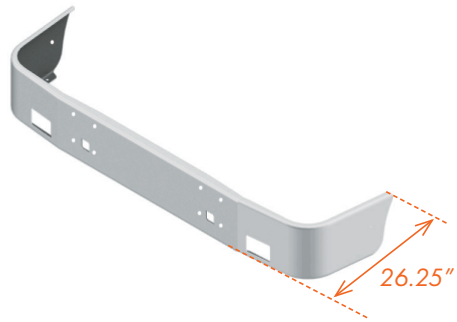

9200 SETBACK AXLE YEARS 1992-1996

ES

CHECK 'EK' AND 'EP' SERIES PRIOR TO ORDERING

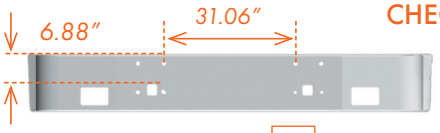

ES-2010- 15




ES-2000- 15



ES-0010- 15




ES-0000- 15

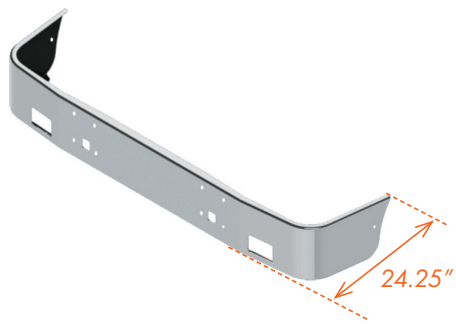

9100, 9200,9400 SETBACK AXLE YEARS 1997-2007

EP

CHECK 'EK' AND 'ES' SERIES PRIOR TO ORDERING

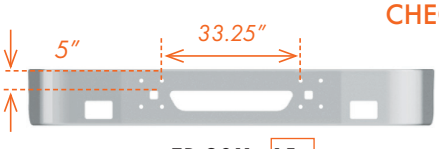

EP-2011- 15



EP-2010- 15



EP-0012- 15 (radar)



EP-0011- 15



EP-2000- 15



EP-0010- 15



EP-0001- 15






EP-0000- 15

INTERNATIONAL BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

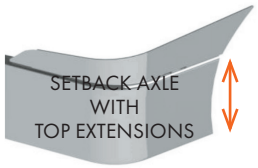

Width	End Style Code
16″	16X
18″	17X
*20″	34X

** No warranty for 20″ wide bumpers*

EU

PROSTAR YEARS 2008-2017
FIXED MOUNT / NON-TILT
MOUNTING BRACKETS AND EXTENSIONS INCLUDED



EU-5011-16X
2 OEM fogs, tow pins, vent



EU-5010-16X-V9
2 OEM fogs, tow pins, round radar
Use option – V8 for rectangular radar



EU-0011-16X
Tow pins, vent




EU-5010-16X
2 OEM fogs, tow pins




EU-0010-16X
Tow pins



EU-0000-16X
No cutouts, mounting only

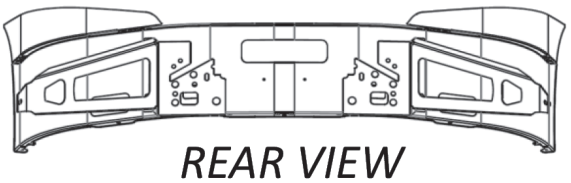


REAR VIEW

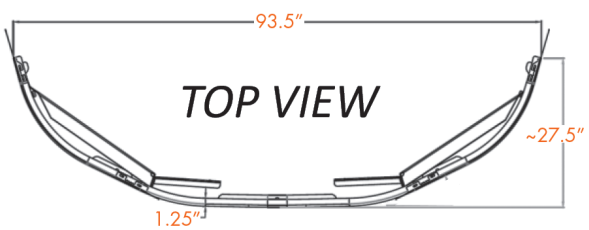



INTERNATIONAL BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

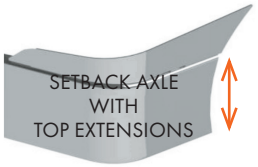

Width	End Style Code
16"	16X
18"	17X
*20"	34X

** No warranty for 20" wide bumpers*

LT SERIES YEARS 2017 & NEWER

EY

MOUNTING BRACKETS AND EXTENSIONS INCLUDED
REPLACES PLASTIC BUMPERS ONLY



EY-5013- 16X
2 OEM fogs, tow pins, slotted vent



EY-0010- 16X
Tow pins



EY-2011- 16X
2 rectangular fogs, tow pins, open vent



EY-0013- 16X
Tow pins, slotted vent




EY-0000- 16X
Mounting Only



EY-0011- 16X
Tow pins, open vent



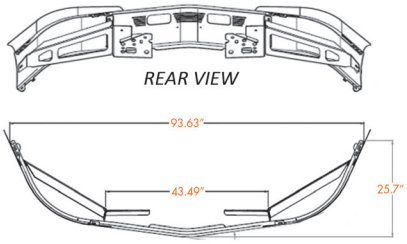

MV607 SETBACK AXLE YEARS 2024 & NEWER

EZ

(-15) END STYLE FOR THIS SERIES IS 14"




12 to 14"	15
16"	16
18"	17
20"*	34

** No warranty for 20" wide bumpers*



EZ-0011- 15
Tow, Vent

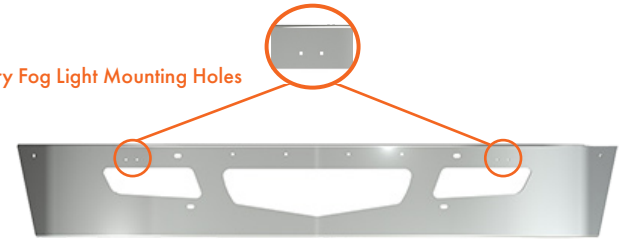

EZ-5011- 15
Fog, Tow, Vent



SHOWN WITH FACTORY GRILL INSERT
(GRILL INSERT NOT INCLUDED)

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

INTERNATIONAL BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	38

10 GAUGE ONLY



Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

** No warranty for 20″ wide bumpers*

ET 4000 SERIES MEDIUM DUTY / DURASTAR YEARS 2002 & NEWER

AUTOMATIC MUST INCLUDE VENT HOLE
ADAPTER BRACKETS INCLUDED



ET-0011-15



ET-0010-15



ET-0001-15




ET-0021-15




ET-0020-15



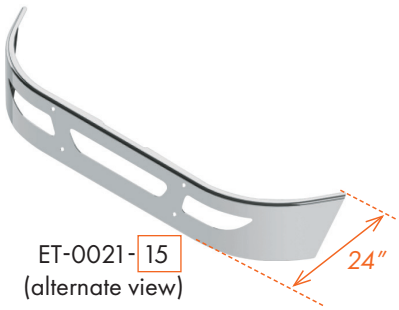

ET-0021-15
(alternate view)

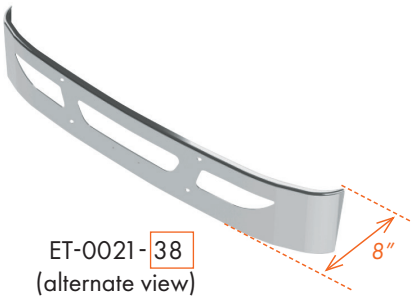

ET-0021-38
(alternate view)

EV 7000 SERIES MEDIUM DUTY / WORKSTAR YEARS 2006 & NEWER

AUTOMATIC MUST INCLUDE VENT HOLE
INCLUDES ONE SET LICENSE PLATE HOLES



EV-5001-38



EV-0001-38




EV-5000-38




EV-0000-38



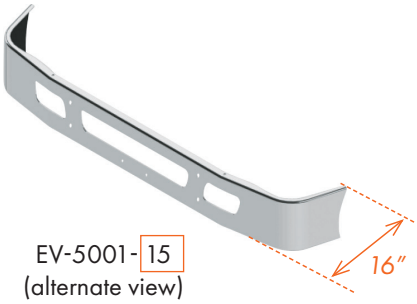

EV-5001-15
(alternate view)

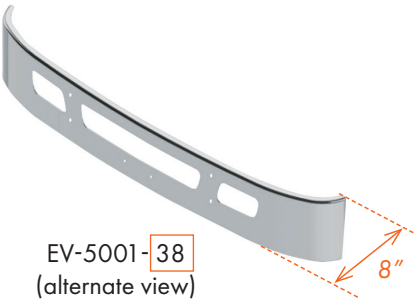

EV-5001-38
(alternate view)

KENWORTH BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

TAPER ROLLED END

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

GULLWING

Width	End Style Code
16″	07

BOXED END

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

SQUARE ROLLED END

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

K100C CABOVER YEARS 1967-1983 — FA


FA-1110-02


FA-1100-02


FA-1010-02



FA-0110-02


FA-1000-02


FA-0100-02


FA-0010-02



FA-0000-02

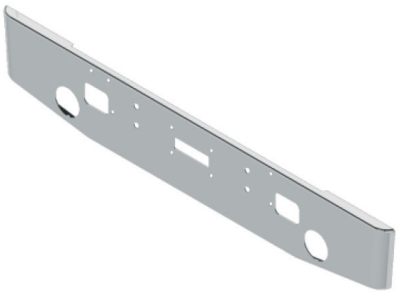

LOGGER YEARS 1967-1981 — FF


FF-1090-02


FF-1000-02

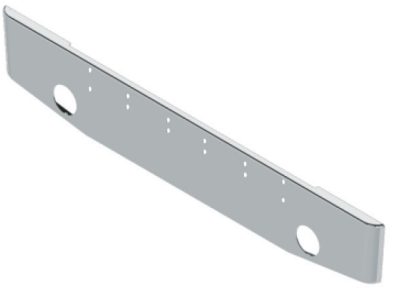



FF-0090-02


FF-0000-02

K100E YEARS 1984-1999 — FB


FB-2010-02


FB-2000-02

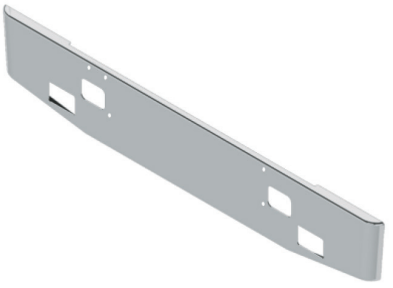



FB-0010-02


FB-0000-02

KENWORTH BUMPERS


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32



Width	End Style Code
16″	07

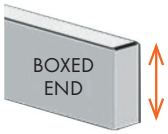

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

FD

W900A YEARS 1967-1981


FD-1210-07


FD-1200-07


FD-1010-07


FD-0210-07


FD-1000-07


FD-0200-07


FD-0010-07


VK120003
Tow Pin Covers (pair)
Fits FD,FE,FT & more


FD-0000-07

FE

W900B YEARS 1982-2010 • W900L YEARS 1982 & NEWER


FE-2210-02


FE-2200-02


FE-2010-02


FE-0210-02


FE-2000-02


FE-0200-02


FE-0010-02




FE-0000-02

FT

W900B YEARS 2011 & NEWER, DOES NOT FIT W900L


FT-2210-06


FT-2200-06


FT-2010-06


FT-0210-06


FT-2000-06


FT-0200-06


FT-0010-06




FT-0000-06

KENWORTH BUMPERS


EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32



Width	End Style Code
16″	07

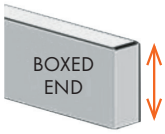

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

W900S YEARS 1989-2007

FJ



FJ-2010-01




FJ-2000-01



FJ-0010-01



FJ-0000-01

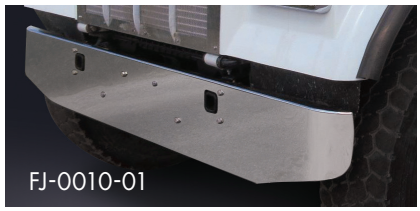

W900S YEARS 2008 & NEWER

FQ



FQ-2210-02



FQ-2200-02



FQ-2010-02



FQ-0210-02



FQ-2000-02



FQ-0200-02



FQ-0010-02



FQ-0010-02

W990 YEARS 2018 & NEWER

FW



FW-2210-06



FW-2000-06



FW-2010-06



FW-0010-06



FW-0210-06



FW-0000-06




KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




Width	End Style Code
14″	25
16″	13
18″	14

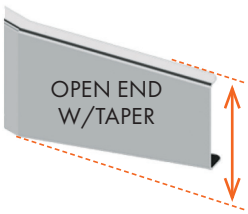

Width	End Style Code
14″	26
16″	132T
18″	142T

FG

T800 YEARS 1986-2003

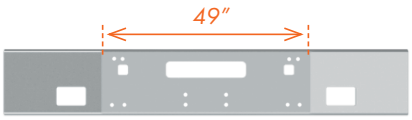

FG-2191-25



FG-2091-25



FG-2090-25



FG-0101-25



FG-0100-25





FG-2190-25



FG-0191-25



FG-2001-25



FG-0091-25



FG-0090-25



FG-0000-25



FG-2101-25



FG-2100-25



FG-0190-25



FG-2000-25




FG-0001-25



FP

T800W WIDENOSE - YEARS 1988-2005

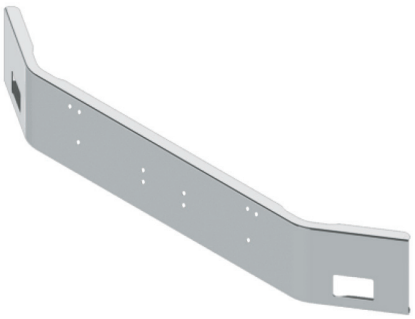




FP-2090-25




FP-2000-25



FP-0090-25



FP-0000-25

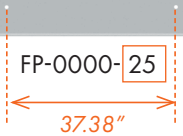


KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	25
16″	13
18″	14

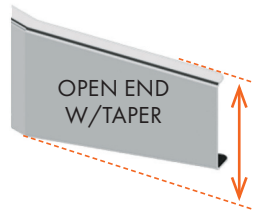

Width	End Style Code
14″	26
16″	132T
18″	142T

T800, T880 YEARS 2004 & NEWER

FN



FN-2111-25



FN-2110-25



FN-2100-25



FN-2010-25



FN-2001-25



FN-2011-25



FN-2101-25



FN-2000-25



FN-0111-25



FN-0110-25



FN-0101-25



FN-0011-25



FN-0010-25



FN-0001-25



FN-0100-25




FN-2191-25




FN-0000-25



FN-0090-25

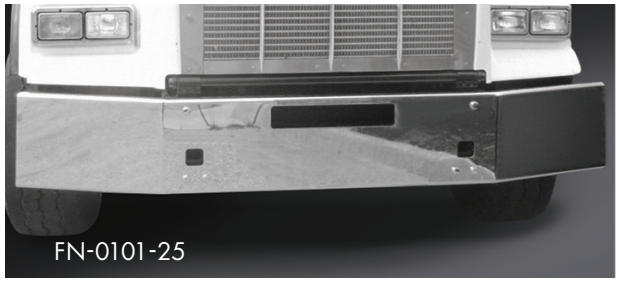

FN-0101-25

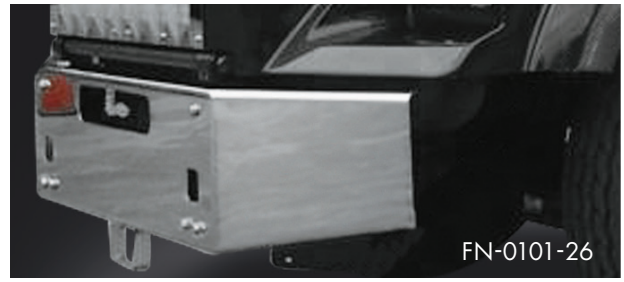


FN-0101-26

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	25
16″	13
18″	14

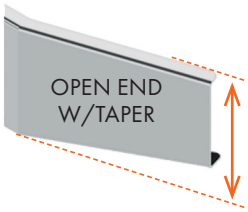

Width	End Style Code
14″	26
16″	132T
18″	142T

FK

T450B YEARS 1994-1997

SIMILAR BOLT PATTERN AS 'FG' SERIES BUT SHORTER BUMPER LENGTH



FK-2191-25



FK-2190-25



FK-2101-25



FK-2091-25



FK-0191-25



FK-2100-25



FK-2090-25



FK-2001-25



FK-0190-25



FK-0101-25



FK-0091-25



FK-2000-25



FK-0100-25



FK-0090-25



FK-0001-25




FK-0000-25

Valley Chrome Plating
QUALITY TRUCK PARTS

KENWORTH BUMPERS


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

FL

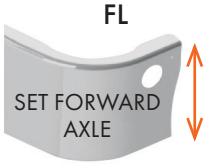


Width	End Style Code
13″	18
16″	19
18″	20
*20″	35

FS

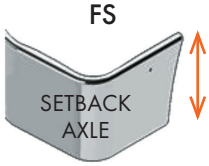

Width	End Style Code
16″	16

FU

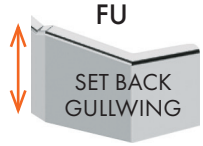


Width	End Style Code
15″	708
18″	709
*20″	711

** No warranty for 20″ wide bumpers*

T300 SET FORWARD AXLE YEARS 1997-2008 — FL


MOUNTS TO FACTORY BRACKETS

LICENSE PLATE HOLES STANDARD




FL-0010-18

EXTERNAL STEP HOLES (STEP NOT INCLUDED)



FL-0000-18

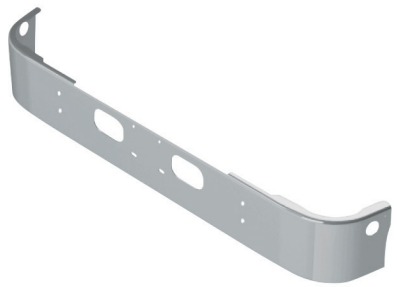

T270, T370 SET BACK AXLE YEARS 2008 & NEWER — FS

ADAPTER BRACKETS INCLUDED. 16″ WIDTH ONLY.
NOW BOLTLESS



FS-2010-16



FS-2000-16




FS-0010-16



FS-0000-16



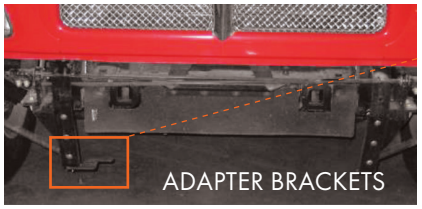



NEW BOLTLESS MOUNTING BRACKETS

T440 SET BACK AXLE YEARS 2011 & NEWER — FU

NOT AVAILABLE IN STAINLESS STEEL



FU-0011-708




FU-0010-708



FU-0001-708



FU-0000-708

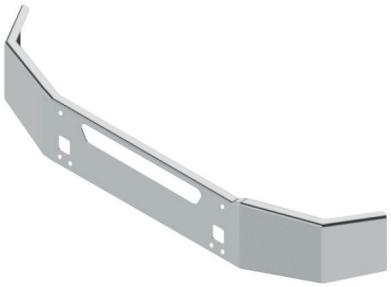

KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

FH

T600 YEARS 1987-2007

SPACERS INCLUDED. MUST INCLUDE VENT HOLES FOR WARRANTY.




FH-2011- 15


FH-2001- 15


FH-0011- 15


FH-0001- 15

FR

T660 YEARS 2008-2017

MOUNTING BRACKETS INCLUDED


FR-5011- 15


FR-2011- 15


FR-2001- 15


FR-5001- 15


FR-2000- 15


FR-2010- 15


FR-5010- 15



FR-0010- 15


FR-0011- 15





FR-0001- 15


FR-0000- 15

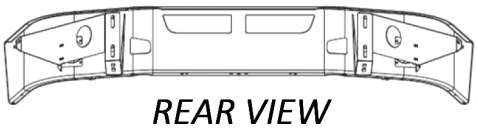

REAR VIEW

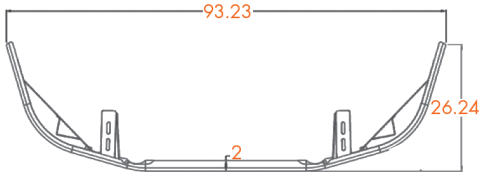

FM

T400 SET BACK AXLE YEARS 1989-2000





FM-2001- 15


FM-0001- 15

KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

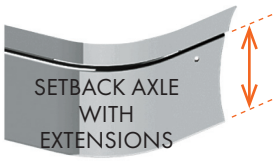

Width	End Style Code
14"	708
16"	709
18"	711
*20"	712

* No warranty for 20" wide bumpers

T680 SET BACK AXLE YEARS 2013 & NEWER
MOUNTING BRACKETS INCLUDED

FV



FV-5210-708
2 OEM fogs, step, tow pins



FV-0010-708-V4
Tow pins, radar accommodation



FV-0210-708
Step, tow pins



FV-5010-708
2 OEM fogs, tow pins



FV-0010-708
Tow pins




FV-0000-708
Mounting only





FV-0010-708-V4
Tow pins, radar accommodation
(ONE-PIECE - AVAILABLE FOR ALL FV BUMPERS)

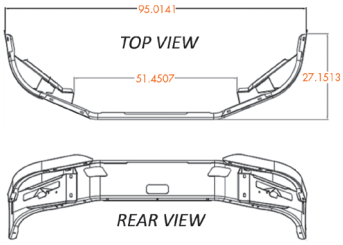

T680 GEN II SET BACK AXLE YEARS 2021 & NEWER
MOUNTING BRACKETS INCLUDED

FX



FX-0000-708
Mounting only



FX-0010-708
Tow pins



FX-0010-708-V4
Tow pins, radar accommodation



FX-5210-708
2 OEM fogs, step, tow pins



FX-5010-708
2 OEM fogs, tow pins



FX-0210-708
Step, tow pins





FX-0011-708
Vent, tow pins



FX-5011-708
Vent, 2 OEM fogs, tow pins

KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



12″	**18**
16″	19
18″	20
20″	35

** No warranty for 20″ wide bumpers*

T280, T380 & T480 SET FORWARD AXLE YEARS 2021 & NEWER

MOUNTS TO FACTORY BRACKETS

FY



FY-5000-18
Fog



FY-0000-18
Mount Only



FY-5001-18



FY-5001-18
Fog, Vent




FY-0001-18
Vent

MACK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

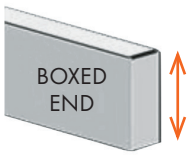

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

GA

R, RL, F, FL, FS



GA-1201-02



GA-1200-02



GA-1001-02



GA-0201-02



GA-1000-02



GA-0200-02



GA-0001-02



GA-0000-02

GB


SUPERLINER, CRUISELINER

NOT AVAILABLE IN 12″ WIDTH

SUPERLINER NOT AVAILABLE IN GULLWING STYLE-07



GB-1211-02

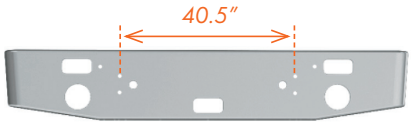

GB-1210-02



GB-1201-02



GB-1011-02



GB-0211-02



GB-1200-02



GB-1010-02



GB-1001-02



GB-0210-02



GB-0201-02



GB-0011-02



GB-1000-02



GB-0200-02



GB-0010-02



GB-0001-02




GB-0000-02

MACK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

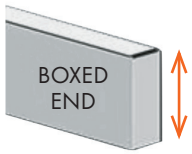

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

R-600, R-700

GC

ADD– GG TO END OF ANY 'GC' PART NUMBER FOR GRILLE GUARD HOLES



GC-1011-02



GC-1010-02



GC-1001-02



GC-0011-02



GC-1000-02



GC-0010-02



GC-0001-02




GC-0000-02-GG




GC-0000-02

GRILLE GUARDS

FIT OEM BUMPERS AND OUR BUMPERS GC, GH, GS, GV
DOES NOT FIT OUR 'GZ' BUMPERS (SEE PAGE 54)
STAINLESS STEEL ONLY

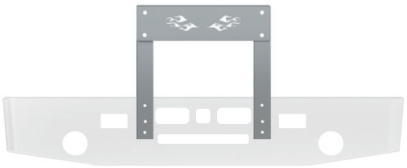


AC-GCGGS-FLAMES

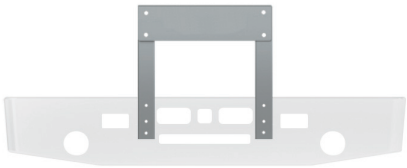

AC-GCGGS

F-600

GD



GD-1011-02



GD-1010-02



GD-1001-02



GD-0011-02



GD-1000-02



GD-0010-02



GD-0001-02




GD-0000-02

MACK BUMPERS


EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

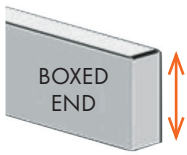

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

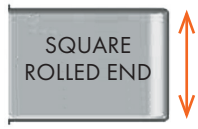

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

GE — VALUELINER, WESTCOAST



GE-1011-02



GE-1010-02



GE-1001-02



GE-0011-02



GE-1000-02



GE-0010-02



GE-0001-02



GE-0000-02


GF — F-700, INTERSTATE



GF-1011-02



GF-1010-02

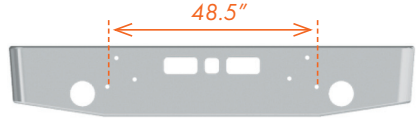

GF-1001-02



GF-0011-02



GF-1000-02



GF-0010-02



GF-0001-02



GF-0000-02

GR — R600 YEARS 1965 TO 1976



GR-1011-02



GR-1010-02



GR-1001-02



GR-0011-02



GR-1000-02



GR-0010-02



GR-0001-02




GR-0000-02

MACK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

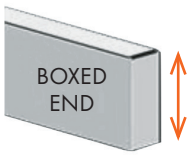

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

MH COE, SUPERLINER II, RW613

GG

NOT AVAILABLE IN 12″ WIDTH



GG-1110-02



GG-1100-02



GG-1010-02



GG-0110-02



GG-1000-02



GG-0100-02



GG-0010-02



GG-0000-02

WESTERN CONTRACTOR, RD688, RD690 YEARS 1989-2001

GH

ADD–GG TO END OF ANY 'GH' PART NUMBER FOR GRILLE GUARD HOLES



GH-1011-02



GH-1010-02



GH-1001-02



GH-0011-02



GH-1000-02



GH-0010-02



GH-0001-02



GH-0000-02-GG



GH-0000-02

GRILLE GUARDS


FIT OEM BUMPERS AND OUR BUMPERS GC, GH, GS, GQ, GV

DOES NOT FIT OUR 'GZ' BUMPERS (SEE PAGE 54)

STAINLESS STEEL ONLY



AC-GCGGS-FLAMES

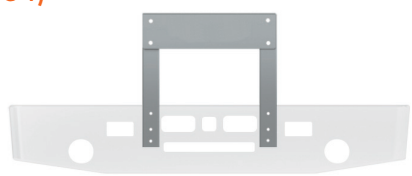

AC-GCGGS

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




Width	End Style Code
10″	27
12″	12
14″	25
16″	13
18″	14

GI

LOGGER

NOT AVAILABLE IN 10″ WIDTH (-27). NOTE LETTERS 'GI' IN PART NUMBER

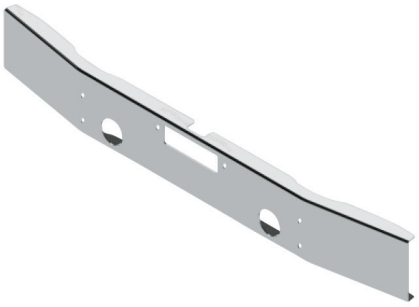



GI-1010-12



GI-0010-12



GI-1000-12




GI-0000-12

GS

RD SET BACK AXLE YEARS 1979-1988

GRILLE GUARD HOLES ARE STANDARD

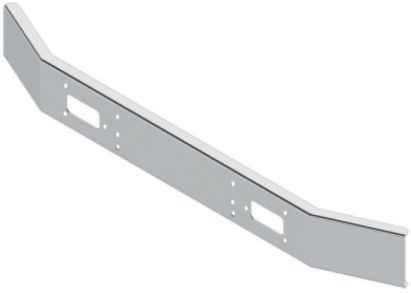



GS-0010-12




GS-0000-12

SEE PAGE 53 FOR GRILLE GUARDS

GP

MR, MRU, MD SERIES YEARS 2018 & OLDER

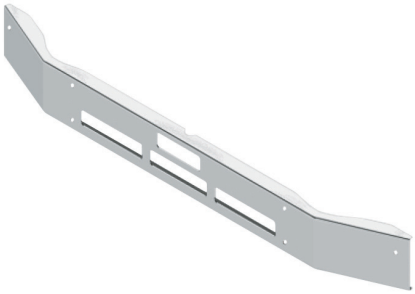



GP-0011-27



GP-0010-27



GP-0001-27



GP-0000-27

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
10″	27
12″	12
14″	25
16″	13
18″	14

CL SERIES YEARS 1994-2003

GN



GN-2010-25



GN-2020-25




OUTBOARD TOW PIN HOLES

GN-0010-25



CENTER TOW PIN HOLE

GN-0020-25

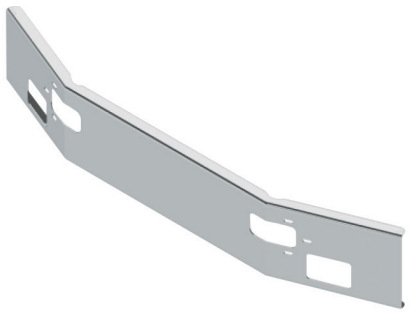

RD688, RD690 YEARS 1993-2003


GRILLE GUARD HOLES ARE STANDARD

GQ

SEE BELOW FOR GRILLE GUARDS



GQ-0000-27

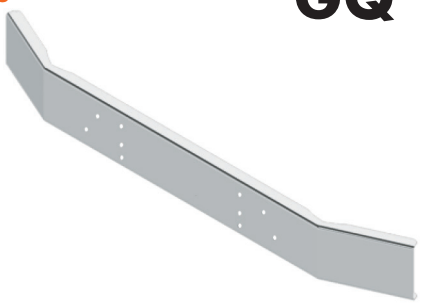

CV SERIES, RD688DM YEARS 2003-2007

GRILLE GUARD HOLES ARE STANDARD

SEE BELOW FOR GRILLE GUARDS


GV



GV-0010-12



GV-0000-12

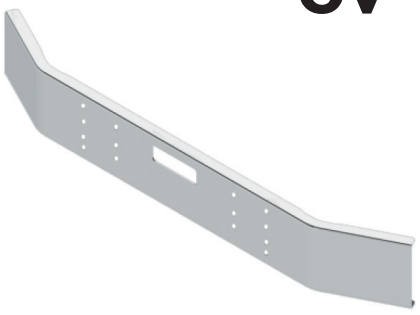

GRILLE GUARDS


FIT OEM BUMPERS AND OUR BUMPERS GC, GH, GS, GQ, GV

DOES NOT FIT OUR 'GZ' BUMPERS (SEE PAGE 54)

STAINLESS STEEL ONLY



AC-GCGGS-FLAMES

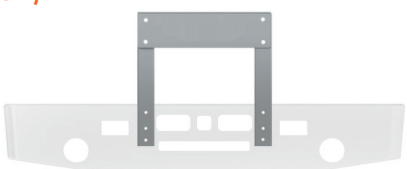


AC-GCGGS

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

GZ

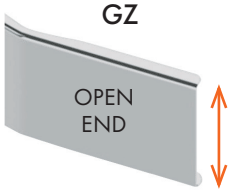

Width	End Style Code
10″	27
12″	12
14″	25
16″	13
18″	14

GT



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

GT



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

GZ

GRANITE, CTP713, GU713

YEARS 2007 & NEWER



GZ-2010-12



GZ-2020-12



GZ-0011-12



GZ-0010-12




GZ-0020-12




GZ-0000-12



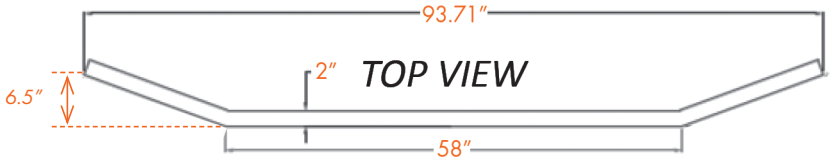

GRILLE GUARDS

FITS GZ BUMPERS AND
OEM EQUIVALENTS ONLY
STAINLESS STEEL ONLY
FOR OTHER MACK GRILLE
GUARDS SEE PAGE 53

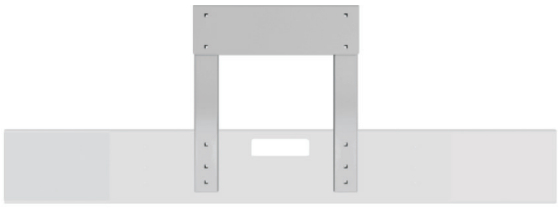

AC-GZGGS

GT

GRANITE, BRIDGE FORMULA

YEARS 2003-2007



GT-2210-02



GT-2200-02



GT-2010-02



GT-0210-02



GT-2000-02



GT-0200-02



GT-0010-02



GT-0000-02

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS


www.valleychrome.com

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
13″	18
16″	19
18″	20
20″	35

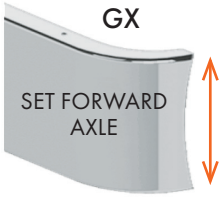

Width	End Style Code
17.5″	19

CH SERIES SET FORWARD AXLE YEARS 1994-2004

BRACKETS INCLUDED & BOLTED IN

GJ


GJ-2210- 18


GJ-2200- 18


GJ-2010- 18


GJ-0210- 18


GJ-2000- 18


GJ-0200- 18


GJ-0010- 18


GJ-0000- 18




REAR VIEW



CH SERIES SET FORWARD AXLE YEARS 2005 & NEWER

ALSO FITS RAWHIDE

MOUNTS TO FACTORY BRACKETS, BRACKETS NOT INCLUDED. LICENSE PLATE HOLES INCLUDED.

GX


GX-1211- 19


GX-1210- 19


GX-0210- 19


GX-0211- 19


GX-0010- 19



GX-1000- 19


GX-0200- 19


GX-0000- 19




REAR VIEW

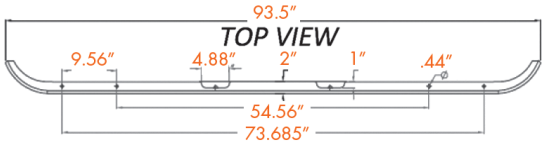

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

* *No warranty for 20″ wide bumpers*

GM

CH SERIES SET BACK AXLE YEARS 1988-1993

BRACKETS INCLUDED & BOLTED IN



GM-2210- 15



GM-2200- 15



GM-2010- 15




GM-0210- 15




GM-2000- 15




GM-0200- 15

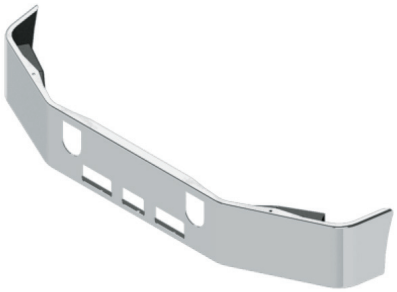




GM-0010- 15



GM-0000- 15

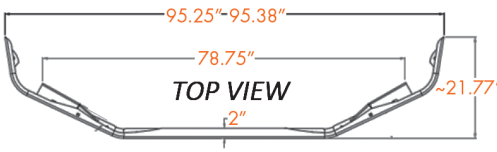



GL

CH SERIES SET BACK AXLE YEARS 1994-2004

BRACKETS INCLUDED & BOLTED IN



GL-2210- 15



GL-2200- 15



GL-2010- 15




GL-0210- 15



GL-2000- 15



GL-0200- 15

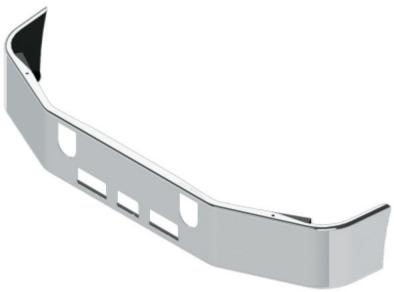




GL-0010- 15



GL-0000- 15

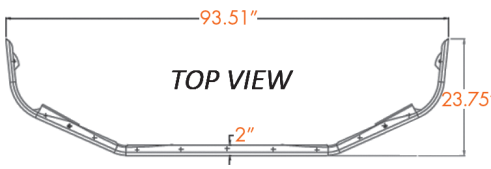



MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

CX SERIES, VISION SET BACK AXLE YEARS 2001-2004

MOUNTING BRACKETS INCLUDED

GU


GU-2210-16


GU-2200-16



GU-2010-16



GU-0210-16



GU-2000-16


GU-0200-16


GU-0010-16

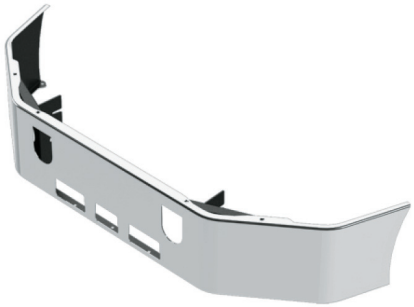

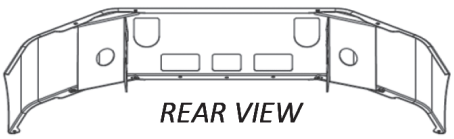

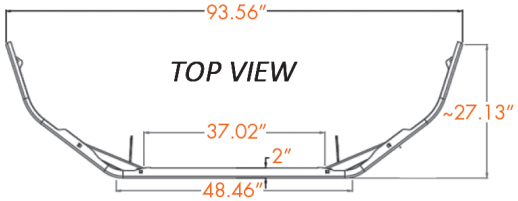

CXP, CXN SERIES SET BACK AXLE YEARS 2005 & NEWER

MOUNTING BRACKETS INCLUDED

ONE SET UPPER LICENSE PLATE HOLES INCLUDED

GW


GW-1210-16



GW-1200-16



GW-1010-16



GW-0210-16


GW-1000-16


GW-0010-16

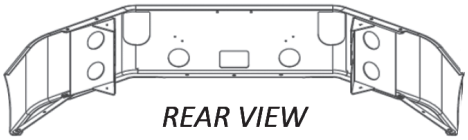

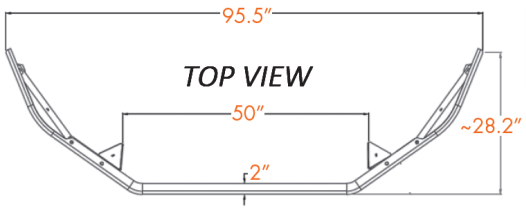

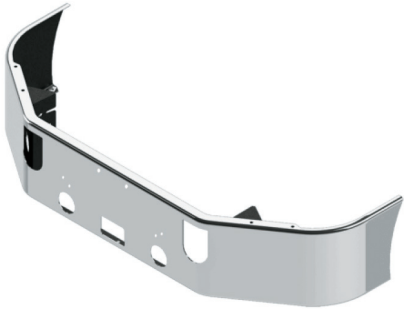

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
16″	16
18″	17
*20″	34

** No warranty for 20″ wide bumpers*

GY

CXU SERIES SET BACK AXLE YEARS 2008 & NEWER

BRACKETS NOT INCLUDED. REPLACES STAINLESS CLAD BUMPERS.
BRACKETS REQUIRED FOR URETHANE REPLACEMENT – SEE BELOW

ANTHEM SET BACK AXLE YEARS 2017 & NEWER

BRACKETS NOT INCLUDED – REPLACES STAINLESS CLAD BUMPERS ONLY



GY-1211-16
Round fogs, step, tow, vent holes



GY-1200-16
Round fogs, step holes



GY-0211-16
Step, tow, vent holes



GY-0210-16
Step, tow holes




GY-0010-16
Tow holes



GY-0200-16
Step hole



Brackets for CXU plastic replacement: ***GY0116BK***

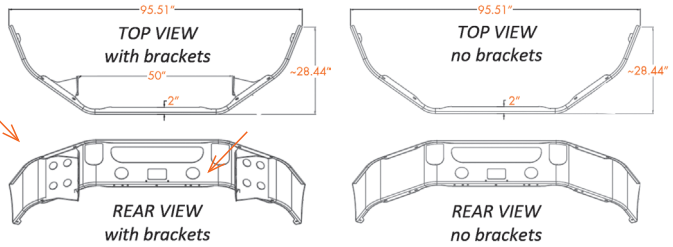

MACK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	12
16″	13

T280, T380 & T480 SET FORWARD AXLE YEARS 2021 & NEWER GOA

MOUNTS TO FACTORY BRACKETS





GOA-0000-12
No Cutouts



GOA-0010-12
Center Tow



Width	End Style Code
16″	16
18″	17
*20″	34

** No warranty for 20″ wide bumpers*

ANTHEM SET BACK AXLE YEARS 2018 & NEWER GOB

BRACKETS INCLUDED – REPLACES URETHANE BUMPERS ONLY



GOB-0000-16
Mount Only



GOB-0001-16
Vent Hole



GOB-0010-16
Tow Holes



GOB-0011-16
Tow Holes, Vent Hole



GOB-0211-16
Center Step, Tow Holes, Vent Hole



GOB-2001-16
2 Square Fogs, Vent Hole




PETERBILT BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

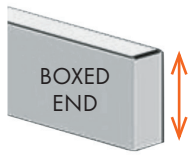

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

352 CABOVER YEARS 1967-1980
359 CONVENTIONAL YEARS 1967-1986

HA


HA-1010-02


HA-1000-02


HA-0010-02


HA-2010-02


HA-2000-02


HA-0000-02

LOGGER YEARS 1973-1986


HE


HE-1090-02


HE-1000-02


HE-0000-02


HE-0090-02

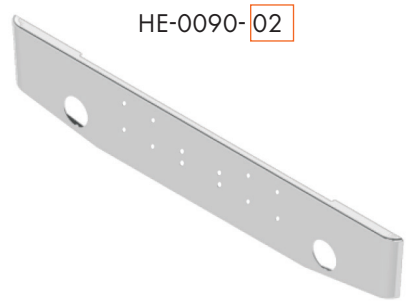

362 CABOVER YEARS 1981 & NEWER
NOT AVAILABLE IN 12″ WIDTH (-01,-04,-09,-91)

HK


HK-1110-02


HK-1100-02


HK-1010-02


HK-0110-02


HK-1000-02


HK-0100-02


HK-0010-02



HK-0000-02

PETERBILT BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

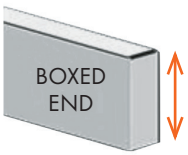

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52




Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

HD

375 CONVENTIONAL YEARS 1987-1994



HD-2011-02

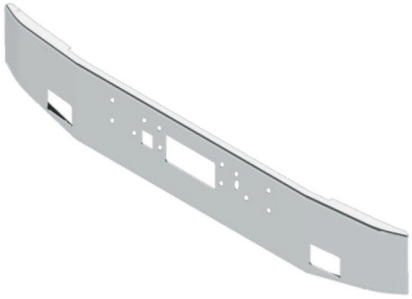



HD-2010-02



HD-0011-02



HD-0001-02



HD-2001-02



HD-0010-02



HD-0000-02

HC

379, 378, 357 YEARS 1987-2007



HC-2010-02



HC-0020-02



HC-2000-02



HC-0000-02



HC-0010-02



HC-0010-06

SEE PAGE 61 FOR SUPPORT BRACKETS

HF

LOGGER YEARS 1987-2007



HF-2090-02



HF-3090-01



HF-0090-02



HF-0090-01

BUMPER SUPPORT BRACKETS – MODEL 379


VP15-06333L-22

for 20″ to 22″ bumpers



VP15-06333L-20

for 16″ to 20″ bumpers

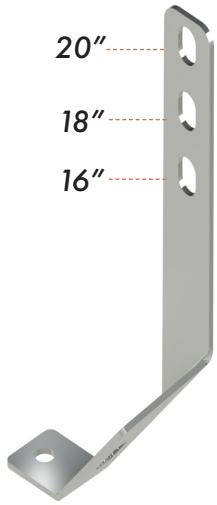

MARKED FOR DRIVER & PASSENGER SIDES




VP15-06333L-20
shown on 20″ bumper
(fasteners not included)

ADD THESE BRACKETS FOR A MORE RIGID INSTALLATION.
POWDER-COATED STEEL.
FASTENERS NOT INCLUDED.
SOLD AS A PAIR.

BUMPER SUPPORT BRACKETS – MODEL 389 & 589


VCN11-6061-22

for 20″ to 22″ bumpers

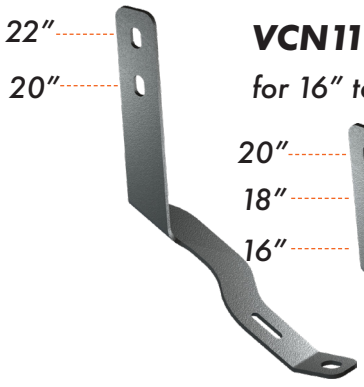

VCN11-6061-20

for 16″ to 20″ bumpers

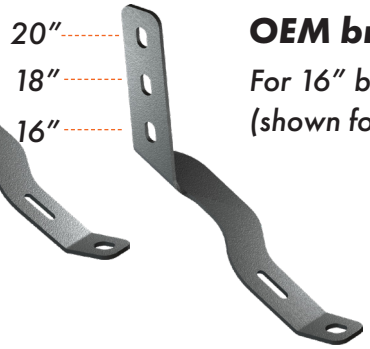

OEM bracket N11-6061

For 16″ bumpers
(shown for comparison)





VCN11-6061-20
shown on 20″ bumper
(fasteners not included)


SAME BRACKET USED FOR DRIVER & PASSENGER SIDES

PETERBILT BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

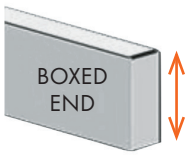

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

HV

365, 367, 388, 389, 567, YEARS 2007 & NEWER
589, YEARS 2024 & NEWER



HV-2210- 02



HV-0010- 06




HV-2200- 02



HV-2000- 02



HV-0000- 02



HV-0090- 02



HV-0210- 02



HV-0010- 02


SEE PAGE 61 FOR SUPPORT BRACKETS

HOB

388 HIGH CLEARANCE YEARS 2007 & NEWER
NOTE LETTERS 'HOB' IN PART NUMBER



HOB-2090- 01

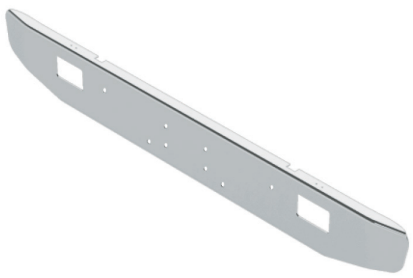



HOB-2000- 01



HOB-0010- 01



HOB-0090- 01



HOB-0000- 01

Valley Chrome Plating
QUALITY TRUCK PARTS

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
13″	18
16″	19
18″	20
20″	35

362E SET FORWARD AXLE

HQ


HQ-2210-18



HQ-2200-18


HQ-2010-18


HQ-0210-18


HQ-0010-18


HQ-0200-18

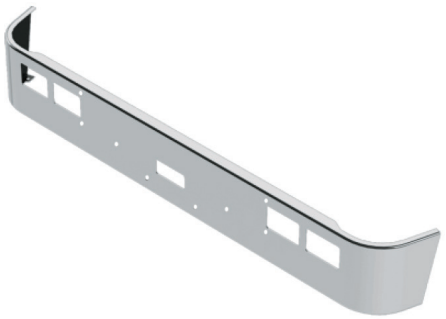

377 SET FORWARD AXLE YEARS 1987-1991

NOTE LETTERS 'HI' IN PART NUMBER

HI





HI-2010-18


HI-2000-18


HI-0010-18


HI-0000-18

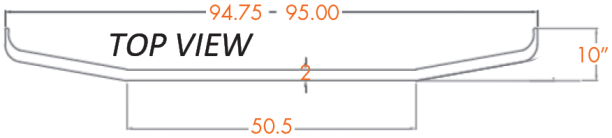

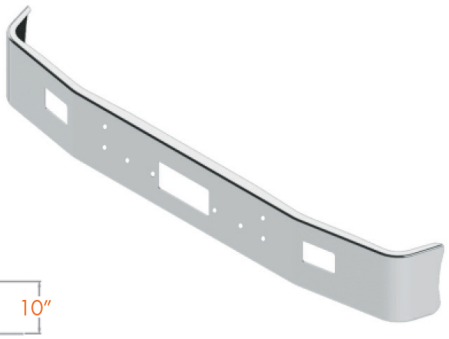

377AE, 375 SET FORWARD AXLE YEARS 1987 & NEWER

HJ





HJ-2010-18


HJ-2000-18


HJ-0010-18


HJ-0000-18



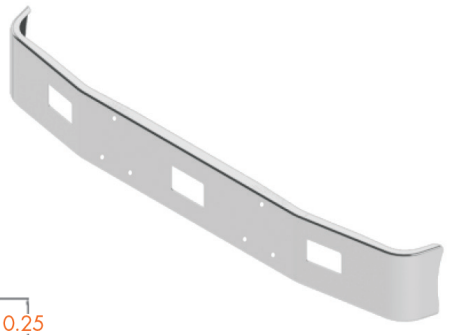

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




Width	End Style Code
10″	27
12″	12
14″	25
16″	13
18″	14

HG

357, 378 SETBACK AXLE YEARS 1987-2004

SEE BELOW FOR TOP FLANGE STEP PLATES
CHECK 'HOD' SERIES PRIOR TO ORDERING

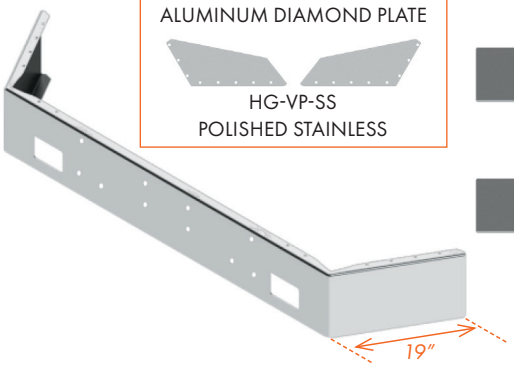


HG-2090-12


HG-2010-12


HG-2000-12


HG-0090-12


HG-0010-12


HG-0000-12

HM

320, 520 CABOVER YEARS 1990 & NEWER

AVAILABLE IN 14″ ONLY (-25)


HM-1011-25


HM-1012-25


HM-1010-25


HM-1001-25


HM-1002-25


HM-1000-25


HM-0011-25


HM-0012-25


HM-0010-25




HM-0002-25


HM-0000-25


HM-0001-25

CALL FOR HEATER HOLE OR
NAT. GAS CUTOUTS

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

* *No warranty for 20″ wide bumpers*

377 WITH 119″ BBC, SET BACK AXLE YEARS 1987-1997
377AE SET BACK AXLE YEARS 1990 & OLDER

HH

MOUNTING BRACKETS **NOT** INCLUDED, CHECK 'HN' SERIES PRIOR TO ORDERING
FOG LIGHT BRACKETS INCLUDED WITH ELIGABLE BUMPERS



HH-2010-15




HH-2000-15




HH-0010-15



HH-0000-15

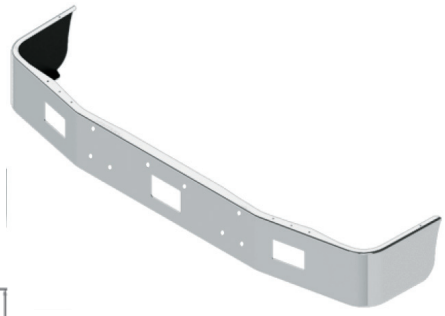

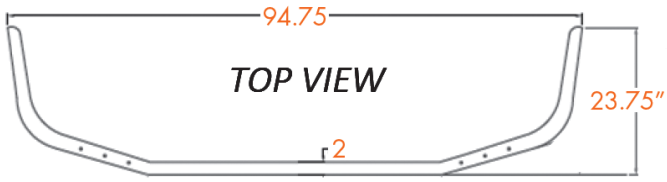

377 WITH 120″ BBC / 122″BBC, SET BACK AXLE
385 WITH 120″ BBC, SET BACK AXLE YEARS 1997-2007

HN

MOUNTING BRACKETS INCLUDED, CHECK 'HH' SERIES PRIOR TO ORDERING



HN-2010-15




HN-2000-15




HN-0010-15



HN-0000-15

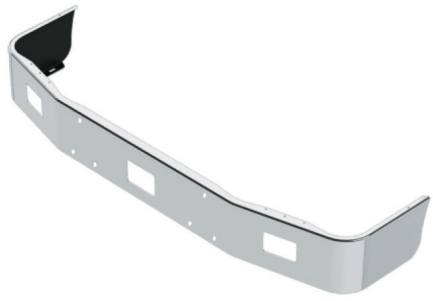

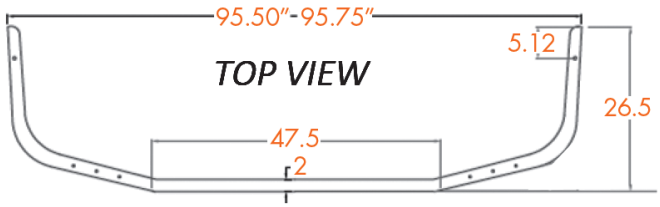

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




Width	End Style Code
12″	15
16″	16
18″	17
*20″	34


** No warranty for 20″ wide bumpers*

HL

385 WITH 112″ BBC, SET BACK AXLE YEARS 1995-2007

CHECK 'HY' SERIES PRIOR TO ORDERING

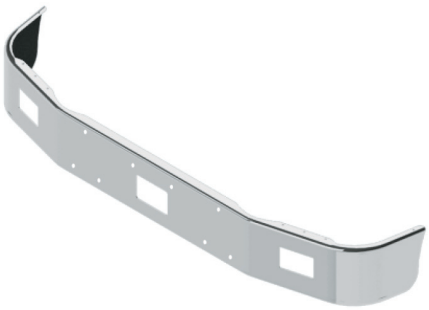


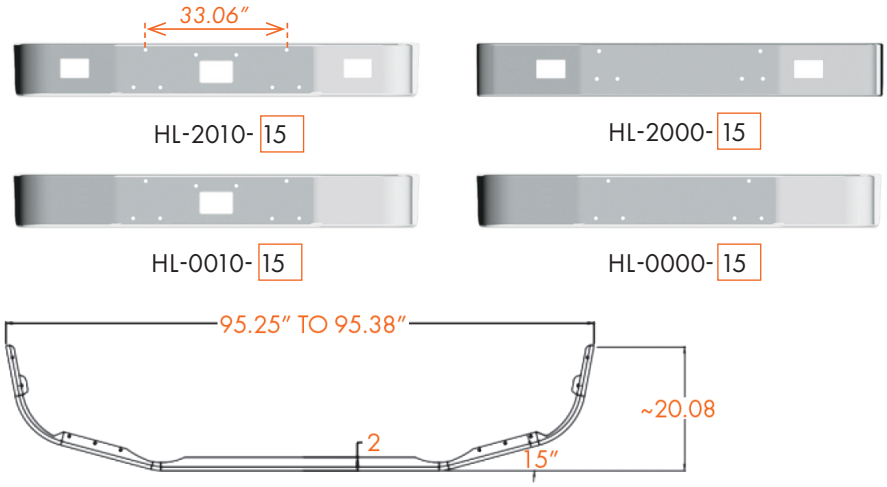


HY

385 WITH 120″ BBC, SET BACK AXLE YEARS 1995-2007

CHECK 'HL' SERIES PRIOR TO ORDERING

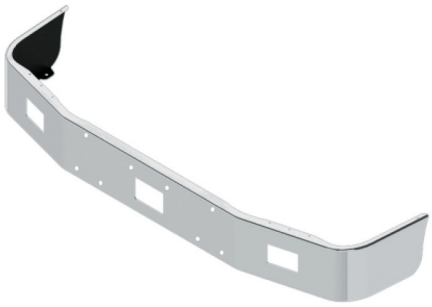

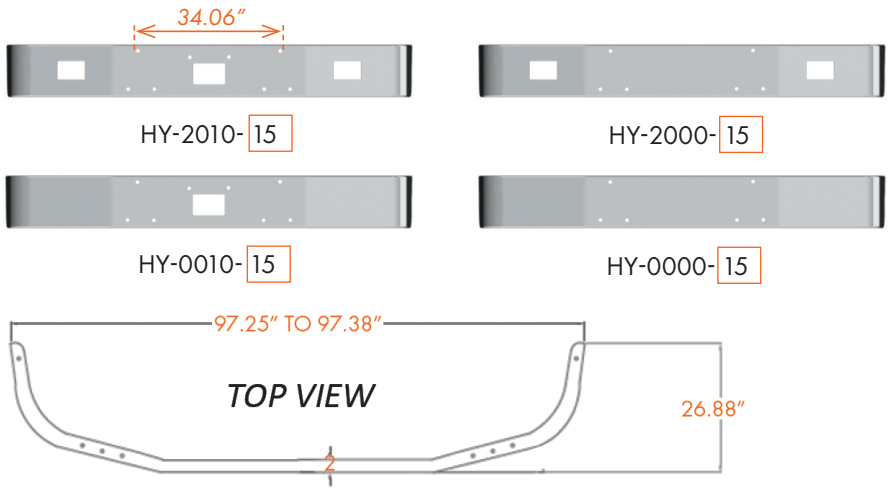

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

* *No warranty for 20″ wide bumpers*

357, 378 SET BACK AXLE YEARS 2005-2007

HOD

NOTE LETTERS 'HOD' IN PART NUMBER
CHECK 'HG' SERIES PRIOR TO ORDERING



HOD-2090-15



HOD-2010-15



HOD-0090-15




HOD-0010-15




HOD-0000-15




HOD-2000-15



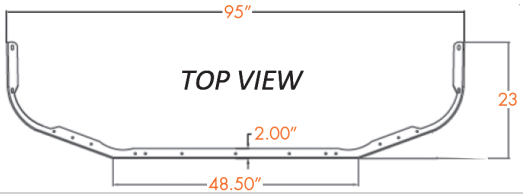


TOP PLATES:



HOD-VP-AD
ALUMINUM DIAMOND PLATE



HOD-VP-SS
POLISHED STAINLESS

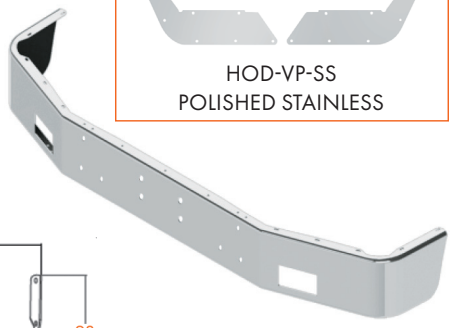

367, 567 SET BACK AXLE YEARS 2007 & NEWER

HX

MOUNTS TO FACTORY BRACKETS

*** FACTORY TOP PLATES DO NOT MOUNT TO VCP BUMPER ***

(TOP PLATES SOLD SEPARATELY)



HX-2090-15



HX-2010-15



HX-0090-15



HX-0010-15




HX-0000-15




HX-2000-15



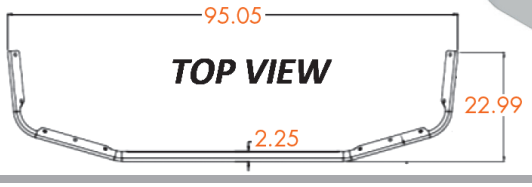


TOP PLATES:



HX-VP-AD
ALUMINUM DIAMOND PLATE




HX-VP-SS
POLISHED STAINLESS

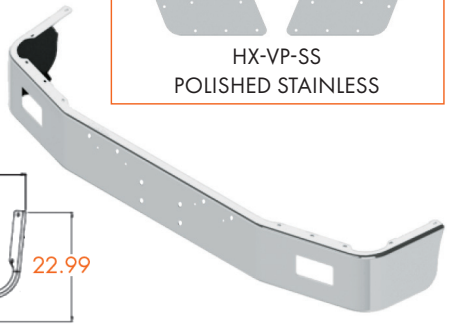

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

HP, HOF

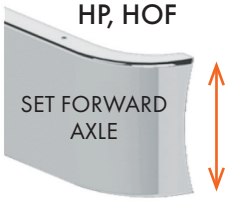

Width	End Style Code
13″	18
16″	19
18″	20
20″	35

HT



Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

** No warranty for 20″ wide bumpers*


HP


330 SET FORWARD AXLE YEARS 1998-2005

12K/ 14K RATED FRONT AXLE

CHECK 'HOF' SERIES PRIOR TO ORDERING

ONE SET LICENSE PLATE HOLES INCLUDED

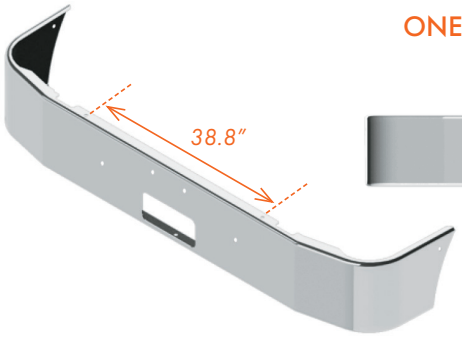

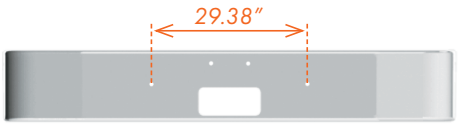

HP-0010-18



HP-0000-18


HOF

335HD, 340HD SET FORWARD AXLE YEARS 2006-2014

16K RATED FRONT AXLE


BRACKETS NOT INCLUDED. MOUNTS TO FACTORY BRACKETS.

NOTE LETTERS 'HOF' IN PART NUMBER. CHECK 'HP' SERIES PRIOR TO ORDERING.

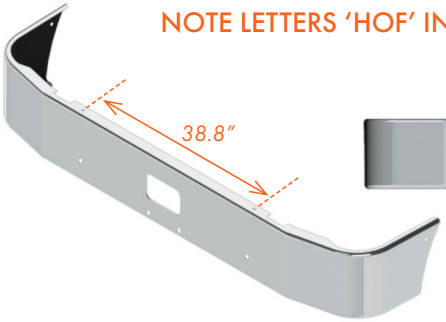



HOF-0010-18

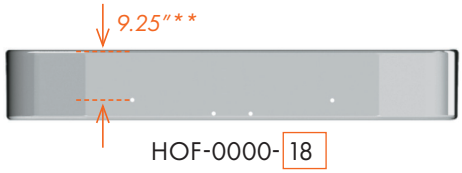

HOF-0000-18

**ALSO AVAILABLE WITH 8.38″ FLANGE TO BOLT DIMENSION - CALL


HT

330, 335, 337, 340, 348 SET BACK AXLE YEARS 2006-2014

12K/ 14K RATED FRONT AXLE

MOUNTING BRACKETS INCLUDED

CHECK 'HOC' SERIES PRIOR TO ORDERING. ONE SET LICENSE PLATE HOLES INCLUDED.

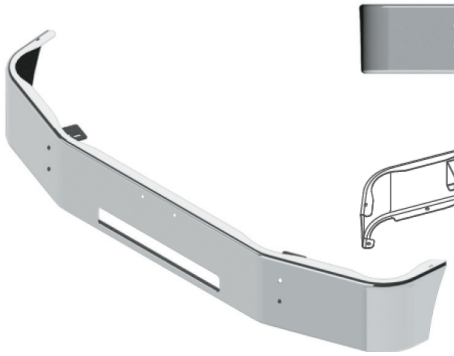



HT-0010-15



REAR VIEW



HT-0000-15



PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14"	18
16"	19
18"	20
20"	35

337 SET FORWARD AXLE YEARS 2015 & NEWER

HOC

MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'HOC' IN PART NUMBER
CHECK 'HT' SERIES PRIOR TO ORDERING



HOC-2010-18




HOC-2000-18



HOC-0010-18



HOC-0000-18

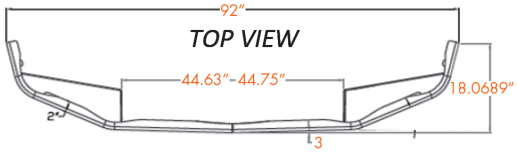





348 SET FORWARD AXLE YEARS 2010 & NEWER

HOE

NOTE LETTERS 'HOE' IN PART NUMBER



HOE-2010-18




HOE-2000-18



HOE-0010-18



HOE-0000-18

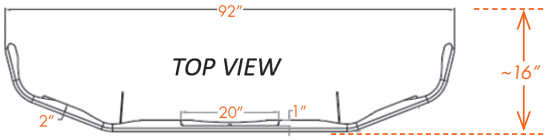





536 & 537 SET FORWARD AXLE YEARS 2021-NEWER

HOG

MOUNTS TO FACTORY BRACKETS
(REPLACES FACTORY STEEL ONLY)



HOG-0000-18





HOG-5000-18



HOG-0001-18



HOG-5001-18

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
16"	16
18"	17
20"	34
22"	36

** No warranty for 20" wide bumpers*

HR

387 SET BACK AXLE YEARS 1999-2001

MOUNTING BRACKETS INCLUDED
AVAILABLE IN 16" TO 20" WIDTHS ONLY


HR-2210-16


HR-2200-16



HR-2010-16


HR-0210-16



HR-0200-16


HR-0010-16



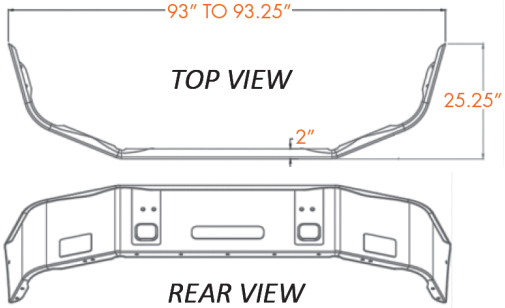


HR-0000-16


BRACKETS (2)

HS

387 SET BACK AXLE YEARS 2002-2011

MOUNTING BRACKETS INCLUDED
AVAILABLE IN 16" TO 20" WIDTHS ONLY


HS-2210-16


HS-2200-16



HS-2010-16


HS-0210-16


HS-0200-16


HS-0010-16



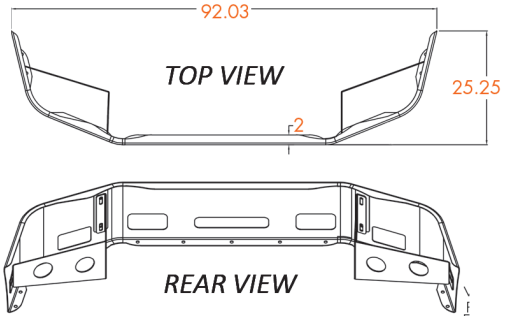


HS-0000-16

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

SEE DESCRIPTIONS BELOW FOR AVAILABLE WIDTHS

** No warranty for 20″ wide bumpers*

386 SET BACK AXLE YEARS 2006-2015

HU

REPLACES PLASTIC BUMPERS ONLY
MOUNTING BRACKETS INCLUDED
AVAILABLE IN 16″ TO 20″ WIDTHS ONLY


HU-2210- 16



HU-2010- 16



HU-2000- 16


HU-0210- 16


HU-0010- 16


HU-0000- 16

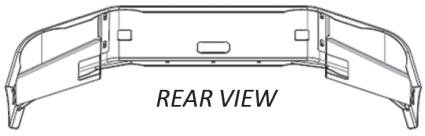

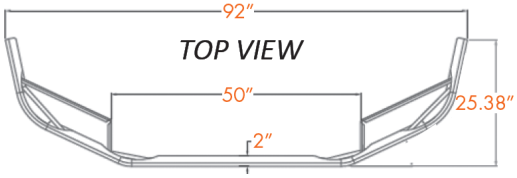



384 SET BACK AXLE YEARS 2008-2015

HW

REPLACES STAINLESS CLAD BUMPERS - MOUNTS TO CLAD BRACKETS
CLAD REPLACEMENT AVAILABLE IN 13″ WIDTH ONLY
PLASTIC REPLACEMENT REQUIRES MOUNTING BRACKETS:
HW0115BK (13″) OR HW0116BK (16″)


HW-2011- 15


HW-2010- 15



HW-2000- 15


HW-0011- 15


HW-0010- 15


HW-0000- 15



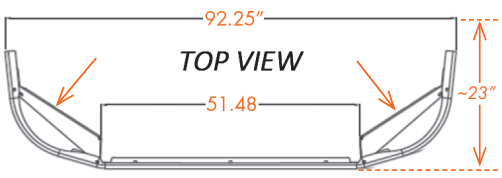




Brackets only for plastic bumper replacement.
Sold separately.

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

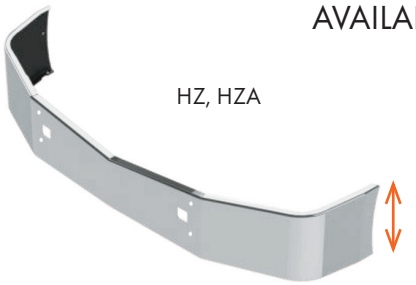

Width	End Style Code
16.5″	16Y
18″	17Y



Width	End Style Code
16″	16
18″	17
*20″	34

** No warranty for 20″ wide bumpers*

HZ

579 SET BACK AXLE YEARS 2012-2020

MOUNTING BRACKETS INCLUDED



HZ-5110- 16Y -V4



HZ-5110- 16Y



HZ-5100- 16Y



HZ-0110- 16Y -V4





HZ-0110- 16Y



HZ-5010- 16Y



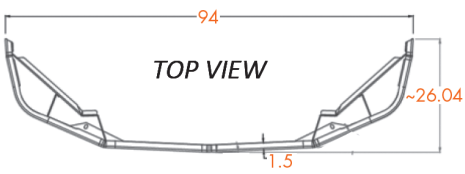

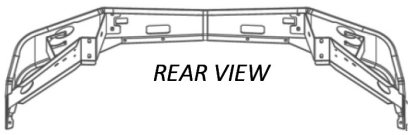

HOA

587 SET BACK AXLE YEARS 2012 & NEWER

NOTE LETTERS 'HOA' IN PART NUMBER. MOUNTING BRACKETS INCLUDED.



HOA-5110- 16



HOA-2110- 16



HOA-0110- 16



HOA-5100- 16



HOA-2100- 16



HOA-0010- 16



HOA-0100- 16





HOA-0210- 16



HOA-0000- 16



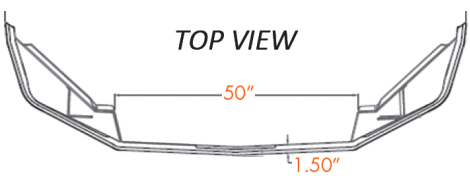

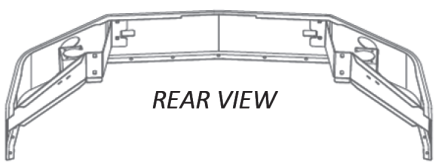

HZA

579 GEN II SET BACK AXLE

YEARS 2021 & NEWER
MOUNTING BRACKETS INCLUDED
SIMILAR OPTIONS AS 'HZ' SERIES ON PREVIOUS PAGE



HZA-0010- 16Y



HZA-0000- 16Y



HZA-5010- 16Y



HZA-5010-16Y-V4
(GEN II W/OEM FOGS)



HZA-0010-16Y-V4

STERLING BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
13″	18
16″	19
18″	20
20″	35

LT7501 SET FORWARD AXLE YEARS 2000-2009

NA

ONE SET OF UPPER LICENSE PLATE HOLES COME STANDARD
3/4″ SPACERS INCLUDED



NA-2010-18




NA-2000-18




NA-0010-18



NA-0000-18

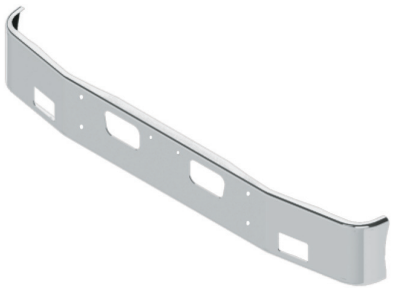

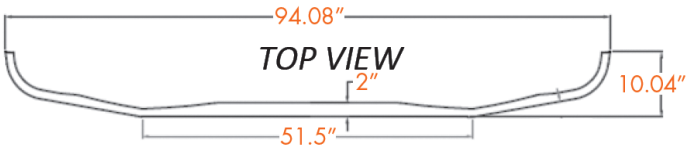



ACTERRA SET FORWARD AXLE YEARS 2000-2006

NB

MOUNTS TO OEM BRACKETS



NB-2200-18



NB-2000-18




NB-0200-18



NB-0000-18



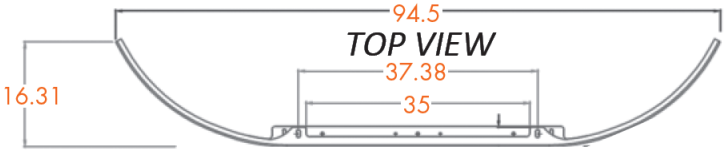





STERLING BUMPERS


AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

NC



Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

ND

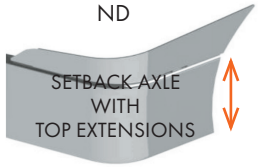

Width	End Style Code
12″	15X
16″	16X
18″	17X
*20″	34X

** No warranty for 20″ wide bumpers*

NC

STERLING LT9500, LT9513, FORD L-SERIES


YEARS 1996-2009

MOUNTING BRACKETS INCLUDED. ONE SET LICENSE PLATE HOLES STANDARD.






NC-0010-15

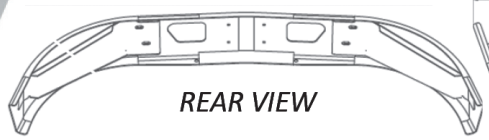



NC-0000-15

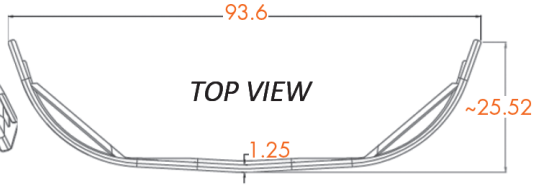






Add "P" to the end of our part number for a black powder coated bumper

ND


STERLING AT9500 YEARS 1996-2009

MOUNTING BRACKETS INCLUDED






ND-2010-15X

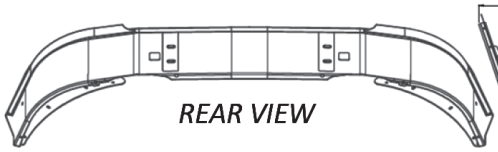



ND-0010-15X

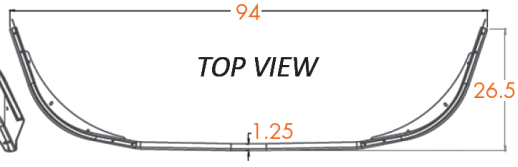





Add "P" to the end of our part number for a black powder coated bumper

VOLVO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	15
16″	16
18″	17
*20″	34


LA = 13″

** No warranty for 20″ wide bumpers*

WA, WIA SET BACK AXLE YEARS 1988-1997

MOUNTING BRACKETS INCLUDED


LA



LG-0010-15



LG-0000-15

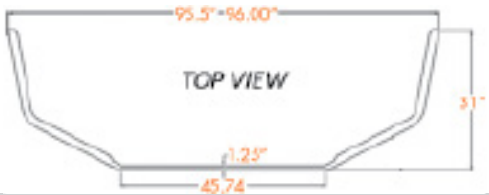



VNM SET BACK AXLE YEARS 1998-2003

MOUNTING BRACKETS INCLUDED

LD



LD-0011-15




LD-0010-15



LD-0001-15



LD-0000-15

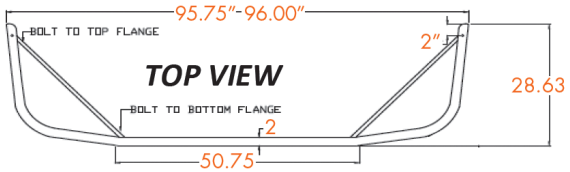





VNM SET BACK AXLE YEARS 2004-2017

MOUNTING BRACKETS INCLUDED

LG



LG-5011-15




LG-0011-15



LG-0010-15



LG-0000-15

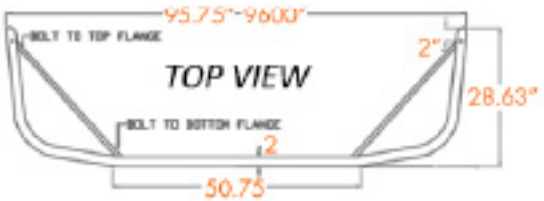






VOLVO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

LK

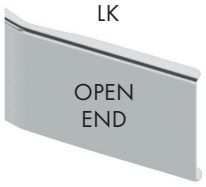

Width	End Style Code
12″	12
14″	25
16″	13
18″	14
20″	61

LC, LI



Width	End Style Code
13″	15
16″	16
18″	17
*20″	34


← 'LI' ONLY AVAILABLE IN - 17 & 34

** No warranty for 20″ wide bumpers*

LK

WG DAYCAB SET FORWARD AXLE YEARS 1991-2001

SEE 'LC' SERIES FOR NON-DAYCAB

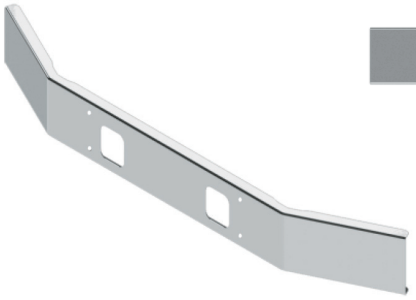



LK-0010-12



LK-0000-12




LC

WG SET BACK AXLE YEARS 1991-2001


MOUNTING BRACKETS INCLUDED

SEE 'LK' SERIES FOR DAYCAB






LC-0010-15



LC-0000-15

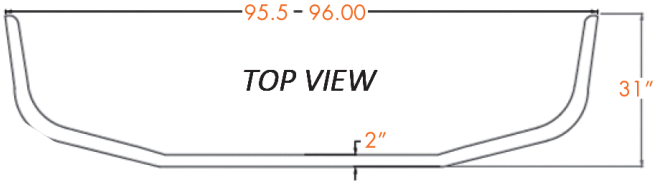

LI

VT SERIES SET BACK AXLE YEARS 2006-2008

NOTE LETTERS 'LI' IN PART NUMBER

ONLY AVAILABLE IN 18″ AND 20″ WIDTHS

ONE SET UPPER LICENSE PLATE HOLES COME STANDARD




LI-5010-17



LI-0010-17



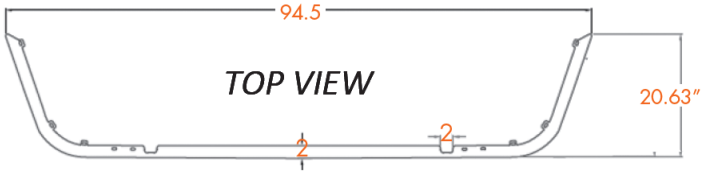

VOLVO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
16″	02
18″	03
20″	31
22″	32

VOLVO WHITE WCA YEARS 1987-2001

LF



LF-0011-02




LF-0010-02



LF-0001-02



LF-0000-02

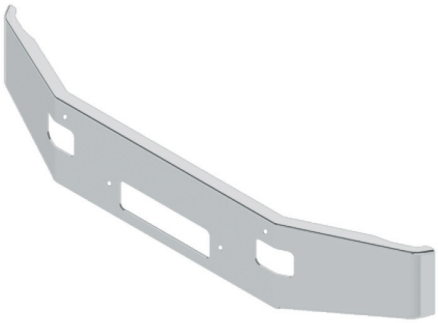





VHD SERIES SET FORWARD AXLE YEARS 2005-2021

LM

MOUNTING BRACKETS AND BLACK POWDER COATED GRILLE FILLER INCLUDED
NOT AVAILABLE WITHOUT VENT HOLES
FITS 14,600LB FRONT AXLE ONLY




LM-2011-02




LM-0011-02



LM-0011-02

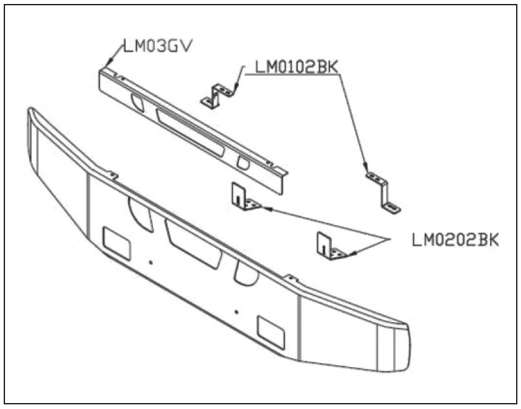

OPTIONAL STAINLESS GRILLE FILLER:

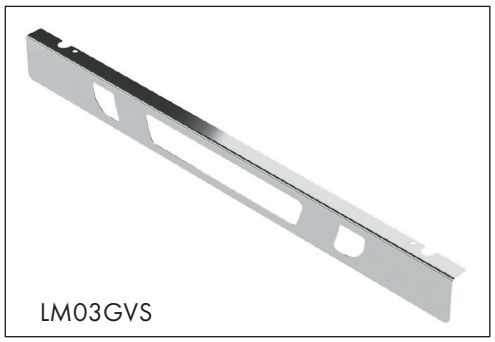

LM03GVS

VOLVO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:




Width	End Style Code	
12"-13"	15	← LB =13" / LE=12"
16"	16	
18"	17	
*20"	34	* No warranty for 20" wide bumpers

LB

VNL SET BACK AXLE YEARS 1996-2003

REPLACES PLASTIC/FIBERGLASS BUMPERS ONLY
MOUNTING BRACKETS INCLUDED
SEE 'LE' SERIES FOR REPLACING STAINLESS CLAD BUMPERS
MUST BE 16" (16) FOR FOG LIGHT OPTIONS

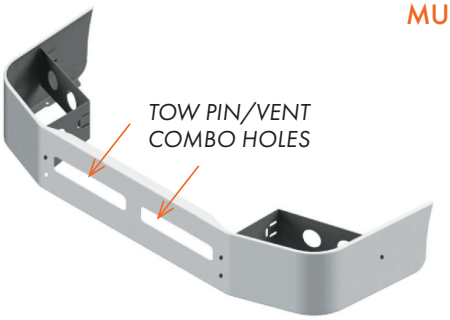



LB-0010-15



LB-0000-15





LB-4010-16



LB-2010-16



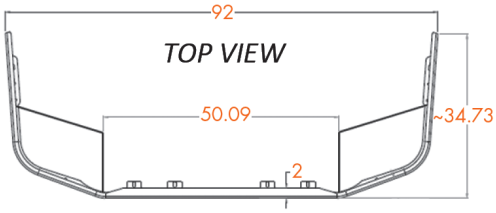


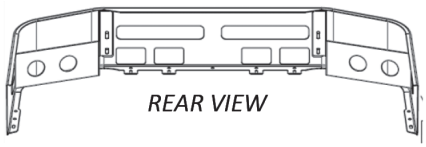

LE

VNL SET BACK AXLE YEARS 1996-2003

REPLACES STAINLESS CLAD BUMPERS ONLY
MOUNTING BRACKETS INCLUDED
SEE 'LB' SERIES FOR REPLACING PLASTIC/FIBERGLASS BUMPERS

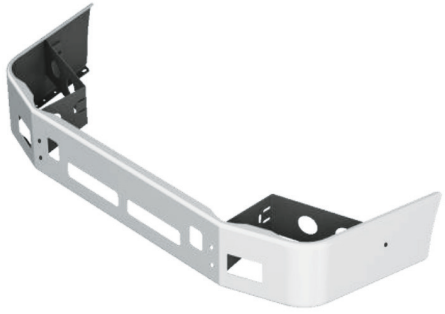



LE-2011-15



LE-2010-15





LE-0011-15



LE-0010-15



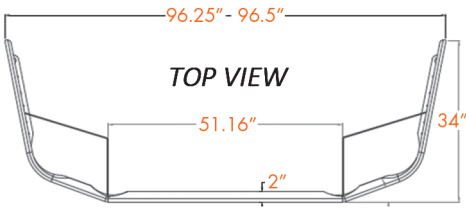

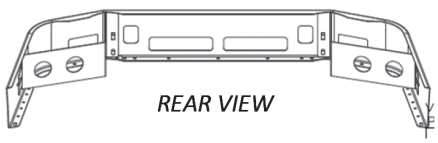

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating QUALITY TRUCK PARTS

www.valleychrome.com

VOLVO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

** No warranty for 20″ wide bumpers*

VNL SET BACK AXLE YEARS 2004-2017

MOUNTING BRACKETS INCLUDED

LH



LH-5011- 15
OEM fog lights, tow pins, vent holes



LH-2011- 15
Rectangular fog lights, tow pins, vent holes



LH-5010- 15
OEM fog lights, tow pin holes



LH-2010- 15
Rectangular fog lights, tow pin holes




LH-0011- 15
Tow pin holes, vent hole




LH-0010- 15
Tow pin holes



LH-0000- 15
Mounting bolts only

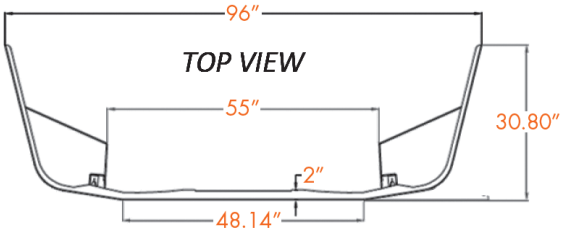

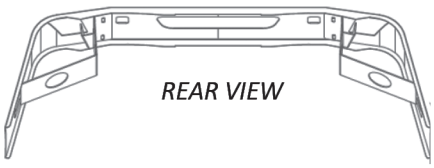





VOLVO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

* *No warranty for 20″ wide bumpers*

LJ

VNR SET BACK AXLE YEARS 2018 & NEWER

MOUNTING BRACKETS INCLUDED



LJ-5011-15



LJ-5010-15



LJ-5001-15



LJ-0011-15





LJ-0010-15



LJ-0000-15



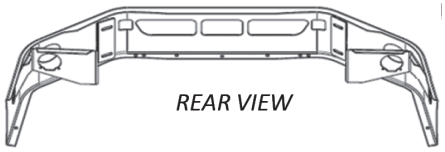

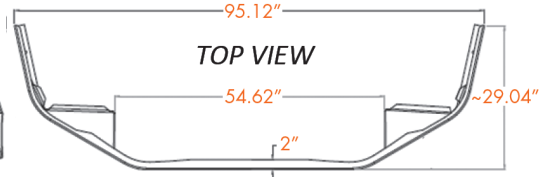

LL

VNL SET BACK AXLE YEARS 2018 & NEWER

MOUNTING BRACKETS INCLUDED



LL-5011-15



LL-5010-15



LL-5001-15



LL-0011-15





LL-0010-15



LL-0000-15



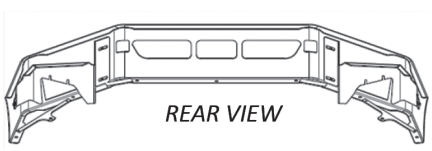

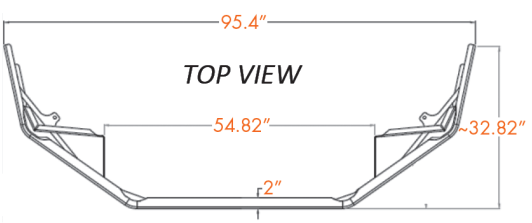


WESTERN STAR BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

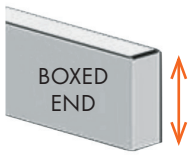

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

CABOVER YEARS 1977-1980 — IA

NOTE LETTERS 'IA' IN PART NUMBER
NOT AVAILABLE IN 12" WIDTH


IA-1110-02


IA-0110-02



IA-0010-02


IA-1100-02


IA-0100-02



IA-0000-02


IA-1010-02

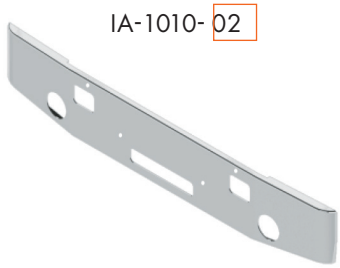

CONVENTIONAL YEARS 1967-1984 — IB

NOTE LETTERS 'IB' IN PART NUMBER




IB-1010-02


IB-2010-02


IB-1000-02



IB-0000-02


IB-0010-02

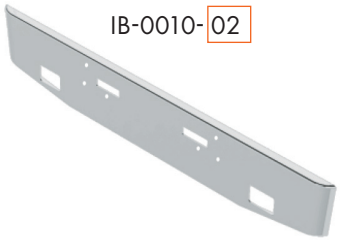

CONVENTIONAL YEARS 1985-1988 — IF

NOTE LETTERS 'IF' IN PART NUMBER




IF-2010-02


IF-2000-02


IF-0000-02



IF-0010-02

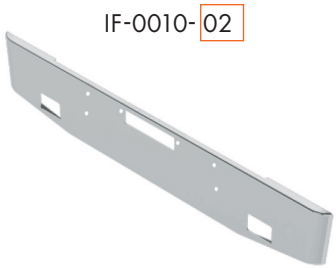


WESTERN STAR BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

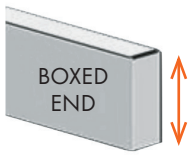

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52




Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

IC 4900SF, 4900EX, CONSTELLATION, LOWMAXX, HERITAGE

YEARS 1989-2007 AND SIMILAR CHASSIS. NOTE LETTERS 'IC' IN PART NUMBER.



IC-2010-02

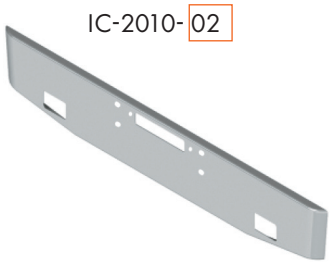



IC-2000-02





IC-0010-02



IC-0000-02

IH 4900SF YEARS 2008 & NEWER

NOT AVAILABLE IN 12″ WIDTH. NOTE LETTERS 'IH' IN PART NUMBER.



IH-2110-06





IH-0110-06



IH-0010-06




IH-2010-06




IH-0000-06

IM 4700SF YEARS 2008 & NEWER

NOT AVAILABLE IN 12″ WIDTH. NOTE LETTERS 'IM' IN PART NUMBER.

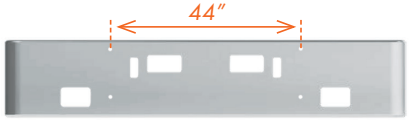

IM-2110-06

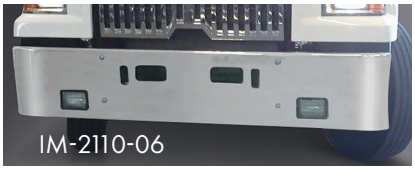



IM-2100-06



IM-0110-06



IM-2010-06



IM-0100-06

WESTERN STAR BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
14″	44
16″	45
18″	46
*20″	47
*22″	48

** No warranty for 20″ or 22″ wide bumpers*

4900SA YEARS 1989-2007
NOTE LETTERS 'II' IN PART NUMBER

II



II-2010-44




II-0010-44




II-2000-44



II-0000-44

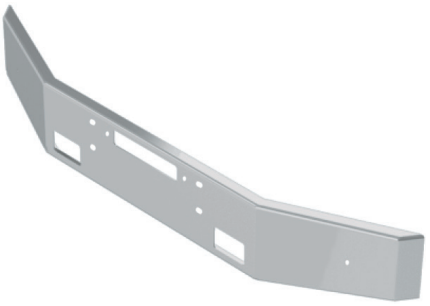

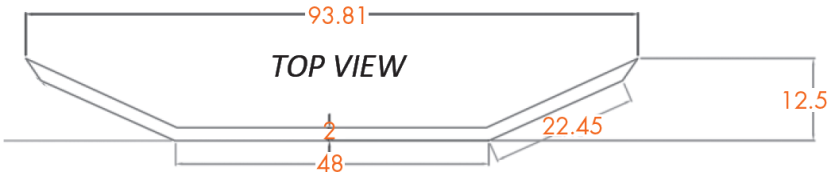




4900SA YEARS 2008 & NEWER
NOTE LETTERS 'IJ' IN PART NUMBER
ALSO CHECK 'IK' AND 'IL' SERIES PRIOR TO ORDERING

IJ



IJ-2010-44




IJ-0010-44




IJ-2000-44



IJ-0000-44

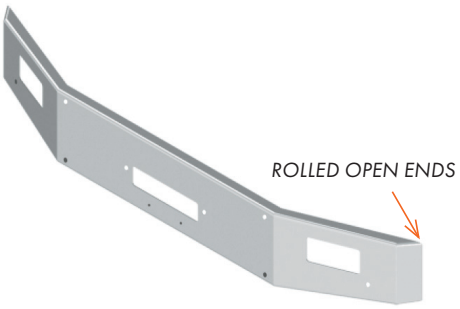

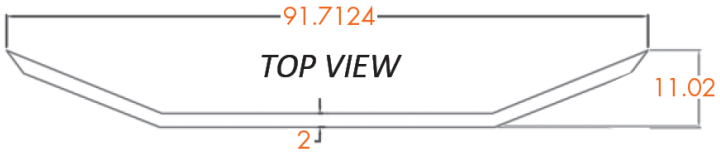




WESTERN STAR BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

IK, IL

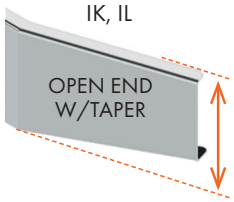

Width	End Style Code
14″	44
16″	45
18″	46
*20″	47
*22″	48

IN




Width	End Style Code
14″	15
16″	16
18″	17

** No warranty for 20″ or 22″ wide bumpers*

IK

4900SA YEARS 2008 & NEWER
NOTE LETTERS 'IK' IN PART NUMBER
ALSO CHECK 'IJ' AND 'IL' SERIES PRIOR TO ORDERING

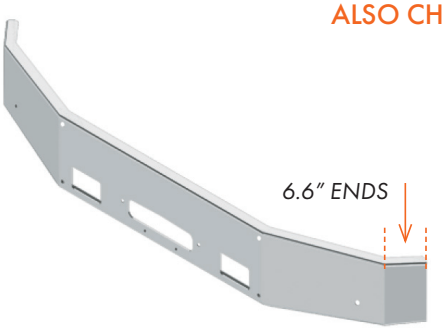




IK-2010-44



IK-2000-44




IK-0010-44



IK-0000-44

IL

4900SA YEARS 2008 & NEWER
NOTE LETTERS 'IL' IN PART NUMBER
ALSO CHECK 'IJ' AND 'IK' SERIES PRIOR TO ORDERING

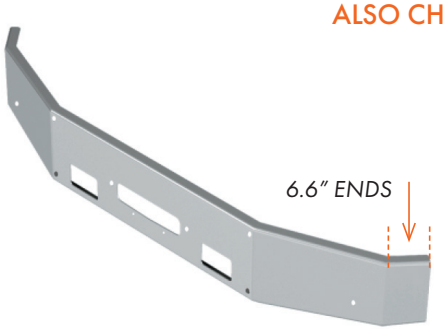




IL-2010-44



IL-2000-44




IL-0010-44



IL-0000-44

IN

4700SB YEARS 2013 & NEWER
NOTE LETTERS 'IN' IN PART NUMBER

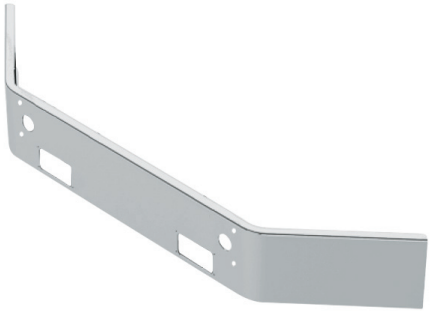



IN-2010-15



IN-0000-15




IN-0010-15



WESTERN STAR BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
16″	708
18″	709
*20″	711



* No warranty for 20″ wide bumpers

5700XE YEARS 2015 & NEWER

IO

ONLY FITS STANDARD WIDTH FRAMES WITH ~1400 SQ. INCH RADIATORS
MOUNTING BRACKETS AND TOP FLANGE STAINLESS EXTENSIONS INCLUDED
NOTE LETTERS 'IO' IN PART NUMBER



IO-5010-708-V5
Fogs, tow pins, radar accommodation



IO-5000-708-V5
Fogs, radar accommodation



IO-0010-708-V5
Tow pins, radar accommodation



IO-0000-708-V5
Radar accommodation only





IO-0010-708
Tow pin holes



IO-0000-708
Mounting holes only











AVAILABLE STYLES FOR PRODUCTS IN THIS SECTION:

Width	End Style Code
16″	45
18″	46
*20″	47
*22″	48

IR, IS

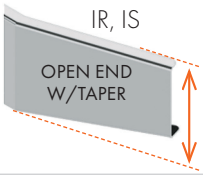


IQ, IT

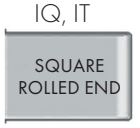

Width	End Style Code
16″	05
18″	06
20″	41
22″	42

* No warranty for 20″ or 22″ wide bumpers

IQ, IT

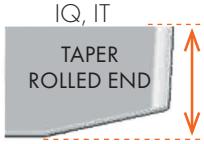


Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

47X SET FORWARD AXLE YEARS 2022-NEWER

IQ




IQ-0010-02

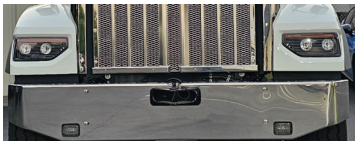




IQ-5210-02



IQ-0030-02



IQ-5330-02

49X SETBACK AXLE SD YEARS 2021-NEWER

IR

Only (-45) End Style Mounts to Factory Brackets



IR-0011-45





IR-5112-45



IR-3000-45



IR-3520-45

47X SETBACK AXLE YEARS 2022-NEWER

IS

Only (-45) End Style Mounts to Factory Brackets



IS-5110-45





IS-5030-45



IS-3520-45



IS-0520-45

WESTERN STAR BUMPERS

IT

Width	End Style Code
16″	92
18″	03
20″	31
22″	32

IQ, IT

TAPER HAND FORM

AVAILABLE STYLES FOR THIS SERIES ALSO ON PREVIOUS PAGE

49X SET FORWARD AXLE YEARS 2021-NEWER


** No warranty for 20″ or 22″ wide bumpers*

IT

AMERICAN EAGLE BOXED END

WITH 8″ EARS

Width	End Style Code
16″	55
18″	56
20″	57
22″	58



IT-0000-92





IT-5330-92




IT-0220-92



IT-5221-92

AVAILABLE STYLES FOR PRODUCTS IN THIS SECTION:

Width	End Style Code
16″	708
18″	709
*20″	711



** No warranty for 20″ wide bumpers*

IP

5700XE YEARS 2015 & NEWER

ONLY FITS WIDER FRAMES WITH HIGH-CAPACITY RADIATOR

MOUNTING BRACKETS AND TOP FLANGE STAINLESS EXTENSIONS INCLUDED

NOTE LETTERS 'IP' IN PART NUMBER



IP-0000- 708

Mounting holes only



IP-0010- 708

With Tow Pin Holes

Valley Chrome Plating

QUALITY TRUCK PARTS

WHITE BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

KA

TAPER ROLLED END

Width	End Style Code
16″	02
18″	03
20″	31
22″	32

KA

SQUARE ROLLED END

Width	End Style Code
16″	05
18″	06
20″	41
22″	42

KB

WRAP AROUND


Width	Bumper Length	End Style Code
12″	94″	22
12″	88″	22-88″

KA

ROAD BOSS 2, ROAD COMMANDER 2

YEARS 1972-1983

NOT AVAILABLE IN 12″ WIDTH

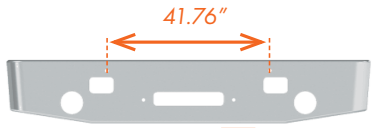


KA-1110-02



KA-1100-02



KA-1010-02

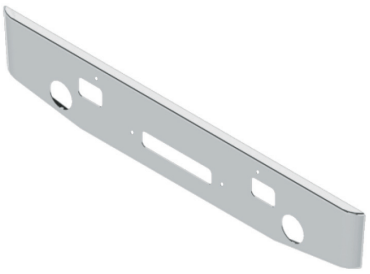





KA-0110-02



KA-1000-02



KA-0100-02



KA-0010-02



KA-0000-02

KB

XPEDITOR YEARS 2003-2010

NOTE OUTSIDE SHAPE & BOLT PATTERN PRIOR TO ORDERING




KB-1010-22



KB-0010-22

Add "P" to end of any bumper part number for black powder coated steel

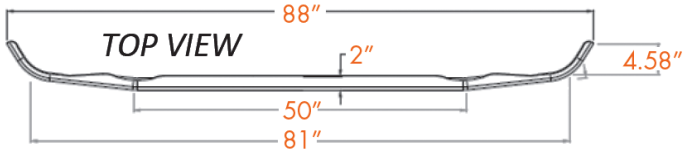



"UNIVERSAL" MOUNT BLANK BUMPERS


EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:



Width	End Style Code
16″	02
18″	03
20″	31
22″	32



Width	End Style Code
16″	05
18″	06
20″	41
22″	42

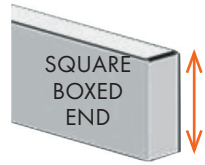

Width	End Style Code
16″	10
18″	11
20″	51
22″	52



Width	End Style Code
16″	112
18″	113
20″	114
22″	115



Width	End Style Code
16″	65
18″	66
20″	67
22″	68



Width	End Style Code
16″	55
18″	56
20″	57
22″	58


SEE MORE BUMPER STYLES ON PAGE 7

MULTIPLE MAKE & MODEL FIT

GO

NOTE LETTERS 'GO' IN PART NUMBER

EXAMPLE PARTS:

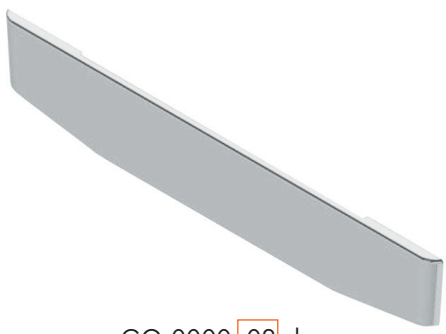

GO-0000-[02] chrome

GO-0000-[02S] stainless




GO-0000-[06] chrome

GO-0000-[06S] stainless



GO-0000-[11] chrome

GO-0000-[11S] stainless

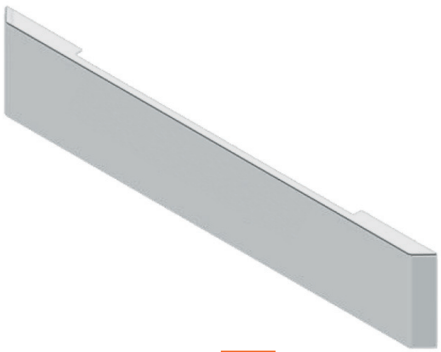

GO-0000-[113] chrome

GO-0000-[113S] stainless



GO-0000-[66] chrome

GO-0000-[66S] stainless




GO-0000-[56] chrome

GO-0000-[56S] stainless

NOTE: DRILLING INTO A CHROME BUMPER IMMEDIATELY VOIDS ALL WARRANTIES.
WE RECOMMEND STAINLESS BUMPERS IF PLANNING TO DRILL INTO A BUMPER.

BLIND MOUNT BUMPERS

BLIND MOUNT BRACKETS:

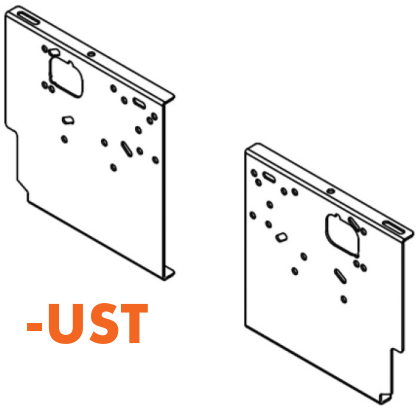


-UST

FITS THESE VALLEY CHROME MODEL CODES:
CB, CQ, FD, FE, HA, HC, GO



UST TOP FLANGE

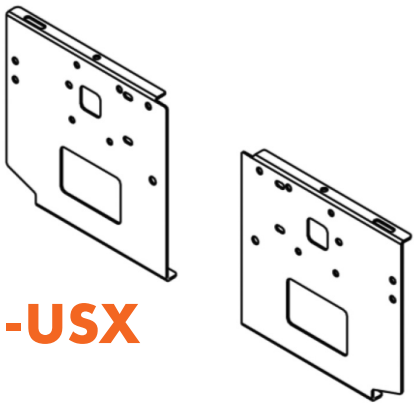

-USX

FITS THESE VALLEY CHROME MODEL CODES:
CU, CV, HC, HV, IC, GO



USX TOP FLANGE

HOW TO CREATE A BLIND MOUNT BUMPER:

1. IDENTIFY YOUR MAKE & MODEL CODE FROM OUR CATALOG (EXAMPLE: PETE 389= 'HV')
2. CHOOSE YOUR CUTOUTS:
   - XXXX = no cutouts/no mounting bolts will show
   - 2XXX = rectangular fog light cutouts only
   - 2X1X = rectangular fog light and tow pin cutouts only
   - XX1X = tow pin cutouts only
   - XX10 = tag hanger bolt holes only ('HC' Peterbilt 379 only)
3. PICK YOUR END STYLE FROM PAGE 7
4. ADD ANY LIGHT OPTION CODES, IF DESIRED (SEE PAGES 89-90)
5. ADD LICENSE PLATE OPTION CODES, IF DESIRED (SEE PAGE 89)
6. APPLY ' UST' OR ' USX' SUFFIX ACCORDING TO BRACKETS SHOWN IN SECTION ABOVE

EXAMPLE: **HV-XXXX-682T-UST**

1 2 3 4

FROM THE ORIGINATORS OF THE BOLTLESS LOOK!

Valley Chrome Plating
QUALITY TRUCK PARTS



HV- XXXX-682T-UST
on a Pete 389

BUMPER MARKER LIGHT OPTIONS

SOME POPULAR OPTIONS SHOWN

MIX & MATCH YOUR OWN COMBINATIONS

SEE PAGE 106 FOR LED LIGHT OFFERINGS

GRANITE EXAMPLES:

KITS INCLUDE LIGHTS, BEZELS, WIRE HARNESS



-9GCA



-8GCA



-6GCA



-4GCA



-9GA



-8GA



-6GA



GRANITE MINI EXAMPLES:

KITS INCLUDE LIGHTS, BEZELS, WIRE HARNESS



-25GMCA



-20GMCA



-8GMCA



-6GMCA



-25GMA



-20GMA



-8GMA



-6GMA

¾" BULLSEYE EXAMPLES:

KITS INCLUDE LIGHTS, BEZELS, WIRE HARNESS



-74BYCA



-46BYCA



-20BYCA



-6BYCA



-74BYA



-25BYA



-15BYA



-2BYA

'FRENCHED' INSET LICENSE PLATE BOX:



-FL01



STANDARD LICENSE PLATE HOLES:



-L01



-L02

TOP TWO LICENSE PLATE HOLES:



-L2

PLACEMENT DEPENDS ON BUMPER DESIGN

BUMPER MARKER LIGHT OPTIONS

SOME POPULAR OPTIONS SHOWN

MIX & MATCH YOUR OWN COMBINATIONS

SEE PAGES 106 FOR LED LIGHT OFFERINGS

OVAL LIGHT HOLE EXAMPLES:

LIGHT HOLE CUTOUTS ONLY



-009

(-011 MAX FOR BOXED END)



-008



-004



-002

SLOTTED RECESSED OVAL EXAMPLES:

LIGHT HOLE CUTOUTS ONLY



-BB9

-BB_ FOR SLOT HOLES ONLY, ADD YOUR OWN LIGHTS



-BB8



-BB6



-BB2

2" ROUND EXAMPLES:

LIGHT HOLE CUTOUTS ONLY



-R27



-R15



-R4



-R2

¾" LIGHT HOLE EXAMPLES:

LIGHT HOLE CUTOUTS ONLY



-25BYN



-2BYN

SLOTTED RECESSED OVAL EXAMPLES:

INCLUDES LIGHTS, 3M TAPE, WIRE HARNESS



-9SCA

CLEAR LENS/AMBER LEDs



-9SA

AMBER LENS/AMBER LEDs

4" ROUND EXAMPLES:

LIGHT HOLE CUTOUTS ONLY



-R13C



-R2C

WATERMELON EXAMPLES:

LIGHT HOLE CUTOUTS ONLY



-W4



-B1W

WATERMELON HOLES ON ANGLED ENDS

45° MITRED END ROADRUNNER BUMPER

BOXED END EXAMPLES:

LIGHT HOLE CUTOUTS ONLY



-B1L

5/8" HOLE



-B1

2" HOLE



-B1GM

GRANITE MINI



-B1BY

3/4" HOLE



-B5

2" HOLES

MAX ON -51



-B4GM

GRANITE MINI

COMBO PATTERN EXAMPLES:

LIGHT HOLE CUTOUTS ONLY



-A06-R8



-R2C-004

COMBO LIGHT NUMBERING PATTERN GOES FROM OUTSIDE OF BUMPER TO CENTER

BUMPER LASER-CUT TEXT OPTIONS



TEXT 1



TEXT 2



TEXT 3



TEXT 4



TEXT 5



TEXT 6



TEXT 7



TEXT 8



TEXT 9



TEXT 10



TEXT 11



TEXT 12



TEXT 13




TEXT 14

LIGHT BOXES TO MOUNT BEHIND YOUR GRAPHIC



LX-24 MOUNTED BEHIND DUPONT LOGO
- ACTUAL NASCAR HAULER -

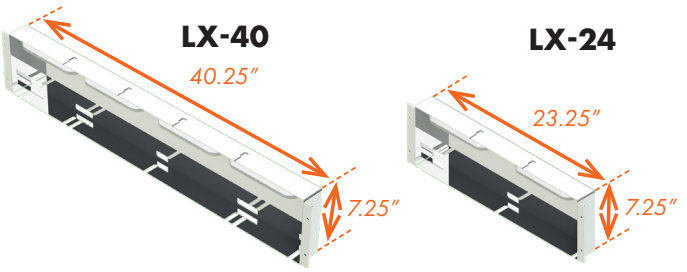

BUMPER MOUNTING BOLT KITS

'UNIVERSAL' HEX BOLT SERIES

PACKAGED FOR RETAIL
POLISHED STAINLESS STEEL BOLTS
SIZE: #12 - 1.75 x 50 PARTIAL THREAD
ZINC PLATED WASHERS AND LOCKNUTS
WHITE NYLON WASHERS PROTECT CHROME SURFACE AFTER INSTALLATION



VU190082 SHOWN PACKAGED



VU190080
4 PCS KIT



VU190081
6 PCS KIT



VU190082
8 PCS KIT





VU190085
NYLON WASHERS 25-PACK

PACCAR SERIES

PACKAGED FOR RETAIL
FITS PETERBILT 389 & KENWORTH W990 & SIMILAR CHASSIS
ZINC PLATED WASHERS AND LOCKNUTS
WHITE NYLON WASHERS PROTECT CHROME



VP190083



NOTES

UNIVERSAL ACCESSORIES SECTION

LED LIGHTING AND STAINLESS PARTS TO FIT MOST TRUCK MAKES



Valley Chrome Plating
QUALITY TRUCK PARTS

UNIVERSAL

FLAP WEIGHTS

WEIGHTS INCLUDE MOUNTING HARDWARE
EACH SOLD AS A PAIR



VU190000
UNIVERSAL FLAP WEIGHT
24" - BOTTOM - ANY MAKE
- 11GA. STAINLESS - GIRLS



VU190001
UNIVERSAL FLAP WEIGHT
24" - BOTTOM - ANY MAKE
- 11GA. STAINLESS



VU190002
UNIVERSAL FLAP WEIGHT
24" TOP - ANY MAKE
- 11GA. STAINLESS



VU190003
UNIVERSAL FLAP WEIGHT
- 24"- U SHAPED BOTTOM
- 11GA. STAINLESS




VU190102
UNIVERSAL FLAP WEIGHT
- 24" - BOTTOM - ANY MAKE
- 11GA. STAINLESS - STEER HEAD



VU190109
UNIVERSAL FLAP WEIGHT
- 24"- U SHAPED BOTTOM
- 11GA. STAINLESS - STEER HEAD

TANK STRAPS

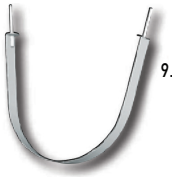

VU190005
9.75" AIR TANK BANDS
(PB, KW, FL) - PAIR




VU190061
AIR TANK WRAP - FITS 9.75"
STAINLESS AIR TANK - 1 PC
COVER ONLY




VU190006
8.25" AIR TANK BANDS
(PB, KW, FL) - PAIR

TAG HANGERS


EACH INCLUDE MOUNTING HARDWARE,
FOAM PROTECTORS & TAG MOUNTING PLASTIC INSERTS

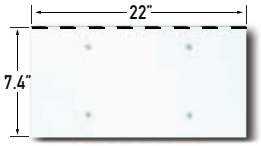


VP120000
HINGED 1 TAG HANGER
18 GA. STAINLESS
PETE 389

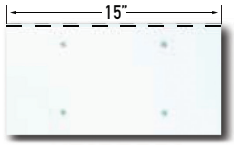

VP120001
HINGED 1 TAG HANGER
18 GA. STAINLESS
PETE 379 & SIMILAR

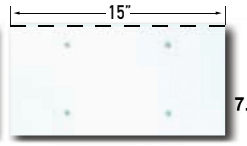

VP120017
HINGED 1 TAG HANGER
24 GA. STAINLESS
PETE 379 & SIMILAR



VU190007
HINGED 2 TAG HANGER (PB, KW, FL)



VU190035
TAG HANGER - SINGLE
TAG - 90 DEGREE
MOUNTS UNDER



VU190036
TAG HANGER - SINGLE
2 TAG - 90 DEGREE
MOUNTS UNDER



VU190037
TAG HANGER - SINGLE
3 TAG - 90 DEGREE
MOUNTS UNDER



VU190008
HINGED 3 TAG HANGER (PB, KW, FL)

TAG HANGERS WITH WATERMELONS INSTALLED



VU120001-2WA
SINGLE TAG HANGER
W/2 AMBER WATERMELONS



VU190007-2WA
DUAL TAG HANGER
W/2 AMBER WATERMELONS



VU190008-2WA
TRIPLE TAG HANGER
W/2 AMBER WATERMELONS

UNIVERSAL

PERMIT PANELS

HINGED PANELS
INCLUDES MOUNTING HARDWARE



VU190090
HINGED PERMIT PANEL
4 X 4



VU190091
HINGED PERMIT PANEL
4 X 8



VU190092
HINGED PERMIT PANEL
4 X 10



VU190093
HINGED PERMIT PANEL
4 X 12



VU190094
HINGED PERMIT PANEL
5 X 4



VU190095
HINGED PERMIT PANEL
5 X 8



VU190096
HINGED PERMIT PANEL
5 X 10



VU190097
HINGED PERMIT PANEL
5 X 12

FLAT PANELS
INCLUDE STRONG 3M DOUBLE SIDED TAPE



VU190098
FLAT PERMIT PANEL
4 X 4 - TAPE MOUNT



VU190099
FLAT PERMIT PANEL
4 X 8 - TAPE MOUNT



VU190103
FLAT PERMIT PANEL
4 X 10 - TAPE MOUNT



VU190104
FLAT PERMIT PANEL
4 X 12 - TAPE MOUNT



VU190105
FLAT PERMIT PANEL
5 X 4 - TAPE MOUNT



VU190106
FLAT PERMIT PANEL
5 X 8 - TAPE MOUNT



VU190107
FLAT PERMIT PANEL
5 X 10 - TAPE MOUNT



VU190108
FLAT PERMIT PANEL
5 X 12 - TAPE MOUNT

UNIVERSAL

RIDGED PERMIT PANELS

90-DEGREE BEND AT TOP, NO-HINGE
INCLUDES MOUNTING HARDWARE
CUSTOMER DRILLS TO FIT



VU190110
RIDGED PERMIT PANEL
4 X 4



VU190111
RIDGED PERMIT PANEL
4 X 8



VU190112
RIDGED PERMIT PANEL
4 X 10



VU190113
RIDGED PERMIT PANEL
4 X 12



VU190114
RIDGED PERMIT PANEL
5 X 4



VU190115
RIDGED PERMIT PANEL
5 X 8



VU190116
RIDGED PERMIT PANEL
5 X 10



VU190117
RIDGED PERMIT PANEL
5 X 12

BEACON LIGHT BRACKETS

INCLUDES MOUNTING HARDWARE



VU190100
BECON LIGHT BRACKET
8" X 8" - PR

UNIVERSAL
AIRLINE BOXES

MOUNTING HARDWARE INCLUDED
AIR LINE BOXES ARE 32" LONG - CLOSED BACK
NOT AVAILABLE IN 430 STAINLESS




VU190015
AIR LINE BOX - STANDARD



VU190016R
AIR LINE BOX - 2-PLUG




VU190015R
AIR LINE BOX - STANDARD - ROUNDED

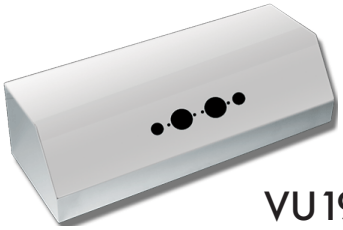

VU190016R
AIR LINE BOX - 2-PLUG - ROUNDED



VU190015
AIR LINE BOX - STANDARD

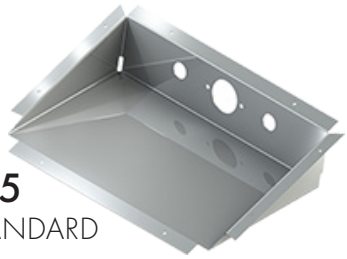



VU190015
AIR LINE BOX - STANDARD

TO BUILD A LIGHT BOX

1. PICK BLANK PART NUMBER
2. PICK LIGHT TYPE (REFER TO PAGE 106-107)
3. PICK THE NUMBER OF LIGHTS

EXAMPLE: VU190016R-2CA

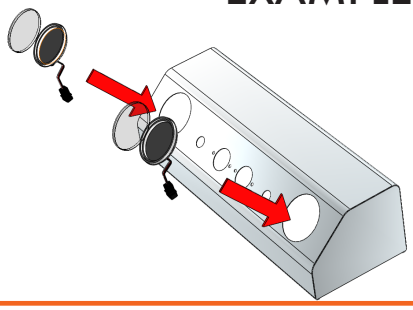

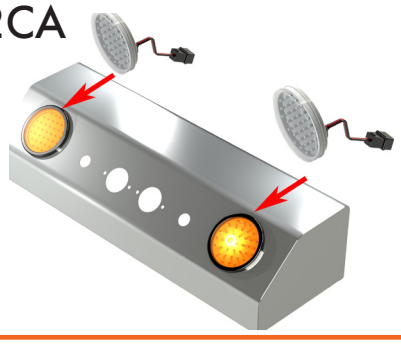

UNIVERSAL


DECK PLATES



VU190017
DECK PLATE - 36" X 34" - SMOOTH STAINLESS - OVER FRAME RAILS



VU190018
DECK PLATE - 48" X 34" - SMOOTH STAINLESS - OVER FRAME RAILS

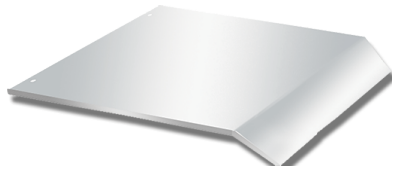

VU190017
REAR DECK PLATE - 29" X 34" - SMOOTH ROLLED EDGES - OVER FRAME RAILS



VU192010
FRONT DECK PLATE - 83" X 27"
11G, SS - BETWEEN FRAME RAILS



VU192011
MID DECK PLATE - 44" X 27"
11G, SS - BETWEEN FRAME RAILS




VU192012
REAR DECK PLATE - 48" X 27"
11G, SS - BETWEEN FRAME RAILS



VU192022
MID DECK PLATE - 77" X 27"
11G, SS - BETWEEN FRAME RAILS

FRONT DECK PLATE TOOL BOX

VU192021
UNIVERSAL FRONT DECK PLATE TOOL BOX
W/LOCK - 24" X 24"

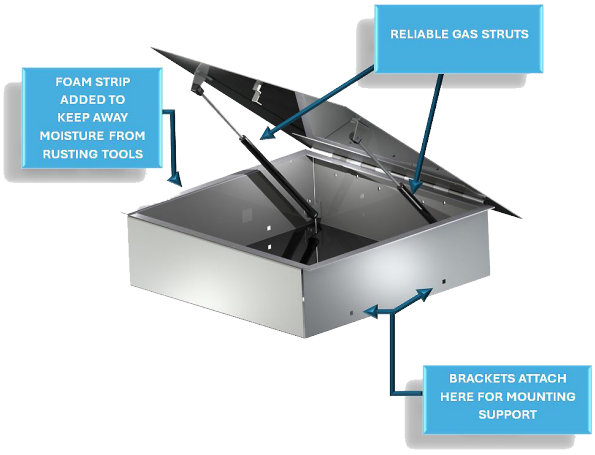






UNIVERSAL

REAR FRAME TOOL BOX



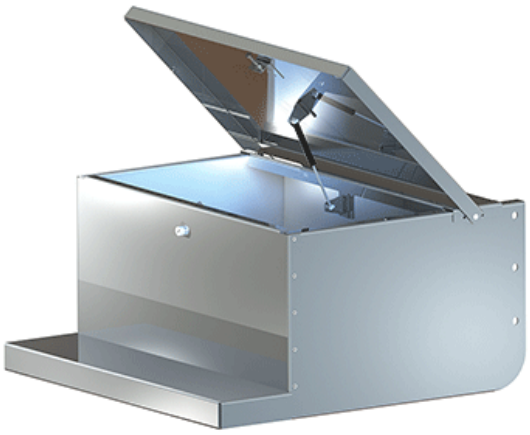

VP150119

- Highly polished 304 non-directional stainless steel
- All makes fit, anywhere frame space and ground clearance is available
- Lock and keys included
- Direct raised lid with gas shock
- Brackets and hardware not included, fit to your custom location

Valley Chrome Plating
QUALITY TRUCK PARTS

UNIVERSAL

FRAME STEPS

INCLUDES SLIP RESISTANT GRIP TAPE



VU191103
FRAME STEPS - 12″
STAINLESS STEPS & SIDES

VU191104
FRAME STEPS - 18″
STAINLESS STEPS & SIDES

VU191105
FRAME STEPS - 24″
STAINLESS STEPS & SIDES





VU191106
FRAME STEPS - 12″
STAINLESS STEPS & SIDES

VU191107
FRAME STEPS - 18″
STAINLESS STEPS & SIDES

VU191108
FRAME STEPS - 24″
STAINLESS STEPS & SIDES




UNIVERSAL


REAR WINDOW VISORS

NOT AVAILABLE ON DAYCAB

INCLUDES STRONG 3M DOUBLE-SIDED TAPE AND MOUNTING HARDWARE

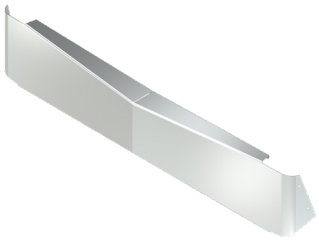


VU193020-BT
REAR VISOR GANGSTER-BOWTIE

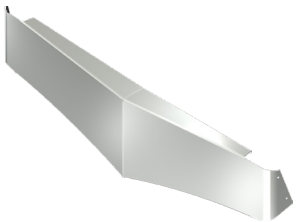

VU195020
REAR VISOR WICKED - ONE-PIECE



VU193020
REAR VISOR GANGSTER

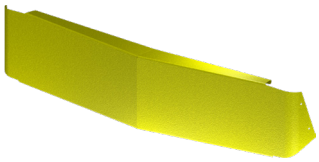

EXAMPLE VU193020P
REAR VISOR GANGSTER



JUST ADD "P" TO THE END FOR PAINTABLE
RAW 18 GAUGE STEEL
COLORS SHOWN EXAMPLES ONLY



EXAMPLE VU193020P-BT
REAR VISOR - GANGSTER BOWTIE


REAR FRAME FILLERS

BOXES COME WITH VU190201 BACK COVER


18-GAUGE STAINLESS STEEL MOUNTING HARDWARE INCLUDED



VU190203
REAR FRAME FILLER
2, 4" RND LEDS & 3, GRANITE RED LEDS

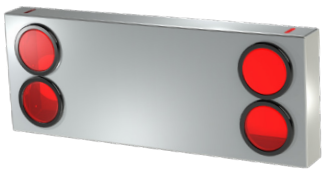

VU190202
REAR FRAME FILLER
4, 4" RND LEDS

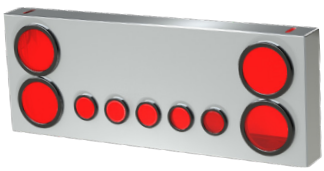

VU190203
REAR FRAME FILLER
4, 4" RND LEDS & 5, 2" RND



VU190204
REAR FRAME FILLER
12, 2" RND LEDS

BLANK BOXES AVAILABLE (VU19200)



VU190201
REAR FRAME FILLER
BACK COVER



VU190207
REAR FRAME FILLER
4, 4" RND LEDS & 5, 2" RND LEDS, W/STEERHEAD

UNIVERSAL

REAR FRAME FILLERS

NOT AVAILABLE ON DAYCAB

INCLUDES STRONG 3M DOUBLE-SIDED TAPE AND MOUNTING HARDWARE




VU190208
REAR FRAME FILLER - 2 - 4" RD / 3 - GRANITE- LEDS - W / STEERHEAD



VU190209
REAR FRAME FILLER - 4 - 4" RD - LEDS - CLEAR LENS / EACH CORNER



VU190210
REAR FRAME FILLER - 4 - 4" RD / 5 - 2" RD - LEDS - CLEAR LENS



VU190211
REAR FRAME FILLER - 12 - 2" RD - LEDS - CLEAR LENS / OVAL




VU190212
REAR FRAME FILLER - 2 - 4" RD / 8 - 2" RD - LEDS - CLEAR LENS



VU190213
REAR FRAME FILLER - 2 - 4" RD / 3 - GRANITE - LEDS - CLEAR LENS



VU190214
REAR FRAME FILLER - 4 -4" RD / 5 - 2" RD - LEDS - CLEAR LENS - W / STEERHEAD

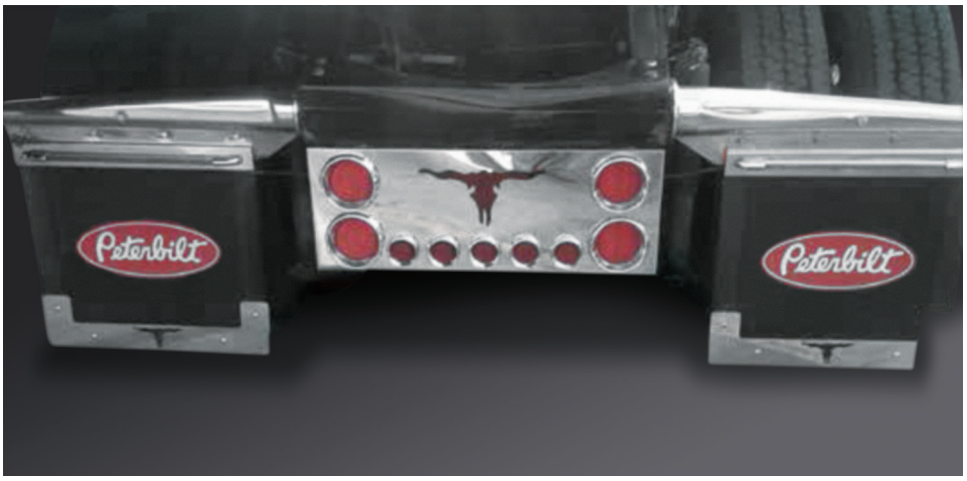

VU190214-4CR-5RR
(chrome light bezels not included)

Mud flap weights VU190109 also shown

UNIVERSAL


LOWER REAR FRAME FILLERS




VU199002
LOWER REAR FRAME FILLER
- BLANK



VU199005
LOWER REAR FRAME FILLER -
379 - BLANK

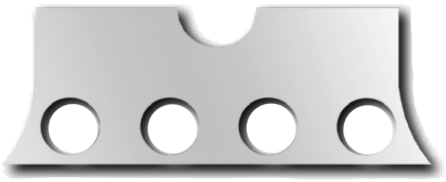

VU199002-4CN
LOWER REAR FRAME FILLER -
4 ROUND CUTOUTS

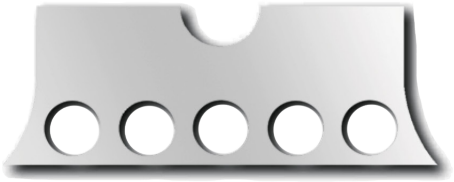

VU199002-5CN
LOWER REAR FRAME FILLER -
5 ROUND CUTOUTS



VU199002-5CR shown, includes lights and harness
CHROME LIGHT BEZELS NOT INCLUDED
WILL NOT WORK ON ALUMINUM FRAMES

UNIVERSAL

RETAIL DISPLAY - LEDs

For authorized distributors



2 PACKAGES AVAILABLE:
PART# VULIGHTKIT3 FOR 12 OF EACH LIGHT AND DISPLAY BOARD
PART# VULIGHTKIT4 FOR 24 OF EACH LIGHT AND DISPLAY BOARD

Actual light display board may vary from illustration above.

Valley Chrome Plating
QUALITY TRUCK PARTS

UNIVERSAL

LED LIGHT OPTION CHART

Use the following light chart to build your rear light bars, cab and sleeper panels, hood extension panels, and so on. Use the first letter in the name of the light and the form you wish the light to be.

Solid Accessory Part Number	Dash	Amount of Lights	Lights name - 1st letter	Lights Color		Complete Part Number with Lights
Vxxxxxxx	-	X	X	X	=	Vxxxxxxx-XXX
VP142007	-	7	G	CA	=	VP142007-7GCA

EXAMPLE:



VP142007-7GCA

Peterbilt 379 cab panel VP142007, with seven Granite clear lens amber LED light assemblies & wire harness

LIGHT OFFERINGS WITH LETTER AND LIGHT COLOR CODES:



OVAL 6"

Amber lens, Amber LEDs = O A
Clear lens, Amber LEDs = O CA
Red lens, Red LEDs = O R
Clear lens, Red LEDs = O CR



GRANITE

Amber lens, Amber LEDs = G A
Clear lens, Amber LEDs = G CA
Red lens, Red LEDs = G R
Clear lens, Red LEDs = G CR



GRANITE MINI

Amber lens, Amber LEDs = GM A
Clear lens, Amber LEDs = GM CA
Red lens, Red LEDs = GM R
Clear lens, Red LEDs = GM CR



ROUND 2"

Amber lens, Amber LEDs = R A
Clear lens, Amber LEDs = R CA
Red lens, Red LEDs = R R
Clear lens, Red LEDs = R CR



CORAL 4" ROUND

Amber lens, Amber LEDs = C A
Clear lens, Amber LEDs = C CA
Red lens, Red LEDs = C R
Clear lens, Red LEDs = C CR



BULLSEYE ¾" ROUND

Amber lens, Amber LEDs = BY A
Clear lens, Amber LEDs = BY CA
Red lens, Red LEDs = BY R
Clear lens, Red LEDs = BY CR

UNIVERSAL

BLANK LIGHT CUTOUT OPTIONS

Add your own lights to our accessories, but first get the correct cutouts:

Solid Accessory Part Number	Dash	Amount of Lights	Lights name - 1st letter	Lights Color		Complete Part Number with Lights
Vxxxxxxx	-	X	X	X	=	Vxxxxxxx-XXX
VP142007	-	10	BY	N	=	VP142007-10BYN


EXAMPLE:




VP142007-10BYN

Peterbilt 379 cab panel VP142007, with ten open ¾" light holes

CUTOUT CODES:



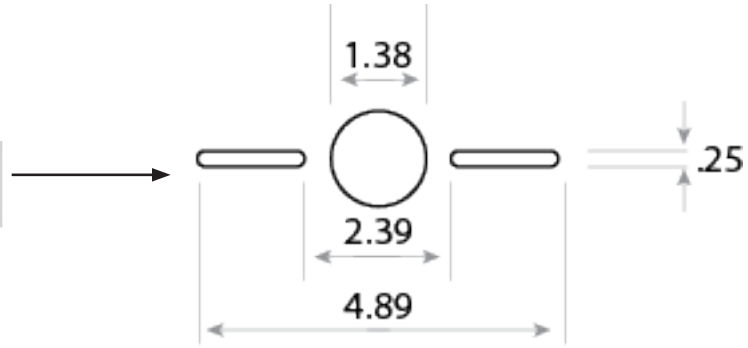

UNIVERSAL/COMBO

Fits a variety of lights on the market.
See cutout dimensions shown to the right.



SN

OVAL SLOTTED

Mount your 6" oval light with double-sided tape behind the cutout



RN

2" ROUND



BYN

¾ " ROUND

"N" LIGHT COLOR INDICATES NO LIGHTS/OPEN CUTOUT


UNIVERSAL

3-YEAR WARRANTY

LED LIGHTS

VU-860L

2" Round

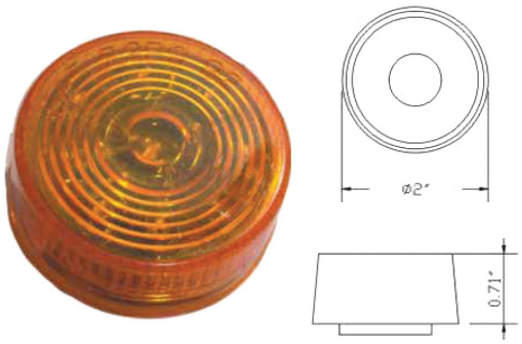

VU-860L-A shown

- 9 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes a rubber grommet when ordered as a kit with bumper or accessory

Part Numbers	Lens Color	LED Color
VU-860L-A	Amber	Amber
VU-860L-CA	Clear	Amber
VU-860L-R	Red	Red
VU-860L-CR	Clear	Red


3-YEAR WARRANTY

VU-924-1L


4" ROUND "CORAL"


- 40 LEDs
- IP67 Rated
- 12 volt or 24 volt
- Chrome reflector for brilliant light emission
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes a rubber grommet when ordered as a kit with bumper or accessory

Part Numbers	Lens Color	LED Color
VU-924-1L-A	Amber	Amber
VU-924-1L-CA	Clear	Amber
VU-924-1L-R	Red	Red
VU-924-1L-CR	Clear	Red
VU-924-1L-CW	Clear	White

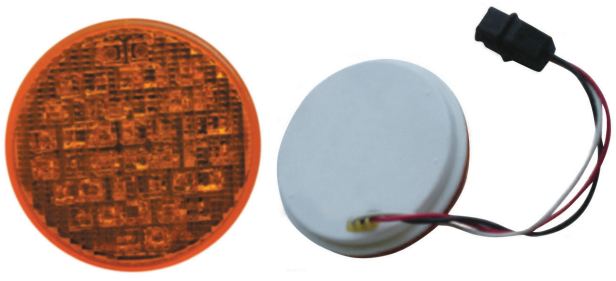

VU-924-1L-A shown

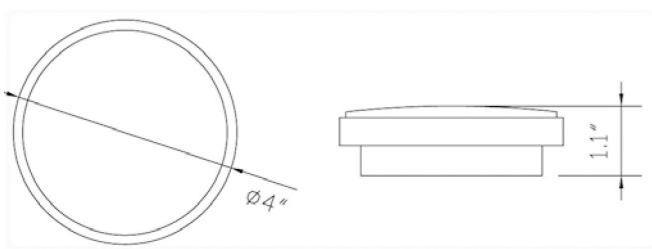

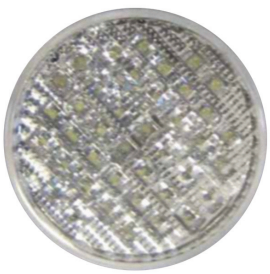

VU-924-1L-CW shown

UNIVERSAL

SIGNATURE MARKER LIGHTS

3-YEAR WARRANTY



VU-1080L-A shown

VU-1080L

GRANITE



Part Numbers	Lens Color	LED Color
VU-1080L-A	Amber	Amber
VU-1080L-CA	Clear	Amber
VU-1080L-R	Red	Red
VU-1080L-CR	Clear	Red


- 6 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel



VU-7160L-A shown

VU-7160L

GRANITE MINI

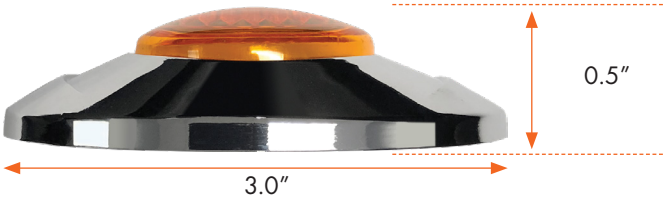

3-YEAR WARRANTY

Part Numbers	Lens Color	LED Color
VU-7160L-A	Amber	Amber
VU--7160L-CA	Clear	Amber
VU--7160L-R	Red	Red
VU--7160L-CR	Clear	Red

- 3 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel

UNIVERSAL

SIGNATURE MARKER LIGHTS

3-YEAR WARRANTY



VU-1094L

GRANITE SLIM




Part Numbers	Lens Color	LED Color
VU-1094L-A	Amber	Amber
VU-1094L-CA	Clear	Amber
VU-1094L-R	Red	Red
VU-1094L-CR	Clear	Red

- 3 LEDs
- 12 volt
- Sonically sealed polycarbonate leans & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel
- IP67 rated

GRANITE COLLECTION COUNTERTOP DISPLAYS AVAILABLE



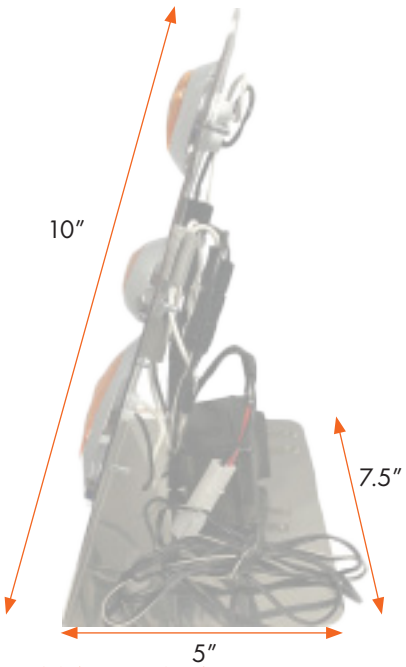

VU-LDG3-BK FOR BLACK POWDER COATED DISPLAY

VU-LDG3-SS FOR POLISHED STAINLESS STEEL DISPLAY

UNIVERSAL

3-YEAR WARRANTY


LED LIGHTS

- 3 LEDs
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel
- IP67 Rated

VU-998-1L

¾" ROUND "BULLSEYE"



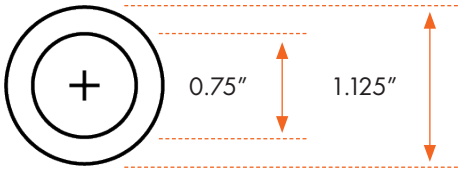

VU-998-1L-CA shown

Part Numbers	Lens Color	LED Color
VU-998-1L-A	Amber	Amber
VU-998-1L-CA	Clear	Amber
VU-998-1L-R	Red	Red
VU-998-1L-CR	Clear	Red

3-YEAR WARRANTY

- 21 Super LEDs
- 12 volt
- Chrome reflector for brilliant light emission
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes an ABS plastic snap-ring and rubber grommet when ordered as a kit with bumper or accessory
- IP67 Rated

VU-968-1L

6" OVAL



VU-968-1L-R shown

(rear view)



Part Numbers	Lens Color	LED Color
VU-968-1L-A	Amber	Amber
VU-968-1L-CA	Clear	Amber
VU-968-1L-R	Red	Red
VU-968-1L-CR	Clear	Red
VU-968-1L-CW	Clear	White



VU-968-1L-A shown with ABS snap ring



VU-968-1L-CW shown

Dimensions with grommet:



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating QUALITY TRUCK PARTS

www.valleychrome.com

UNIVERSAL

LED LIGHTS

3-YEAR WARRANTY

VU-949-1L


"TORPEDO" CAB MARKER




VU-949-1L-A shown

- 19 LEDs
- IP67 Rated
- 12 volt
- Chrome reflector for brilliant light emission
- Bright chrome outer housing
- Rubber mounting pad
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel

Part Numbers	Lens Color	LED Color
VU-949-1L-A	Amber	Amber
VU-949-1L-CA	Clear	Amber

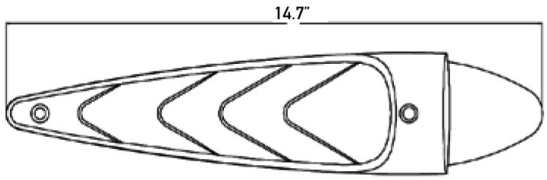

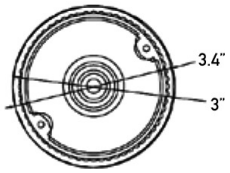

VU-855L

VINTAGE CAB MARKER





VU-855L-A shown

- 36 LEDs
- IP67 Rated
- 12 volt
- Bright chrome outer housing
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel

3-YEAR WARRANTY

Part Numbers	Lens Color	LED Color
VU-855L-A	Amber	Amber
VU-855L-CA	Clear	Amber

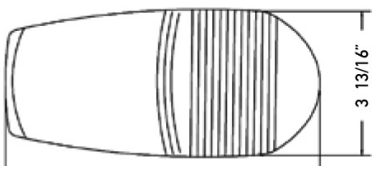

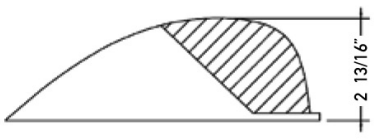


UNIVERSAL

3-YEAR WARRANTY

PETE TURN/PARK/CLEARANCE LIGHT & WATERMELON LIGHTS

VU-951L


6" x 5" CLEARANCE

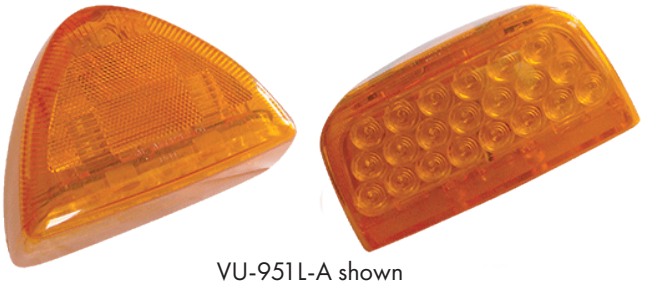


VU-951L-A shown

- 31 Super LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light

Part Numbers	Lens Color	LED Color
VU-951L-A	Amber	Amber
VU-951L-CA	Clear	Amber



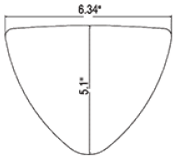



Amber (VU-1110L-A)



Blue (VU-1110L-B)



Purple (VU-1110L-P)



Red (VU-1110L-R)




Clear (VU-1110L-C)




Green (VU-1110L-G)

UNIVERSAL
WATERMELON LIGHT BRACKETS


1-YEAR WARRANTY

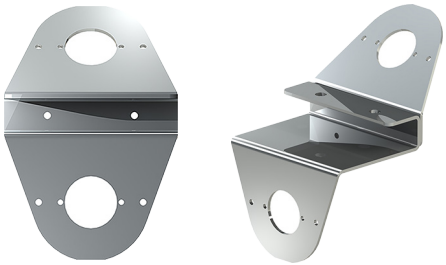

VU190123
DUAL WATERMELON FRAME BRACKET
CUTOUTS ONLY

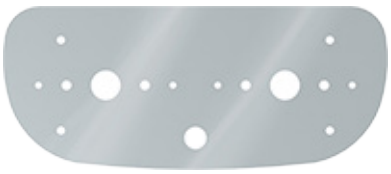

VWM007
DUAL WATERMELON INTERIOR BRACKET
W/SWITCH HOLE (CUTOUTS ONLY)

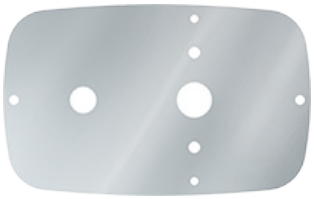

VWM008
SINGLE WATERMELON INTERIOR BRACKET
W/SWITCH HOLE (CUTOUTS ONLY)



VU190120
SINGLE WATERMELON MIRROR BRACKET
CUTOUTS ONLY



VWM011
SINGLE WATERMELON INTERIOR BRACKET
W/SWITCH HOLE (CUTOUTS ONLY)



VWM006
SINGLE WATERMELON INTERIOR BRACKET
W/SWITCH HOLE (CUTOUTS ONLY)



VWM002
SINGLE WATERMELON FRAME BRACKET
CUTOUTS ONLY




VWM014
SINGLE WATERMELON BUMPER BRACKET
UNIVERSAL



VU-1110L-A
AMBER WATERMELON LIGHT
(EXPLODED VIEW)

UNIVERSAL

WIRE HARNESSES

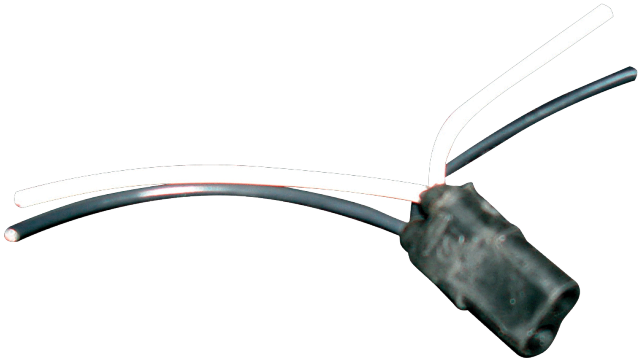

VU-877F

FEMALE HARNESS

- 2 female bullets
- 100 ft. length
- Available in 4", 6", 8" or 10" spacing – see part numbers

Part Numbers	Bullet spacing
VU-877F-4	4"
VU-877F-6	6"
VU-877F-8	8"
VU-877F-10	10"



VHMS3007

AIR CLEANER LIGHT BOX HARNESS

- See pages 126, 134, 166 for air cleaner light boxes
- One PACCAR female end
- Two PACCAR male ends

Valley Chrome Plating
QUALITY TRUCK PARTS

STAINLESS ACCESSORIES

PETERBILT MODEL 359



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 359

CAB PANEL 3.5"

MOUNTING HARDWARE INCLUDED



VP110235
PB CAB PANELS - 359 -
STANDARD BLANK - PAIR



VP110238
PB CAB PANEL, EXT. PANEL
FORMED 359 2PC. STANDARD
WRAP BLANK - PAIR



VP110236
PB CAB PANELS - 359 -
STANDARD WRAP BLANK - PAIR



VP110236 shown

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

HOOD EXTENSIONS



VP110319
PB - 359 HOOD EXTENSION
PANEL - FACTORY



PETERBILT MODEL 359

MISC. TRIM PIECES



VP110023
PB 359 TOP OF DOOR TRIM - LOWERED LOOK - 359

CUSTOM HEIGHTS AVAILABLE



VP110023-P FOR PAINTABLE



VP110027
PB 359 WINDSHIELD WIPER ARM COVERS




VP120113
PB BUG SHIELD - STAINLESS
- 359
MOUNTING HARDWARE INCLUDED



VP120504
PB 359 FENDER SUPPORT
COVER - FRONT - BLANK

RUBBER TRIM AND MOUNTING
HARDWARE INCLUDED

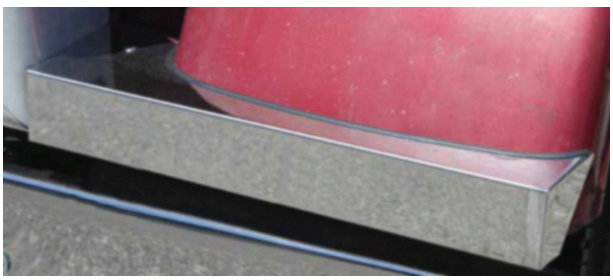

PETERBILT MODEL 359

STANDARD MOUNT STAINLESS VISORS



VP130001
PB - 359 12" DROP VISOR - ANY YEAR 359

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END
FOR PAINTABLE. EXAMPLE:

VP130001-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

FOR MORE PETE VISORS SEE PAGES 198-201

GANGSTER STAINLESS VISORS



VP132001
PB - 12" GANGSTER VISOR - 359 2 PC



VP132001-BT
PB - 12" GANGSTER BOWTIE VISOR - 359 2 PC



VP132001-BF
PB - 12" GANGSTER BUTTERFLY VISOR - 359 2 PC



VP132001-RBF
PB - 12" GANGSTER VISOR - 359 2 PC, REVERSE BUTTERFLY

VP132001P-RBF
PB - 12" GANGSTER VISOR - 359 - PAINTABLE 2 PC, REVERSE BUTTERFLY

WICKED VISORS



VP135001
PB - 12" WICKED - DROP VISOR -
ANY YEAR 359 - 2 PC

VISOR FOR 350 SERIES, YEARS 1970 & OLDER



VP130016
PB - 9" STANDARD VISOR
350 SERIES YEARS 1970 & OLDER

PETERBILT MODEL 359

AIR DEFLECTORS



VP110016
PB 359 - 379, 389 WINDOW
AIR DEFLECTORS



VP110031
PB 359 - 379, 389 WINDOW
AIR DEFLECTORS W/LOWER
LOOKS(VP110017)WINDOW
TRIM 37.25" X 20.375"


FUEL TANK STRAP COVERS
BRACKETS & MOUNTING HARDWARE INCLUDED



VP150039
PB 359 - FUEL TANK STRAP
COVERS - 2PCS



MISC. TRIM PIECES

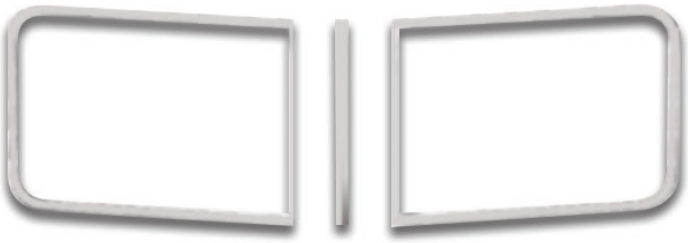

VP110024
PB WINDSHIELD TRIM - 3 PC 359 -
STANDARD - 430 STAINLESS



VP110012
359, 379 DOOR FLAME
TRIM - PAIR

STAINLESS ACCESSORIES

PETERBILT MODELS 365 & 367





Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 365 & 367

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VP110241
PB CAB PANELS - 2005 & NEWER - 367, 365 - BLANK WRAP - SET BACK ONLY


ADD LIGHT OPTIONS TO A PART NUMBER



EXAMPLE
VP110241 - 4 UN



EXAMPLE
VP110241 - 5 RN

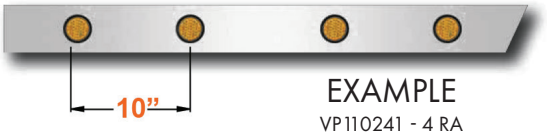

EXAMPLE
VP110241 - 4 RA



EXAMPLE
VP110241 - 4 GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

Valley Chrome Plating
QUALITY TRUCK PARTS

PETERBILT MODEL 365 & 367

SLEEPER PANELS 4″

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



VP142064
PB SLEEPER PANELS - 367, 365 - 36″/44″ - BLANK



VP142065
PB SLEEPER PANELS - 367, 365 - 48″/58″ - BLANK



VP142066
PB SLEEPER PANELS - 367, 365 - 63″/72″ - BLANK



VP142067
PB SLEEPER PANELS - 367, 365 - 70″/78″ - BLANK

ADD LIGHT OPTIONS:




EXAMPLE
VP142065 - 5 UN



EXAMPLE
VP142065– 5 RN



EXAMPLE
VP142067 – 8 RA

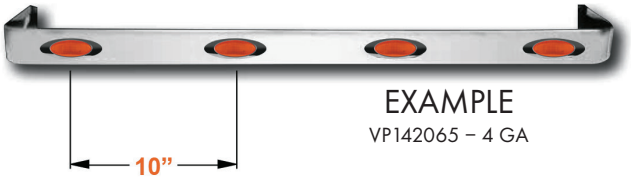

EXAMPLE
VP142065 – 4 GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107


Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36″	44″
	48″	58″
	63″	72″
	70″	78″

Valley Chrome Plating
QUALITY TRUCK PARTS


PETERBILT MODEL 365 & 367

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

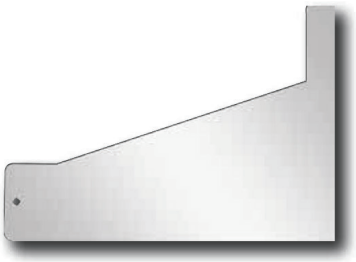


VP142101
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 384, 379, 388, 389 - 63"/72" - BLANK, 365, 367

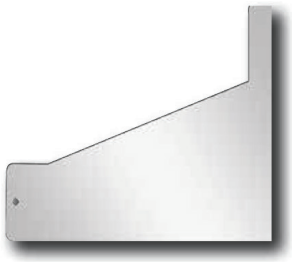


VP142103
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 384, 379, 388, 389 - 70"/78" - BLANK, 365, 367



ADD LIGHT OPTIONS:

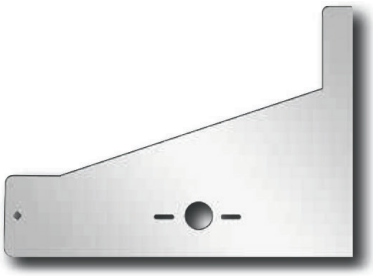

EXAMPLE
VP142101-1UN

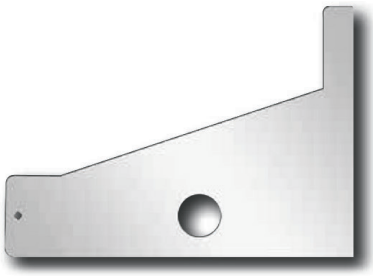

EXAMPLE
VP142101-1RN



EXAMPLE
VP142101-1GA


ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 365 & 367

AIR CLEANER LIGHT BOXES

CONNECTS TO AIR CLEANER STRAP

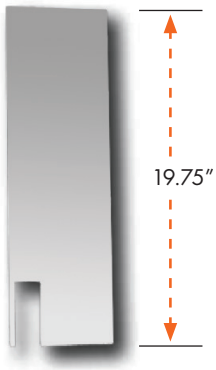

VP112118

PB - AIR CLEANER LIGHTS - BLANK - 367, 365 - 2005 & NEWER - SET BACK AXLE ONLY - PAIR

CUSTOM EXAMPLE:



VP112118-4RA

PB - AIR CLEANER LIGHTS - 4 ROUND AMBERS - 367, 365 - 2005 & NEWER - SET BACK AXLE ONLY - PAIR

Don't Forget the Light Harness:



VHMS3007

1 - PACCAR - FEMALE 2 - PACCAR - MALE - FOR CONNECTING FRONT & REAR AIR CLEANER LIGHTS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

BUG SHIELDS



VP120110

PB BUG SHIELD - STAINLESS - 367, 388, 389

MOUNTING HARDWARE INCLUDED

Valley Chrome Plating

QUALITY TRUCK PARTS

PETERBILT MODELS 379 & 389




1	**VP132002P**	Gangster visor, 12", paintable
2	**VP110018**	Windshield trim kit -large
3	**VP120502**	Front blinker bars (pair) with LEDs Similar: VP120501 for model 379
4	**VP110228**	Cab panels –extended wrap Shown with four slotted light holes (VP110228-4S)
5	**VP110308**	Hood extension panel – wide replacement Shown with three slotted light holes (VP110308-3S)
6	**VP150011R**	Fuel tank fairings (pair), rounded style, 64" long
7	**VP142000**	4" sleeper panels (pair) for 63"/72" sleeper Shown with five slotted light holes (VP142000-5S), 6" wide also available
8	**VP150109R**	Rear tool box with locks, smooth stainless, rounded look
9	**911**	Turbowing for flat top / cabover
10	**HV-XXXX-58-6BB-L01-UST**	Front chrome bumper, boltless, 22" American Eagle, 6 slotted light hole Multiple other stock & custom bumpers available



SEE PAGES 155-177 FOR MODEL 389 ACCESSORIES

PETERBILT MODEL 379



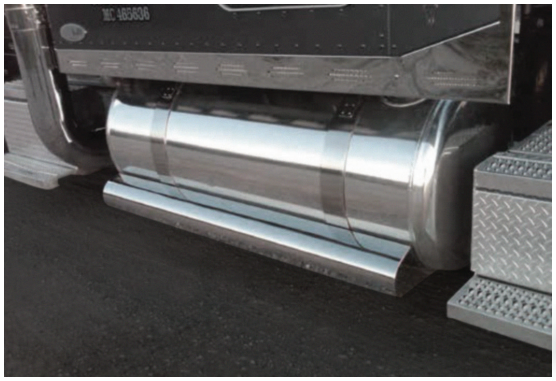



Valley Chrome Plating
QUALITY TRUCK PARTS

PETERBILT MODEL 379

ONE-PIECE CAB/HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VP116401
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 379 - 4" - BLANK

VP116402
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - WRAP -379 - 4" - BLANK



VP116201
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 379 - 6" - BLANK

VP116202
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - WRAP - 379 - 6" - BLANK



ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

Valley Chrome Plating
QUALITY TRUCK PARTS

PETERBILT MODEL 379



CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VP110203
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR



VP110207
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR



VP110227
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR



VP110228
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED WRAP- BLANK - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

CAB PANELS 6"

MOUNTING HARDWARE INCLUDED



VP110250
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR



VP110251
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR




VP110254
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED WRAP - BLANK - PAIR



VP110253
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR

ADD LIGHT OPTIONS:

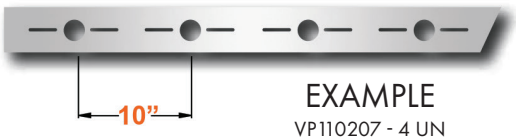

EXAMPLE
VP110207 - 4 UN



EXAMPLE
VP110207 - 5 RN



EXAMPLE
VP110203 - 4 RA



EXAMPLE
VP110203 - 4 GA

PETERBILT MODEL 379

HOOD EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED (excl. VP110310)




VP110300
PB 379 - HOOD EXTENSION PANEL - FACTORY REPLACEMENT



VP110310
PB 379 - HOOD EXTENSION PANEL - FACTORY LAYOVER TAPE MOUNT



VP110301
PB 379 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR

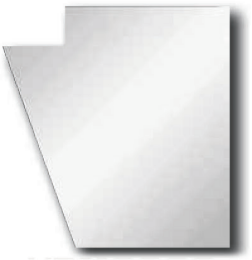

VP110303
PB 379 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

HOOD EXTENSION PANELS 6"


MOUNTING HARDWARE INCLUDED



VP110350
PB 379 - HOOD EXTENSION PANEL - FACTORY REPLACEMENT



VP110352
PB 379 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR

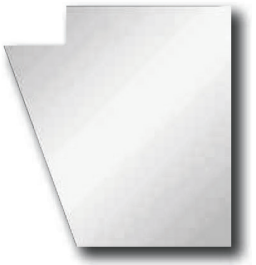

VP110358
PB 379 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - PAIR

ALL NOTCHED HOOD EXTENSION PANELS TAKE A STANDARD CAB PANEL
ALL WIDE HOOD EXTENSION PANELS TAKE AN EXTENDED CAB PANEL

PETERBILT MODEL 379

SLEEPER PANELS 4"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



VP142004
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR



VP142007
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48"/58" - BLANK - PAIR



VP142000
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR




VP142002
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK - PAIR

ADD LIGHT OPTIONS



EXAMPLE
VP142002 – 8 RA

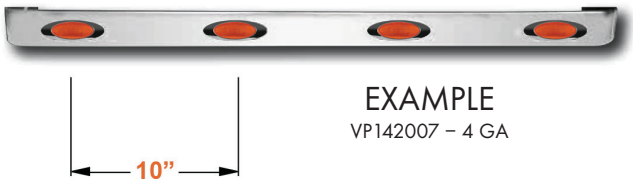

EXAMPLE
VP142007 – 4 GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS 6"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



VP142050
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR



VP142051
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48" - BLANK - PAIR



VP142052
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR




VP142053
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/80" - BLANK - PAIR

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"


PETERBILT MODEL 379

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

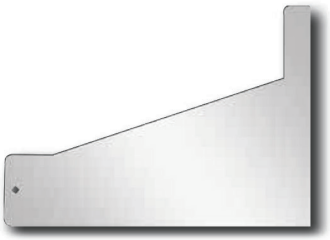

VP142101
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

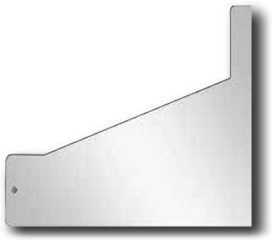


VP142103
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK




ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

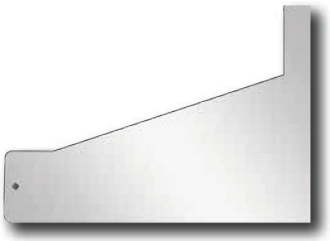

VP142150
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

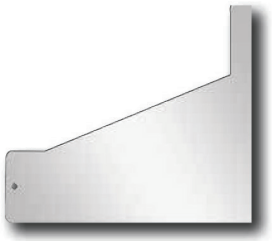

VP142151
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK



Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"


PETERBILT MODEL 379

AIR CLEANER LIGHT BOXES VORTOX

CONNECT TO AIR CLEANER STRAPS:



VP110109
PB - AIR CLEANER LIGHTS - BLANK - 377, 378, 379 - 1987 & NEWER - PAIR - VORTOX - FRONT

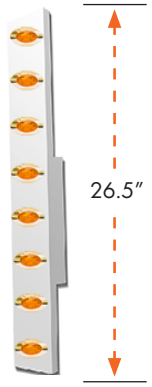

VP113108
PB - AIR CLEANER LIGHTS - REAR - BLANK - 377, 378, 379 - 1987 & NEWER- PAIR - VORTOX - REAR

FOR STRAPLESS LOOK:



VP112209
PB - AIR CLEANER SUPPORT - BLANK - 379, 388, 389 - 2007 & NEWER - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE



VP110109-8RA
PB - AIR CLEANER LIGHTS - 8 ROUND AMBERS - 377, 378, 379 - 1987 & NEWER - PAIR - VORTOX


VP110109-8GMA shown

Don't Forget the Light Harness:



VHMS3007
1 - PACCAR - FEMALE 2 - PACCAR - MALE - FOR CONNECTING FRONT & REAR AIR CLEANER LIGHTS

PETERBILT MODEL 379

MIRROR LIGHT BOXES



VP114011
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - BLANK



ADD -SM WITH BUILT IN SPOT MIRRORS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLES:



VP114011-2GA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 2 - GRANITE - AMBER LEDS



VP114011-5RCA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 5 - 2" ROUNDS - CLEAR AMBER LEDS



VP114011-2SCA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 2 - SLOTTED - CLEAR AMBER LEDS




VP114011-5RA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 5 - 2" ROUNDS - AMBER LEDS

PETERBILT MODEL 379


BUMPER & GRILLE TRIM



VP120001
PB 1 TAG HANGER
INCLUDES HARDWARE, FOAM PROTECTORS AND PLASTIC LICENSE PLATE BOLT INSERTS

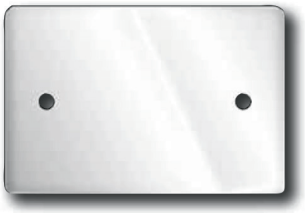

VP120004
PB TOW PIN COVER - 378, 379 - 1987 & NEWER
MOUNTING HARDWARE INCLUDED

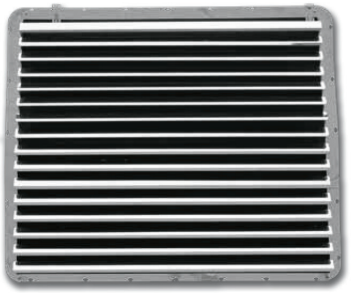

VP120201
PB 379 LONG NOSE GRILL - HORIZONTAL - RIVETED
MOUNTING HARDWARE INCLUDED



VP120012
PB SIDE GRILL DEFLECTOR
379, 388, 389

SEE PAGE 95 FOR MORE TAG HANGERS

FENDER GUARDS




VP120005
PB FENDER GUARDS - FITTED - 379 - 1987 & NEWER - 2PC




VP120006
PB FENDER GUARDS - ROLLED, BOLT - THROUGH - 379 - 1987 & NEWER - 2PC



VP120007
PB FENDER GUARDS - PLAIN - 378, 379 - 1987 & NEWER

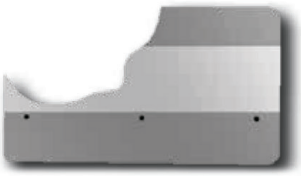

VP120009
PB FENDER GUARDS - PLAIN - 378, 379 - 1987 & NEWER W/JJ CUTOUT

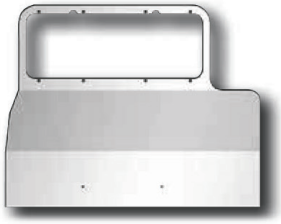

VP120010
PB FENDER GUARDS - PB - DOUBLE HEAD LIGHT MOUNT - 378, 379 - 1987 & NEWER - 2PC



VP120011
PB FENDER GUARDS-SINGLE HEAD LIGHT MOUNT - 378, 379 - 1987 & NEWER

PETERBILT MODEL 379

BUG SHIELDS

MOUNTING HARDWARE INCLUDED



VP120103
PB BUG SHIELD TRIM ONLY
(HIGHLIGHT) - 379 ONLY
STAINLESS STEEL



VP120105
PB BUG SHIELD TRIM ONLY
(FLAMES) - 379 ONLY
STAINLESS STEEL



VP120106
PB BUG SHIELD - STAINLESS -
379 - LONG HOOD



VP120107
PB BUG SHIELD - STAINLESS
- 357, 378, 385, 379 -
SHORT HOOD

Valley Chrome Plating
QUALITY TRUCK PARTS

PETERBILT MODEL 379

BLINKER BARS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED



VP120501
PB 379 FRONT BLINKER BARS
- W/ LEDS - PAIR
NOTE: ALREADY HAS SLOTTED LIGHT
HOLES AND LIGHTS, NO
NEED TO BUILD CUSTOM




VP100501
PB 379 REAR BLINKER BARS -
- W/ LEDS - PAIR
NOTE: ALREADY HAS SLOTTED LIGHT
HOLES AND LIGHTS, NO
NEED TO BUILD CUSTOM



VP120501BL
PB 379 FRONT BLINKER BARS
- W/ LEDS - PAIR
NO LIGHT HOLES
ADD LIGHTS TO YOURS,
SEE PAGES 106 -107

FENDER SUPPORT COVERS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED

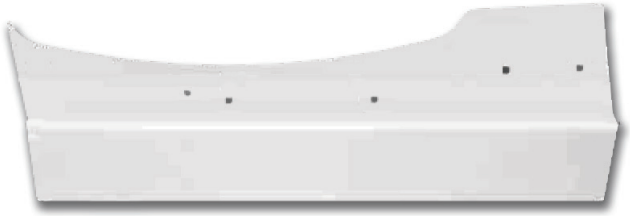

VP120505
PB 379 FENDER SUPPORT
COVER - FRONT - BLANK

PETERBILT MODEL 379

SLEEPER FILLER PANELS

MOUNTING HARDWARE INCLUDED





VP140021
PB SPEEPER REAR CORNER FILLER PANELS 70" ONLY - 379, 389 - 4 - 4" LEDS - PAIR

SLEEPER SHOCK COVERS


RUBBER STRIP & HARDWARE INCLUDED



VP140034
PB SLEEPER SHOCK COVERS - 379, 389 - 2 PCS (L+R) ANGLED TAPE MOUNT




VP140022
PB 379, 389 SLEEPER SHOCK COVERS - 2 PAIR TAPE MOUNT

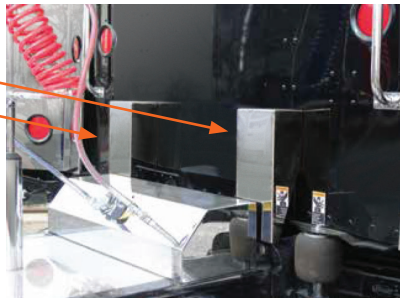



VP140032
PB SLEEPER SHOCK COVERS - 379,389 - 1 LG FULL COVER TAPE MOUNT

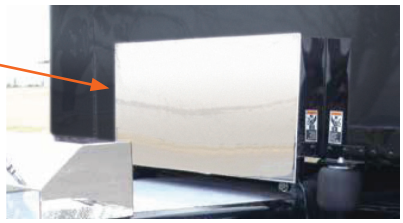




VP140035
PB SLEEPER SHOCK COVER - 379,389 ANGLED FULL COVER



VP140033
PB SLEEPER SHOCK COVERS - 379,389 - 1 LG CURVED FULL COVER

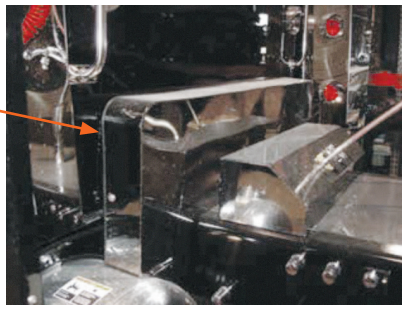

RUBBER STRIP & HARDWARE INCLUDED

PETERBILT MODEL 379

AIR DEFLECTORS

VP110016
PB 359 - 379, 389 WINDOW AIR DEFLECTORS
TAPE MOUNT



VP110031
PB 359 - 379, 389 WINDOW AIR DEFLECTORS W/LOWER LOOKS(VP110017)WINDOW TRIM 37.25" X 20.375"
TAPE MOUNT



FUEL TANK STRAP COVERS


BRACKETS & MOUNTING HARDWARE INCLUDED



VP150020
PB - FUEL TANK STRAP COVERS - 4PCS



VP150029
PB - FUEL TANK STRAP COVERS - 2PCS
NOT 359

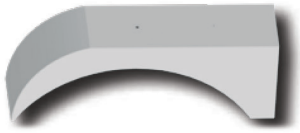

VP150029R
PB - FUEL TANK STRAP COVERS - ROUND - 2PCS
ALL BUT 359



Valley Chrome Plating
QUALITY TRUCK PARTS

PETERBILT MODEL 379

FUEL TANK FAIRINGS

BRACKETS & HARDWARE INCLUDED
NOT AVAILABLE 430 STAINLESS

60″ 64″ 66″



VP150010
PB - FUEL TANK FAIRINGS 60″
379 - 1987 & NEWER - PAIR



VP150011
PB - FUEL TANK FAIRINGS 64″
379 - 1987 & NEWER - PAIR



VP150012
PB - FUEL TANK FAIRINGS 66″
379 - 1987 & NEWER - PAIR



STANDARD



VP150010R
PB - FUEL TANK FAIRINGS
60″ 379 - 1987 & NEWER - PAIR
ROUND



VP150011R
PB - FUEL TANK FAIRINGS
64″ 379 - 1987 & NEWER - PAIR
ROUND



VP150012R
PB - FUEL TANK FAIRINGS
66″ 379 - 1987 & NEWER - PAIR
ROUND



ROUNDED



VP150010W
PB - FUEL TANK FAIRINGS
60″ 379 - 1987 & NEWER - PAIR -
WING LOOK



VP150011W
PB - FUEL TANK FAIRINGS
64″ 379 - 1987 & NEWER - PAIR -
WING LOOK



VP150012W
PB - FUEL TANK FAIRINGS
66″ 379 - 1987 & NEWER - PAIR -
WING LOOK




WING LOOK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE:



VP150012-5GA

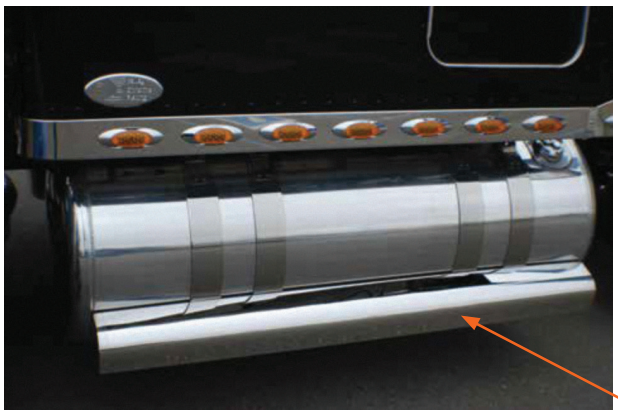

PETERBILT MODEL 379

EMBLEMS



VP100009
EMBLEM ACCENT PB 379
RACING STRIPE - 2PC



VP100028
EMBLEM ACCENT PB 379 -
RACING STRIPE - LONG - PAIR


MISC. TRIM PIECES



VP100021
PB 379 FENDER TRIM
INNER WELL - 2PC




VP100026
PB 379 FENDER TRIM - 2PC

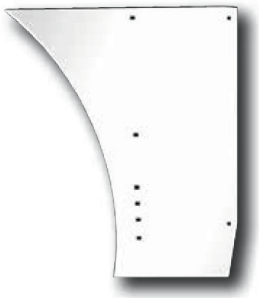

VP100020
PB LOWER HOOD PANEL
EXTENDED HOOD - 379 1987
& NEWER - 2PC



VP100025
PB 379 CENTER HOOD TRIM
EXTENDED HOOD

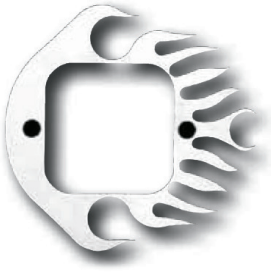

VP110012
359, 379 DOOR FLAME
TRIM - PAIR



VP110018
PB WINDSHIELD TRIM - 5 PC
379, 389 - LARGE



VP110015
PB CENTER EX T WINDSHIELD
TRIM - 377, 378, 379

PETERBILT MODEL 379

MISC TRIM PIECES



VP110022

PB 379 TOP OF DOOR TRIM - LOWERED LOOK - 73-04 - DOOR MOUNTED MIRRORS - PR
TAPE MOUNT

CUSTOM HEIGHTS AVAILABLE



VP110022P FOR PAINTABLE




VPTFI8021

PB OUTER FENDER TRIM - 379
INCLUDES SET SCREWS
SOLD AS SET OF 3 PAIR

VPTFI8021S

FOR ONE PAIR

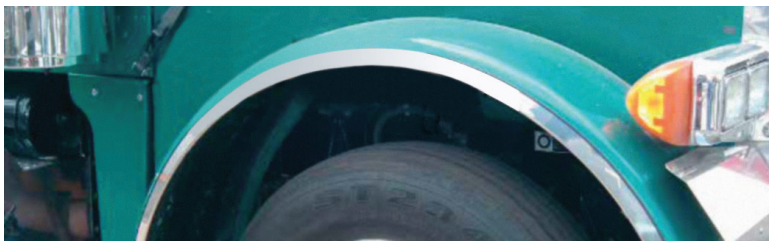



VP110025


PB 379, 388, 389 WINDSHIELD WIPER ARM COVERS
TAPE MOUNT



PETERBILT MODEL 379


BATTERY BOXES & TOOL BOXES

STANDARD WIDTH 30" / CUSTOM WIDTHS AVAILABLE UP TO 48"

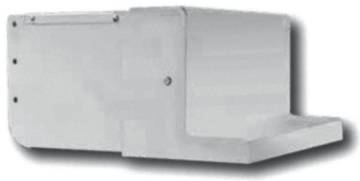


VP150112 - PB - 379,388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - ROUNDED MOULDED LID

VP150113 - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - ROUNDED MOULDED LID

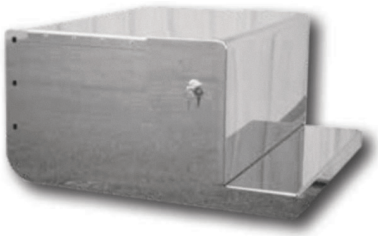

VP150109R - PB - 379, 388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK

VP150110R - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK

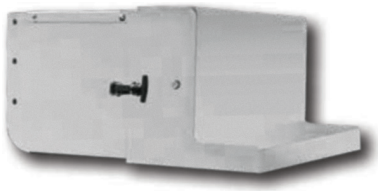


VP150115 - PB - 379,388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - MOULDED LID

VP150116 - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - MOULDED LID

VP150116TM - PB - 379, 388, 389 BATT, BOX - STAINLESS W/TIE DOWNS - 18" TALL MOLDED LID

ADD -36 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 36" BOX
ADD -48 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 48" BOX

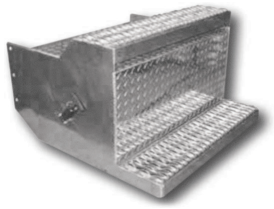

VP150103
PB - 379, 388, 389 BATTERY BOX - ALUMINUM



VP150104
PB - 379, 388, 389 BATTERY BOX - ALUMINUM




BOX STEP HIGHLIGHTS/PROTECTORS




VP150030
PB TOOL BOX/BATTERY BOX - STEP PROTECTOR-(18") - WICKED PR

VP150031
PB TOOL BOX/BATTERY BOX - STEP PROTECTOR- (30") WICKED PAIR

PAINTED OPTIONS SHOWN

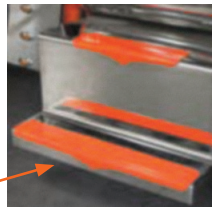

PETERBILT MODEL 379
TOOL & BATTERY BOX COVERS

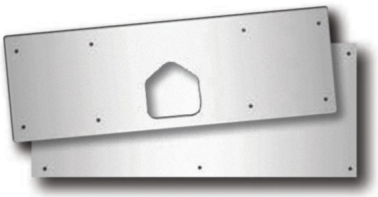

VP150002
PB TOOL & BATTERY BOX COVER 1993 & NEWER - 2 PC.



VP150003
PB BATTERY BOX COVER 378, 379 - 12" X 30" - 1993 & NEWER



VP150004
PB TOOL BOX COVER 378, 379 - 10" X 30" - 1993 & NEWER




VP150015
PB TOOL BOX COVER - W/ 1" LIP ON TOP - 378, 379




VP150016
PB 379 BATTERY BOX COVER - W/ 1" LIP ON TOP

PETERBILT MODEL 379
TAG & LICENSE PLATE HANGERS
ALSO FITS MODEL 389

VP120021
PB WIDE TAG/LIC PLATE HANGER
INCLUDES HARDWARE, FOAM PROTECTORS & PLASTIC LICENSE PLATE BOLT INSERTS

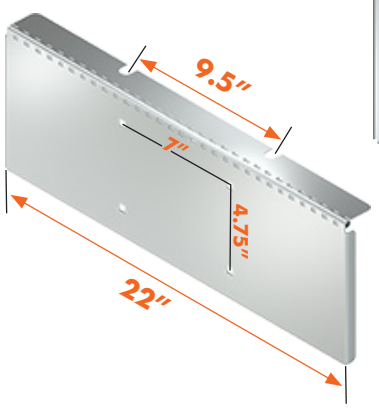

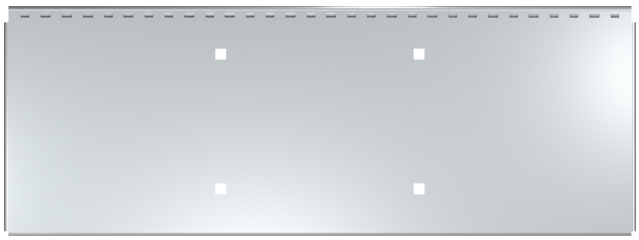



AVAILABLE WITH 2 WATERMELON LIGHTS INSTALLED
(VP120021-2WA SHOWN)

STAINLESS ACCESSORIES

PETERBILT MODEL 384



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 384

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VP110338
PB CAB PANELS - 384 - STANDARD - BLANK - WRAP PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

CAB PANELS 6"

MOUNTING HARDWARE INCLUDED



VP110252
PB CAB PANELS - 384 - STANDARD - BLANK - PAIR



VP110353
PB CAB PANELS - 384 - STANDARD - BLANK - WRAP - PAIR

ADD LIGHT OPTIONS:



EXAMPLE
VP110252 - 4 UN



EXAMPLE
VP110252 - 5 RN



EXAMPLE
VP110252 - 4 RA



EXAMPLE
VP110252 - 3 GA

PETERBILT MODEL 384

SLEEPER PANELS 4"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



VP142060
PB SLEEPER PANELS - 384 - 36"/44" - NOTCHED FOR EXHAUST - BLANK



VP142061
PB SLEEPER PANELS - 384 - 48"/58" - NOTCHED FOR EXHAUST - BLANK



VP142062
PB SLEEPER PANELS - 384 - 63"/72" - NOTCHED FOR EXHAUST - BLANK



VP142063
PB SLEEPER PANELS - 384 - 70"/78" - NOTCHED FOR EXHAUST - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS 6"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



VP142160
PB SLEEPER PANELS - 384 - 36"/44" - NOTCHED FOR EXHAUST - BLANK



VP142161
PB SLEEPER PANELS - 384 - 48"/58" - NOTCHED FOR EXHAUST - BLANK



VP142162
PB SLEEPER PANELS - 384 - 63"/72" - NOTCHED FOR EXHAUST - BLANK



VP142163
PB SLEEPER PANELS - 384 - 70"/78" - NOTCHED FOR EXHAUST - BLANK

ADD LIGHT OPTIONS



EXAMPLE
VP142063 – 8 RA




EXAMPLE
VP142060 – 4 GA

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"


PETERBILT MODEL 384

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

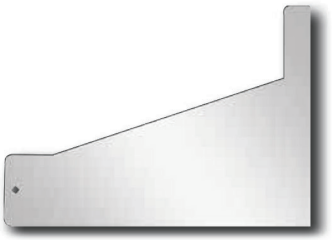

VP142101
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

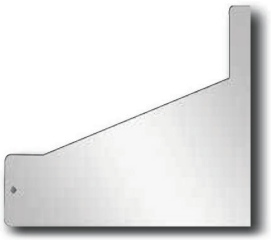


VP142103
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK




ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

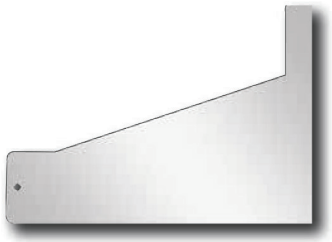

VP142150
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

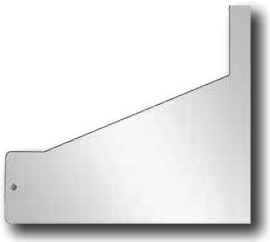

VP142151
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK



Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

BUG SHIELDS



VP120111
PB BUG SHIELD - STAINLESS - 384
MOUNTING HARDWARE INCLUDED

STAINLESS ACCESSORIES

PETERBILT MODEL 386



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 386

CAB PANELS 2.5"

MOUNTING HARDWARE INCLUDED



VP110200
PB CAB PANELS - 2005 & NEWER - 386 - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXHAUST FILLER PANEL 2.5"

MOUNTING HARDWARE INCLUDED



VP110205
PB EX HAUST FILLER PANEL - 386 - BLANK - PAIR

ADD LIGHT OPTIONS:



EXAMPLE
VP110205 - 3 GA



EXAMPLE
VP110205 - 3 PA



EXAMPLE
VP110205 - 3 UN

386 PANELS ARE ONLY 2.5" WIDE AND CAN ONLY USE GRANITE, PETERBILT AND UNIVERSAL CUT OUTS.

PETERBILT MODEL 386

SLEEPER PANELS 2.5"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE



VP142008
PB SLEEPER PANELS - 1987 & NEWER - 386 - 36"/44" - BLANK - PR



VP142009
PB SLEEPER PANELS - 1987 & NEWER - 386 - 48"/58" - BLANK - PR



VP142010
PB SLEEPER PANELS - 1987 & NEWER - 386 - 63"/72" - BLANK - PR




VP142011
PB SLEEPER PANELS - 1987 & NEWER - 386 - 70"/78" - BLANK - PR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

ADD LIGHT OPTIONS





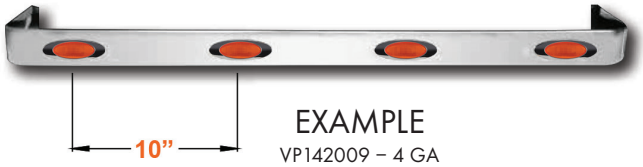

EXAMPLE
VP142009 – 4 GA


386 PANELS ARE ONLY 2.5" WIDE AND CAN ONLY USE GRANITE, PETERBILT AND UNIVERSAL CUT OUTS.

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"


PETERBILT MODEL 386

SLEEPER EXTENSION PANELS 2.5″

MOUNTING HARDWARE INCLUDED

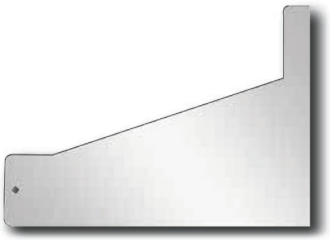

VP142111
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 386 - 2.5″ WIDE - 70″/78″ - BLANK

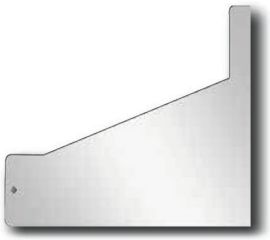


VP142112
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 386 - 2.5″ WIDE - 36,48,63″/72″ - BLANK



ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

ADD LIGHT OPTIONS

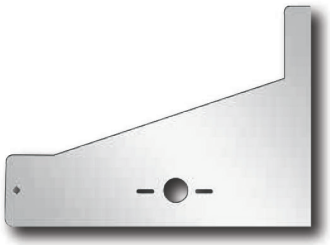

EXAMPLE
VP142112-1UN



EXAMPLE
VP142112-1GA



EXAMPLE
VP142112-1PA

386 PANELS ARE ONLY 2.5″ WIDE AND CAN ONLY USE GRANITE, PETERBILT AND UNIVERSAL CUT OUTS.

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36″	44″
	48″	58″
	63″	72″
	70″	78″

BUG SHIELDS



VP120112
PB BUG SHIELD - STAINLESS - 384/386
MOUNTING HARDWARE INCLUDED

STAINLESS ACCESSORIES

PETERBILT MODELS 388 & 389



FOR 388 & 389 VISORS SEE PAGES 198-201

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 388 & 389

FORMED CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

4" WIDE DRIVER SIDE, ALSO AVAILABLE IN 6" WIDTH
2.25" ONLY ON PASSENGER SIDE



VP114207
PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED - BLANK - PR



VP114228
PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED WRAP- BLANK - PR



VP114267
PB CAB PANELS - 389 - 2010 & NEWER - FORMED EXTENDED - W / UREA SYSTEM - 2.1/4" PASSANGER SIDE - 4" DRIVERS SIDE - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

FORMED CAB PANELS 6"




VP114251
PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED - BLANK - PR



VP114253
PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED WRAP- BLANK - PR

ADD LIGHT OPTIONS:

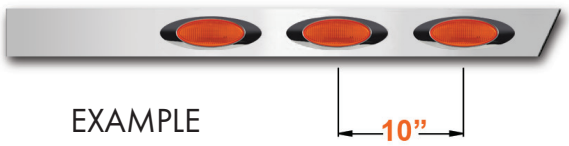


EXAMPLE
VP114251-3GA

PETERBILT MODEL 388 & 389


ONE-PIECE CAB/HOOD EXTENSION PANELS, NO DEF SYSTEM

MOUNTING HARDWARE INCLUDED

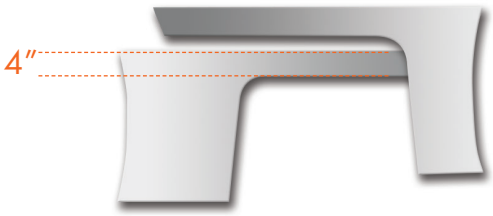


VP116400
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4″ CAB PANELS - BLANK

VP116411
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4″ CAB PANELS - WRAP - BLANK

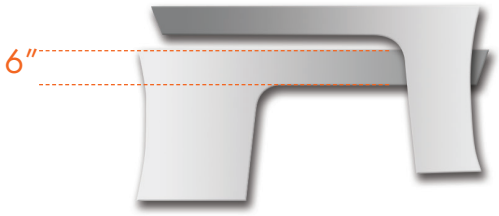


VP116200
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6″ CAB PANELS - BLANK


VP116211
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6″ CAB PANELS - WRAP - BLANK

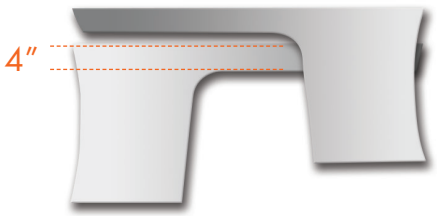

VP116420
PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - ONE PIECE - 389 2008 - NON UREA - 4″ CAB PANELS - BLANK

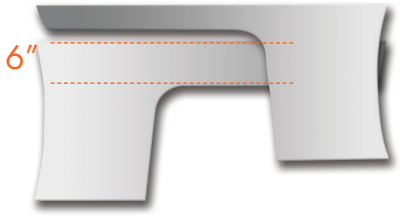

VP116420-6
PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - ONE PIECE - 389 2008 - NON UREA - 6″ CAB PANELS - BLANK

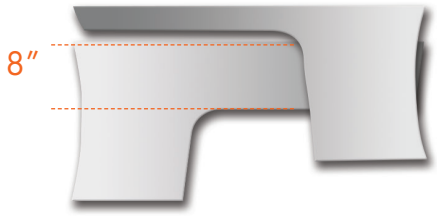

VP116420-8
PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - ONE PIECE - 389 2008 - NON UREA - 8″ CAB PANELS - BLANK

2008-2010 WITH CAT ENGINES USE WIDE PANELS BOTH SIDES
2009-2010 CUMMINS ENGINES USE WIDE DRIVER SIDE, NARROW PASSENGER


ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107


VP116411-8GA shown

PETERBILT MODEL 388 & 389


ONE-PIECE CAB/HOOD EXTENSION PANELS DEF SYSTEM

MOUNTING HARDWARE INCLUDED

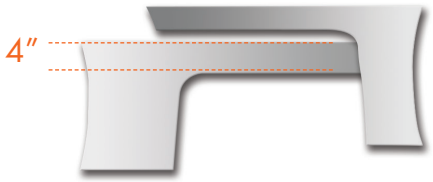

VP116421

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 - 2010 & NEWER W/UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4″ CAB PANEL DRIVERS SIDE - 4″ CAB PANEL PASSENGERS SIDE - BLANK

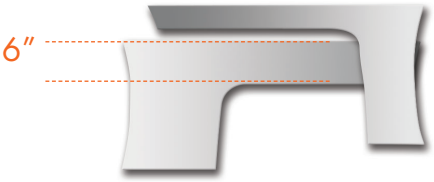

VP116425


PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 - 2010 & NEWER W/ UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4″ CAB PANEL DRIVERS SIDE - 6″ CAB PANEL PASSENGERS SIDE - BLANK

2008-2010 WITH CAT ENGINES USE WIDE PANELS BOTH SIDES
2009-2010 CUMMINS ENGINES USE WIDE DRIVER SIDE, NARROW PASSENGER

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

ONE-PIECE CAB/HOOD EXTENSION PANELS, NO DEF SYSTEM

FORMED PANELS • HARDWARE INCLUDED

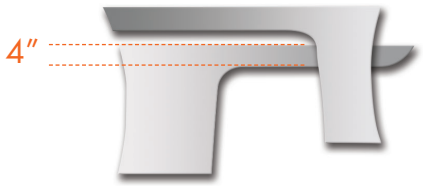


VP114400

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4″ CAB PANELS - BLANK

VP114411

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4″ CAB PANELS - WRAP - BLANK

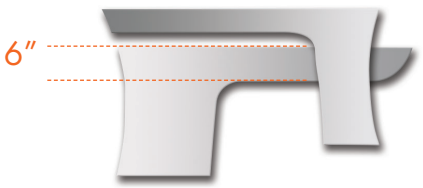


VP114200

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6″ CAB PANELS - BLANK


VP114211

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6″ CAB PANELS - WRAP - BLANK

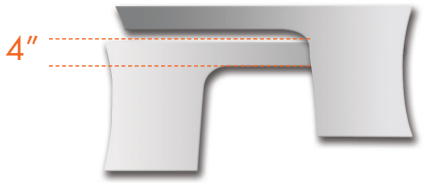

VP114420

PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - FORMED ONE PIECE - 389 2008 - NON UREA - 4″ CAB PANELS - BLANK

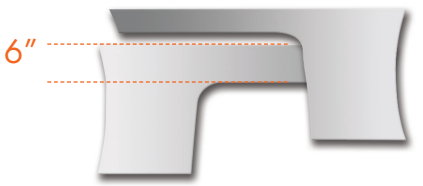


VP114420-6

PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - FORMED ONE PIECE - 389 2008 - NON UREA - 6″ CAB PANELS - BLANK

PETERBILT MODEL 388 & 389

ONE-PIECE CAB/HOOD EXTENSION PANELS DEF SYSTEM

FORMED PANELS • HARDWARE INCLUDED

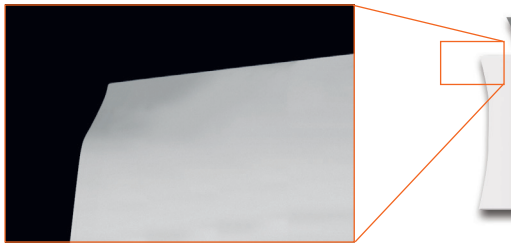

CORNER FOLLOWS
CONTOUR OF TRUCK




VP114421

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 - 2010 & NEWER W/ UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4" CAB PANEL DRIVERS SIDE - 4" CAB PANEL PASSENGERS SIDE - BLANK



VP114422

PB CAB & WIDE REPLACEMENT PANEL - FORMED - ONE PIECE - 388, 389 - 2010 & NEWER W/ UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSANGERS SIDE - 4" CAB PANEL DRIVERS SIDE - 2.1/4" CAB PANEL PASSANGERS SIDE - WRAPPED - BLANK

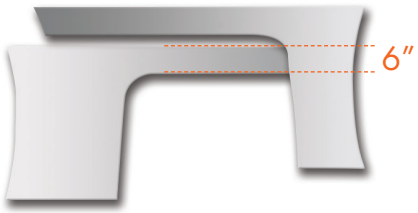

VP114425

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 - 2010 & NEWER W/ UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4" CAB PANEL DRIVERS SIDE - 6" CAB PANEL PASSENGERS SIDE - BLANK



VP114426

PB CAB & WIDE REPLACEMENT PANEL - FORMED - ONE PIECE - 388, 389 - 2014 & NEWER W/ UREA SYSTEM AND DYNAFLEX KIT - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSANGERS SIDE - 4" CAB PANEL DRIVERS SIDE - 2.1/4" CAB PANEL PASSANGERS SIDE - BLANK



VP114427

PB CAB & WIDE REPLACEMENT PANEL - FORMED - ONE PIECE - 388, 389 - 2014 & NEWER W/ UREA SYSTEM AND DYNAFLEX KIT - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSANGERS SIDE - 4" CAB PANEL DRIVERS SIDE - 2.1/4" CAB PANEL PASSANGERS SIDE - WRAPPED - BLANK

2008-2010 WITH CAT ENGINES USE WIDE PANELS BOTH SIDES
2009-2010 CUMMINS ENGINES USE WIDE DRIVER SIDE, NARROW PASSENGER

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

PETERBILT MODEL 388 & 389

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VP110203
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR



VP110207
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR



VP110227
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR



VP110228
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED WRAP- BLANK - PAIR

CAB PANELS 6"

MOUNTING HARDWARE INCLUDED



VP110250
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR



VP110251
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR




VP110254
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR



VP110253
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

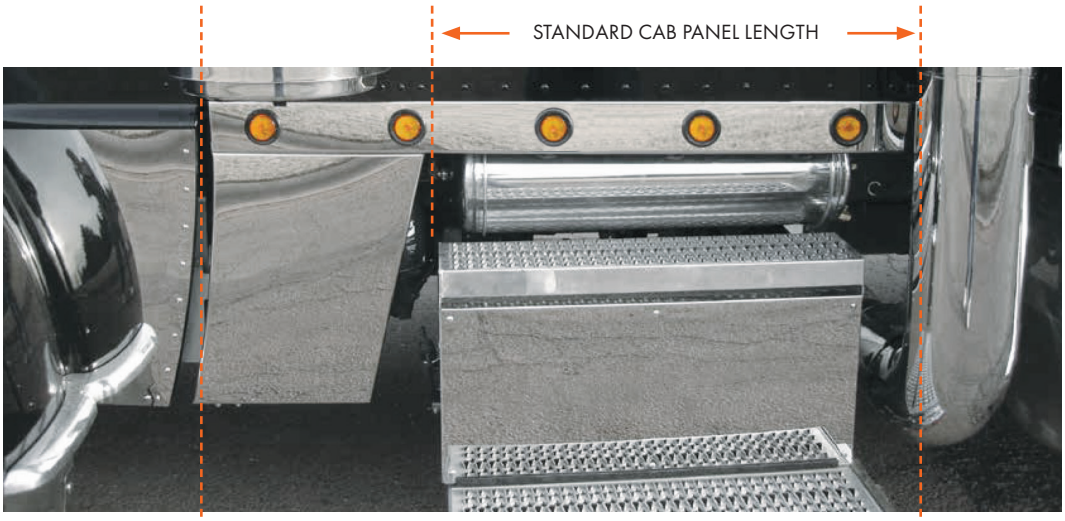

(EXTENDED CAB PANEL VP110227-5RA SHOWN)

PETERBILT MODEL 388 & 389

CAB PANELS NO DEF SYSTEM

MOUNTING HARDWARE INCLUDED



VP113890
PB CAB PANELS - 1987 & NEWER - 389 - STANDARD - BLANK - PR - 44.38" LONG



VP113891
PB CAB PANELS - 1987 & NEWER - 389 - STANDARD WRAP - BLANK - PR

CAB PANELS DEF SYSTEM

MOUNTING HARDWARE INCLUDED



VP110263
PB CAB PANELS - 388,389 - 2010 & NEWER - STANDARD - W / UREA SYSTEM - 2.1/4" PASSENGER SIDE - 4" DRIVERS SIDE - BLANK



VP110264
PB CAB PANELS - 388,389 - 2010 & NEWER - WRAP - W / UREA SYSTEM - 2.1/4" PASSENGER SIDE - 4" DRIVERS SIDE - BLANK



VP110267
PB CAB PANELS - 389 - 2010 & NEWER - EXTENDED - W / UREA SYSTEM - 2.1/4" PASSENGER SIDE - 4" DRIVERS SIDE - BLANK

4" WIDE DRIVER SIDE, ALSO AVAILABLE IN 6" WIDTH
2.25" ONLY ON PASSENGER SIDE

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

PETERBILT MODEL 388 & 389

SLEEPER PANELS 4"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON PAGE 165



VP142004
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR



VP142007
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48"/58" - BLANK - PAIR



VP142000
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR



VP142002
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS 6"

MOUNTING HARDWARE INCLUDED



VP142050
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR



VP142051
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48"/58" - BLANK - PAIR



VP142052
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR



VP142053
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK - PAIR

ADD LIGHT OPTIONS



EXAMPLE
VP142002 – 8 RA



EXAMPLE
VP142007 – 4 GA

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 388 & 389

HOOD EXTENSION PANELS 4"


MOUNTING HARDWARE INCLUDED (EXCEPT VP110314 TAPE MOUNT)



VP110313
PB 389 - HOOD EXTENSION PANEL - FACTORY REPLACEMENT - PAIR




VP110314
PB 389 - HOOD EXTENSION PANEL - FACTORY LAYOVER - PAIR, TAPE MOUNT

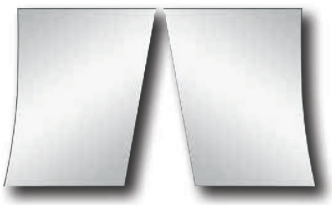


VP110308
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR



VP110309
PB 389 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - PAIR

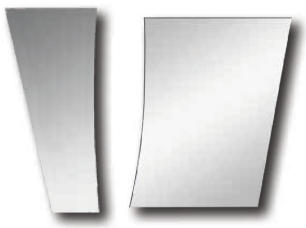

VP110311
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - W/DEF - PAIR

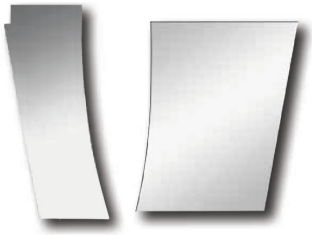


VP110312
PB 389 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - W/DEF - PAIR

HOOD EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED



VP110364
PB 389 - HOOD EXTENSION PANEL - FACTORY REPLACEMENT - PAIR

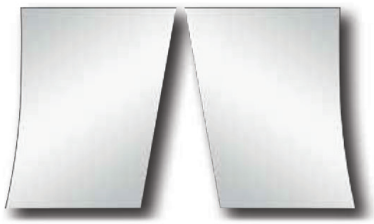

VP110366
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR




VP110367
PB 389 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - PAIR


PETERBILT MODEL 388 & 389

HOOD EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

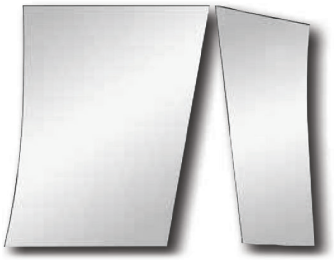


VP110307
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - W/PICKETT EXHAUST ELBOWS - PAIR

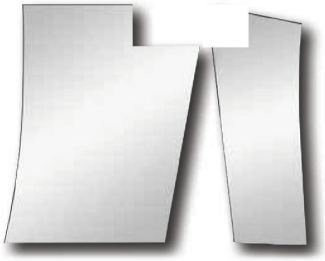


VP110397
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - NOTCHED- BLANK - W/ PICKETT EXHAUST ELBOWS - PAIR

HOOD EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

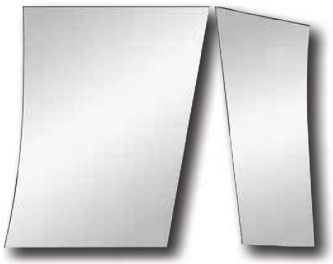


VP110379
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - W/PICKETT EXHAUST ELBOWS - PAIR

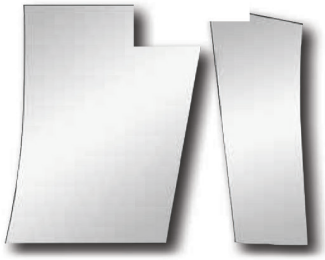

VP110398
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - NOTCHED- BLANK - W/ PICKETT EXHAUST ELBOWS - PAIR

ADD LIGHT OPTIONS

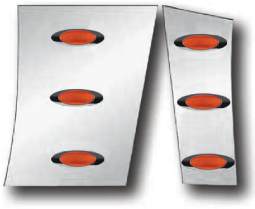

EXAMPLE
VP110307-3GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

PETERBILT MODEL 388 & 389

388 CAB PANEL DEF SYSTEM

MOUNTING HARDWARE INCLUDED



VP110229

2012 AND NEWER 388 W/DEF
WITH VERTICAL EXHAUST
PASSENGER SIDE 35", DRIVER SIDE 40"

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

PETERBILT MODEL 388 & 389

389 DEF BOX LOWERING KIT









PETERBILT MODEL 388 & 389

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

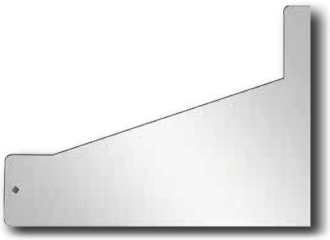

VP142101
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

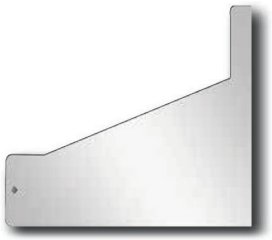


VP142103
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK




SLEEPER EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

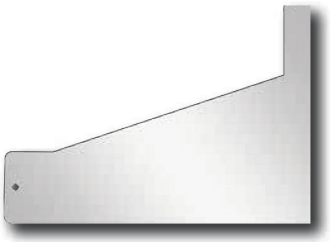

VP142150
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

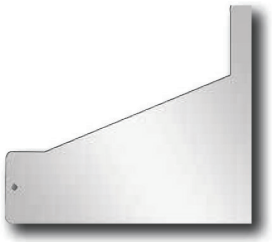

VP142151
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK



Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE
VP142101-1GA



PETERBILT MODEL 388 & 389

AIR CLEANER LIGHT BOXES DONALDSON

CONNECT TO AIR CLEANER STRAPS:



VP112109
PB - AIR CLEANER LIGHTS - BLANK - 388, 389 - 2007 & NEWER - PR - DONALDSON/PREMIUM - FRONT



VP113109
PB - AIR CLEANER LIGHTS - BLANK - REAR - 388, 389 - 2007 & NEWER - PR - DONALDSON/PREMIUM - REAR

FOR STRAPLESS LOOK:



VP112209
PB - AIR CLEANER SUPPORT - BLANK - 379, 388, 389 - 2007 & NEWER - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107


VP112109-6RA shown



VP112109-7RA
PB - AIR CLEANER LIGHTS - 8 ROUND AMBERS - 388, 389 - 2007 & NEWER - PAIR - DONALDSON/PREMIUM

Don't Forget the Light Harness:



VHMS3007
1 - PACCAR - FEMALE 2 - PACCAR - MALE - FOR CONNECTING FRONT & REAR AIR CLEANER LIGHTS

PETERBILT MODEL 388 & 389

MIRROR LIGHT BOXES



VP114011
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - BLANK



ADD -SM WITH BUILT IN SPOT MIRRORS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLES:



VP114011-2GA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 2 - GRANITE - AMBER LEDS



VP114011-5RCA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 5 - 2" ROUNDS - CLEAR AMBER LEDS



VP114011-2SCA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 2 - SLOTTED - CLEAR AMBER LEDS



VP114011-5RA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 5 - 2" ROUNDS - AMBER LEDS

PETERBILT MODEL 388 & 389

BUMPER & GRILLE TRIM



VP120000
PB TAG HANGER
(388, 389)
INCLUDES HARDWARE, FOAM
PROTECTORS AND PLASTIC
LICENSE PLATE BOLT INSERTS




VK120003
TOW PIN COVER FITS 389



VP120012
PB SIDE GRILL
DEFLECTOR 379, 388, 389

SEE PAGE 95 FOR MORE TAG HANGERS

FENDER GUARDS

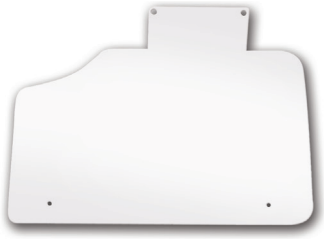

VP120013
PB FENDER GUARDS -
HEAD LIGHT MOUNT - 388,
389 - 2007 & NEWER



VP120014
PB FENDER GUARDS - PB -
HEAD LIGHT MOUNT
- 389 - W/BLINKER BAR – PR

BUG SHIELDS



VP120110
PB BUG SHIELD - STAINLESS
- 367, 388, 389
MOUNTING HARDWARE INCLUDED



PETERBILT MODEL 388 & 389

EMBLEMS



VP100032
PB 389 EMBLEM ACCENT -
RACING STRIPE -
LONG HOOD
INCLUDES MOUNTING HARDWARE



VP100033
PB 389 EMBLEM ACCENT -
RACING STRIPE
- SHORT HOOD
TAPE MOUNT



VP100040
PB 389 HOOD LATCH
GUARD - PAIR
INCLUDES MOUNTING
HARDWARE

FENDER TRIM






VP100123
PB 389 FENDER
TRIM - INNER WELL - 2PC
TAPE MOUNT



VP100122
PB389 FENDER TRIM - 2PC
TAPE MOUNT

HOOD TRIM

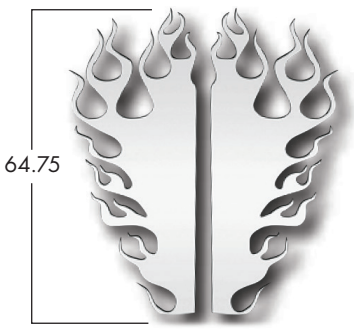

VP100124
PB 389 CENTER HOOD TRIM
2PC FLAME



VP100121
PB CENTER HOOD TRIM - 389
SCREW ON



VP100125
PB 389 CENTER HOOD TRIM
3PC FLAME (VP100121,
VP100124)

PETERBILT MODEL 388 & 389

BLINKER BARS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED



VP120502
PB 389 FRONT BLINKER BARS
- W/LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD AS CUSTOM



VP100502
PB 389 REAR BLINKER BARS -
- W/LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD AS CUSTOM



VP120506M
PB 389 FRONT BLINKER BARS
- W/LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD AS CUSTOM

FENDER SUPPORT COVERS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED



VP120503
PB 389 FENDER SUPPORT
COVER - FRONT
TOO NARROW FOR LIGHT OPTIONS




VP100503
PB 389 FENDER SUPPORT
COVER - REAR
TOO NARROW FOR LIGHT OPTIONS

VP120502 →



PETERBILT MODEL 388 & 389

STAINLESS VISORS

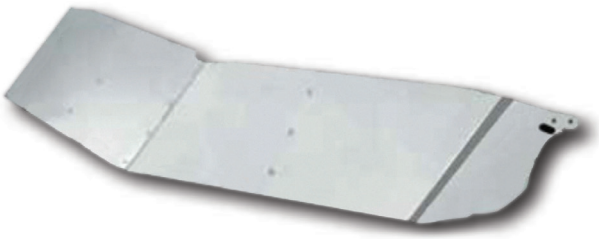

VP130013
PB - 389 14" - DROP VISOR - 2007 - NEWER STANDARD W/ CAB MTD. MIRRORS CURVED WINDOW, ONE PIECE WINDSHIELD
ALSO FITS MODEL 348

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP130013-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

FOR MORE PETE VISORS SEE PAGES 198-201

SLEEPER FILLER PANELS

MOUNTING HARDWARE INCLUDED





VP140021
PB SPEEPER REAR CORNER FILLER PANELS 70" ONLY - 379, 389 - 4 - 4" LEDS - PAIR

PETERBILT MODEL 388 & 389

MISC. TRIM PIECES



VP101001
PB 389 LOWER HOOD PANEL -
2007 & NEWER - PAIR



VP100038
PB - 389 FRONT FLAP
WEIGHTS - 11GA – PAIR



VP110018
PB WINDSHIELD TRIM - 5 PC
379, 389 - LARGE



VPTFI8022
PB OUTER FENDER
TRIM - 389
DOES NOT FIT 388
SOLD AS A SET OF 3 PAIR

VPTFI8022S
FOR ONE PAIR



VP110017
PB 388/389 TOP OF DOOR TRIM - LOWERED LOOK - PAIR
WILL ONLY FIT DOORS WITHOUT VENT WINDOW

VP110017P




ADD -P FOR PAINTABLE

PETERBILT MODEL 388 & 389

MISC. TRIM PIECES



VP110020
PB - OUTSIDE DOOR TRIM -
389 - 2-PCS
TAPE MOUNT

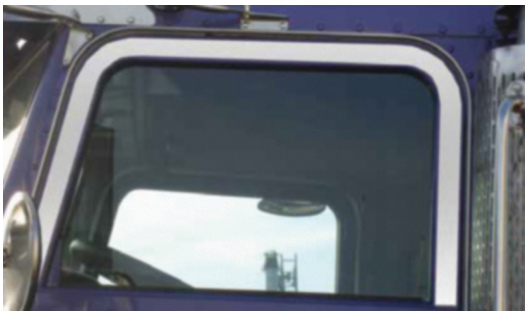




VP110025
PB 379, 388, 389 WINDSHIELD WIPER
ARM COVERS
TAPE MOUNT





VP110019
PB 389 OUTSIDE DOOR TRIM -
CORNER ANGLE - PAIR
TAPE MOUNT

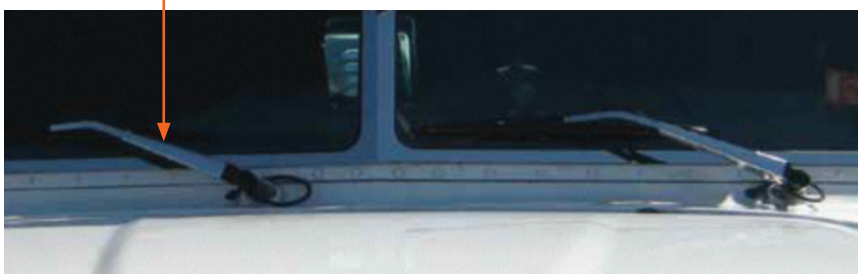





VP110090
PB EXHAUST SHIELDS -
388, 389 - W/NO LOGO
BRACKETS & HARDWARE INCLUDED

PETERBILT MODEL 388 & 389


SLEEPER SHOCK COVERS



VP140034
PB SLEEPER SHOCK COVERS
- 379, 389 - 2 PCS (L+R)
ANGLED
TAPE MOUNT




VP140022
PB 379, 389 SLEEPER SHOCK
COVERS - 2 PAIR
TAPE MOUNT

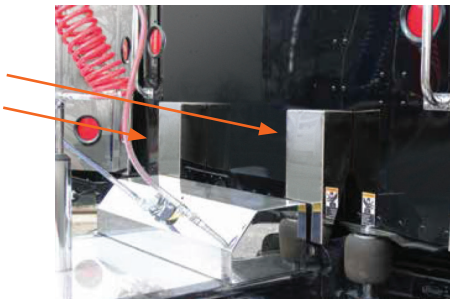



VP140032
PB SLEEPER SHOCK COVERS
- 379,389 - 1 LG FULL COVER
TAPE MOUNT

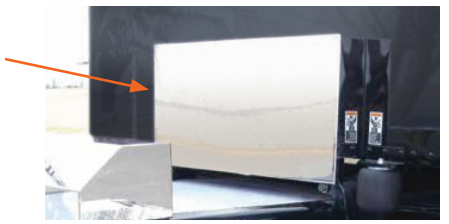




VP140035
PB SLEEPER SHOCK COVER -
379,389 ANGLED FULL COVER



VP140033
PB SLEEPER SHOCK COVERS
- 379,389 - 1 LG CURVED FULL COVER

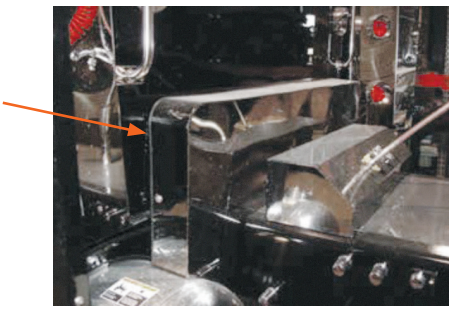

RUBBER STRIP & HARDWARE INCLUDED

AIR DEFLECTORS



VP110016
PB 359 - 379, 389 WINDOW
AIR DEFLECTORS
TAPE MOUNT



VP110031
PB 359 - 379, 389 WINDOW
AIR DEFLECTORS W/LOWER
LOOKS(VP110017)WINDOW
TRIM 37.25" X 20.375"
TAPE MOUNT

PETERBILT MODEL 388 & 389

FUEL TANK STRAP COVERS


BRACKETS & MOUNTING HARDWARE INCLUDED



VP150020
PB - FUEL TANK STRAP COVERS - 4PCS



VP150029
PB - FUEL TANK STRAP COVERS - 2PCS NOT 359

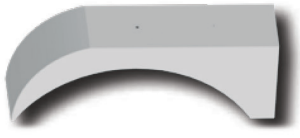

VP150029R
PB - FUEL TANK STRAP COVERS - ROUND - 2PCS ALL BUT 359



EXHAUST COVERS



VP150021
PB - 389 EXHAUST COVER - PASSENGER SIDE - FITS 06 FITS 06 - JULY 07



VP150022
PB - 389 EXHAUST COVER - DRIVERS SIDE - FITS 06 - JULY FITS 06 - JULY 07




VP150023
PB - 388, 389 EXHAUST COVER - PASSENGER & DRIVERS SIDE FITS 06 - JULY 07




Valley Chrome Plating
QUALITY TRUCK PARTS

PETERBILT MODEL 388 &389


TOOL & BATTERY BOX COVERS

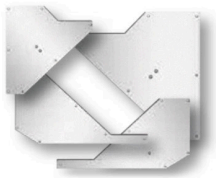

VP150000
PB BATTERY BOX STAINLESS COVER KIT - 389 - 2013-OLDER - 4 PCS

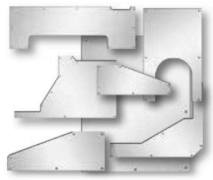

VP150009
PB TOOL BOX STAINLESS COVER KIT - 389 - 2013-OLDER - CATALYTIC COVER PASS SIDE - 7 PCS

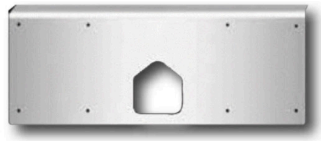


VP150005
PB TOOL BOX COVER - 389



VP150006
PB BATTERY BOX COVER - 389 WITH 1" LIP



VP150007
PB TOOL & BATTERY BOX COVERS - 389 WITH 1" LIP - 2 PCS

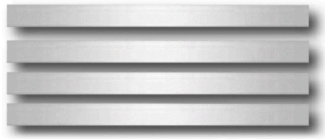

VP150008
PB TOOL & BATTERY BOX STEP TRIMS - 389 - 4 PCS




VP150014
PB 389 TOOL BOX FILLER BLOCK FOR BOTTOM STEP




VP150018
PB 389 BATTERY BOX COVER MOLDED - 3PCS



VP150019
PB 389 BATTERY BOX LOWER STEP COVER W/SIDES - 3PCS

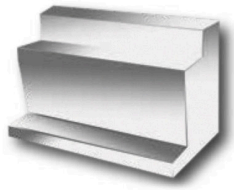


VP150024
PB - 389 UREA CATALYTIC COVER 3PC COVER - '12 AND OLDER

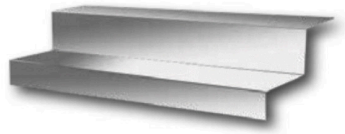

VP150025
PB - 389 UREA CATALYTIC COVER HIGHLIGHT - UPPER - '12 AND OLDER



VP150042
PB - 389 - 2014 UREA CATALYTIC COVER HIGHLIGHT - SIDES - 2PCS

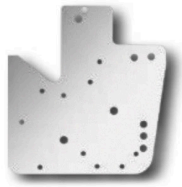

VP150027
PB - 389 - 2013-OLDER UREA CATALYTIC COVER HIGHLIGHT - SIDES - 2PCS




VP150026
PB - 389 UREA CATALYTIC COVER HIGHLIGHT - LOWER

ADD "P" FOR PAINTABLE

PETERBILT MODEL 388 & 389


BATTERY BOXES & TOOL BOXES

STANDARD WIDTH 30" / CUSTOM WIDTHS AVAILABLE UP TO 48"

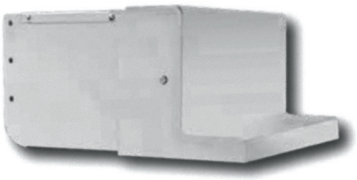


VP150112 - PB - 379,388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - MOULDED LID

VP150113 - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - MOULDED LID

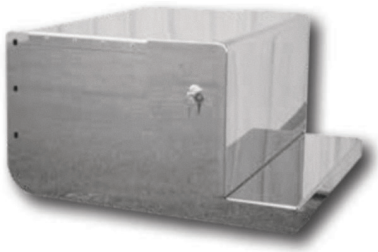

VP150109R - PB - 379, 388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK

VP150110R - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK

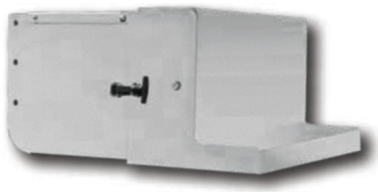


VP150115 - PB - 379,388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - MOULDED LID

VP150116 - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - MOULDED LID

VP150116TM - PB - 379, 388, 389 BATT, BOX - STAINLESS W/TIE DOWNS - 18" TALL MOLDED LID

ADD -36 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 36" BOX
ADD -48 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 48" BOX

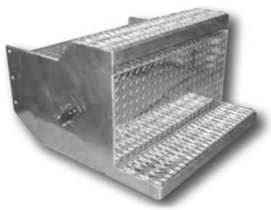

VP150103
PB - 379, 388, 389 BATTERY BOX - ALUMINUM



VP150104
PB - 379, 388, 389 BATTERY BOX - ALUMINUM




BOX STEP HIGHLIGHTS/PROTECTORS



VP150030
PB TOOL BOX/BATTERY BOX - STEP PROTECTOR-(18") - WICKED PR

VP150031
PB TOOL BOX/BATTERY BOX - STEP PROTECTOR- (30") WICKED PAIR

PAINTED OPTIONS SHOWN

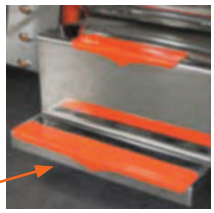

STAINLESS ACCESSORIES

PETERBILT MODEL 567



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 567

CAB PANEL

MOUNTING HARDWARE INCLUDED



VP110277
PB CAB PANELS - 567 - BLANK

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED



VP140283
PB SLEEPER PANELS - 567 - 80" - BLANK W/REAR EXHAUST



VP142079
PB SLEEPER PANELS - 567 & 579 - 80" - EXAUST BEHIND SLEEPER

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
567, 579	36"	44"
	63"	72"
	(N/A)	80"

HOOD EXTENSION PANELS



VP110401
PB 567 - HOOD EXTENSION PANEL - FILLER PANEL



VP110402
PB 567 - HOOD EXTENSION PANEL - FACTORY LAYOVER TAPE MOUNT



VP110403
PB 567 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR

FENDER GUARDS



VP120019
PB FENDER GUARD - 567 FITTED 4PCS. UPPER & LOWER

PETERBILT MODEL 567

BUG SHIELDS



VP120114
PB BUG SHIELD - STAINLESS
567, 579
MOUNTING HARDWARE INCLUDED

FUEL TANK STRAP COVERS

BRACKETS & MOUNTING HARDWARE INCLUDED



VP150048
PB - 567 FUEL TANK STRAP
COVERS - 4PCS



Valley Chrome Plating
QUALITY TRUCK PARTS

PETERBILT MODEL 567

STAINLESS VISORS

VP130007
PB - 12" - DROP VISOR 2013 579 DAY CAB
ALSO FITS MODEL 567

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END
FOR PAINTABLE. EXAMPLE:

VP130007P
RAW 18 GAUGE STEEL



PAINTABLE CUSTOM VISOR SHOWN
VP130007P-16-10BYA

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

FOR MORE PETE VISORS SEE PAGES 198-201

Valley Chrome Plating
QUALITY TRUCK PARTS

STAINLESS ACCESSORIES

PETERBILT MODEL 579



Bumpers and Stainless Accessories made in the USA


Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

STAINLESS ACCESSORIES

PETERBILT MODEL 579



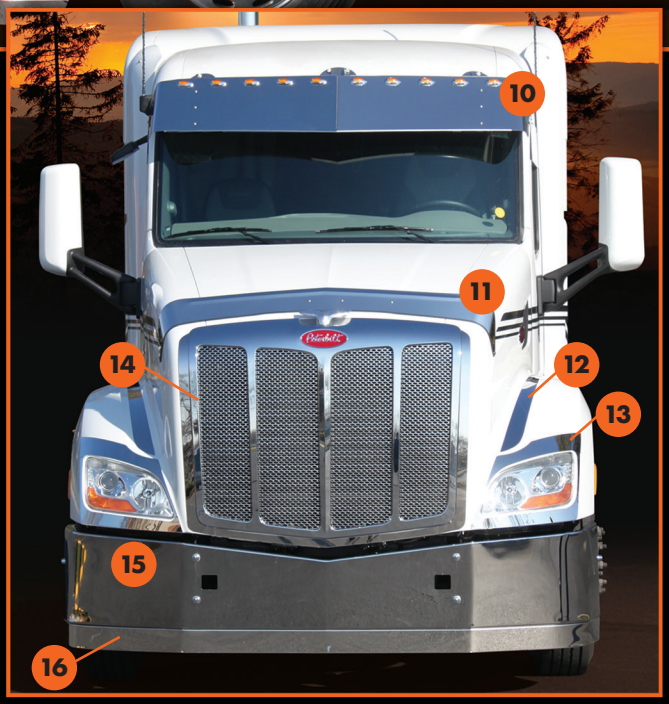

1	**VP110028**	Top of door trim – "lowered" look
2	**VP140029**	Sleeper door handle outer trim with fire extinguisher cutout
3	**VP142077**	Sleeper panels – driver & pass. sides (shown with optional light cutouts)
4	**VP150112-21**	Tool box 21"
5	**VP150032**	Fuel tank fairing upper highlight trim
6	**VP150034**	Kick panel trim
7	**VP110271**	Cab panel with heater plug cutout (shown with optional light cutouts)
8	**VP110029**	Lower door highlight trim
9	**VP100127**	Fender highlight trim (4 pcs driver & passenger sides)
10	**VP130008**	Visor (VP130008-10GMA shown)
11	**VP120114**	Bug shield
12	**VP100126**	Fender highlight, 2 pcs (inner well)
13	**VP120018**	Fender guards
14	**VP100034**	Front hood bug guards (3 pcs.)
15	**HZ-0010-16Y**	Front bumper (other options available)
16	**HZ-SP**	Front bumper air dam

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 579

CAB PANELS

MOUNTING HARDWARE INCLUDED
ULTRA AND ULTRA LOFT CABS USE SAME PANELS



VP110270
PB CAB PANELS - 579 - BLANK - 2 PCS



VP110271
PB CAB PANELS - 579 - BLANK W/HEATER PLUG HOLE - 2 PCS



VP110276
PB CAB PANELS - 579 - BLANK - SHORT HOOD - 2016



VP110272
PB CAB PANELS - 579 DAY CAB OR VERT EXHAUST BLANK - 2 PCS



VP110273
PB CAB PANELS - 579 DAY CAB OR VERT EXHAUST- BLANK W/HEATER PLUG HOLE - 2 PCS

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED



VP142075
PB SLEEPER PANELS - 579 - 36"/44" - EXAUST BEHIND SLEEPER



VP142077
PB SLEEPER PANELS - 579 - 63"/72" - BLANK



VP142078
PB SLEEPER PANELS - 579 - 80" - BLANK W/FRONT EXHAUST



VP142079
PB SLEEPER PANELS - 579 - 80" - EXAUST BEHIND SLEEPER

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
567, 579	36"	44"
	63"	72"
	(N/A)	80"

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

VP110271-4GMA




PETERBILT MODEL 579

DEF SYSTEM PANELS

BRACKETS & MOUNTING HARDWARE INCLUDED



VP150043
PB - 579 DEF CATALYTIC
COVER HIGHLIGHT - UPPER

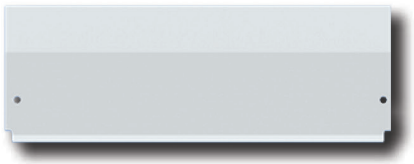


VP150044
PB - 579 DEF CATALYTIC
COVER HIGHLIGHT - LOWER



VP150045W
PB - 579 DEF CATALYTIC
LOWER STEP COVER - WING STYLE



VP150046
PB - 579 DEF CATALYTIC
EXHAUST COVER -
DYNAFLEX EXHAUST

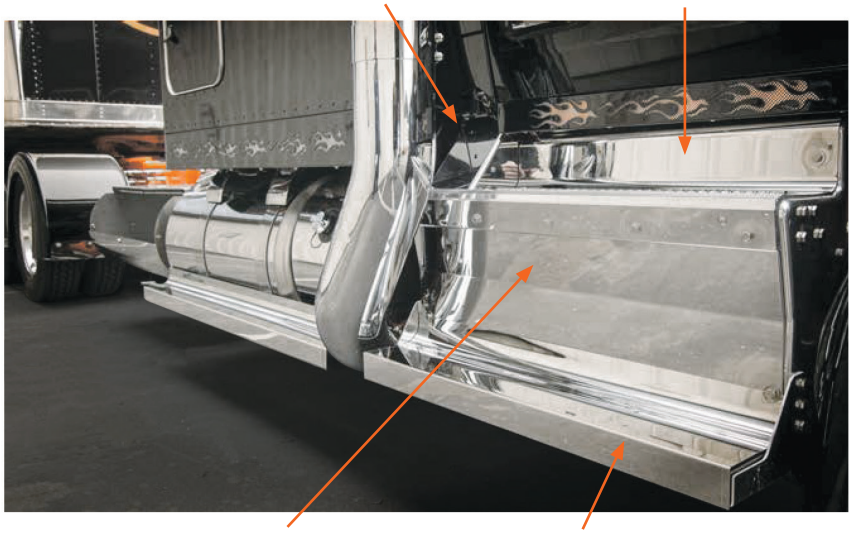

Valley Chrome Plating
QUALITY TRUCK PARTS

PETERBILT MODEL 579

MISC. TRIM PIECES



VP100126
PB 579 FENDER
HIGHLIGHT - INNER WELL 2 PCS
TAPE MOUNT



VP100127
PB 579 FENDER
TRIM DS/PS - 4PC
TAPE MOUNT




VP100034
PB 579 FRONT HOOD GRILLE SURROUND
TAPE MOUNT





VP110028
PB 579 TOP OF DOOR TRIM -
LOWERED LOOK - PAIR
TAPE MOUNT

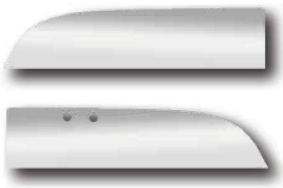

VP110030
PB 579 TOP OF DOOR TRIM -
LOWERED LOOK - PAIR - W/MIRROR
HOLES PASS. SIDE



PETERBILT MODEL 579

MISC. TRIM PIECES



VP110029
PB - 579 LOWER DOOR
HIGHLIGHT - 2PC







VP120018
PB FENDER GUARD - 579
FITTED 4PCS. UPPER &
LOWER





VP120114
PB BUG SHIELD - STAINLESS
567,- 579
MOUNTING HARDWARE INCLUDED

PETERBILT MODEL 579

STAINLESS VISORS



VP130007
PB - 12" - DROP VISOR 2013 TO 2019 579 DAY CAB ONLY
ALSO FITS MODEL 567, DOES NOT FIT ULTRA LOFT

VP130008
PB - 14" - DROP VISOR 2013 TO 2019 579 RAISED ROOF ULTRACAB
NOTE: MOUNTS TO EXISTING FACTORY VISOR BRACKETS
NO OTHER MOUNTING BRACKETS PROVIDED

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END
FOR PAINTABLE. EXAMPLE:

VP130008-P
RAW 18 GAUGE STEEL



VP130008-10GMA SHOWN

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107



VP132008
PB - 18" GANGSTER VISOR - FITS 579
ULTRA CAB ONLY, DOES NOT FIT ULTRA LOFT



VP132008-BF
PB - 18" GANGSTER VISOR -
BUTTERFLY - FITS 579
ULTRA CAB ONLY, DOES NOT FIT ULTRA LOFT



VP130014
PB - 16" STD MOUNT DROP VISOR
579 ULTRA LOFT ONLY

FOR MORE PETE VISORS SEE PAGES 198-201

PETERBILT MODEL 579


SLEEPER SHOCK COVERS



VP140036
PB SLEEPER BREATHER COVERS - 579 - 2 PCS ANGLED TAPE MOUNT



VP140037
PB SLEEPER SHOCK/ BREATHER COVER - 579 FULL COVER RUBBER STRIP & MOUNTING HARDWARE INCLUDED

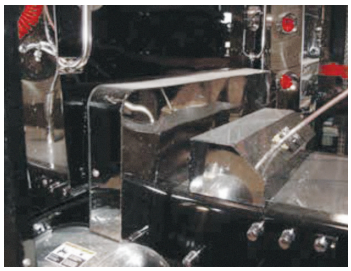



VP140038
PB SLEEPER SHOCK COVER - 579 FULL COVER RUBBER STRIP & MOUNTING HARDWARE INCLUDED

TANK FAIRING HIGHLIGHT



VP150032
PB - 579 FUEL TANK FAIRING UPPER HIGHLIGHT - 2PCS TAPE MOUNT



KICK PANEL TRIM






VP150034
PB - 579 DOOR ENTRY KICK PANELS - 2PCS

STAINLESS ACCESSORIES

PETERBILT MODEL 587



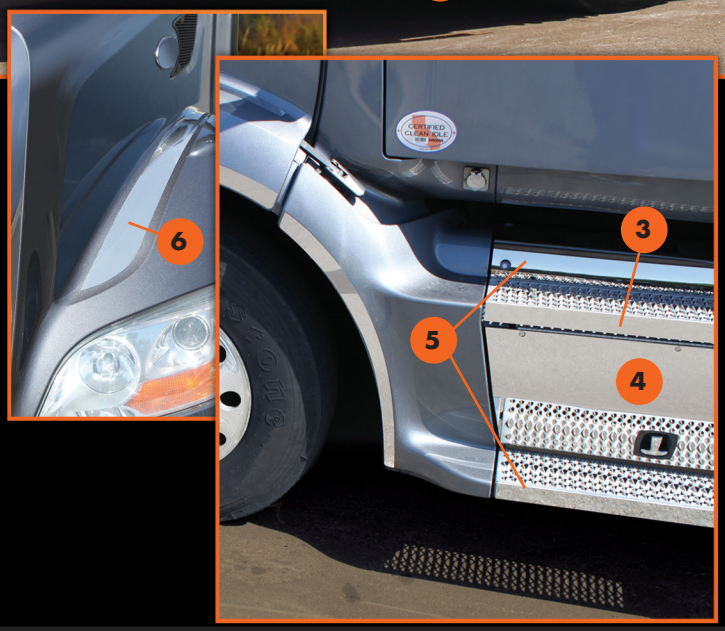

1	**VP13011**	Drop visor, 16", for raised roof
2	**VP100129**	Outer fender trim kit (4 pieces – driver & pass. sides)
3	**VP150036**	Door entry kick panels (2 pieces – driver & pass. sides)
4	**VP150037**	Tool box / battery box cover (One pair – driver & pass. sides)
5	**VP150038**	Step highlights, upper & lower (4 pieces – driver & pass. sides)
6	**VP100128**	Fender inner highlight (2 pieces – driver & pass. sides)
7	**HOA-0010-16**	Chrome bumper, 16" wide (other options available)
8	**HOA-SP**	Stainless air dam for bumper

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 587

FENDER TRIM



VP100128
PB 587 FENDER
HIGHLIGHT DS/PS - 2PC





VP100129
PB 587 FENDER
TRIM DS/PS - 4PC



STAINLESS VISORS

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END
FOR PAINTABLE. EXAMPLE:

VP130011P
RAW 18 GAUGE STEEL

VP130011
PB - 587 16" DROP VISOR - 2011 AND NEWER RAISED ROOF



ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107


PETERBILT MODEL 587

MISC. TRIM PIECES





VP150036
PB - 587 DOOR ENTRY KICK PANELS - 2PCS

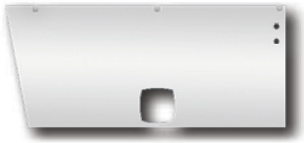

VP150037
PB - 587 TOOL/BATTERY BOX COVER - 2 PCS



VP150038
PB - 587 0 STEP HIGHLIGHTS - 4 PCS

Valley Chrome Plating
QUALITY TRUCK PARTS


PETERBILT MODEL 589




1. VP130017 - 12" DROP VISOR (MOUNTS TO FACTORY BRACKETS)
2. VP112120 - 7GSCA FRONT AIRCLEANER LITE BAR W/7 GRANITE SLIM CLEAR AMBERS
3. VP110420 - 4GSCA HOOD EXTENSION W/4 GRANITE SLIM CLEAR AMBERS
4. VP110221 - 3GSCA DRIVER-SIDE CAB PANEL W/3 GRANITE SLIM CLEAR AMBERS
5. VP113120 - 7GSCR REAR AIRCLEANER LITE BAR W/7 GRANITE SLIM CLEAR REDS
6. VP142045 - 5GSCA 63" SLEEPER PANEL W/5 GRANITE SLIM CLEAR AMBERS

PETERBILT MODEL 589

FENDER GUARDS, AIR CLEANER LIGHT BARS, CAB & SLEEPER PANELS

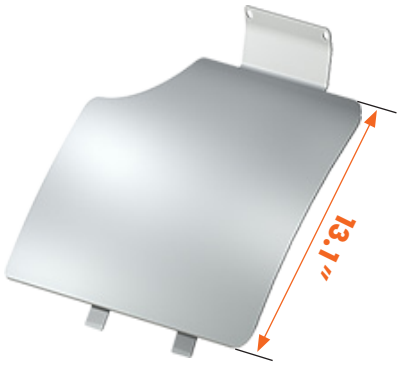

VP120020
PB BLIND MOUNT FENDER GUARD

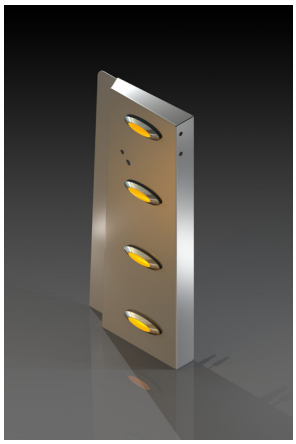

VP110420-4GSCA
PB HOOD EXTENSION
W/4 GRANITE SLIM CLEAR AMBERS



VP113120-7GSCR
PB REAR AIRCLEANER LITE BAR
W/7 GRANITE SLIM CLEAR REDS



VP142045-5GSCA
PB 63" SLEEPER PANEL
W/5 GRANITE SLIM CLEAR AMBERS




VP112121
PB FRONT AIRCLEANER LITE BAR
(NO CUTOUTS)



VP112120-7GSCA
PB REAR AIRCLEANER LITE BAR
W/7 GRANITE SLIM CLEAR AMBERS




VP110221-3GSCA
PB DRIVER-SIDE CAB PANEL
W/3 GRANITE SLIM CLEAR AMBERS

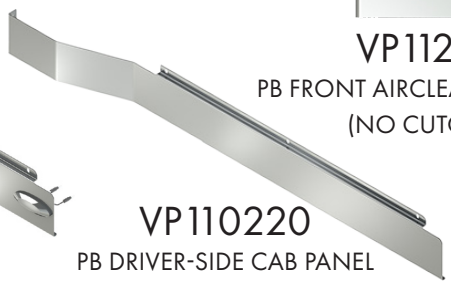

VP110220
PB DRIVER-SIDE CAB PANEL
(NO CUTOUTS)



VP150054
PB FUEL TANK WRAP

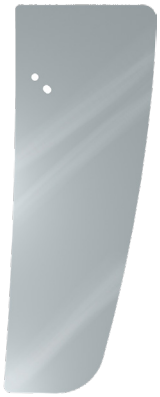

VP110421
PB FACTORY HOOD PANEL REPLACEMENT

PETERBILT MODEL 589 YEARS 2024 & NEWER


VISORS




VP135017
12" WICKED VISOR
(FITS TRUCKS W/FACTORY VISOR)

PETERBILT

WATERMELON LIGHT BRACKETS & PLATES

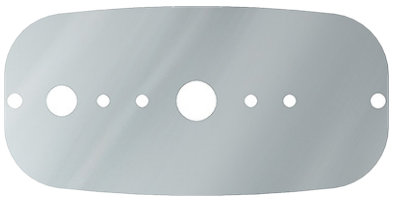


VWM005
SINGLE WATERMELON INTERIOR PLATE
W/SWITCH HOLE
(389 CENTER DOME LIGHT)

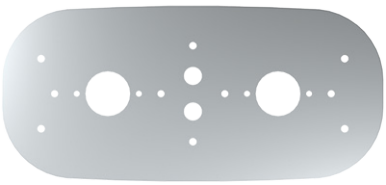

VWM001
DUAL WATERMELON INTERIOR PLATE
W/SWITCH HOLE
(389 DOME LIGHT)



VU-1110L-A
AMBER WATERMELON LIGHT
(EXPLODED VIEW)
(SOLD SEPARATELY)

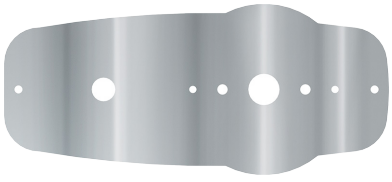

VWM009
SINGLE WATERMELON INTERIOR PLATE
W/SWITCH HOLE



VWM012
SINGLE WATERMELON FRAME BRACKET
CUTOUTS ONLY

ACCESSORIES FOR ALL PETERBILT MODELS







Valley Chrome Plating

QUALITY TRUCK PARTS

ALL PETERBILT MODELS

HOOD EMBLEMS

PETERBILT LOGO EMBLEM NOT INCLUDED



VP100004
EMBLEM ACCENT PB
TEAR DROP - 2PC
TAPE MOUNT



VP100005
EMBLEM ACCENT PB
TEAR DROP W/CUTOUTS - 2PC
TAPE MOUNT



VP100006
EMBLEM ACCENT PB
ELLIPSE W/CUTOUT - PAIR
INCLUDES MOUNTING HARDWARE



VP100007
EMBLEM ACCENT PB
SKULL & CROSSBONES - PAIR
TAPE MOUNT



VP100008
EMBLEM ACCENT PB
CHECKERED FLAG - PAIR
INCLUDES MOUNTING HARDWARE



VP100010
EMBLEM ACCENT PB
WILD FIRE - PAIR
TAPE MOUNT



VP100011
EMBLEM ACCENT PB
FLAMES - 2PC
INCLUDES MOUNTING HARDWARE



VP100013
EMBLEM ACCENT PB
OVAL - PAIR
TAPE MOUNT



VP100012
EMBLEM ACCENT PB
CHEVRON - PAIR
TAPE MOUNT

ALL PETERBILT MODELS

HOOD EMBLEMS

PETERBILT LOGO EMBLEM NOT INCLUDED



VP100014
EMBLEM ACCENT PB
OVAL - W/CUTOUTS - PAIR
INCLUDES MOUNTING
HARDWARE



VP100015
EMBLEM ACCENT PB
OVAL - W/SPADES - PAIR
TAPE MOUNT



VP100016
EMBLEM ACCENT PB
OVAL - W/2-EXTENSIONS - PAIR
TAPE MOUNT



VP100017
EMBLEM ACCENT PB
OVAL - W/3-EXTENSIONS - PAIR
TAPE MOUNT



VP100018
EMBLEM ACCENT PB
SWIRL - 2PC
INCLUDES MOUNTING
HARDWARE



VP100027
EMBLEM ACCENT PB -
FISH - PAIR
INCLUDES MOUNTING
HARDWARE



VP100029
EMBLEM ACCENT PB -
FLAMES - 2PCS.
INCLUDES MOUNTING
HARDWARE



VP100019
EMBLEM ACCENT PB
SWIRL - W/CUTOUTS - 2PC
INCLUDES MOUNTING
HARDWARE

HOOD LATCH GUARDS



VP100022
PB HOOD LATCH TRIM
STANDARD HOOD - 2PC



VP100024
PB HOOD LATCH TRIM
EXTENDED HOOD - 2 PC



VU190011
PB, FL, KW, HOOD LATCH
ACCENT TRIM - PAIR

ALL PETERBILT MODELS

KEY GUARDS

STRONG 3M DOUBLE-SIDED TAPE INCLUDED



VP110001
PB KEY GUARD
FLAME - PAIR



VP110002
PB KEY GUARD
TEAR DROP- PAIR



VP110003
PB KEY GUARD
CHECKERED FLAG - PAIR



VP110004
PB KEY GUARD
TRIANGLE - PAIR



VP110005
PB KEY GUARD
OVAL -PAIR



VP110006
PB KEY GUARD
ELLIPSE W/CUTOUT - PAIR




VP110007
PB KEY GUARD
WILDFIRE - PAIR




VP110008
PB KEY GUARD - FISH

MISC. TRIM PIECES

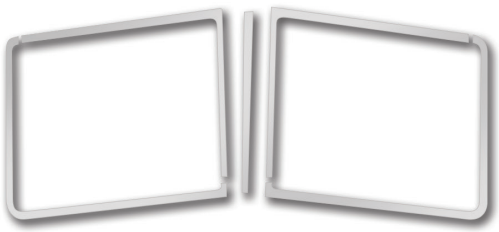


VP110014
PB WINDSHIELD TRIM 3 PC

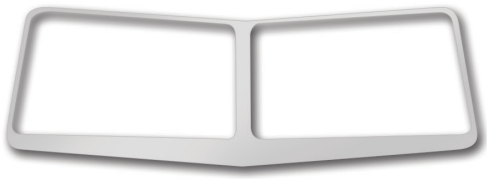

VP110021
PB WINDSHIELD TRIM 5 PC



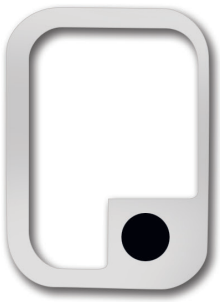

VP110011
PB CAB MOUNTED MIRRORS
DOOR LATCH/KEY HOLE
COVERS - 2PC

ALL PETERBILT MODELS

BUG SHIELD – MODEL 387



VP120108
PB BUG SHIELD - STAINLESS
PETE - 387
MOUNTING HARDWARE INCLUDED

WINDOW TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VP140001
PB RECTANGULAR VIEW WINDOW TRIM RING



VP140002
PB 70" SLEEPER WINDOW TRIM - PAIR



VP140003
PB SLEEPER/DAY CAB REAR WINDOW TRIM 37.25" X 20.375"



VP140014
PB 70" SLEEPER WINDOW TRIM - LOWERED LOOK PR

SLEEPER WINDOW LOWER LOOKS



VP140117
PB TOP OF DOOR TRIM - LOWERED LOOK - PR
WILL ONLY FIT DOORS WITHOUT VENT WINDOW

ADD -P FOR PAINTABLE



PETERBILT SUN VISORS BY CAB TYPE

STANDARD MOUNT STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING



VP130000
PB-14"- DROP VISOR 1996-98 ULTRA CAB

VP130001
PB - 359 12" DROP VISOR - ANY YEAR 359



VP130002
PB-14" - DROP VISOR - STANDARD CAB 2005 & OLDER WITH DOOR MOUNTED MIRRORS

VP130002-16
PB - 16" - DROP VISOR - STANDARD CAB 2005 & OLDER, NOTE 04 AND OLDER DOOR MNT MIRRORS



VP130003
PB - 14" - DROP VISOR - 1999-2001 ONLY, ULTRACAB

VP130003-16
PB-16" - DROP VISOR 1999 - 2001 ULTRACAB



VP130004
PB - 14" - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS

VP130004-16
PB - 16" - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS



VP130005
PB - 14" - DROP VISOR - 2005 - NEWER ULTRACAB - W/CAB MOUNTED MIRRORS

VP130005-16
PB - 16" - DROP VISOR - 2005 - NEWER ULTRACAB W/CAB MOUNTED MIRRORS



VP130006
PB - 13.5" - DROP VISOR - 2005 - NEWER STANDARD CAB W/CAB MOUNTED MIRRORS, ALSO FITS MODEL 348

VP130006-16
PB - 16" - DROP VISOR - 2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS ALSO FITS MODEL 348



VP130017
PB-12"- DROP VISOR 2025-NEW



VP130005

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP130002-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

PETERBILT SUN VISORS BY CAB TYPE

BOLTLESS MOUNT STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING



VP131002
PB-14" - BOLTLESS - DROP VISOR - STANDARD CAB 2005 & OLDER - DOOR MOUNTED MIRRORS - 1PC

VP131002-16
PB-16" - BOLTLESS - DROP VISOR - STANDARD CAB 2005 & OLDER - DOOR MOUNTED MIRRORS - 1PC



VP131003
PB-14" - BOLTLESS - DROP VISOR - 1999 - 2001 - ULTRACAB - 1PC

VP131003-16
PB-16" - BOLTLESS - DROP VISOR - 1999 - 2001 - ULTRACAB - 1PC



VP131004
PB - 14" - BOLTLESS - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS - 1 PC

VP131004-16
PB - 16" - BOLTLESS - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS - 1 PC



VP131005
PB - 14" - BOLTLESS DROP VISOR 2005 + ULTRACAB ONE PIECE W/CAB MT MIRRORS

VP131005-16
PB - 16" - DROP VISOR 2005 + ULTRACAB ONE PIECE W/CAB MT MIRRORS



VP131006
PB - 14" - BOLTLESS - DROP VISOR - 2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS - 1 PC

VP131006-16
PB - 16" - BOLTLESS DROP VISOR - 2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS - 1 PC



VP130005

COOL BOLTLESS LOOK!

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP131002-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

PETERBILT WICKED VISORS

BOLTLESS STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING




VP135000
PB - 15" WICKED - DROP VISOR
1996-98 ULTRA CAB - 2 PC

VP135001
PB - 12" WICKED - DROP
VISOR - ANY YEAR 359 - 2PC



VP135002
PB - 15" WICKED - DROP
VISOR -STANDARD CAB
2005 & OLDER W/DOOR
MOUNTED MIRRORS - 2 PC

VP135003
PB - 15" WICKED - DROP
VISOR 1999-2001 ULTRA
CAB - 2PC

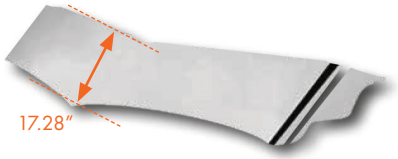

VP135004
PB - 15" WICKED - DROP
VISOR - 2002 - 2005
ULTRACAB WITH DOOR
MOUNTED MIRRORS - 2 PC

VP135005
PB - 15" WICKED - DROP
VISOR - 2005 - NEWER
ULTRACAB W/CAB MOUNTED
MIRRORS - 2 PC



VP135006
PB - 15" WICKED - DROP
VISOR - 2005 - NEWER
STANDARD W/CAB
MOUNTED MIRRORS - 2 PC



VP136002
PB - 13" WICKED
GANGSTER VISOR - FITS
ANY - 370 SERIES & 380
SERIES - 2 PC



VP135006

YOU SAY
WICKED
LIKE IT'S A BAD THING

COOL BOLTLESS LOOK!




ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

PETERBILT SUN VISORS

GANGSTER STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
MADE WITH 16 GAUGE GRADE 430

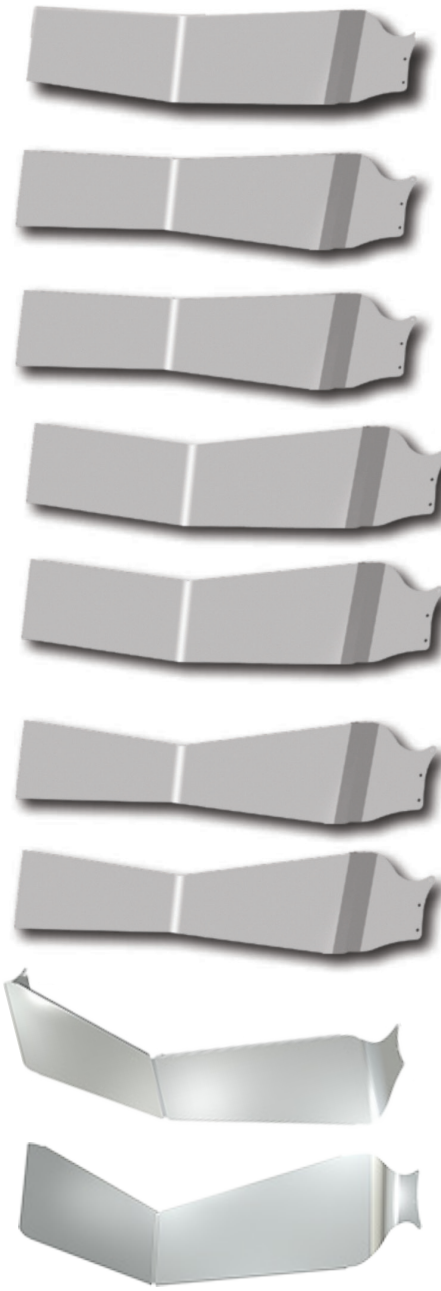

VP132002
PB - 12" GANGSTER VISOR - FITS ANY - 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002-BF
PB - 12" GANGSTER BUTTERFLY VISOR - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002P-BF
PB - 12" GANGSTER BUTTERFLY VISOR PAINTABLE - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002-RBF
PB - 12" GANGSTER REVERSE BUTTERFLY VISOR - FITS ANY - 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002P-RBF
PB - 12" GANGSTER REVRSE BUTTERFLY VISOR PAINTABLE - FITS ANY - 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002-BT
PB - 12" GANGSTER BOWTIE VISOR - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002P-BT
PB - 12" GANGSTER BOWTIE VISOR PAINTABLE - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132017
PB-14" - GANGSTER REVERSE BOWTIE VISOR - FITS ULTRA CAB

VP132018
PB-14" - BOLTLESS - GANGSTER FLAT BOTTOM VISOR - FITS ULTRA CAB



VP132002P-BT shown

Valley Chrome Plating
QUALITY TRUCK PARTS

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE

RAW 18 GAUGE STEEL
COLORS SHOWN EXAMPLES ONLY

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

PETERBILT STAINLESS TRIM

SLEEPER WRAPS

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VP140005
PB SLEEPER WRAP - FLAG - LG

VP140006
PB SLEEPER WRAP - FLAG - SM - UNIBILT STAND-UP



VP140007
PB SLEEPER WRAP - FLAMES - LG

VP140008
PB SLEEPER WRAP - FLAMES - SM - UNIBILT STAND-UP



VP140009
PB SLEEPER WRAP - STEER HEAD - LG

VP140010
PB SLEEPER WRAP - STEER HEAD - SM - UNIBILT STAND-UP




VP140023
PB SLEEPER WRAP - GIRLS - LG

VP140024
PB SLEEPER WRAP - GIRLS - SM - UNIBILT STAND-UP



VP140018
PB SLEEPER WRAP - PLAIN - LG - FLAT TOP CAB

VP140019
PB SLEEPER WRAP - PLAIN - SM - ULTRA CAB

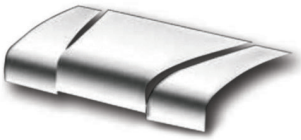

VP140011
PB SLEEPER WRAP - PLAIN - LG - FLAT TOP - 3PC

VP140012
PB SLEEPER WRAP - PLAIN - SM - 3PC - UNIBILT STAND-UP





VP140015
PB SLEEPER WRAP - PLAIN - SM - SIDES - 2PCS



VP140016
PB SLEEPER WRAP - PLAIN - LG - SIDES - 2PCS

REAR FRAME COVERS


MOUNTS USING EXISTING FRAME BOLTS




VP160001
PB - REAR FRAME COVER - 379



VP160003
PB - REAR FRAME COVER - WILDFIRE



VP160004
PB - REAR FRAME COVER - ELLIPSE



VP160005
PB - REAR FRAME COVER - OVAL - W/CUTOUTS

WILL NOT WORK WITH ALUMINUM FRAMES



VP160006
PB - REAR FRAME COVER - STEER HEAD



VP160007
PB - REAR FRAME COVER – GIRLS


PETERBILT STAINLESS TRIM

DEF TANK COVERS

MOUNTS TO EXISTING HARDWARE




VP150028
DEF FUEL TANK COVER - STAINLESS

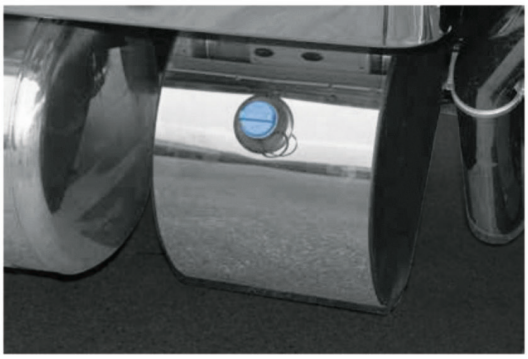


FUEL TANK WRAPS

MOUNTS BEHIND FUEL TANK STRAPS
STRONG 3M DOUBLE-SIDED TAPE ALSO INCLUDED

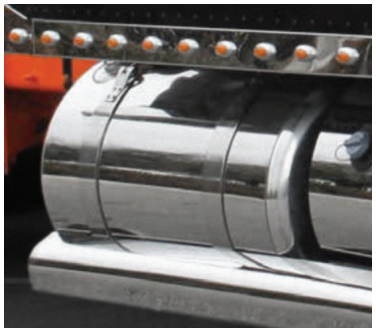

VP150041
DRIVER SIDE
PB -2012 FUEL TANK WRAP - 75 GALLON

VP150041-PS
PASSENGER SIDE
PB -2012 FUEL TANK WRAP - 75 GALLON

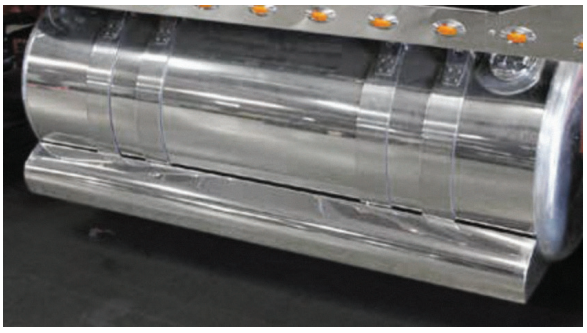

VP150040
DRIVER SIDE
PB - 2012 FUEL TANK WRAP - 150 GALLON

VP150040-PS
PASSENGER SIDE
PB - 2012 FUEL TANK WRAP - 150 GALLON

SPECIFY TANK LENGTH, INSIDE WELD TO INSIDE WELD WHEN ORDERING

STAINLESS ACCESSORIES

KENWORTH W900



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

KENWORTH W900

CAB PANELS

MOUNTING HARDWARE INCLUDED



VK110205
W900L - 2014 - HIGHLIGHT - BLANK - 2 PCS



VK110206
W900L - 2014 - HIGHLIGHT - BLANK - W/ LIGHT HOLE - HEATER PLUG HOLE



VK110200
W900L - AEROCAB - CAB PANELS - 50.25" - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107



EXAMPLE
VK110200-4UN



EXAMPLE
VK110200-5RN



EXAMPLE
VK110200-4RA



EXAMPLE
VK110200-4GA



VK110200-3GA shown

KENWORTH W900

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED



VK142035
KW SLEEPER PANELS - T600 (1995 & NEWER, NO FAIRINGS) T800 (1986 & NEWER), W900 (1986 & NEWER) - 42" - BLANK



VK142008
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 60" - BLANK - 1995 & NEWER WRAPS ON BOTH ENDS



VK142015
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 72" - BLANK



VK142023
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 86" – BLANK



VK142030
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING, PASS SIDE NOTCHED FOR EXH - T600, T800, W900 - 62"- BLANK



VK142100
KW SLEEPER PANELS - AEROCAB - W/EXHAUST - W900 L - 62" - BLANK



VK142101
KW SLEEPER PANELS - AEROCAB - W/EXHAUST - W900 L - 72" - BLANK



VK142105
KW SLEEPER PANELS - AEROCAB - W/FUEL DOOR - W900 L - 86" - BLANK



VK142200
KW SLEEPER PANELS - 2014 AEROCAB - 62" - BLANK - 2 PCS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107



EXAMPLE
VK142008-3UN



EXAMPLE
VK142008-5RA



EXAMPLE
VK142023-8GA

KENWORTH W900

HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VK110300
HOOD EXTENSION PANELS - W900L - BLANK - 1997-2004 - 2 PCS



VK110305
HOOD EXTENSION PANELS - W900L - BLANK - 2014 - 2 PCS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107



EXAMPLE
VK110300-3UN



EXAMPLE
VK110300-4GA



SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VK143001
SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK - 1992 - 2012



EXAMPLE
VK143001-1GA

KENWORTH W900

AIR CLEANER LIGHT BOXES

MOUNTING HARDWARE INCLUDED


ADD LIGHTS TO YOUR PANEL
SEE PAGES 106-107
EXAMPLE:



VK113000
AIR CLEANER LIGHT BOXES - W900 - FRONT - BLANK



VK113001
AIR CLEANER LIGHT BOXES - W900 - CENTER MOUNT - FRONT - BLANK

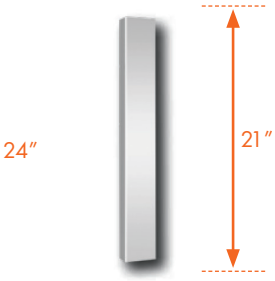

VK110020
AIR CLEANER LIGHT BOXES - W900 - REAR - BLANK



VK112209
KW - AIR CLEANER SUPPORT - BLANK - W900L - 2014 - PAIR



VK113000-8RA
AIR CLEANER LIGHT BOXES - W900 - FRONT - 8 ROUND AMBERS

KENWORTH W900 &W990

BUMPER SUPPORT BRACKETS



VK15-06333L-18
SUPPORT BRACKET FOR 18″ BUMPERS



VK15-06333L-22
SUPPORT BRACKET FOR 22″ BUMPERS



VK15-06333LW-18
SUPPORT BRACKET FOR 18″ BUMPERS (WITH WATERMELON LIGHT CUTOUT)



VK15-06333LW-20
SUPPORT BRACKET FOR 20″ BUMPERS (WITH WATERMELON LIGHT CUTOUT)



VK15-06333LW-22
SUPPORT BRACKET FOR 22″ BUMPERS (WITH WATERMELON LIGHT CUTOUT)

KENWORTH W900

AIR CLEANER FAIRINGS



VK100013
AIR CLEANER FAIRING W9L PR



VK100020
AIR CLEANER FAIRING W9L
PR 2014




VK100022
AIR CLEANER FAIRING W9L PAIR
2014 - SLIM VERSION




KENWORTH W900

EXTERIOR WINDOW TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

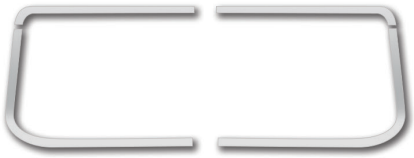

VK110021
2014 KW WINDSHIELD TRIM - 4 PC - W900 CURVED WINDSHIELD

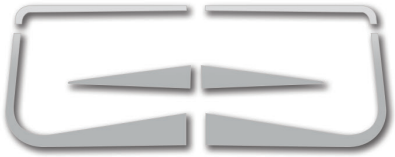

VK110018
2014 KW WINDSHIELD TRIM - 6 PC - W900 - CURVED WINDSHIELD - LARGE

EXHAUST SHIELDS

BRACKETS AND MOUNTING HARDWARE INCLUDED



VK110090
KW EXHAUST SHIELD W/NO LOGO W900B

BUG SHIELDS

MOUNTING HARDWARE INCLUDED



VK120023
KW BUGSHIELD TRIM - W900L - HIGHLIGHT ONLY STAINLESS HIGHLIGHT



VK120024
KW BUGSHIELD TRIM - W900L - FLAME - ONLY STAINLESS HIGHLIGHT



VK120009
KW STAINLESS BUG SHIELD - 900L




VK120010
KW STAINLESS BUG SHIELD - 900B

KENWORTH W900

BLINKER BARS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED

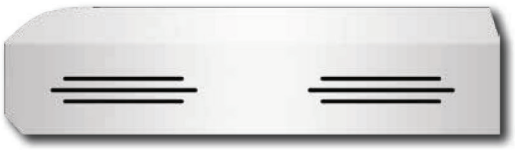

VK120501
KW - W900L FRONT BLINKER BARS W/LIGHTS




VK100501
KW - W900L REAR BLINKER BARS W/LIGHTS



VK120501BL
KW - W900L FRONT BLINKER BARS BLANK

ADD LIGHTS TO YOUR BLINKER BAR – SEE PAGES 106-107

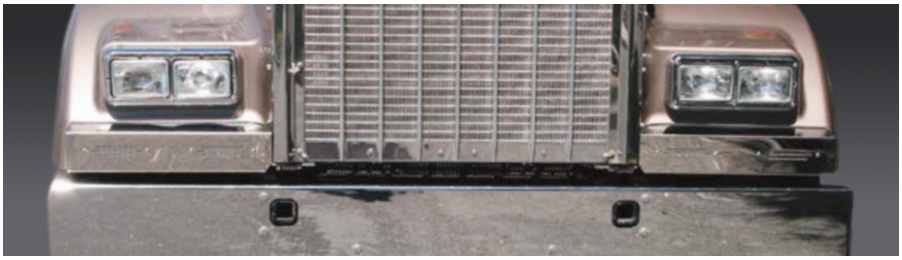

FLAP WEIGHTS



VK190001
2014 W900 L - FRONT FENDER FLAP WEIGHTS - 2 PCS

KENWORTH W900

FENDER GUARDS



VK120019



VK120016
KW - FENDER GUARDS - W900L - 1989 & NEWER - PAIR



VK120017
KW - FENDER GUARDS - W900L - FLUSH MOUNT 1989 & NEWER - PAIR



VK120019
KW - FENDER GUARDS - W900B - FLUSH MOUNT 1989 & NEWER - PAIR

BATTERY & TOOL BOX COVERS



VK150004
KW - BATTERY BOX COVER - T600, T800, W900 - 39.5" X 9.0"




VK150005
KW - BATTERY BOX COVER - T600, T800, W900 - 45" X 9"




VK150006
KW - TOOL BOX COVER - T600, T800, W900 - 39.5" X 8.5"




VK150007
KW - TOOL BOX COVER - T600, T800, W900 - 45" X 8.5"

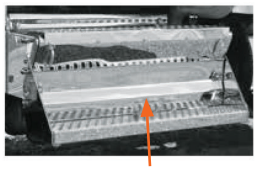

VK150030
2014- W900 L - BATTERY BOX STEP COVER

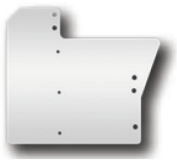

VK150031
2014- W900 L - BATTERY COVER HIGHLIGHT - 2 PCS

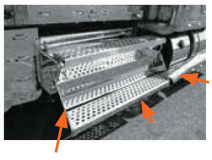

VK150032
2014- W900 L - BATTERY BOX STEP HIGHLIGHT - 5 PCS

KENWORTH W900

HOOD & GRILLE TRIM




VK120002
W9L LOWER GRILL FILTER TRIM



VK120001
W900L TOP GRILL DEFLECTORS - PAIR



11151
HOOD WING - POWER STYLE

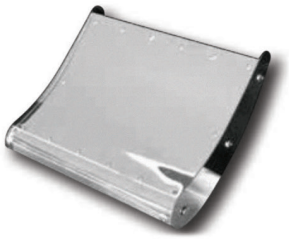

11191
FENDER WINGS - POWERSTYLE



22281
SIDE HOOD WINGS



VK120007
KW SIDE GRILL DEFLECTOR - FULL LENGTH - W900L



VK120008
KW SIDE GRILL DEFLECTOR - FOR USE WITH BLINKER BAR - W900L



VK120004
KW SIDE GRILL DEFLECTORS



VK120008

KENWORTH W900


STAINLESS SUN VISORS

MOUNTING HARDWARE INCLUDED



VK130001
VK-13" - DROP VISOR - W900
AEROCAB CURVED - 1995 - 2006

VK131001
KW - 13" - DROP VISOR - W900
AEROCAB CURVED 1995 & 2006 -
1PC - BOLTLESS

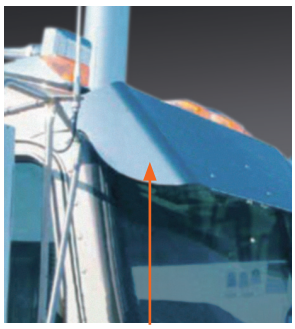

VK130001



VK130002
KW - 13" - DROP VISOR - W900 - CABS W/
SPLIT FLAT WINDSHIELDS 1984 TO 1998

VK131002
KW - 13" - DROP VISOR - W900 - CABS
W/ SPLIT FLAT WINDSHIELDS 1984 TO 1998 -
1PC - BOLTLESS




VK130002




VK130003
KW - 11" - DROP VISOR - (W900 2007-2013)
- (T660, T800 2007-2024)-
CURVED WINDSHIELD

VK131003
KW - 11" - DROP VISOR - W900 - T660 -
CURVED WINDSHIELD - 2007 & NEWER - 1PC
- BOLTLESS

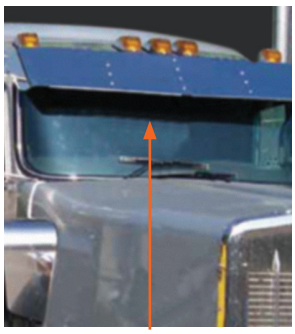

VK130003

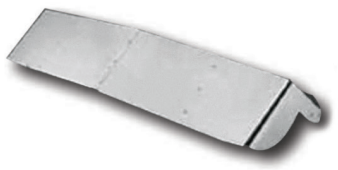

VK130004
KW - 13" - DROP VISOR - W900 - CABS W/
SPLIT FLAT WINDSHIELD 1999 TO 2004

VK131004
KW - 13" - DROP VISOR - W900 - CABS W/
SPLIT FLAT WINDSHIELD 1999 TO 2004 - 1PC -
BOLTLESS

KENWORTH W900


GANGSTER VISORS

MOUNTING HARDWARE INCLUDED




VK132001
KW - 12" - GANGSTER VISOR - DROP - W900 - CURVED WINDSHIELD - 1995 - 2006 - 2 PC

VK132003
KW - 12" - GANGSTER VISOR - DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC

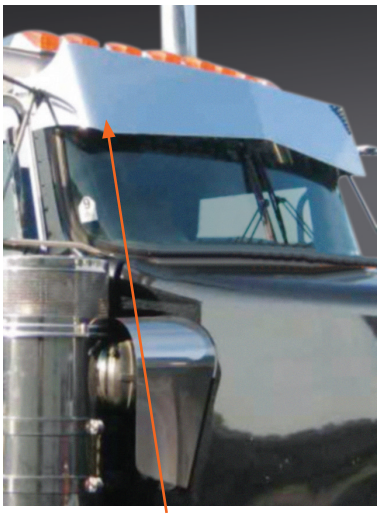

VK132003-BF

EXAMPLE

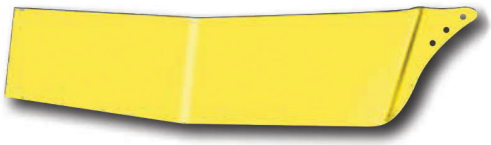

VK132001P
KW - 12" - GANGSTER VISOR PAINTABLE - DROP - W900 - CURVED WINDSHIELD - 1995 - 2006 - 2 PC
RAW 18-GAUGE STEEL




VK132001-BF
KW - 12" - GANGSTER BUTTERFLY VISOR - DROP - W900 - CURVED WINDSHIELD - 1995 - 2006 - 2 PC



VK132003-BF

EXAMPLE

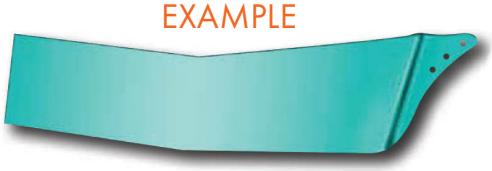

VK132001P-BF
KW - 12" - GANGSTER BUTTERFLY VISOR PAINTABLE - DROP - W900 - CURVED WINDSHIELD - 1995 - 2006- 2 PC
RAW 18-GAUGE STEEL

ABOVE VISORS ARE ONLY AVAILABLE IN 12"

Valley Chrome Plating
QUALITY TRUCK PARTS

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

KENWORTH W900

BOLTLESS WICKED VISORS


MOUNTING HARDWARE INCLUDED



VK135001
KW - 13" - WICKED - DROP - W900 AEROCAB CURVED 1995-2006 - 2 PIECE



VK135002
KW - 13" - WICKED - DROP - W900 - CABS W/ SPLIT FLAT WINDSHIELDS 1984 TO 1998 - 2 PIECE

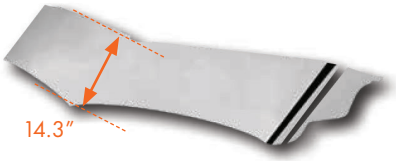

VK135003
KW - 14" - WICKED - DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PIECE



VK135004
KW - 13" - WICKED - DROP - W900 - CABS W/ SPLIT FLAT WINDSHIELD 1999 & NEWER - 2PIECE



VK136001
KW - 14" - WICKED GANGSTER - W900 - CURVED WINDSHIELD - 1995-2006 - 2 PIECE



VK136003
KW - 14" - WICKED GANGSTER - W900, T660, T800 - CURVED WINDSHIELD - 2007-NEWER - 2 PIECE

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VK135002-P
RAW 18 GAUGE STEEL

COOL BOLTLESS LOOK!



VK135001

YOU SAY
WICKED
LIKE IT'S A BAD THING

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

KENWORTH W900


CATALYTIC SYSTEM BOX HIGHLIGHT



VK150020
2014- W900 L - CATALYTIC
STEP COVER




VK150021
2014- W900 L - CATALYTIC
COVER HIGHLIGHT - 2 PCS

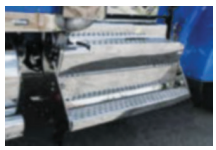

VK150022
2014- W900 L - CATALYTIC
STEP HIGHLIGHTS - 5 PCS

DEF TANK COVER

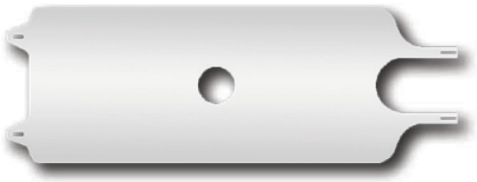

VK150028
KW - 2014 W900 L - DEF
TANK COVER



STAINLESS DECK PLATES



VK192010
FRONT DECK PLATE FLUSH MOUNT - W/
AIR LINE BOX CUTOUT - 2014 W900 L



VK192011
MID DECK PLATE FLUSH MOUNT -
2014 W900 L - 66"X27"




VK192012
REAR DECK PLATE - FLUSH MOUNT -
2014 W900 L

KENWORTH W900

FUEL TANK FAIRINGS


BRACKETS & MOUNTING HARDWARE INCLUDED
NOT AVAILABLE IN 430 STAINLESS
FAIRINGS FOR STANDARD WIDTH TANK STRAPS SHOWN

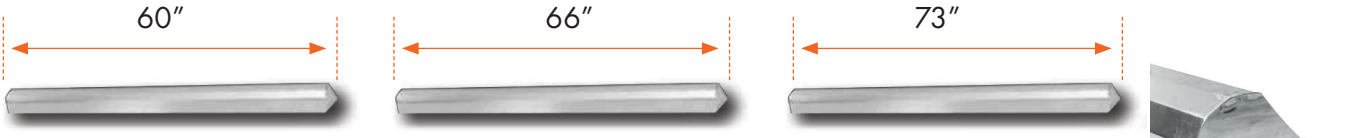

VK150001
KW - FUEL TANK FAIRINGS 60″ - W900 - 1998 & NEWER - PAIR

VK150002
KW - FUEL TANK FAIRINGS 66″ - W900 - 1998 & NEWER - PAIR

VK150003
KW - FUEL TANK FAIRINGS 73″- W900 - 1998 & NEWER - PAIR

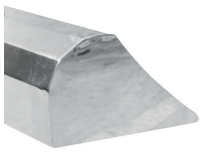

STANDARD



VK150001R
KW - FUEL TANK FAIRINGS 60″ - ROUND - W900 - 1998 & NEWER

VK150002R
KW - FUEL TANK FAIRINGS 14″ 66″ - ROUND - W900 - 1998 & NEWER

VK150003R
KW - FUEL TANK FAIRINGS 73″ - ROUND - W900 - 1998 & NEWER



ROUNDED



CUSTOM FAIRINGS FOR WIDE STRAPS SHOWN - CALL FOR YOUR CUSTOM SETUP

EXAMPLE



VK150003-5GA

ADD LIGHTS TO YOUR FAIRING – SEE PAGES 106-107

Valley Chrome Plating
QUALITY TRUCK PARTS

KENWORTH W900

LOWER HOOD PANELS

KENWORTH LOGO NOT INCLUDED



VK100016
KW - LOWER HOOD PANELS -
W900 1989 & NEWER - PR

CENTER HOOD TRIM



VK100021
KW - W900L CENTER
HOOD TRIM
TAPE MOUNT

STAINLESS ACCESSORIES

KENWORTH T600



Photo submitted by Tony St Bernard

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

KENWORTH T600

SLEEPER PANELS



VK142035
KW SLEEPER PANELS - T600 (1995 & NEWER, NO FAIRINGS) T800 (1986 & NEWER), W900 (1986 & NEWER) - 42" - BLANK



VK142008
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 60" - BLANK - 1995 & NEWER



VK142015
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 72" - BLANK



VK142023
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 86" – BLANK



VK142030
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING , PASS SIDE NOTCHED FOR EXH - T600, T800, W900 - 62" - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107



EXAMPLE
VK142008-3UN



EXAMPLE
VK142008-5RA



EXAMPLE
VK142023-8GA

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VK143001
SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK - 1992 - 2012



EXAMPLE
VK143001-1GA

KENWORTH T600

STAINLESS GRILLES

MOUNTING HARDWARE INCLUDED



VK120600
KW GRILL T600B -
HORIZONTAL - RIVETED

BUG SHIELDS

MOUNTING HARDWARE INCLUDED



VK120012
KW STAINLESS BUG SHIELD
- T600

Valley Chrome Plating
QUALITY TRUCK PARTS

KENWORTH T600

BATTERY & TOOL BOX COVERS



VK150004
KW - BATTERY BOX COVER - T600, T800, W900 - 39.5" X 9.0"



VK150005
KW - BATTERY BOX COVER - T600, T800, W900 - 45" X 9"



VK150006
KW - TOOL BOX COVER - T600, T800, W900 - 39.5" X 8.5"



VK150007
KW - TOOL BOX COVER - T600, T800, W900 - 45" X 8.5"

SIDE MARKER TRIM



VK140001
T600 SIDE MARKER LIGHT ACCENT TRIM - PAIR

Valley Chrome Plating
QUALITY TRUCK PARTS

STAINLESS ACCESSORIES

KENWORTH T660



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

KENWORTH T660

CAB PANELS

MOUNTING HARDWARE INCLUDED



VK110201
T660 - CAB PANELS - BLANK"

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

BUG SHIELDS

MOUNTING HARDWARE INCLUDED




VK120015
KW STAINLESS BUG SHIELD
- T660



STAINLESS SUN VISORS

MOUNTING HARDWARE INCLUDED

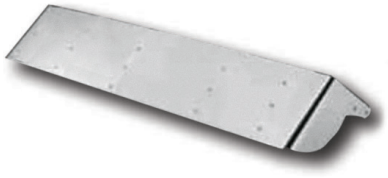


VK130003
KW - 13" - DROP VISOR - (W900 2007-2013)
- (T660, T800 2007-2015)-
CURVED WINDSHIELD

VK131003
KW - 13" - DROP VISOR - W900 - T660 -
CURVED WINDSHIELD - 2007 & NEWER - 1PC
- BOLTLESS

KENWORTH T660

GANGSTER VISORS


MOUNTING HARDWARE INCLUDED

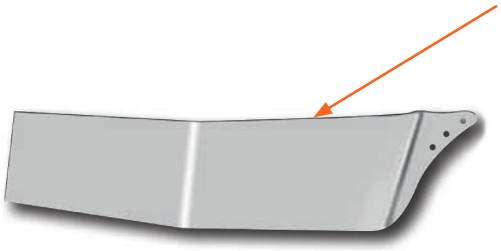

VK132003
KW - 12" - GANGSTER VISOR
DROP - W900, T660, T800 - CURVED
WINDSHIELD - 2007 & NEWER - 2 PC

VK132003 - BF
KW - 12" - GANGSTER VISOR - BUTTERFLY
DROP - W900, T660, T800 - CURVED
WINDSHIELD - 2007 & NEWER - 2 PC


ABOVE VISORS ARE ONLY AVAILABLE IN 12"

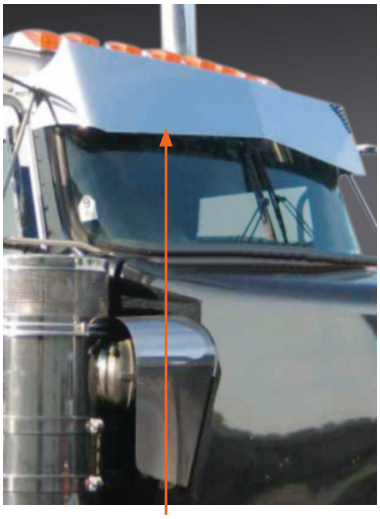

VK132003-BF

BOLTLESS WICKED VISORS

MOUNTING HARDWARE INCLUDED

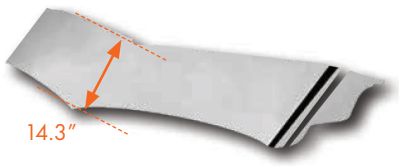

VK135003
KW - 14" - WICKED -
DROP - W900, T660, T800
- CURVED WINDSHIELD -
2007 & NEWER - 2 PIECE

COOL BOLTLESS LOOK!




VK136003
KW - 14" - WICKED
GANGSTER - W900,
T660, T800 - CURVED
WINDSHIELD -
2007-NEWER - 2 PIECE

YOU SAY
WICKED
LIKE IT'S A BAD THING

KENWORTH T660

BATTERY & TOOL BOX COVERS

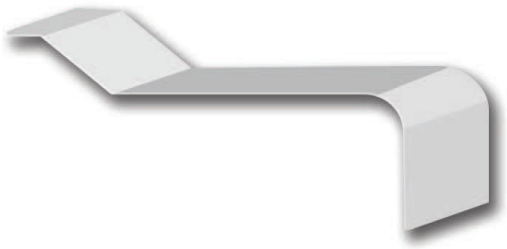

VK150008
T660 DAY CAB BATTERY BOX
HIGHLIGHT

KENWORTH T680





1	VK110028	Top of door trim – "lowered" look
2	VK110209	Cab Panel – Blank (VK110209-3GA shown)
3	VK150029	DEF Tank Cover
4	VK120101	Bug shield
5	VK130007	12" drop visor
6	FV-0010-708	Chrome front bumper (other options available)

KENWORTH T680

CAB & COWEL PANELS

MOUNTING HARDWARE INCLUDED



VK110209
2015 T680 - CAB PANELS - BLANK" VERTICAL EXHAUST ONLY



VK110210
2016 T680 - CAB PANELS - BLANK



VK110211
2016 T680 - CAB PANELS - BLANK W/HEATER PLUG HOLE



VK110210
(ALTERNATE VIEW)



VK110308
2021-2023 COWEL PANEL
(FITS HIGH-ROOF TRUCKS)



VK110308-4GSCA
2021-2023 COWEL PANEL
W/4 GRANITE SLIM CLEAR AMBER LIGHTS
(FITS HIGH-ROOF TRUCKS)

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VK143001
SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK - 1992 - 2012

DOOR AND WINDOW TRIM



VK110222
KW - T680 DOOR ENTRY KICK PANELS - 4PCS UPPER & LOWER



VK110028
KW T680 LOWERED LOOK - 2015

KENWORTH T680

BUG SHIELDS

MOUNTING HARDWARE INCLUDED





VK120101
KW STAINLESS BUG SHIELD - T680




VK120104
KW STAINLESS BUG SHIELD
- T680
(FITS TRUCKS W/O HOOD MIRRORS

FENDER GUARDS




VK120018
KW - T680 FENDER GUARDS
- FITTED - 4PCS. UPPER &
LOWER

STAINLESS SUN VISORS

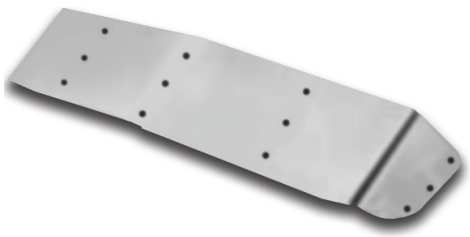


VK130007
KW - 13" - DROP - T680, T880 -
CURVED WINDSHIELD - 2015
REPLACES FACTORY VISOR ONLY

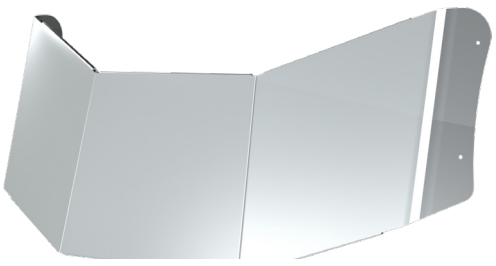


VK130008
KW - 15" DROP VISOR T680
MID-ROOF STANDUP SLEEPER
WITH NO EXISTING FACTORY VISOR

KENWORTH T680

DEF TANK COVER

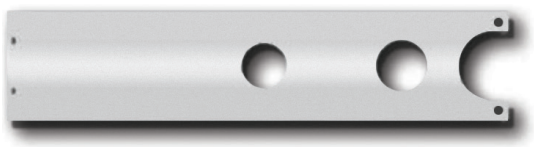

VK150029
KW - UREA TANK COVER 2015
T680

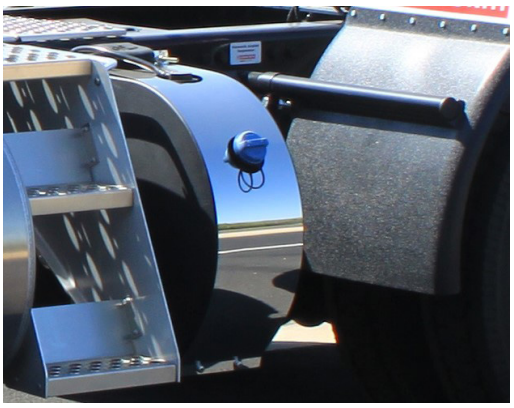

Valley Chrome Plating
QUALITY TRUCK PARTS

STAINLESS ACCESSORIES

KENWORTH T800 & T880



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

KENWORTH T800 & T880

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED



VK142035
KW SLEEPER PANELS - T600 (1995 & NEWER, NO FAIRINGS) T800 (1986 & NEWER), W900 (1986 & NEWER) - 42" - BLANK



VK142008
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 60" - BLANK - 1995 & NEWER



VK142015
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 72" - BLANK



VK142023
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 86" – BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107



EXAMPLE
VK142008-3UN



EXAMPLE
VK142008-5RA



EXAMPLE
VK142023-8GA

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED



VK143001
SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK - 1992 - 2012



EXAMPLE
VK143001-1GA

KENWORTH T800 & T880

BUG SHIELDS

MOUNTING HARDWARE INCLUDED




VK120013
KW STAINLESS BUG SHIELD
- T800

FENDER GUARDS




VK120022
KW - FENDER GUARDS - T-800
AERO CAB -1996 & NEWER - PAIR

STAINLESS SUN VISORS

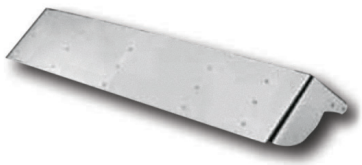

VK130003
KW - 13" - DROP VISOR - (W900 2007-2013) - (T660, T800 2007-2015)- CURVED WINDSHIELD
MOUNTING HARDWARE INCLUDED

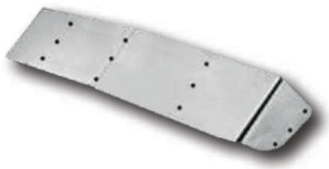

VK130007
KW - 13" - DROP - T680, T880 -
CURVED WINDSHIELD - 2015
DAY CAB ONLY
NO MOUNTING HARDWARE INCLUDED
REPLACES FACTORY VISOR ONLY




VK130003

KENWORTH T800 & T880

GANGSTER VISORS


MOUNTING HARDWARE INCLUDED

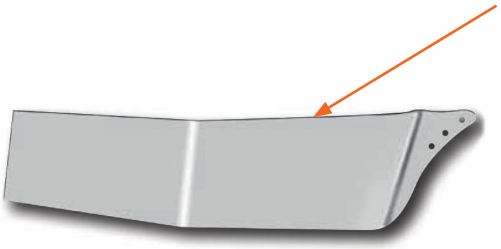

VK132003
KW - 12" - GANGSTER VISOR - DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC

VK132003 - BF
KW - 12" - GANGSTER VISOR - DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC


ABOVE VISORS ARE ONLY AVAILABLE IN 12"

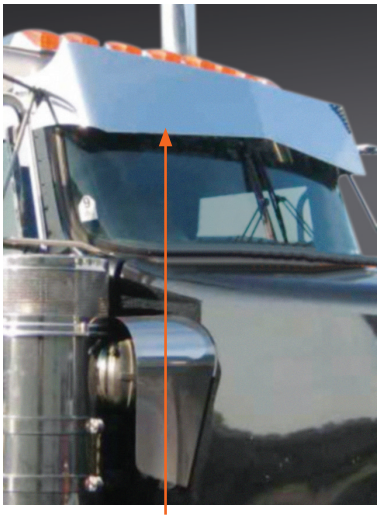

VK132003-BF

BOLTLESS WICKED VISORS

MOUNTING HARDWARE INCLUDED

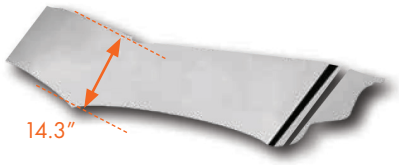

VK135003
KW - 14" - WICKED - DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PIECE

COOL BOLTLESS LOOK!



VK136003
KW - 14" - WICKED GANGSTER - W900, T660, T800 - CURVED WINDSHIELD - 2007-NEWER - 2 PIECE

YOU SAY
WICKED
LIKE IT'S A BAD THING

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

KENWORTH T800 & T880

BATTERY & TOOL BOX COVERS



VK150004
KW - BATTERY BOX COVER -
T600, T800, W900 - 39.5" X 9.0"



VK150005
KW - BATTERY BOX COVER -
T600, T800, W900 - 45" X 9"



VK150006
KW - TOOL BOX COVER - T600,
T800, W900 - 39.5" X 8.5"



VK150007
KW - TOOL BOX COVER - T600, T800,
W900 - 45" X 8.5"

Valley Chrome Plating
QUALITY TRUCK PARTS

ALL KENWORTH MODELS

EXTERIOR WINDOW TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VK110002
KW DAYLIGHT DOOR OUTER TRIM - 6PC



VK110012
KW EXTERIOR WINDOW TRIM - PASSENGER DOOR VIEW - DAYLIGHT DOOR



VK110013
KW EXTERIOR WINDOW TRIM PASSENGER DOOR VIEW

DOOR HANDLE TRIM



VK110003
PB, KW STAINLESS DOOR HANDLE TRIM - PAIR

LOWER LOOK



VK110017
KW WINDOW LOWERED LOOK 4.5"
FITS DAYLIGHT DOOR ONLY

AIR DEFLECTORS



VK110001
T300 T600 T800 W900
WINDOW AIR DEFLECTORS PAIR

ALL KENWORTH MODELS

EMBLEM ACCENTS

KENWORTH LOGO NOT INCLUDED



VK100001
EMBLEM ACCENT
OLD GLORY - PAIR
TAPE MOUNT



VK100002
EMBLEM ACCENT
3 POINT SLOTTED - PAIR
HARDWARE INCLUDED -PAIR



VK100003
EMBLEM ACCENT
FLAMES - PAIR
TAPE MOUNT



VK100004
EMBLEM ACCENT
HIGH LIGHT - PAIR
HARDWARE INCLUDED



VK100005
EMBLEM ACCENT
3 POINT - PAIR
HARDWARE INCLUDED



VK100006
EMBLEM ACCENT
SATURN - PAIR
HARDWARE INCLUDED



VK100007
EMBLEM ACCENT
SHORT SATURN - PAIR
HARDWARE INCLUDED



VK100008
EMBLEM ACCENT
3-D LOOK - PAIR
HARDWARE INCLUDED



VK100009
EMBLEM ACCENT
VICTORY LANE - PAIR
HARDWARE INCLUDED



VK100012
EMBLEM ACCENT
U SHAPED UNDERLINE
HARDWARE INCLUDED



VK100015
EMBLEM ACCENT
OVAL W/ UPWARD FLAME
TAPE MOUNT

HOOD LATCH GUARDS




VK100017
KW - HOOD LATCH GUARDS
T222, T800, W900 1989 &
NEWER - PAIR



VK100018
KW - HOOD LATCH GUARDS
ALL MODELS W/ BALL LATCH
1968 -1989 - PAIR



VU190011
PB, FL, KW, HOOD LATCH
ACCENT TRIM - PAIR

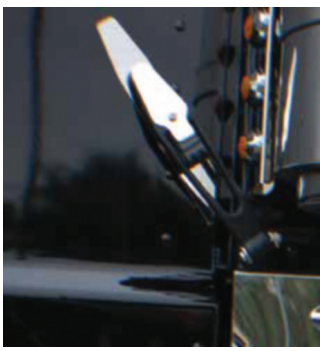

ALL KENWORTH MODELS

SLEEPER WINDOW TRIM



VK140002
W9L SLEEPER
WINDOW TRIM - PAIR



VK140003
KW 72" SLEEPER
UPPER WINDOW TRIM
(SLIDING OR SWING) PAIR



VK140004
KW 86" STUDIO SLEEPER UPPER
SLIDING WINDOW TRIM PAIR

REAR FRAME COVERS




VK160001
KW - REAR FRAME COVER -
1992 & NEWER




VK160002
KW - REAR FRAME COVER -
STEER HEAD - 1992 & NEWER

STAINLESS FUEL TANK WRAPS

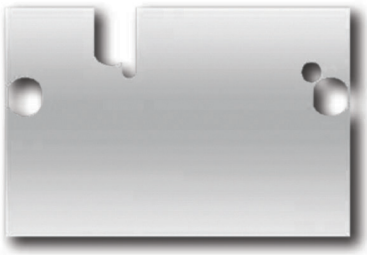

VK150040
KW - 2014 FUEL TANK -
HYDRAULIC TANK COMBO
WRAP - 72"

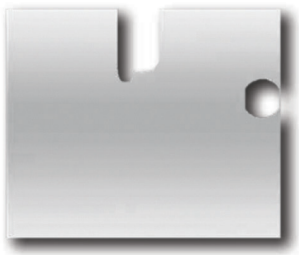

VK150041
KW - 2014 FUEL TANK WRAP -
75 GALLON - 57"



STAINLESS ACCESSORIES

FREIGHTLINER FLD/CLASSIC



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

FREIGHTLINER FLD / CLASSIC

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VF110015
FL - CAB PANEL - BLANK -
PAIR – 1991 NEWER CLASSIC

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107



EXAMPLE
VF110015-3UN



EXAMPLE
VF110015-4GA

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED



VF142003
2001 CLASSIC XL INTEGRAL SLEEPER NO AERO
WINGS - 48" SLEEPER PANELS - PAIR- BLANK

FREIGHTLINER FLD / CLASSIC

HOOD LATCH GUARDS



VF100001
FL - HOOD LATCH GUARDS - CLASSIC 1993 & NEWER - PAIR



VF100005
FL - HOOD LATCH GUARDS - CLASSIC X L - 1993 & NEWER - PAIR



VU190011
PB, FL, KW, HOOD LATCH ACCENT TRIM - PAIR

HOOD TRIM



VF100010
FL CLASSIC FRONT SIDE OF HOOD TRIM W/ FLAMES PAIR



VF100011
FL - LOWER HOOD PANELS - CLASSIC X L - 1993 & NEWER - PAIR

LOWERED LOOK WINDOW PANELS



VF110018
FLD & CLASSIC 5.75" LOWERED LOOK WINDOW PANELS

FREIGHTLINER FLD / CLASSIC

MISC. TRIM PIECES



VF110013
FL- DOOR LATCH TRIM - CENTURY / COLUMBIA / CLASSIC FLD - PAIR



VF114001
FREIGHTLINER CLASSIC - HOOD EXTENSION PANEL - LAY-OVER - PAIR

AIR CLEANER LIGHT BOXES



VF112001
FL - CLASSIC - FRONT - AIR CLEANER LIGHT BOXES - BLANK - PAIR



VF113001
FL - CLASSIC - REAR - AIR CLEANER LIGHT BOXES - BLANK - PAIR

ADD LIGHTS TO YOUR LIGHT BOX – SEE PAGES 106-107

FREIGHTLINER FLD / CLASSIC

FENDER GUARDS



VF120003
FL CLASSIC & X L UPPER FENDER GUARDS (SHORT & LONG HOOD) PAIR



VF120004
FL - FENDER GUARDS - EXTENDED HOOD - CLASSIC - 1993 & NEWER - PAIR



VF120007
FL - FENDER GUARDS - FLD 120 - 1989 & NEWER

STAINLESS TRIM FOR PLASTIC BUMPERS



VF120001
FLD SETBACK AXLE BUMPER TRIM KIT W/ 1 TOW PIN & FOG LIGHT HOLES 3 PC

ALSO CHECK OUT OUR EXTENSIVE LINE OF FULL METAL REPLACEMENT BUMPERS:
CLASSIC, PAGES 11-13
FLD SETBACKS, PAGES 15-18





FREIGHTLINER FLD / CLASSIC

BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED



VF120010
FL - BUG SHIELD - STAINLESS
- CLASSIC & CLASSIC XL



VF120011
FL - BUG SHIELD - STAINLESS
- FLD 120



Valley Chrome Plating
QUALITY TRUCK PARTS

FREIGHTLINER FLD / CLASSIC

SUN VISORS



VF130001
FL - 18" DROP VISOR - CLASSIC RAISED ROOF CONDO - 9 - 2" ROUND - NO LIGHTS INCLUDED



VF130002
FL - 18" DROP VISOR - CLASSIC MID ROOF - 9 - 2" RD - NO LIGHTS INCLUDED



VF130006
FL-13" - DROP VISOR - CLASSIC XL FLAT TOP - REPLACES FACTORY STAINLESS ONLY - DOES NOT REPLACE FIBERGLASS.
DOES NOT WORK WITH TRUCKS WITHOUT EXISTNG VISOR.

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VF130001P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

Valley Chrome Plating
QUALITY TRUCK PARTS

FREIGHTLINER FLD / CLASSIC

WICKED BOLTLESS VISORS




VF135001
FL - 18" - WICKED - DROP VISOR - CLASSIC RAISED ROOF CONDO - 9 - 2" ROUND - NO LIGHTS INCLUDED - 2 PC



VF135002
FL - 18" - WICKED - DROP VISOR - CLASSIC MID-ROOF - 9 - 2" RD - NO LIGHTS INCLUDED - 2 PC



VF135006
FL - 13" - WICKED - DROP VISOR - CLASSIC XL - FLAT TOP UP TO 2001 REPLACES STAINLESS FACTORY VISOR - 2 PC

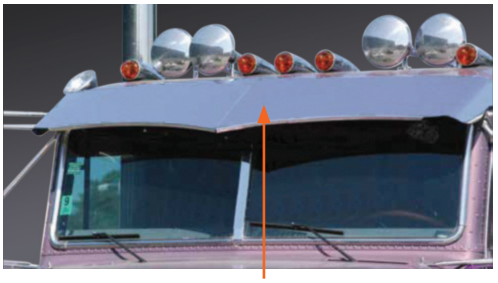

VF135006

YOU SAY
WICKED
LIKE IT'S A BAD THING

COOL BOLTLESS LOOK!

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

Valley Chrome Plating
QUALITY TRUCK PARTS

STAINLESS ACCESSORIES

FREIGHTLINER CENTURY & COLUMBIA



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

FREIGHTLINER CENTURY & COLUMBIA

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VF110020
FL - CAB PANEL - 4" - 2005
AND NEWER CENTURY/COLUMBIA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS



VF140020
2005 AND NEWER CENTURY/
COLUMBIA SLEEPER PANEL +
EXTENSION - 1PC - 70" - BLANK

MISC. TRIM PIECES

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VF110013
FL- DOOR LATCH TRIM -
CENTURY / COLUMBIA /
CLASSIC FLD - PAIR



VF110014
FL - VIEW WINDOW TRIM RING
- CENTURY / COLUMBIA



VF110019
FL - CENTURY / COLUMBIA UPPER CAB
HIGHLIGHT - 2PCS

FREIGHTLINER CENTURY & COLUMBIA

STAINLESS TRIM FOR PLASTIC BUMPERS



VF120002
FL CENTURY PLASTIC BUMPER TRIM
03-OLDER - 3 PC
TAPE MOUNT

ALSO CHECK OUT OUR
EXTENSIVE LINE OF FULL METAL
REPLACEMENT BUMPERS:
CENTURY, PAGES 19-20
COLUMBIA, PAGES 19-20







BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED



VF120013
FL - BUG SHIELD - STAINLESS
- CENTURY



VF120014
FL - BUG SHIELD - STAINLESS
– COLUMBIA

Valley Chrome Plating
QUALITY TRUCK PARTS

FREIGHTLINER CENTURY & COLUMBIA

SUN VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING



VF130003
FL-18" - DROP VISOR - RAISED ROOF CENTURY - 2003 & OLDER - 10 - 2" ROUND - HOLES - NO LIGHTS INCLUDED ALSO FITS 2009 & OLDER CORONADO



VF130007
FL-18" DROP VISOR - RAISED ROOF CENTURY & COLUMBIA - 2004 & NEWER - 10 - 2" RD HOLES - NO LIGHTS INCLUDED



VF130014
FL - 14" DROP VISOR - 04 CORONADO DAY CAB 06 - NEWER & COLUMBIA- NO LIGHTS ONLY FOR TRUCKS WITHOUT EXISTING FACTORY VISOR


VF130016
FL - 16" DROP VISOR - 04 CENTURY/05 COLUMBIA MID ROOF - NO LIGHTS

PAINTABLE VISORS AVAILABLE


JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VF130003P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

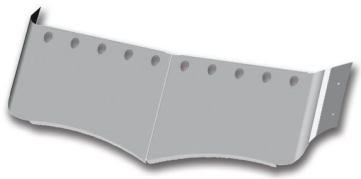

VF135003
FL - 18" - WICKED - DROP VISOR - CENTURY-RAISED ROOF - UP TO 2003 - 2 PC

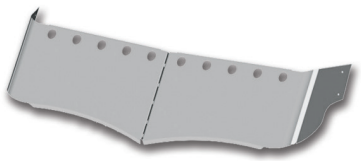

VF135007
FL- 18" - WICKED - DROP VISOR - CENTURY & COLUMBIA 2004 - NEWER - 2 PC - 10 2" ROUND HOLES NO LIGHTS INCLUDED



VF135016
FL - 16" WICKED - DROP VISOR - 04 CENTURY/05 COLUMBIA MID ROOF - NO LIGHTS

YOU SAY
WICKED
LIKE IT'S A BAD THING

COOL BOLTLESS LOOK!

STAINLESS ACCESSORIES

FREIGHTLINER CORONADO 2002-2009 & GLIDER KITS



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

FREIGHTLINER CORONADO 2002-2009/GLIDERS

BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED




VF120012
FL - BUG SHIELD - STAINLESS - CORONADO



SUN VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING

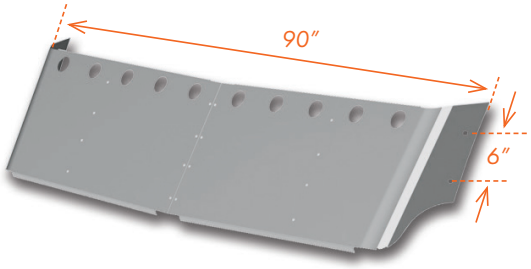

VF130003
FL-18" - DROP VISOR - RAISED ROOF CENTURY - 2003 & OLDER - 10 - 2" ROUND - HOLES - NO LIGHTSINCLUDED ALSO FITS 2009 & OLDER CORONADO



VF130014
FL - 14" DROP VISOR - 04 CORONADO DAY CAB 06 - NEWER & COLUMBIA- NO LIGHTS

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

STAINLESS ACCESSORIES

FREIGHTLINER CASCADIA 2017 & OLDER "P3"



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED



VF110200
CAB PANEL 4" - CASCADIA -
BLANK PAIR



ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS


MOUNTING HARDWARE INCLUDED



VF140010
CASCADIA SLEEPER PANEL 48"



VF142101
FL SLEEPER EXTENSION PANEL -
CASCADIA - 48" - BLANK

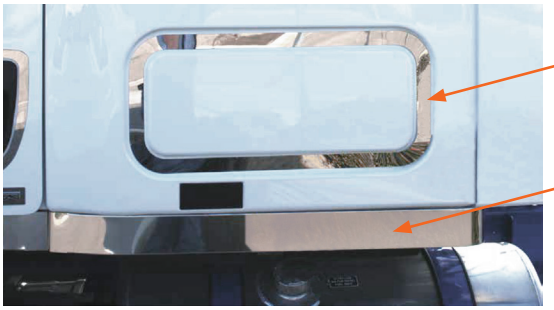

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

FAIRING PANELS

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

MID FAIRING KIT:



VF142009
2008 CASCADIA MID FAIRING PANELS - 6 PCS - BLANK

LOWER FAIRING KIT:



VF142012
2008 CASCADIA LOWER FAIRING PANELS - 6 PCS - BLANK

UNDER FAIRING KIT:



VF142014
2008 CASCADIA MID FAIRING PANELS - 6 PCS - BLANK

UNDER FAIRING INDIVIDUAL PIECES:



VF142014-1
2008 CASCADIA UNDER FAIRING PANEL - FRONT PASS SIDE



VF142014-2
2008 CASCADIA UNDER FAIRING PANEL - MIDDLE PASS SIDE



VF142014-3
2008 CASCADIA UNDER FAIRING PANEL - REAR PASS SIDE



VF142014-4
2008 CASCADIA UNDER FAIRING PANEL - FRONT DRIVERS SIDE



VF142014-5
2008 CASCADIA UNDER FAIRING PANEL - MIDDLE DRIVERS SIDE



VF142014-6
2008 CASCADIA UNDER FAIRING PANEL - REAR DRIVERS SIDE



FREIGHTLINER CASCADIA 2017 & OLDER "P3"

FENDER TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE




VF100012
FL - CASCADIA FENDER TRIM - 2PC



VF100013
FL - CASCADIA FENDER TRIM EXT. - 2PC

HOOD & DOOR TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

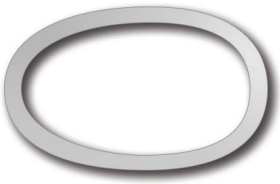

VF100016
FL - HOOD LIGHT TRIM - PAIR



VF100015
FL - CASCADIA AIR VENT ACCENT



VF110016
CASCADIA DOOR
HANDLE TRIM

LOWERED LOOK WINDOW PANELS



VF110017
CASCADIA LOWERED LOOK
WINDOW PANELS
ALSO FITS 2018 & NEWER P4 MODEL CASCADIAS

FREIGHTLINER CASCADIA 2017 & OLDER "P3"


STAINLESS TRIM FOR PLASTIC BUMPERS



VF120017
CASCADIA FENDER TRIM -
ABOVE BUMPER - PAIR



VF120006
CASCADIA FT BUMPER TRIM
- 4PC - TAPE MOUNT

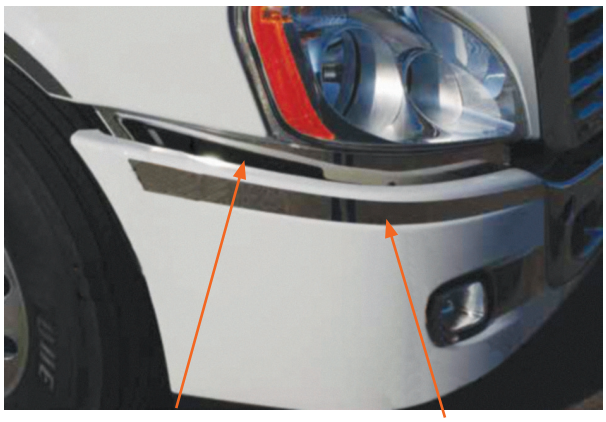

VF120017 *VF120006*

ALSO CHECK OUT OUR EXTENSIVE LINE OF FULL METAL CASCADIA REPLACEMENT BUMPERS: PAGE 21-22



BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED



VF120015
FL - BUG SHIELD - STAINLESS
– CASCADIA



FREIGHTLINER CASCADIA 2017 & OLDER "P3"

SUN VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING



VF130017
FL – 18" STD MOUNT DROP VISOR
CASCADIA "P3" YRS. 2017 OLDER
CONDO/MID SLEEPER
FOR TRUCKS WITH OR WITHOUT FACTORY VISOR



PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VF130017-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107



VF135017
FL - 18" WICKED DROP VISOR - 2PC
CASCADIA "P3" YRS. 2017 & OLDER
CASCADIA "P4" YRS. 2018 & NEWER
CONDO, MID ROOF
REPLACES FACTORY VISOR


COOL BOLTLESS LOOK!




VF130017BF
FL - 18" STD MOUNT BUTTERFLY VISOR
CASCADIA "P3" YRS. 2017 & OLDER
CONDO, MID ROOF
FOR TRUCKS WITH OR WITHOUT FACTORY VISOR


FREIGHTLINER CASCADIA 2017 & OLDER "P3"

FUEL TANK COVERS

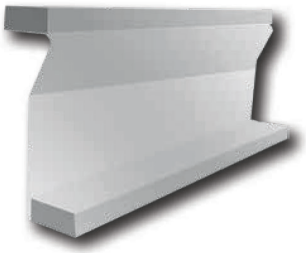

VF150006
FL - CASCADIA FUEL TANK COVER W/STEPS - PASS SIDE

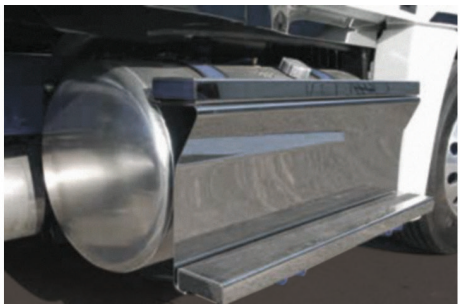

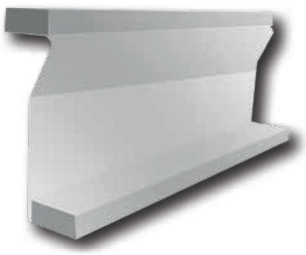


VF150007
FL - CASCADIA BATTERY BOX/ FUEL TANK COVER - 2011 DAY CAB 34"


BATTERY BOX COVERS & STEPS



VF150000
FL - CASCADIA BATTERY BOX COVER

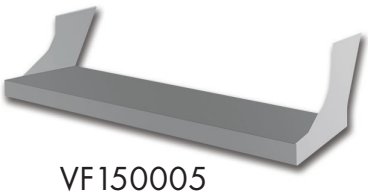

VF150005
FL - CASCADIA UNDER BATTERY BOX STEP- 3PC.

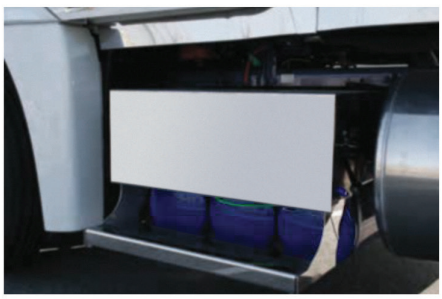



VF150010
FL - CASCADIA BATTERY BOX UPPER - 2011 DAY CAB 34"



VF150011
FL - CASCADIA BATTERY BOX UPPER - 2011 DAY CAB 40"

CATALYTIC COVERS



VF150008
FL - CASCADIA CATALYTIC COVER - LOWER 2011 DAY CAB 40"



VF150009
FL - CASCADIA CATALYTIC COVER - UPPER 2011 DAY CAB 40"

FREIGHTLINER ACCESSORIES - ALL MODELS

EMBLEM ACCENTS



VF100002
FL - EMBLEM ACCENTS -
W/ CUTOUTS - PAIR
INCLUDES MOUNTING HARDWARE



VF100004
FL - EMBLEM ACCENTS -
16" - PAIR
TAPE MOUNT


PERMIT PANELS



VF110007
FL - PERMIT PANEL - EMBLEM
& CUTOUT - LEFT -
1998 & NEWER




VF110008
FL - PERMIT PANEL - PLUG
CUTOUT - LEFT -
1998 & NEWER



VF110009
FL - PERMIT PANEL - EMBLEM
CUTOUT - LEFT -
1998 & NEWER



VF110010
FL - PERMIT PANEL - BLANK -
LEFT - 1998 & NEWER



VF110011
FL - PERMIT PANEL - EMBLEM
CUTOUT - RIGHT -
1998 & NEWER



VF110012
FL - PERMIT PANEL - BLANK -
RIGHT - 1998 & NEWER

FUEL TANK FAIRING

BRACKETS AND MOUNTING HARDWARE INCLUDED
NOT AVAILABLE IN 430 STAINLESS



VF150001
FL - FUEL TANK FAIRINGS -
82" - PAIR



VF150002
FL - FUEL TANK FAIRINGS -
87" - PAIR



STAINLESS ACCESSORIES

INTERNATIONAL




Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

INTERNATIONAL

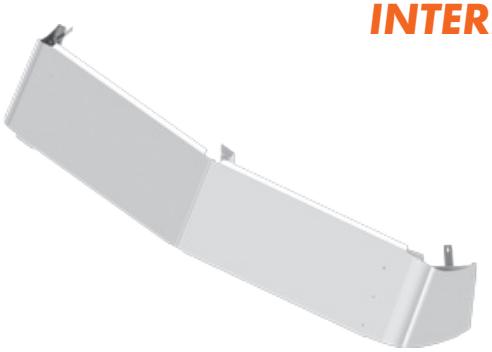

VI130003
INTL - 12" DROP VISOR 2PC
FITS PROSTAR & LONESTAR



VI135003
INTL - 12" TAPERED TO 16" IN CENTER
WICKED DROP VISOR - 2PC
FITS PROSTAR & LONESTAR



VI135003-10BYCA

ADD LIGHTS TO YOUR VISOR OR PANEL – SEE PAGES 106-107

VI120107
INTL - BUG SHIELD FITS MODEL 9900
STAINLESS STEEL
RUBBER TRIM & MOUNTING HARDWARE INCLUDED



VI110200
INTL - CAB PANELS - FITS MODELS 9200,9300,9400
STAINLESS STEEL



STAINLESS ACCESSORIES

VOLVO VNL



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

VOLVO VNL

HOOD & FENDER TRIM



VV120002
FENDER GUARD - UPPER -
780 SERIES
TAPE MOUNT



VV100003
FENDER GUARD - UPPER -
780 SERIES
TAPE MOUNT




BUG SHIELD

MOUNTING HARDWARE INCLUDED



VV120107
BUG DEFLECTOR 630, 670,780,
830, 880 SERIES

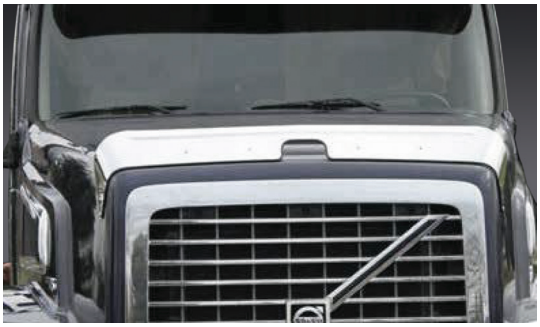

STAINLESS TRIM FOR FACTORY VISORS



VV130000
VISOR INSERT - 700, 800
SERIES



VOLVO VNL

FAIRING HIGHLIGHTS

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VV121000
FRONT FAIRING UPPER
STEP PANEL - PAIR



VV121001
FRONT FAIRING UPPER
STEP HIGHLIGHT
2PCS



VV121002
FRONT FAIRING LOWER
STEP PANEL - PAIR



VV121003
FRONT FAIRING LOWER
STEP HIGHLIGHT



VV121004
FRONT FAIRING LOWER
STEP BOTTOM HIGHLIGHT



VV121005
REAR FAIRING UPPER
STEP HIGHLIGHT



VV121006
REAR FAIRING LOWER
STEP PANEL



VV121007
REAR FAIRING LOWER
STEP HIGHLIGHT



VV121008
REAR FAIRING LOWER
STEP BOTTOM HIGHLIGHT



STAINLESS ACCESSORIES

VOLVO VT SERIES



Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

VOLVO VT SERIES

CAB PANELS

MOUNTING HARDWARE INCLUDED



VV112000
CAB PANELS 880/830 - BLANK
- NO SIDE FAIRING



EXAMPLE
VV112000-4GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED



VV143000
SLEEPER PANELS - BLANK -
WITH NO SIDE FAIRINGS



EXAMPLE
VV143000 - 5UN



EXAMPLE
VV143000– 5RN



EXAMPLE
VV143000 – 7RA



EXAMPLE
VV143000 – 4GA

VOLVO VT SERIES

HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED





VV110300
HOOD EXTENSION PANEL
- BLANK



EXAMPLE
VV110300-4GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

HOOD & FENDER TRIM



VV100000
HEADLIGHT TRIM - SIDE -
830, 880 SERIES
TAPE MOUNT





VV100001
TOP FENDER TRIM - 830,
880 SERIES
TAPE MOUNT



VOLVO VT SERIES

HOOD & FENDER TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE



VV120000
FENDER GUARD - UPPER -
830, 880 SERIES




VV120001
FENDER GUARD - LOWER -
830, 880 SERIES

BUG SHIELD

MOUNTING HARDWARE INCLUDED



VV120107
BUG DEFLECTOR 630, 670,780,
830, 880 SERIES

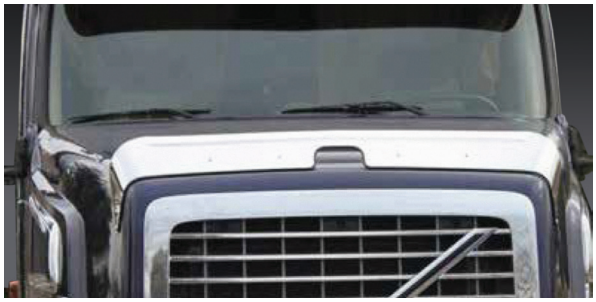

SUN VISORS

MOUNTING HARDWARE INCLUDED



VV130005
DROP VISOR - 830 MID-ROOF



VOLVO VT SERIES

BATTERY BOX COVER




VV150000
BATTERY BOX COVER - 830
VOLVO - 8PCS



FUEL TANK FAIRINGS



VV150001
FUEL TANK FAIRINGS - 68"

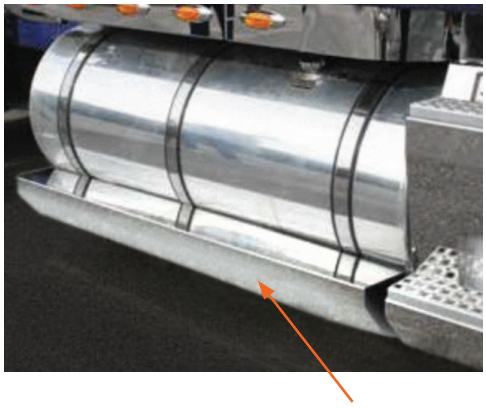

Valley Chrome Plating
QUALITY TRUCK PARTS


STAINLESS ACCESSORIES

WESTERN STAR 4700SF







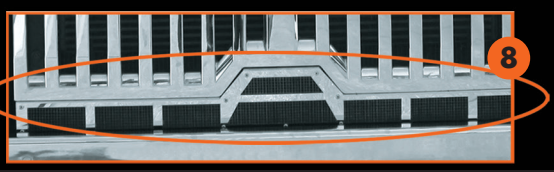

PARTS LIST:

1	*IM-2110-06*	Chrome Bumper (Call for Options & Price)
2	*VW120005*	Fender Guards (Fitted)
3	*VW120006*	Upper Fender Guards (Rolled)
4	*VW110200-8GMA*	Cab Panel Line (Cab Panels with Granite Amber Lights Shown)
	VW110200	Blank Cab Panels w/Heater Plug Holes (Not Pictured)
	VW110201	Blank Cab Panels (Not Pictured)
5	*VW130001*	12" Visor - 2013 & Newer
6	*VW120010*	Bug Shield - Stainless Steel
7	*VW120011*	Bug Shield - Stainless Steel - "W" Look
8	*VW120201*	Lower Radiator Rock Guard

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

WESTERN STAR 4700SF YEARS 2013 & NEWER

CAB PANELS

MOUNTING HARDWARE INCLUDED



VW110200
WS CAB PANELS - 2013 AND NEWER - 4700 SF - BLANK W/ HEATER PLUG HOLE




VW110201
CAB PANELS - BLANK - NO SIDE FAIRING - 4PCS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

FENDER GUARDS



VW120005
WS FENDER GUARDS - FITTED - 4700 SF 2013 AND NEWER HARDWARE INCLUDED

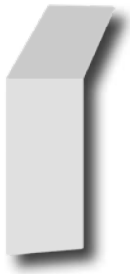

VW120006
WS UPPER FENDER GUARD - FITTED 4700 SF 2013 AND NEWER TAPE MOUNT

BUG SHIELDS

BRACKETS & MOUNTING HARDWARE INCLUDED




VW120010
PB BUG SHIELD - STAINLESS - 4700 SF 2013 AND NEWER



VW120011
WS BUG SHIELD - "W" STYLE - STAINLESS - 4700 SF 2013 AND NEWER

RADIATOR ROCK GUARD





VW120201
WS LOWER RADIATOR GUARD - 2013 AND NEWER 4700 SF

SUN VISORS

BRACKETS & MOUNTING HARDWARE INCLUDED




VW130001
WS 12" VISOR 2013 AND NEWER 4700 SF



5700XE YEARS 2015 & NEWER

SUN VISORS

BRACKETS & MOUNTING HARDWARE INCLUDED

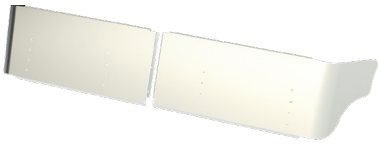

VW130002
WS SUNVISOR - 13.5" WIDE
5700XE STAINLESS

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

For more info on bumpers for this model, see page 85

BUG SHIELDS

MOUNTING HARDWARE INCLUDED



VW120014
WS BUGSHIELD
5700XE STAINLESS




47X/49X SETBACK AXLE YEARS 2021-NEWER
VISORS



VW130003
12" DROP VISOR



VW130004
15" DROP VISOR

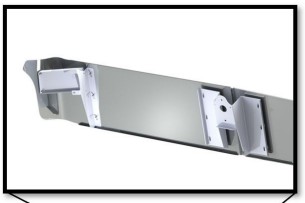



VW130004
15" DROP VISOR
(REAR VIEW)

49X SETBACK AXLE YEARS 2022-NEWER
SLEEPER EXTENSION PANEL



VW142100
SLEEPER EXTENSION PANEL
ISO VIEW




VW142100
SLEEPER EXTENSION PANEL

49X SETBACK AXLE YEARS 2022-NEWER
AIR INTAKE SCREEN



VW100000
AIR INTAKE SCREEN
ISO VIEW

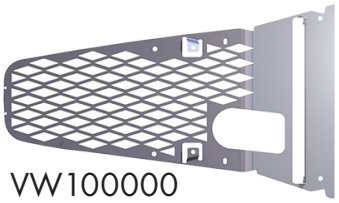

VW100000
AIR INTAKE SCREEN

49X SETBACK AXLE YEARS 2021 & NEWER
CAB PANELS



VW110202
CAB PANELS - BLANK
(FITS TRUCKS WITH CAB MOUNTED EXHAUST)



VW142000
60" SLEEPER PANEL - BLANK
(FITS TRUCKS WITH CAB MOUNTED EXHAUST)



VW110203
COWEL PANEL

THE ORIGINAL TURBOWING BY Valley Chrome Plating

QUALITY TRUCK PARTS



TURBOWING





THE TURBOWING ADVANTAGE

"The Original Turbowing" is the Grand-Daddy of all air deflectors. This size, shape and design is today's air deflector of choice and will be for another 30 years. Impeccable over the road performance records make it one of the most popular accessories in the industry today, because Turbowing works. Proven efficiency saves truckers thousands of dollars in fuel costs each year. Get started today!

DURABILITY:

Turbowing "Tough" is the term unmatched in the trucking industry today. A rugged over-the-road environment remains a real-life "Tell-tale" test for big rig accessories. Some air deflectors are giving in to this harsh reality, Turbowings remain solid and continue to prove their worth, trip after trip!

FUNCTIONAL:

Testimonials from owner operators have shown consistent fuel savings of approximately ***10% up to 19%***. for the average owner/operator, this means payback for their Turbowing investment in less than six months.

EXAMINE THIS LIST OF FEATURES OFFERED ONLY BY STAINLESS COMPANY:

- Highest quality materials and hardware.
- Pre-formed body panels to reduce undue stress on rivets.
- Sleeper specific brackets attach to the strongest points of the sleeper at the factory-built supports.
- Fixed angle brackets ensure the correct angle for deflection of air, no fooling around.
- Full application range to fit all popular sleeper sizes in flat-top and raised roofs.
- Paccar approved, one of the only wing-styled air deflectors available through Paccar's parts division.
- Tested and proven so you gain every time.

TURBOWING

PICKUP TRUCK WINGS

HIGHLIGHTS OF THE STAINLESS LINE OF AIR DEFLECTORS


- 30% reduction in drag.
- Wings are available in mirror polished stainless steel.
- Reduced "bug splatter" on the front of the trailer.
- Enhances stability in windy situations.
- Increased towing speed.
- The ability to pass other large vehicles without getting bogged down or blown around from on-coming wind.
- No drilling required with easy on and off clip mount system. (For most full size domestic pickup trucks 3/4 ton and up)

DESIGNED TO IMPROVE YOUR TOW PACKAGE

Towing a 5th wheel trailer, gooseneck race car trailer with a pickup truck or big rig semi truck means you are fighting the wind. STAINLESS builds a stylish wing to deflect air over the trailer and maximize fuel economy every time you tow.

Going camping? Want to get better fuel mileage towing on the way to and from your destination but just want the most economical way to save fuel? Use STAINLESS air deflectors.

TURBOWING UNIVERSAL CLIP-ON/BOLT-ON WING

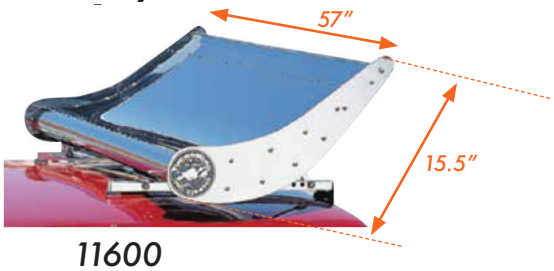

11600

DODGE, CHEVY, FORD - POWER
**SEE UNIVERSAL MOUNTING KITS*

HIGH PROFILE UPGRADE KIT



11603

11600 UPGRADE KIT, MINI WING, END PLATES, BOLT KITS

APPLICATION	CAB STYLE	CLIP-ON KIT	BOLT-ON KIT
2001 - 2006 Chevy & GMC (2500-3500)	Extended w/4-door	10244	11703
2001 - 2006 Chevy & GMC (2500-3500)	Extended w/ small door	10244	11703
2001 - 2006 Chevy & GMC (2500-3500)	Crew cab	10249	11704
2007 & Newer Chevy & GMC (2500-3500)	Extended cab	17249	11703
2007 & Newer Chevy & GMC (2500-3500)	Crew cab	17249	11704
2010-2014 Chevy	Crew cab	10258	(N/A)
2015 Chevy	Crew cab	10256	(N/A)
1980 -1997 Ford	All cabs w/rain gutters	11230	CALL
1998 & Newer Ford Standard,	Extended w/4-door, Crew	10237	10601
2015 Ford 3/4 ton to 1 ton	Super Crew	10257	(N/A)
1994-2002 Dodge (1500-3500)	All cabs	10251	(N/A)
2003-2010 Dodge	All cabs	10252	11706
2013 & Newer Dodge	All cabs	10254	(N/A)

TURBOWING

AEROLIGHT 700 SERIES

- 38" Rail
- 76"L X 26"D X 20"H
- Ideal size and function for all stand-up high-roof sleepers
- Downsized, identical design/function as the Turbowing 1.
- Conforms to industry height restrictions.
- Preset wing angle for optimum performance.
- Polished stainless bracketry.
- Polished stainless available for most standups.



900 SERIES

The Turbowing 900 Series was originally developed for the lower roof flat-top style sleepers where the height of the trailer was significantly taller than the roof of the truck. This design boasts bold, sharp looks, and works extremely well at increasing fuel mileage.



Standard 900 Series

- Weight 125 lbs.
- 76"L X 30"D X 30"H
- Wing body: mirror polished stainless
- Brackets: polished stainless steel
- Adjustment: preset per sleeper/trailer height
- Fuel mileage increase: approx. 10%
- Drag/wing resistance reduction: 30%
- For most flat-top sleepers
- Warranty: 3 year limited

TURBOWING

PETERBILT WINGS



711
HIGH ROOF/STANDUP SLEEPERS



911
FLAT TOP/ C/O CABOVER

MOUNTING KITS

AEROLIGHT 700 - PETERBILT

48700
48" HR - HIGH ROOF/ STANDUP SLEEPER

63700
63"/72" HR - HIGH ROOF/ STANDUP SLEEPER

70700
70" HR - HIGH ROOF/STANDARD OR UNIBILT SLEEPER

AEROLIGHT 900 - PETERBILT

63900
63"/72" STD FT - STANDARD FLATTOP NON-UNIBILT

50900
48" STD FT - STANDARD NON-UNIBILT

36900
36" STD FT - STANDARD NON-UNIBILT


63900U
63"/72" STD FT - STANDARD FLATTOP UNIBILT

90900
90" C/O CAB OVER



VU190021
TURBOWING BRACKET
STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS

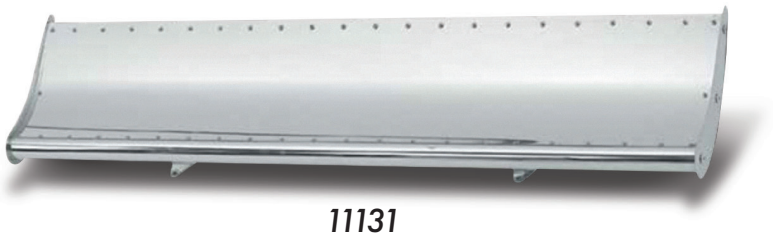

11131
HOOD WINGS - POWER STYLE - UNIVERSAL (EXCEPT KW) 42" X 9" X 6"

TURBOWING

KENWORTH WINGS



711
ALL HIGH ROOF SLEEPERS



911
AEROCAB INTEGRAL/ STANDARD FLATTOP/ CAB OVERS

MOUNTING KITS

AEROLIGHT 700 - KENWORTH

KW700
ALL HR - HIGH ROOF SLEEPERS
60", 62", 72", 74", & 86" AERODYNE I, II, STUDIO SLEEPERS & STAND UP AEROCAB

AEROLIGHT 900 - KENWORTH

62900
62" ING - AEROCAB INTEGRAL FLATTOP

60900
60" STD FT - STANDARD FLATTOP

42900
42" STD FT - STANDARD FLATTOP

72900
72" ING - AEROCAB INTEGRAL FLATTOP


49900
50" STD FT - STANDARD FLATTOP

37900
36" STD FT - STANDARD FLATTOP



VU190021
TURBOWING BRACKET
STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS

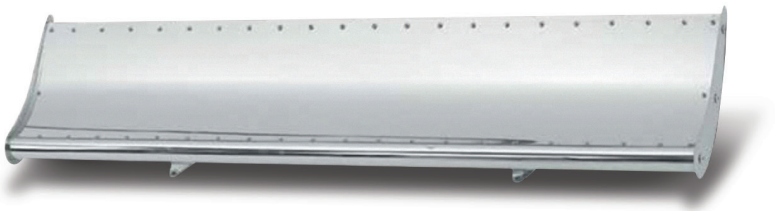

11151
HOOD WINGS POWER STYLE
42" X 9" X 3"

TURBOWING

FREIGHTLINER WINGS



711
HI-STYLE/STANDARD RAISED ROOF/
MID ROOF INTEGRAL



911
STANDARD INTEGRAL/STANDARD
FLATTOP/CAB OVER

MOUNTING KITS

AEROLIGHT 700 - FREIGHTLINER

FX711
BUSINESS CLASS FL50, FL60, FL70, FL80, FL106, FL112, M2(72") WING & BRKTS SOLD TOGETHER

56700
58" MR ING - MID ROOF INTEGRAL

69700
70" MR ING - MID ROOF INTEGRAL

TURBOWING 900 - FREIGHTLINER

70900
70" ING - STANDARD INTEGRAL
SLEEPER CAB

47900
48" ING - STANDARD INTEGRAL
SLEEPER CAB

49900
50" STD FT - STANDARD FLATTOP
SLEEPER BOX

57900
58" ING - STANDARD INTEGRAL
SLEEPER CAB

58900
60" STD FT - STANDARD FLATTOP
SLEEPER BOX


39900
40" STD FT - STANDARD FLATTOP
SLEEPER BOX

86900
86" C/O - CAB OVER



VU190021
TURBOWING BRACKET
STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS

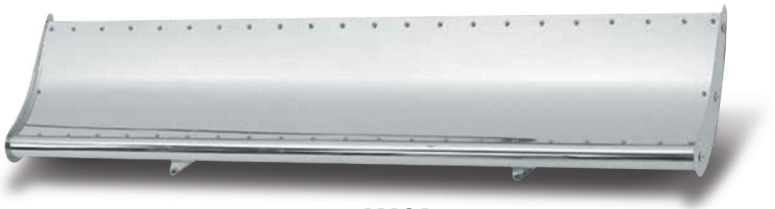

11131
HOOD WINGS - POWER STYLE -
UNIVERSAL (EXCEPT KW) 42" X 9" X 6"

TURBOWING

INTERNATIONAL WINGS



711
HIGH ROOF/STANDUP SLEEPERS



911
FLAT TOP/ C/O CABOVER

MOUNTING KITS

51700
51" H/R - HI-RISE INTEGRAL PRO SLEEPER

72700
72" H/R - HI-RISE INTEGRAL PRO SLEEPER

TURBOWING 900 - INTERNATIONAL

73900
72" ING - LO-ROOF INTEGRAL PRO SLEEPER

59900
60" STD FT - STANDARD FLATTOP

41900
42" STD FT - STANDARD FLATTOP


51900
51" ING - LO-ROOF INTEGRAL PRO SLEEPER

48900
48" STD FT - STANDARD FLATTOP

86900
86" C/O - CAB OVER

10900
110" C/O - CAB OVER

HOOD WINGS

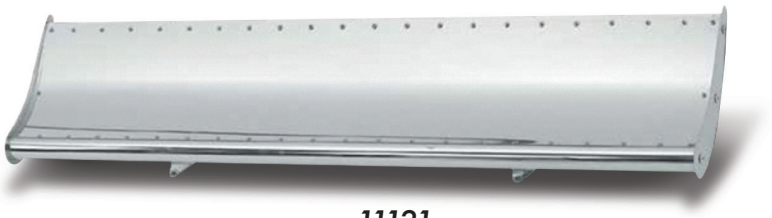

11131
HOOD WINGS - POWER STYLE - UNIVERSAL (EXCEPT KW) 42" X 9" X 6"

TURBOWING

WESTERN STAR WINGS



AEROLIGHT 700 - WESTERN STAR

WESTERN STAR WINGS HAVE DIFFERENT C-C DIM. 60" SOLID WING & MOUNTING

WC711


70" CONST - CONSTELLATION SERIES



VU190021

TURBOWING BRACKET
STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS

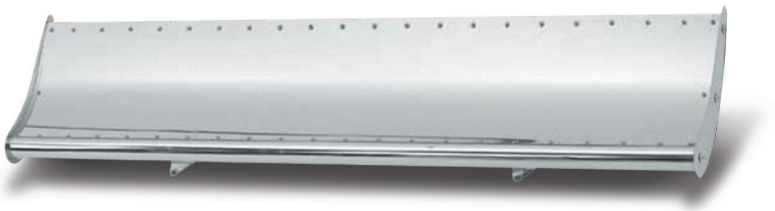

11131

HOOD WINGS - POWER STYLE -
UNIVERSAL (EXCEPT KW) 42" X 9" X 6"

Valley Chrome Plating
QUALITY TRUCK PARTS

TURBOWING

PRO TAIL WINGS



VU194000
PRO TAIL 72" X 18" HIGH ROOF FLAT TOPS ONLY



VU194001
PRO TAIL 70" X 11" HIGH ROOF FLAT TOPS ONLY



VU194002
PRO TAIL 70" X 19" - WING VERSION FLAT TOPS ONLY



WARRANTY & RETURNS

Thank you for choosing Valley Chrome bumpers and STAINLESS, a division of Valley Chrome Plating, Inc., as your source for chrome and stainless steel custom truck accessories. Our family of products is fully guaranteed for fit, appearance and quality. Our mission is to provide you with the finest products at a fair price. Our reputation has been built in the trucking industry on our commitment to you, the trucking industry professional.

LIMITED WARRANTY

STAINLESS extends a warranty against defects in material and workmanship for a period of one year. LED light assemblies come with a three year limited warranty. This warranty is void by damage or defects in appearance due to accident, abuse, alterations to the product, improper installation, corrosive environments or any other abnormal conditions. This warranty applies only to the original purchaser of the product and covers only the defective part, whether it is a single item or component part of a purchased group. The warranty year begins upon purchase of the product by the end user. All requests for warranty must include the original invoice. Serial numbers must be provided for bumpers, wings and any other serialized parts. There is no warranty for setback axle bumpers ("break-backs") 20" and wider. Flat bumpers 20" and wider may require additional brackets and bracing (not included) to avoid cracking, and may not be warranted if our company determines the bracing is insufficient.

RETURN POLICY

Products must be returned to our Clovis, Ca. facility with a Returned Goods Authorization number, freight prepaid. Items sent without an R.G.A. number or freight collect will be refused. STAINLESS reserves the right to repair or replace the item at our discretion. Warranted items will be returned freight prepaid upon acceptance of our responsibility of the defect. Please contact our customer service staff for the R.G.A. number. Items may not be returnable due to age or stored condition, which is at our company's discretion.

FREIGHT POLICY

All freight is F.O.B. from our Clovis, Ca. facility unless prepaid conditions are met.

Dealers/Distributors: see your published price list for the freight policy that applies to you. Bumpers, Turbowings, battery boxes and tool boxes can be combined to achieve prepaid status.

Accessories may be combined with bumper and/or wing orders at our discretion.

IMAGES IN THIS CATALOG

The images shown in this catalog are best representations of our products, however, they are representative only and may sometimes not match actual product. Add-on items shown in images, such as external tow apparatus, fog lamps and other non-Valley Chrome/STAINLESS items attached to bumpers and accessories are not included in the product offered.

UPDATED INFORMATION

Information in this catalog, when printed by our company, is made as accurate as possible at the time of printing. For the most current information, including error corrections, see the most current catalog posted on our website. Because of the truck and automotive industry's aftermarket publishing inconsistencies, some model years and vehicle models indicated in this publication may vary slightly from the actual model. Obtain product drawings and photos from our customer service staff to verify product fit prior to ordering.

Valley Chrome Plating

QUALITY TRUCK PARTS

Call for a Dealer Near You **1.800.354.0976**

www.valleychrome.com • 1028 HOBLITT AVE. • CLOVIS, CA 93612 • USA

Bumpers & STAINLESS
Stainless Accessories are...

FOLLOW US

MADE IN THE USA