VALLEY CHROME TRUCK PARTS

VALLEY CHROME PLATING

QUALITY SINCE 1961

BUMPERS & ACCESSORIES CATALOG

version 26.3

ABS Quality Evaluations, Inc. MANAGEMENT SYSTEM CERTIFICATION

ISO 9001
ISO 14001

VALLEY CHROME PLATING

For **OVER 60 YEARS**, the trucking industry has put its trust in Valley Chrome Plating, Inc./STAINLESS. We are a hard working, family-owned American business. A huge THANK YOU to those who have helped us build our reputation for stellar aftermarket bumpers, visors, light panels, LED accessory lighting and more!

Please visit us on our website and join the excitement on our social media pages by posting pictures of our products on your trucks. Our knowledgeable staff is ready to serve you by phone as well, by calling 1.800.354.0976.

TABLE OF CONTENTS

BUMPERS

Part Numbering Guide 7
Autocar 8
Ford 9-10
Freightliner 11-26
GMC 27-29
Hino 30
International 31-38
Kenworth 39-48
Mack 48-59
Peterbilt 60-74
Sterling 75-76
Volvo 77-82
Western Star & White 83-88
Universal Mount Blank Bumpers 89
Blind Mount Bumpers 90
Bumper Customization Options 91-93
Bumper Mounting Bolt Kits 94

UNIVERSAL ACCESSORIES

Flap Weights, Tank Straps & Tag Hangers ... 97
Permit Panels 98
Ridged Permit Panels & Beacon Light Brackets 99
Airline Boxes 100
Deck Plates & Front Deck Plate Tool Box ... 101
Rear Frame Tool Box 102
Frame Steps 103
Rear Window Visors 104
Rear Frame Fillers 105
Lower Rear Frame Fillers 106
Retail Display - LEDs 107
LED Light Option Chart 108
Blank Light Cutout Options 109
Universal LED Lights & Watermelon Lights 110-115
Watermelon Light Brackets 116
Wire Harnesses 117

PETERBILT MODEL 359 ACCESSORIES

Cab Panel 3.5" & Hood Extensions 119
Misc. Trim Pieces 120
Standard Mount Stainless Visors, Gangster Stainless Visors & Wicked Visors 121
Air Deflectors, Fuel Tank Strap Covers & Misc. Trim Pieces 122

PETERBILT MODELS 365 & 367 ACCESSORIES

Cab Panel 4" 124
Sleeper Panels 4" 125
Sleeper Extension Panels 4" 126
Air Cleaner Light Boxes & Bug Shields 127

PETERBILT MODEL 379 ACCESSORIES

One-Piece Cab/Hood Extension Panels 130
4" & 6" Cab Panels 131
4" & 6" Hood Extension Panels 132
4" & 6" Sleeper Panels 133
4" & 6" Sleeper Extension Panels 134
Air Cleaner Light Boxes Vortox 135
Mirror Light Boxes 136
Bumper/Grille Trim & Fender Guards 137
Bug Shields 138
Blinker Bars & Fender Support Covers 139
Sleeper Filler Panels & Shock Covers 140
Air Deflectors & Fuel Tank Strap Covers 141
Fuel Tank Fairings 142
Emblems & Misc. Trim Pieces 143-144
Battery Boxes & Tool Boxes 145
Tool & Battery Box Covers 146

PETERBILT MODEL 384

4" & 6" Cab Panels 148
4" & 6" Sleeper Panels 149
4" & 6" Sleeper Extension Panels 150

PETERBILT MODEL 386

2.5" Cab Panels & Exhaust Filler Panel 152
2.5" Sleeper Panels 153
2.5" Sleeper Extension Panels, Bug Shields 154

PETERBILT MODELS 388 & 389

4" & 6" Formed Cab Panels 156
One-Piece Cab/Hood Extension Panels for DEF & No DEF System 157-159
4" & 6" Cab Panels 160

Table of Contents continued on next page

TABLE OF CONTENTS

Table of Contents continued from previous page

PETERBILT MODELS 388 & 389 (cnt'd)
4" & 6" Cab Panels for Def & No Def System161
4" & 6" Sleeper Panels.....162
4" & 6" Hood Extension Panels 163-164
388 Cab Panel DEF System 165
4" & 6" Sleeper Extension Panels.....166
Air Cleaner Light Boxes Donaldson 167
Mirror Light Boxes 168
Bumper & Grille Trim, Fender Guards & Bug Shields..... 169
Emblems, Fender Trim & Hood Trim 170
Blinker Bars & Fender Support Cover 171
Stainless Visors & Sleeper Filler Panels 172
Misc. Trim Pieces 173-174
Sleeper Shock Covers & Air Deflectors.....175
Fuel Tank Strap Covers & Exhaust Covers .176
Tool & Battery Box Covers 177
Battery Boxes, Tool Boxes & Box Step High-lights/Protectors.....178

PETERBILT MODEL 567
Cab Panels, Sleeper Panels, Hood Extensions & Fender Guards 180
Bug Shields & Fuel Tank Strap Covers 181
Stainless Visors.....182

PETERBILT MODEL 579
Cab Panel & Sleeper Panels.....185
DEF System Panels.....186
Misc. Trim Pieces 187-188
Stainless Visors.....189
Sleeper Shock Covers, Tank Fairing Highlight & Kick Panel Trim 190

PETERBILT MODEL 587
Fender Trim & Stainless Visors 192
Misc. Trim Pieces 193

PETERBILT MODEL 589
Fender Guards, Air Cleaner Light Bars, Cab & Sleeper Panels 196
Universal Watermelon Light Brackets, Tag Hangers & Panels.....197

ACCESSORIES FOR ALL PETERBILT MODELS
Hood Emblems & Hood Latch Guards199-200
Key Guards & Misc. Trim Pieces 201
Bug Shield for model 387, Window Trim & Sleeper Window Lower Looks 202
Stainless Visors.....203-206
Sleeper Wraps & Rear Frame Covers 207
DEF Tank Covers & Fuel Tank Wraps.....208

KENWORTH MODEL W900
Cab Panels 210
Sleeper Panels.....211
Hood Extension Panels & Sleeper Extension Panels 212
Air Cleaner Light Boxes 213
Air Cleaner Fairings.....214
Exterior Window Trim, Exhaust Shields & Bug Shields 215
Blinker Bars & Flap Weight.....216
Fender Guards, Battery & Tool Box Covers217
Hood & Grille Trim.....218
Stainless Sun Visors 219-221
Catalytic System Box Highlights, DEF Tank Cover & Stainless Deck Plates 222
Fuel Tank Fairings.....223
Lower Hood Panels & Center Hood Trim...224

KENWORTH MODEL T600
Sleeper Panels & Sleeper Extension Panels226
Stainless Grilles & Bug Shields.....227
Battery/Tool Box Covers & Side Marker Trim228

KENWORTH MODEL T660
Cab Panels, Bug Shields & Stainless Sun Visors 230

Gangster Visors & Boltless Wicked Visors .231
Battery & Tool Box Covers 232

Table of Contents continued on next page

TABLE OF CONTENTS

Table of Contents continued from previous page

KENWORTH T680
Cab & Cowl Panels, Sleeper Extension Panels & Door and Window Trim....234
Bug Shields, Fender Guards & Stainless Sun-Visors....235
DEF Tank Cover....236

KENWORTH T800 & T880
Sleeper Panels & Sleeper Extension Panels238
Bug Shields, Fender Guards & Stainless Sun-Visors....239
Gangster Visors & Boltless Wicked Visors . 240
Battery & Tool Box Covers....241
Exterior Window Trim, Door Handle Trim, Lower Look.... 241 & Air Deflectors 242
Emblem Accents & Hood Latch Guards 243
Sleeper Window Trim, Rear Frame Covers & Stainless Fuel Tank Wraps....244

FREIGHTLINER FLD/CLASSIC
Cab Panels 4" & Sleeper Panels....246
Hood Latch Guards, Hood Trim & Lowered Look Window Panels....247
Misc. Trim Pieces & Air Cleaner Light Boxes248
Fender Guards, Stainless Trim For Plastic Bumpers & Headlight Visors....249
Bug Shields....250
Drop Visors....251
Wicked Boltless Visors....252

FREIGHTLINER CENTURY & COLUMBIA
Cab Panels 4", Sleeper Panels & Misc.-Trim Pieces....254
Stainless Trim for Plastic Bumpers & Bug Shields 255
Sun Visors....256

FREIGHTLINER CORONADO 2002-2009 & GLIDER KITS
Bug Shields & Sun Visors....258

FREIGHTLINER CASCADIA 2017 & OLDER "P3"
Cab Panels 4" & Sleeper Panels....260
Fairing Panels....261
Fender Trim, Hood & Door Trim & Lowered Look-Window Panels....262
Stainless Trim For Plastic Bumpers & Bug Shields 263
Sun Visors....264
Fuel Tank Covers, Battery Box Covers & Steps & Catalytic Covers....265
Emblem Accents, Permit Panels & Fuel Tank-Fairing....266

INTERNATIONAL
Sun Visors....268

VOLVO VNL
Hood & Fender Trim, Bug Shield & Stainless Trim For Factory Visors....270
Fairing Highlights....271

VOLVO VT SERIES
Cab Panels & Sleeper Panels....273
Hood Extension Panels & Hood & Fender Trim 274
Hood & Fender Trim, Bug Shield & Sun Visors. 275
Battery Box Cover & Fuel Tank Fairings 276

WESTERN STAR 4700SF
Cab Panels, Fender Guards & Panels 278
Bug Shields, Radiator Rock Guard & Sun Visors 279

WESTERN STAR 5700XE
Sun Visors & Bug Shields ....(279 Cont'd)

WESTERN STAR 47X & 49
Sun Visors, Sleeper Extension Panels & Air Intake Screens....279

TURBOWINGS
The Turbowing Advantage....281
Pickup Truck Wings/Mounting Kits....282
Aerolight 700 Series Intro & 900 Series Intro.. 283
Peterbilt Wings/Mounting Kits....284
Kenworth Wings/Mounting Kits....285
Freightliner Wings/Mounting Kits....286
International Wings/Mounting Kits....287
Western Star Wings/Mounting Kits 288
Pro Tail Wings....289

NOTES....290

WARRANTY AND RETURN POLICIES....291

BUMPER PART NUMBERING & OPTIONS GUIDE

How our BUMPER part numbering system works:

We use a "smart" part number. Every digit has a meaning, which indicates how we build your bumper. Make sure all digits are correct to have your bumper built correctly!

Example Part Number:

HC – 0010 – 06 – 21BY

TRUCK MAKE
H = Peterbilt

TRUCK MODEL
C = Model 379

Search the following bumper pages to find this two digit code.

CUTOUTS
0010 = mounting holes and tow hole. Visit the bumper pages in this catalog for available cutout options.

END STYLE
06 = 18 inch Rolled End Square. See this chart for end style choices. Varies by make/model. See bumper pages.

OPTIONS
21BY = 21 open Bullseye 3/4 light holes. No code needed here if the rest of the part number completes your bumper. See p. 88-91 for some options.

"STANDARD TAPER"

12"	01
16"	02

"TEXAS SQUARE"

18"	**06**
20"	41
22"	42

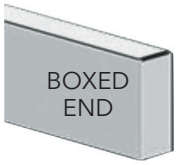

"SQUARE BOXED"

12"	09
16"	10
18"	**11**
20"	51
22"	52

16"	07

12"	91
14"	30
16"	92
18"	03
20"	31
22"	32

10"	00
12"	04
14"	21
16"	05
18"	96
20"	97
22"	98

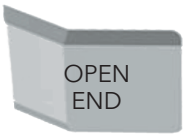

10"	27
12"	**12**
14"	**25**
14" (w/Taper)	**26**
16"	13
18"	14
20"	61
22"	62

9"	29
12 to 14"	**15**
16"	16
18"*	17
20"*	34

12"-13"	**18**
16"	19
18"	20
20"	35

10"	24
12"	22
14"	38
16"	23

12"	70
14"	71
16"	72
18"	73
20"	74
22"	75

WITH 8" EARS

12"	54
16"	55
18"	56
20"	57
22"	58

WITH 6" EARS

12"	54A
16"	55A
18"	56A
20"	57A
22"	58A

WITH 8" EARS

12"	64
16"	65
18"	66
20"	67
22"	68

WITH 6" EARS

12"	64A
16"	65A
18"	66A
20"	67A
22"	68A

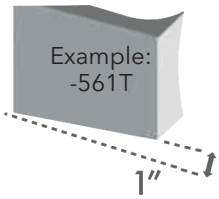

CUSTOM TAPERS:

Add "1T" for 1" TAPER
Example: -561T = AMER. EAGLE BOX, 18" to 17" TAPER
Add "2T" for 2" TAPER
Example: -742T = BOXED END, 20" to 18" TAPER

45° MITRE END

12"	111
16"	112
18"	113
20"	114
22"	115

45° MITRE END

12"	101
16"	102
18"	103
20"	104
22"	105

* NOTE: No Warranty on setback bumpers 20" and wider, except COA, COB and LI series.

Standard sizes are in bold.

ALSO SEE OUR "BUILD A BUMPER" CONFIGURATION TOOL ON OUR WEBSITE

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

AA, AB

Width	End Style Code
16″	02
18″	03
20″	31
22″	32

AA, AB

Width	End Style Code
16″	05
18″	06
20″	41
22″	42

KB

Width	Bumper Length	End Style Code
12″	94″	22
12″	88″	22-88″

AA

AUTOCAR

WITH 2″ BREAKBACK

NOT AVAILABLE IN 12″ WIDTH

26.06″



AA-2011-02

AA-2010-02

AA-2001-02

AA-0011-02

AA-2000-02

AA-0010-02

AA-0001-02

AA-0000-02

AB

AUTOCAR

WITH 2″ BREAKBACK

36.58″

AB-2010-02

AB-2000-02

AB-0010-02

AB-0000-02

FORD BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

BA

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

BA

Width	End Style Code
10″	00
12″	04
16″	05
18″	06
20″	41
22″	42

BF, BG

Width	End Style Code
9″	29
12″	15
16″	16
*18″	17

* No warranty for 18″ width on models BF & BG

L, LN, LT, LTN, LTL -800-900-8000-9000 YEARS 1970-1998 — BA

ALSO MODELS LN7000 & STERLING LT9511

MUST BE 16″ WIDE OR LARGER FOR 4 FOG LIGHT OPTION

BA-4010-02

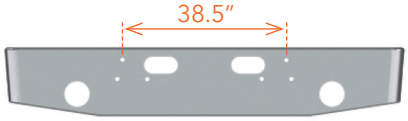

BA-1010-02

BA-4000-02

BA-0000-02

BA-1000-02

BA-0010- 02

AEROMAX SETBACK AXLE – L, LS, LA, LTS, LTA YEARS 1988-1995 — BF

CHECK 'BG' SERIES PRIOR TO ORDERING

BF-0000-29

BF-0010-29

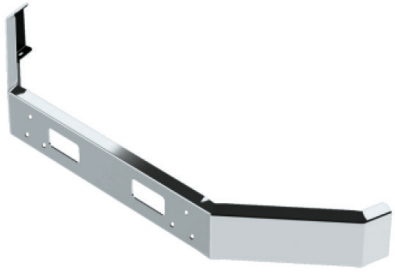

LST SET BACK AXLE YEARS 1988-1995 — BG

CHECK 'BF' SERIES PRIOR TO ORDERING

BG-0000-29

BG-0010-29

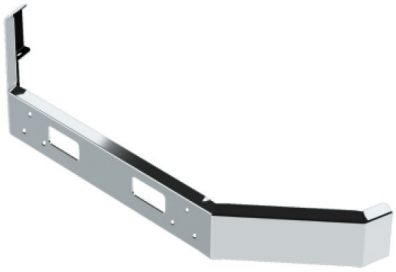

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ width

BI

F-650 SUPER DUTY YEARS 2005-2018

WITH CUMMINS 5.9L ENGINES
MOUNTING BRACKETS INCLUDED
CHECK 'BJ' SERIES PRIOR TO ORDERING
NOTE LETTERS 'BI' IN PART NUMBER

BI-0011-15

BI-0010-15

BI-0001-15

BI-0000-15

BJ

F-650 SUPER DUTY YEARS 2005-2018

WITH CATERPILLAR C7 ENGINES
MOUNTING BRACKETS INCLUDED
CHECK 'BI' SERIES PRIOR TO ORDERING

BJ-0011-15

BJ-0010-15

BJ-0001-15

BJ-0000-15

FREIGHTLINER BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

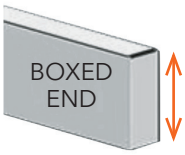

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

CABOVER AND CONVENTIONAL

YEARS 1980-1984

CA

CA-1110-02

CA-1100-02



CA-1010-02



CA-0110-02

CA-1000-02

CA-0100-02



CA-0010-02

CA-0000-02

CABOVER AND CONVENTIONAL AND CLASSIC

YEARS 1984-1999

CB

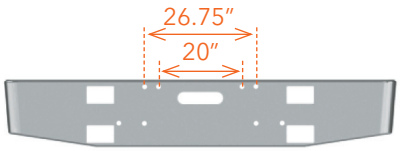

CB-2110-02

CB-2100-02

CB-2010-02

CB-0110-02

CB-2000-02

CB-0100-02

CB-0010-02

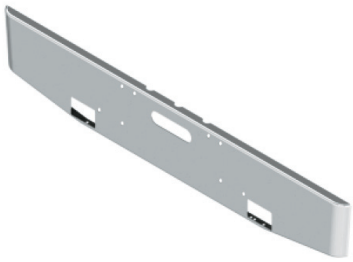

CB-0000-02

VF120009

FL-TOW PIN COVER -CLASSIC

FITS 'CA' & 'CB' SERIES BUMPERS

FREIGHTLINER BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

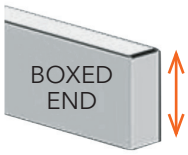

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

CQ — FLD CLASSIC YEARS 2000-2002

CQ-2110-02

CQ-2100-02

CQ-2010-02

CQ-0110-02

CQ-2000-02

CQ-0100-02

CQ-0010-02

CQ-2010-02

CQ-0000-02

CS — FLD CLASSIC – 1200 SERIES YEARS 2002-2007

CS-2110-02

CS-2100-02

CS-2010-02

CS-0110-02

CS-2000-02

CS-0100-02

CS-0010-02

VF120009
FL-TOW PIN COVER -CLASSIC
FITS 'CQ' & 'CS' & 'CU' SERIES BUMPERS

CS-0000-02

CU — FLD CLASSIC – 1400 SERIES YEARS 2002-2007

ALSO CHECK 'CV' SERIES

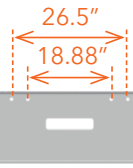

CU-2110-02

CU-2100-02

CU-2010-02

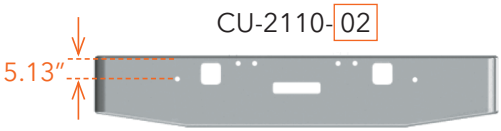

CU-0110-02

CU-2000-02

CU-0100-02

CU-0010-02

CU-2110-02

CU-0000-02

FREIGHTLINER BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

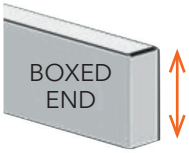

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

FLD CLASSIC YEARS 2002-2007 — CV

ALSO CHECK 'CU' SERIES

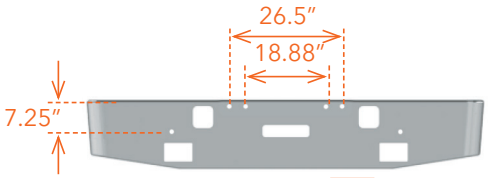

CV-2110-02

CV-2100-02

CV-2010-02

CV-0110-02

CV-2000-02

CV-0100-02

CV-0010-02

CV-0000-02

FLD CLASIC YEARS 2008-2010 — CX

ONLY AVAILABLE IN
16″ AND WIDER

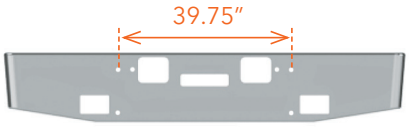

CX-2110-02

CX-2010-02

CX-0110-02

CX-2100-02

CX-0100-02

CX-0010-02

CX-2000-02

CX-0000-02

114SD SET FORWARD AXLE YEARS 2012-NEWER — COI

NOTE LETTERS "COI" IN PART NUMBER

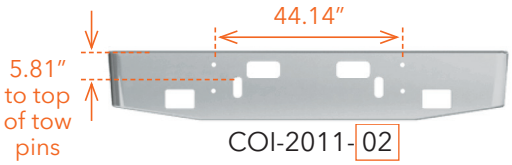

COI-2011-02

COI-2010-02

COI-2001-02

COI-0011-02

COI-2000-02

COI-0010-02

COI-0001-02

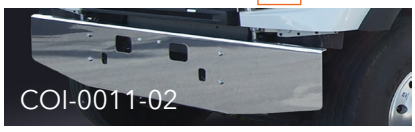

COI-0000-02

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

CZ

Width	End Style Code
19″	707

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

CZ

CORONADO YEARS 2002-2009 & GLIDER CHASSIS
DOES NOT USE FACTORY SUPPORT BRACKETS OR ENDS CAPS

19″



CZ-1001-707

CZ-1000-707

CZ-0001-707

17″

CZ-0000-707

CZ-1001-707



Stainless grille insert – CZ01GI
Not included, available separately

COC

CORONADO 122SD SET FORWARD YEARS 2010-NEWER
16″ AND WIDER (SEE 'COE' SERIES FOR 12″ BUMPERS)
NOTE LETTERS "COC" IN PART NUMBER

39.63″

COC-2110-02

COC-2100-02

COC-2010-02

COC-0110-02

COC-2000-02

COC-0100-02

COC-0010-02

COC-2110-06

COC-0000-02

COE

CORONADO 122SD SET FORWARD YEARS 2010-NEWER
12″ WIDE (SEE 'COC' SERIES FOR 16″ AND WIDER BUMPERS)
NOTE LETTERS "COE" IN PART NUMBER

2″

COE-2110-01

COE-2100-01

COE-2010-01

9.5″

COE-0110-01

COE-2000-01

COE-0100-01

COE-0010-01

COE-0110-01

COE-0000-01

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	04
16″	95
18″	96
20″	97

* No warranty for 20″ width

FLC112 SETBACK AXLE YEARS 1986-1995 — CC

CC-2010-04

CC-2000-04

CC-0010-04

CC-0000-04

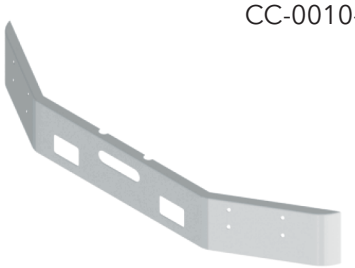

FLC120 SETBACK AXLE YEARS 1986-1995 — CD

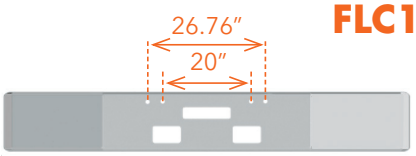

CD-2010-04

CD-2000-04

CD-0010-04

CD-0000-04

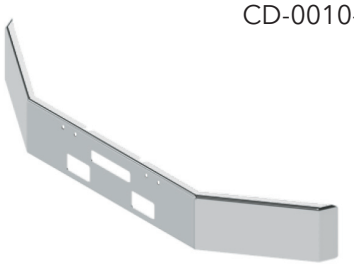

FLD 112SD SETBACK AXLE YEARS 1989-1996 — CP

CP-2011-04

CP-2010-04

CP-2001-04

CP-0011-04

CP-2000-04

CP-0010-04

CP-0001-04

CP-0000-04

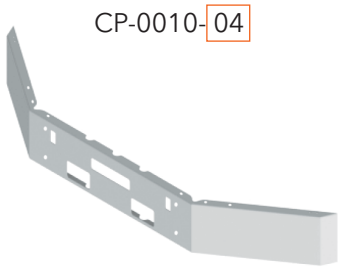

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

CE

Width	End Style Code
16″	07

CF, CE

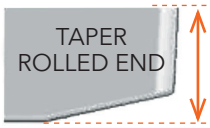

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

CF, CE

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

CF — CABOVER WITH 7 INCH BREAKBACK, YEARS 1989-1995

36.88″

CF-2111-02

CF-2110-02

CF-2101-02

CF-2011-02

CF-0111-02

CF-2100-02

CF-2010-02

CF-2001-02

CF-0110-02

CF-0101-02

CF-0011-02

CF-2000-02

CF-0100-02

CF-0010-02

CF-0001-02

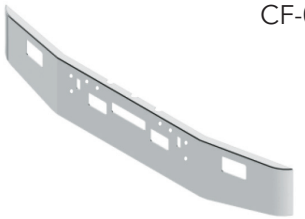

CF-0000-02

CE — FLC112 CONVENTIONAL, YEARS 1986-1995

STEEL CAB MUST USE GULLWING STYLE -07 ONLY

22.75″

CE-1110-07

CE-1100-07

CE-1010-07

CE-0110-07

CE-1000-07

CE-0100-07

CE-0010-07

CE-2110-07

CE-0000-07

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	04
16″	95
18″	96
20″	97

* No warranty for 20″ width

FOR 92-INCH LONG BUMPERS WITHOUT PLASTIC END CAPS, ADD "92" TO END OF PART NUMBER.
EXAMPLE: CG-2011-04-"92"

FLD 112 WITH 6 INCH BREAKBACK, YEARS 1989-1996 86.75″ LONG STANDARD. PLASTIC ENDS NOT INCLUDED. CG

CG-2011-04

CG-2010-04

CG-2001-04

CG-0011-04

CG-2000-04

CG-0010-04

CG-0001-04

CG-0000-04

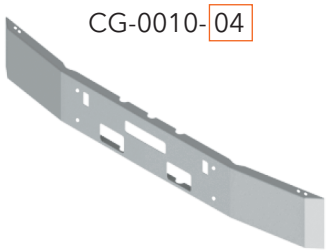

FLD 120 WITH 6 INCH BREAKBACK, YEARS 1989-1996 86.75″ LONG STANDARD. PLASTIC ENDS NOT INCLUDED (ALSO SEE 'CJ' SERIES). CH

CH-2010-04

CH-2000-04

CH-0010-04

CH-0000-04

CH-2010-04

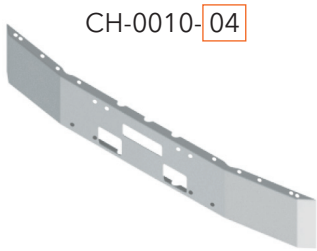

FLD 120 WITH 6 INCH BREAKBACK, YEARS 1989-1996 86.75″ LONG STANDARD. PLASTIC ENDS NOT INCLUDED (ALSO SEE 'CH' SERIES). CJ

CJ-2010-04

CJ-2000-04

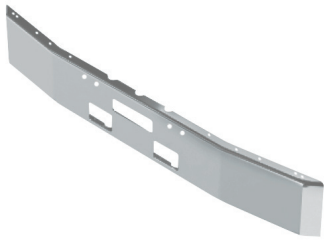

CJ-0010-04

CJ-0000-04

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

CM

Width	End Style Code
12″	04
16″	95
18″	96
20″	97

CI

Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ width

FOR 92 INCH LONG CM SERIES BUMPERS WITHOUT PLASTIC END CAPS,
ADD "92" TO END OF PART NUMBER . EXAMPLE : CM-2011-04-"92"

CM

FLD 112 & FLD 120 WITH 6-INCH BREAKBACK, YEARS 1989-1996

86.75″ LONG STANDARD. PLASTIC ENDS NOT INCLUDED.
COMBO BOLT PATTERN

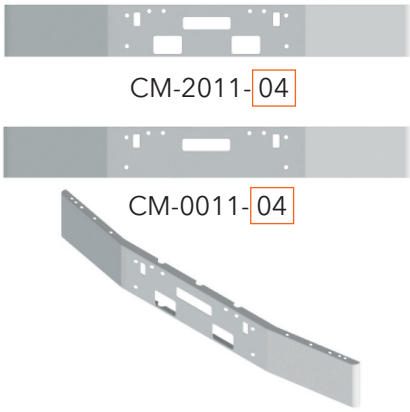

CM-2011-04

CM-2010-04

CM-2001-04

CM-0011-04

CM-2000-04

CM-0010-04

CM-0001-04

CM-0000-04

CI

FLD 112 & FLD 120 SETBACK FULL WRAP. METAL BUMPER, YEARS 1989-2006

COMBO BOLT PATTERN, NOTE LETTERS 'CI' IN PART NUMBER

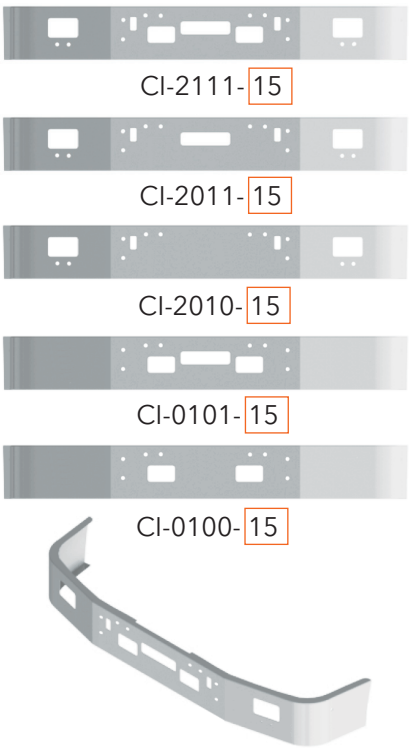

CI-2111-15

CI-2110-15

CI-2101-15

CI-2011-15

CI-0111-15

CI-2100-15

CI-2010-15

CI-2001-15

CI-0110-15

CI-0101-15

CI-0011-15

CI-2000-15

CI-0100-15

CI-0010-15

CI-0001-15

CI-0011-15

CI-0000-15

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ width

CENTURY SETBACK AXLE, YEARS 1996-2004 MOUNTING BRACKETS INCLUDED

CL

CL-2210-15

CL-2200-15

CL-2010-15

CL-0210-15

CL-0200-15

CL-0010-15

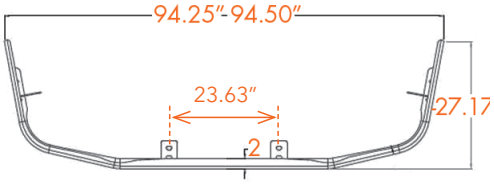

CL-0000-15

COLUMBIA SETBACK AXLE, YEARS 1999-2007

CW

CENTURY SETBACK AXLE, YEARS 2005-2007 MOUNTING BRACKETS INCLUDED

ALSO FITS NEWER MODEL GLIDERS - CHECK CHASSIS CONFIGURATION

CW-1011-15

CW-2011-15

CW-0011-15

CW-1010-15

CW-2010-15

CW-0010-15

CW-0000-15

CW-2000-15

CW-0001-15

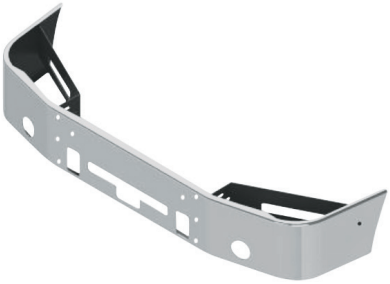

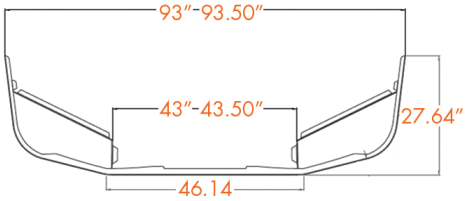

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
18″	17
*20″	34

* No warranty for 20″ width

COA

COLUMBIA SETBACK AXLE, YEARS 2008 & NEWER

REPLACES STEEL CENTER/PLASTIC ENDS BUMPERS ONLY

MOUNTING BRACKETS INCLUDED

NOTE LETTERS 'COA' IN PART NUMBER. FOR 2008 & NEWER GLIDERS SEE CW SERIES.

COA-1011-17

COA-2011-17

COA-0011-17

COA-1010-17

COA-2010-17

COA-0010-17

COA-0000-17

COA-2000-17

COA-0001-17

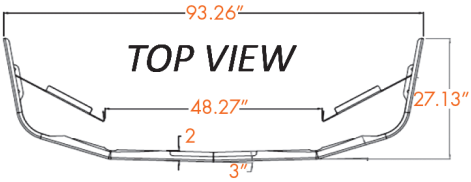

COB

COLUMBIA SETBACK AXLE, YEARS 2008 & NEWER

CENTURY SETBACK AXLE, YEARS 2008 & NEWER

REPLACES STAINLESS CLAD BUMPERS ONLY

MOUNTING BRACKETS INCLUDED. NOTE LETTERS 'COB' IN PART NUMBER.

COB-1011-17

COB-2011-17

COB-0011-17

COB-1010-17

COB-2010-17

COB-0010-17

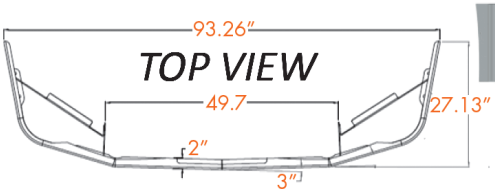

COB-0000-17

COB-0001-17

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

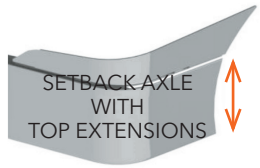

Width	End Style Code
14″	15X
16″	16X
18″	17X
*20″	34X

* No warranty for 20″ width

CASCADIA "P3" YEARS 2008-2017

CY

REPLACES PLASTIC BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS AND EXTENSIONS INCLUDED
SEE 'COH' SERIES FOR REPLACING P3 STAINLESS CLAD
SEE 'COJ' AND 'COK' SERIES FOR NEWER P4 BUMPERS

CY-5010-15X
2 OEM fogs, tow pins

CY-2011-15X
2 rect. fogs, tow pins, vent
No radar

CY-5012-15X
2 OEM fogs, tow pins, vent
Accommodates radar

CY-0011-15X
Tow pins, vent, no radar

CY-0012-15X
Tow pins, vent
Accommodates radar

CY-0000-15X
No cutouts, mounting only

CY-0010-15X
Tow pins

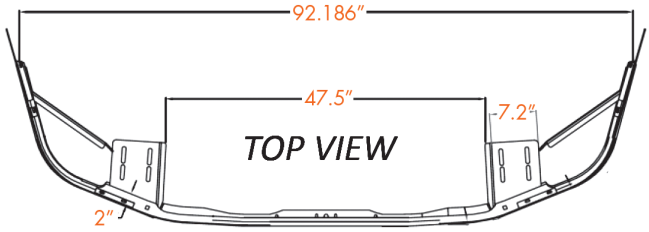

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

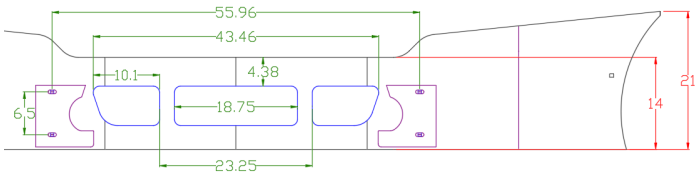

End Style Code

708S

ONE-PIECE BUMPER (ONE SIZE ONLY)

CASCADIA YEARS 2008-2017

CY

REPLACES PLASTIC BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS AND EXTENSIONS INCLUDED
SEE 'COH' SERIES FOR REPLACING P3 STAINLESS CLAD
SEE 'COJ' AND 'COK' SERIES FOR NEWER P4 BUMPERS

CY-5011- 708S
2 OEM fogs, tow pins, vent
No radar

CY-0001- 708S
vent
No Radar

CY-0002- 708S
vent
Acommodates Radar

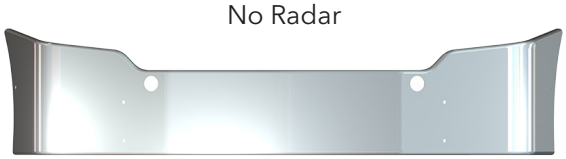

CY-0010- 708S
tow pins

CY-0011- 708S
tow pins, vent
No radar

CY-0012- 708S
tow pins, vent
Acommodates Radar

CY-5012- 708S
2 OEM fogs, tow pins, vent
Acommodates Radar

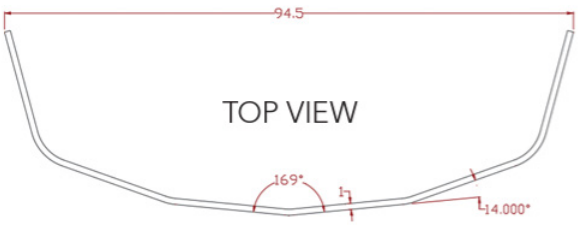

CY-5011- 708S
2 OEM fogs, tow pins, vent
No radar

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

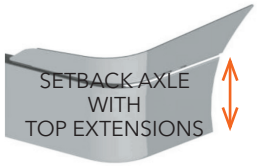

Width	End Style Code
14″	15X
*16″	16X

* 16″ bumpers require customer to shim brackets

COH

CASCADIA "P3" YEARS 2008-2017

REPLACES STAINLESS CLAD BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
EXTENSIONS INCLUDED, MOUNTING BRACKETS NOT INCLUDED
MOUNTS TO EXISTING CLAD BUMPER BRACKETS
SEE 'CY' SERIES FOR REPLACING P3 PLASTIC BUMPERS
SEE 'COJ' AND 'COK' SERIES FOR NEWER P4 BUMPERS
NOTE LETTERS 'COH' IN PART NUMBER

COH-5011-15X
2 OEM fogs, tow pins, vent
No radar

COH-5012-15X
2 OEM fogs, tow pins, vent
Accommodates radar

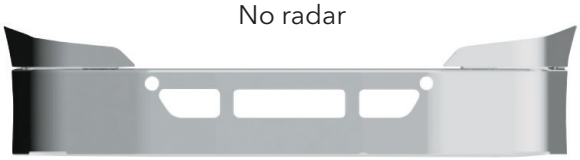

COH-0011-15X
Tow pins, vent, no radar

COH-0012-15X
Tow pins, vent
Accommodates radar

COH-0000-15X
No cutouts, mounting only

COH-0010-15X
Tow pins

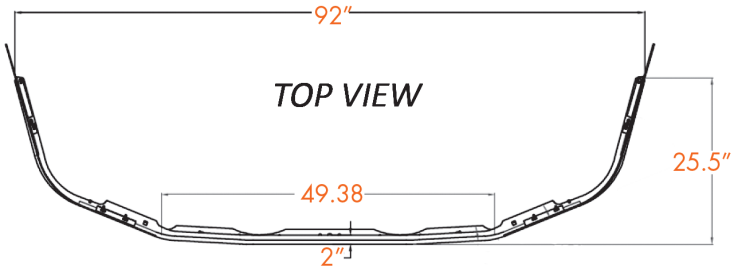

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

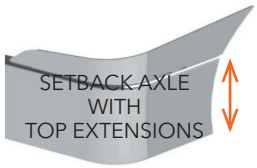

Width	End Style Code
14″	15Z
16″	16Z
18″	17Z
*20″	34Z

* No warranty for 20″ wide bumpers

CASCADIA "P4" YEARS 2017 & NEWER

COJ

REPLACES PLASTIC BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'COJ' IN PART NUMBER
SEE 'COK' SERIES IF REPLACING STAINLESS CLAD BUMPERS

COJ-5011-15Z-V6
2 OEM fogs, tow pins, vent, radar
Radar requires plastic cover

TO TOP OF RADAR HOLE
0.37″

COJ-5010-15Z-V6
2 OEM fogs, tow pins, radar
Radar requires plastic cover

COJ-2010-15Z-V6
2 rectangular aftermarket fogs, tow pins, radar
Radar requires plastic cover

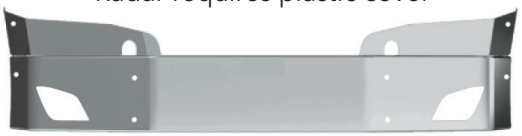

COJ-5010-15Z
2 OEM fogs, tow pins

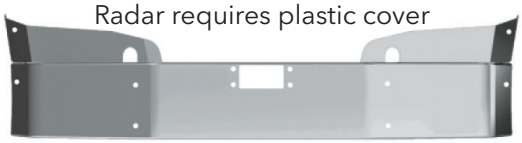

COJ-0010-15Z-V6
Tow pins, radar
Radar requires plastic cover

COJ-0011-15Z
Tow pins, vent

COJ-0010-15Z
Tow pins

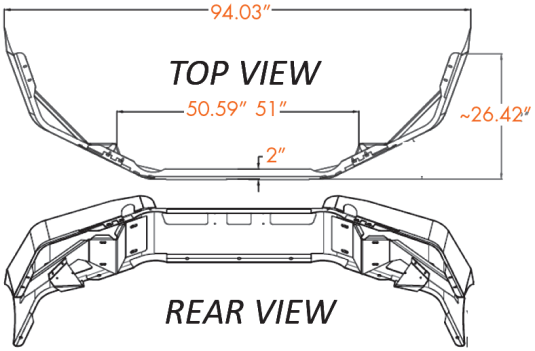

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

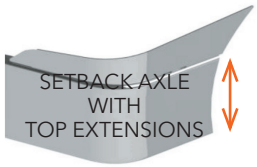

Width	End Style Code
14″	15Z
16″	16Z
18″	17Z
*20″	34Z

* No warranty for 20″ wide bumpers

COK

CASCADIA "P4" YEARS 2017 & NEWER

REPLACES STAINLESS CLAD BUMPERS ONLY
STANDARD WIDTH RADIATOR TRUCKS ONLY
MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'COK' IN PART NUMBER
SEE 'COJ' SERIES IF REPLACING PLASTIC BUMPERS

COK-5011-15Z-V6
2 OEM fogs, tow pins, vent, radar
Radar requires plastic cover

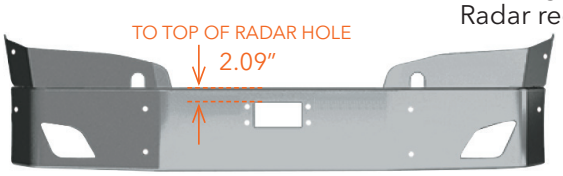

COK-5010-15Z-V6
2 OEM fogs, tow pins, radar
Radar requires plastic cover

COK-2010-15Z-V6
2 rectangular aftermarket fogs, tow pins, radar
Radar requires plastic cover

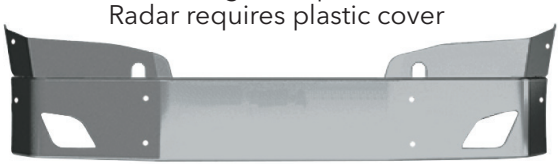

COK-5010-15Z
2 OEM fogs, tow pins

COK-0010-15Z-V6
Tow pins, radar
Radar requires plastic cover

COK-0011-15Z
Tow pins, vent

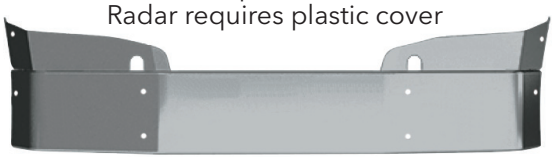

COK-0010-15Z
Tow pins

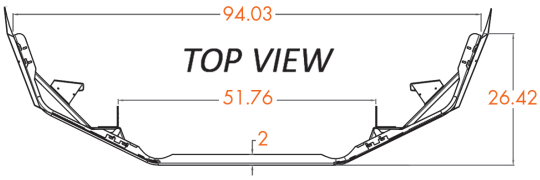

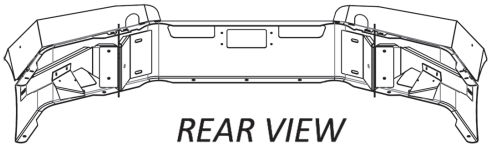

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

*No warranty for 20″ wide bumpers

FL SERIES MEDIUM DUTY YEARS 2002 & OLDER

CK

FL50, FL60, FL70, FL80
MOUNTS TO FACTORY BRACKETS
ALSO CHECK 'CR' SERIES

CK-0220-15

CK-0020-15

CK-0200-15

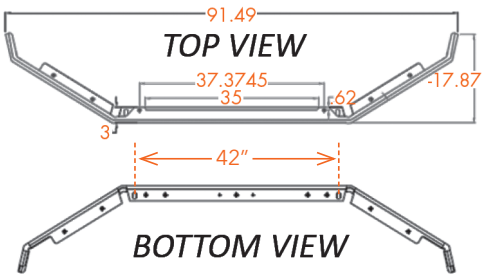

CK-0000-15

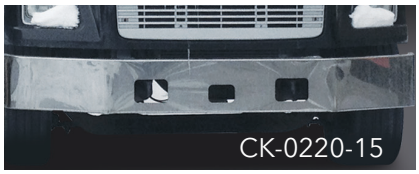

CK-0220-15

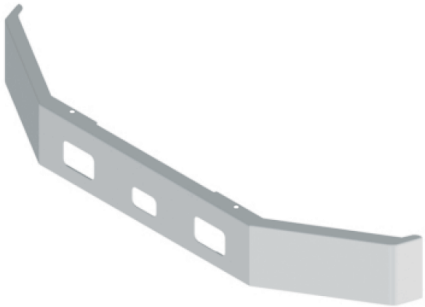

FL112 SERIES MEDIUM DUTY YEARS 2002 & OLDER

CR

MOUNTS TO FACTORY BRACKETS
ALSO CHECK 'CK' SERIES

CR-0220-15

CR-0020-15

CR-0200-15

CR-0000-15

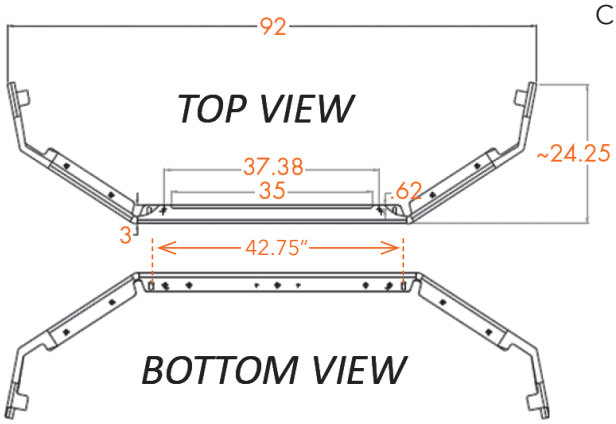

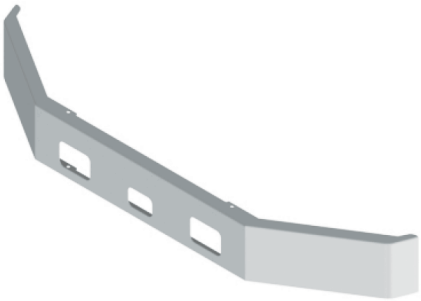

FREIGHTLINER BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

CT

M2 106 BUSINESS CLASS YEARS 2003 & NEWER

FLUSH TOP FLANGE MOUNT. INCLUDES UPPER LICENSE PLATE HOLES.
ALSO CHECK 'COG' SERIES

CT-0001-15

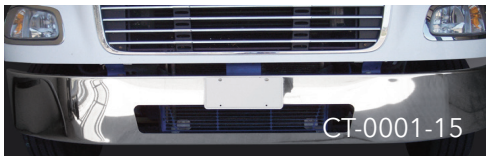

CT-0000-15

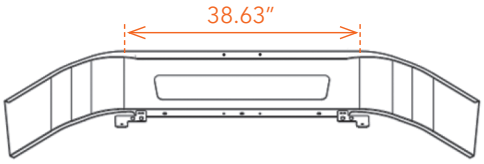

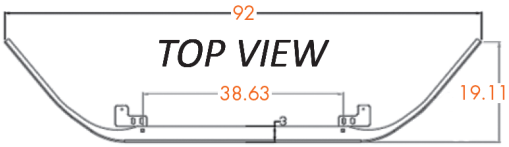

COF

M2 112 BUSINESS CLASS YEARS 2003 & NEWER

TOP FLANGE MOUNT ON INTEGRATED GUSSETS. INCLUDES UPPER LICENSE PLATE HOLES.
NOTE LETTERS 'COF' IN PART NUMBER

COF-0011-15

COF-0010-15

COF-0001-15

COF-0000-15

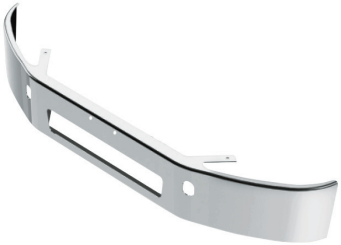

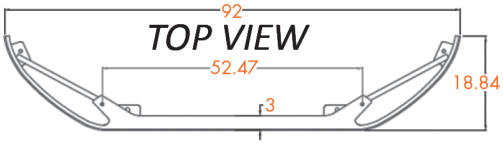

COG

M2 106 BUSINESS CLASS YEARS 2011 & NEWER

RECESSED TOP FLANGE MOUNT, BRACKETS INCLUDED
NOTE LETTERS 'COG' IN PART NUMBER
CHECK 'CT' SERIES PRIOR TO ORDERING

COG-0001-15

COG-0000-15

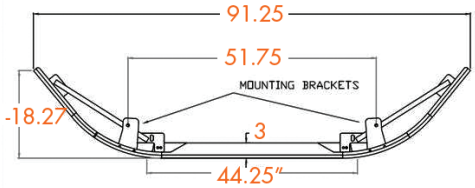

INCLUDES UPPER LICENSE PLATE HOLES.

GMC BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

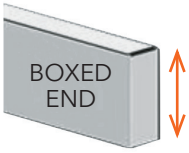

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

GENERAL YEARS 1977-1987 — DB

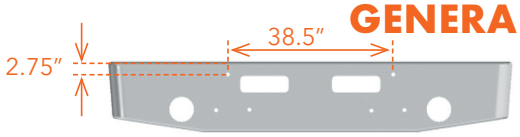

DB-1001-02

DB-1000-02

DB-0001-02

DB-0000-02

BRIGADIER YEARS 1978-1988 — DC

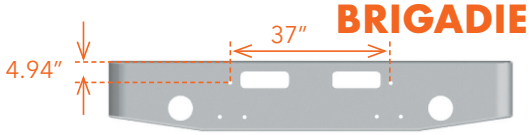

DC-1001-02

DC-1000-02

DC-0001-02

DC-0000-02

BRIGADIER HIGH CAB YEARS 1978-1988 — DD

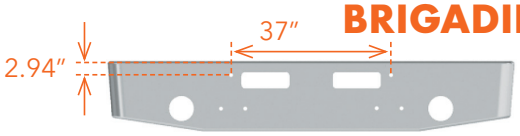

DD-1001-02

DD-1000-02

DD-0001-02

DD-0000-02

ASTRO YEARS 1982-1987, NOT AVAILABLE IN 12″ WIDTH — DE

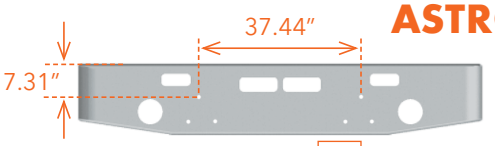

DE-1011-02



DE-1010-02

DE-1001-02

DE-0011-02



DE-1000-02

DE-0010-02

DE-0001-02

DE-0000-02

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	38

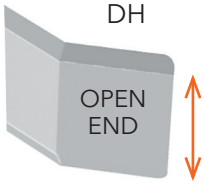

Width	End Style Code
12″	12
16″	13
18″	14

DH — GMC 7000/CHEVY C60, C65, C70 YEARS 1981-1988

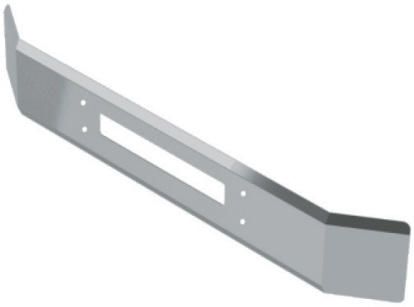

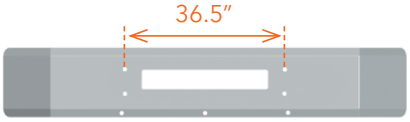

DH-0001-12

DH-0000-12

DF — GMC TOPKICK/CHEVY KODIAK YEARS 1989-1990

NOT AVAILABLE IN 7-GAUGE STEEL OR STAINLESS STEEL

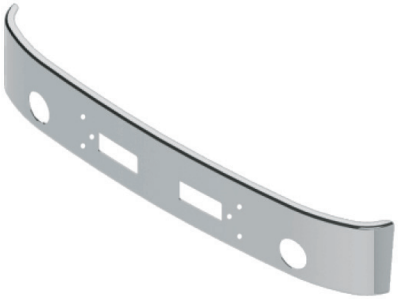

DF-1001-38

DF-1000-38

DF-0001-38

DF-0000-38

DG — GMC TOPKICK/CHEVY KODIAK YEARS 1990-2003

C5500, C6500

NOT AVAILABLE IN 7-GAUGE STEEL OR STAINLESS STEEL

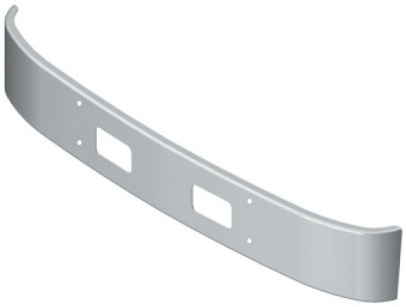

DG-1001-38

DG-1000-38

DG-0001-38

DG-0000-38

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	15
16″	16
18″	17

C4500, C5500 YEARS 2004-2006

DI

NOTE LETTERS 'DI' IN PART NUMBER
INCLUDES UPPER LICENSE PLATE HOLES.

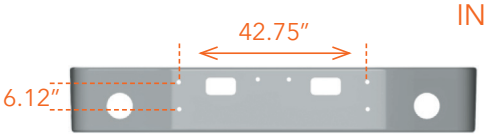

DI-1001-15

DI-0001-15

DI-1000-15

DI-0000-15

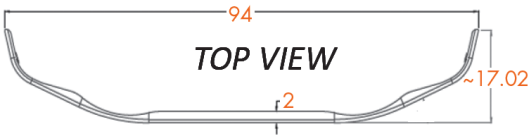

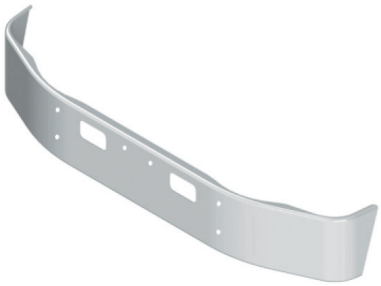

C6500, C7500 YEARS 2004-2009

DJ

INCLUDES UPPER LICENSE PLATE HOLES.

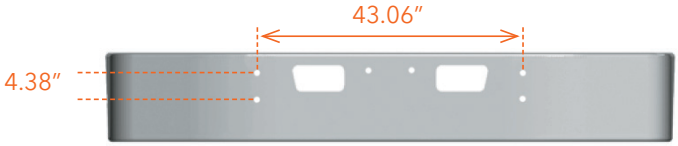

DJ-0001-15

DJ-0000-15

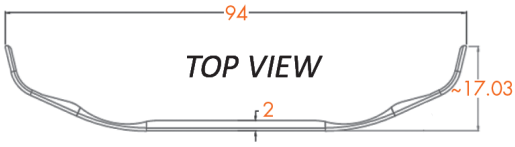

HINO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

OA

268, 338 YEARS 2004 & NEWER
MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'OA' IN PART NUMBER
INCLUDES ONE SET UPPER LICENSE PLATE HOLES

OA-0011-15

OA-0010-15

OA-0001-15

OA-0000-15

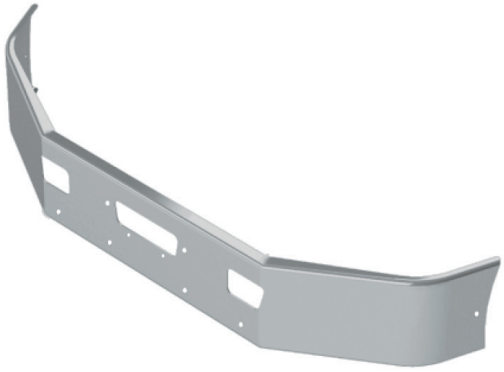

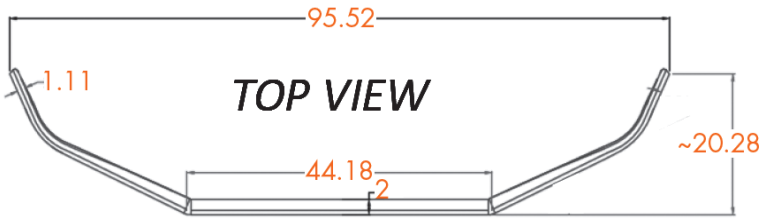

OA-0011-15

OA-0011-15P

Add "P" to end of any bumper part number for black powder coated steel

INTERNATIONAL BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

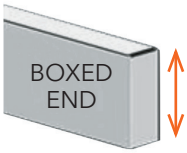

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

4200, 4300 YEARS YEARS 1977-1990 CONVENTIONAL

ED

ED-1210-02

ED-1200-02

ED-1010-02

ED-0210-02

ED-1000-02

ED-0200-02

ED-0010-02

ED-0000-02

9300, 9370 CONVENTIONAL, 9670 CABOVER

EI

YEARS 1983-1996

SET FORWARD AXLE. SEE 'EJ' SERIES FOR SETBACK AXLE.

NOTE LETTERS 'EI' IN PART NUMBER

EI-2110-02

EI-2210-02

EI-2100-02

EI-2200-02

EI-2010-02

EI-0110-02

EI-0210-02

EI-2000-02

EI-0100-02

EI-0200-02

EI-0010-02

EI-0010-02

EI-0210-06

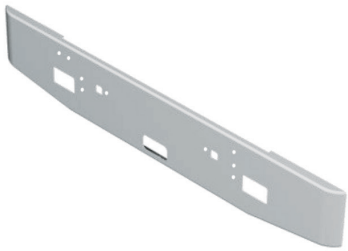

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	04
16″	05
18″	96
*20″	97
*22″	98

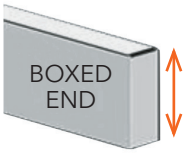

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

* No warranty for 20″ wide bumpers

EJ

9300 SERIES SET BACK AXLE YEARS 1983-1996

SEE 'EI' SERIES FOR SET FORWARD AXLE

EJ-2210-96

EJ-2000-96

EJ-0010-96

EJ-0210-96

EJ-0200-96

EJ-0000-96

EJ-2010-96

EJ-2200-96

EJ-2210-96

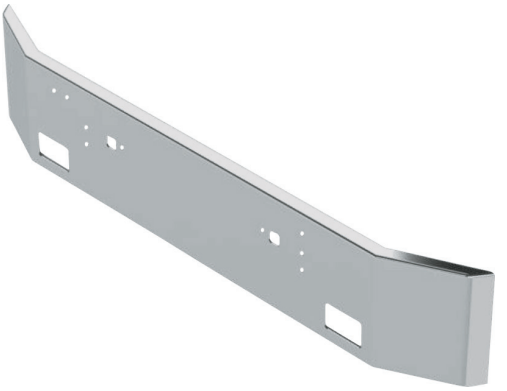

VALLEY CHROME PLATING

INTERNATIONAL BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

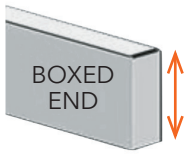

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

9900 YEARS 1998-1999 — EN

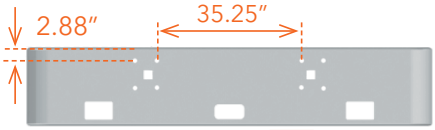

EN-2210-06

EN-2200-06

EN-2000-06

EN-0210-06

EN-0200-06

EN-0010-06

EN-2010-06

EN-0000-06

9900 YEARS 2000 & NEWER — ER

ER-2210-06

ER-2200-06

ER-2010-06

ER-2000-06

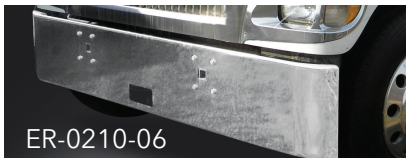

ER-0210-06

ER-0200-06

ER-0010-06

ER-0000-06

5900 SET FORWARD AXLE YEARS 2001-2011 — EW

EW-2010-02

EW-2020-02

EW-2030-02

EW-2000-02

EW-0010-02

EW-0020-02

EW-0030-02

EW-2010-02

EW-0000-02

INTERNATIONAL BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
10″	24

EF

2200S, 2500S YEARS 1977-1990

NOT AVAILABLE IN 10-GAUGE STEEL OR STAINLESS STEEL

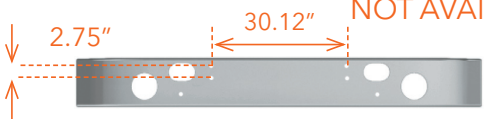

EF-1010-24

EF-0000-24

EF-1000-24

EF-0010-24

EG

1700S, 1800S 1900S YEARS 1977-1990

NOT AVAILABLE IN 10-GAUGE STEEL OR STAINLESS STEEL

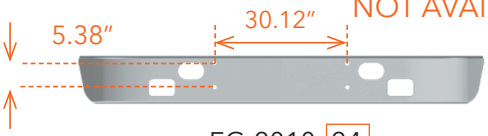

EG-2010-24

EG-0000-24

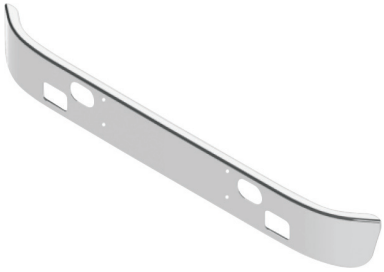

EG-2000-24

EG-0010-24

EL

4000 SERIES, 7000 SERIES, 8000 SERIES YEARS 1990-2004

NOT AVAILABLE IN 10-GAUGE STEEL OR STAINLESS STEEL

EL-2010-24

EL-0000-24

EL-2010-24

EL-2000-24

EL-0010-24

EM

4000 SERIES, 7000 SERIES, 8000 SERIES YEARS 1990-2004

NOT AVAILABLE IN 10-GAUGE STEEL OR STAINLESS STEEL

EM-2010-24

EM-0000-24

EM-2010-24

EM-2000-24

EM-0010-24

INTERNATIONAL BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

9400 SETBACK AXLE YEARS 1990-1996

CHECK 'ES' AND 'EP' SERIES PRIOR TO ORDERING

EK

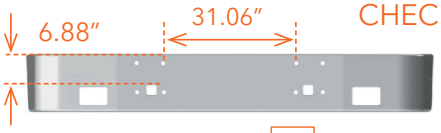

EK-2010-15

EK-2000-15

EK-0010-15

EK-0000-15

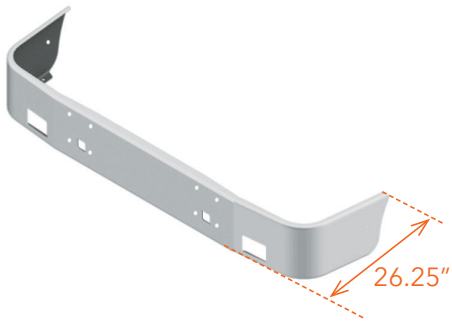

9200 SETBACK AXLE YEARS 1992-1996

CHECK 'EK' AND 'EP' SERIES PRIOR TO ORDERING

ES

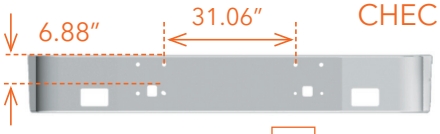

ES-2010-15

ES-2000-15

ES-0010-15

ES-0000-15

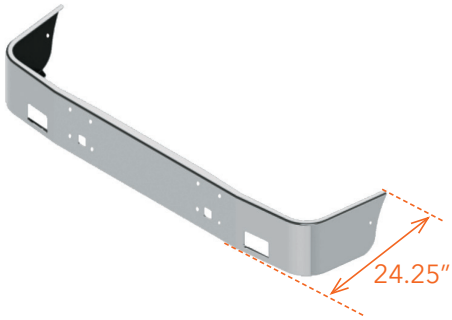

9100, 9200,9400 SETBACK AXLE YEARS 1997-2007

CHECK 'EK' AND 'ES' SERIES PRIOR TO ORDERING

EP

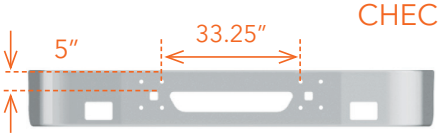

EP-2011-15

EP-2010-15

EP-0012-15 (radar)

EP-0011-15

EP-2000-15

EP-0010-15

EP-0001-15

EP-0011- 15

EP-0000-15

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

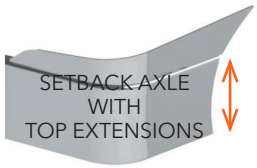

Width	End Style Code
16″	16X
18″	17X
*20″	34X

* No warranty for 20″ wide bumpers

EU

PROSTAR YEARS 2008-2017
FIXED MOUNT / NON-TILT
MOUNTING BRACKETS AND EXTENSIONS INCLUDED

EU-5011-16X
2 OEM fogs, tow pins, vent

EU-5010-16X-V9
2 OEM fogs, tow pins, round radar
Use option – V8 for rectangular radar

EU-0011-16X
Tow pins, vent

EU-5010-16X
2 OEM fogs, tow pins

EU-0010-16X
Tow pins

EU-0000-16X
No cutouts, mounting only

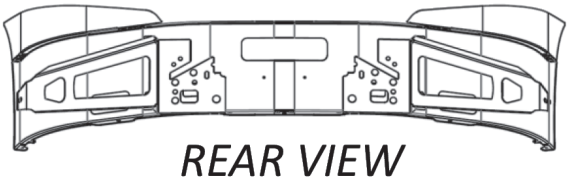

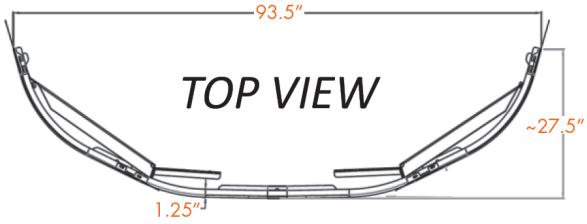

INTERNATIONAL BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

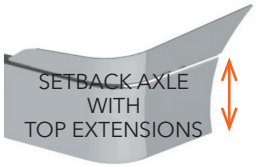

Width	End Style Code
16″	16X
18″	17X
*20″	34X

* No warranty for 20″ wide bumpers

LT SERIES YEARS 2017 & NEWER

EY

MOUNTING BRACKETS AND EXTENSIONS INCLUDED
REPLACES PLASTIC BUMPERS ONLY

EY-5013-16X
2 OEM fogs, tow pins, slotted vent

EY-0010-16X
Tow pins

EY-2011-16X
2 rectangular fogs, tow pins, open vent

EY-0013-16X
Tow pins, slotted vent

EY-0000-16X
Mounting Only

EY-0011-16X
Tow pins, open vent

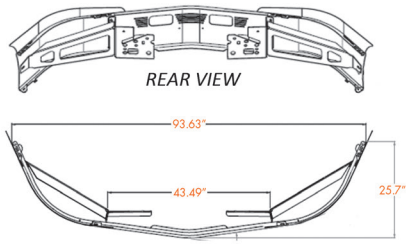

MV607 SETBACK AXLE YEARS 2024 & NEWER

EZ

(-15) END STYLE FOR THIS SERIES IS 14″

12 to 14″	15
16″	16
18″	17
20″*	34

* No warranty for 20″ wide bumpers

EZ-0011-15
Tow, Vent

Factory Fog Light Mounting Holes

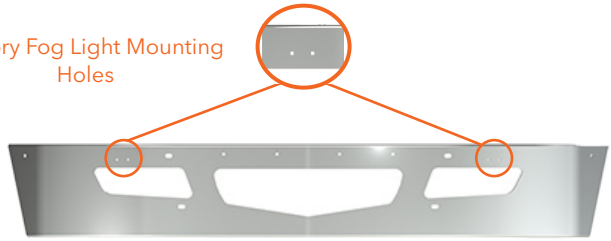

EZ-5011-15
Fog, Tow, Vent

SHOWN WITH FACTORY GRILL INSERT
(GRILL INSERT NOT INCLUDED)

INTERNATIONAL BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	38

10 GAUGE ONLY

Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

ET 4000 SERIES MEDIUM DUTY / DURASTAR YEARS 2002 & NEWER

AUTOMATIC MUST INCLUDE VENT HOLE
ADAPTER BRACKETS INCLUDED

ET-0011-15

ET-0010-15

ET-0001-15

ET-0021-15

ET-0020-15

ET- 0021-15

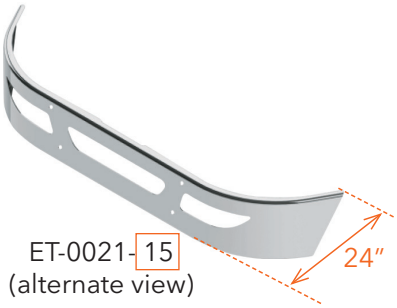

ET-0021-15
(alternate view)

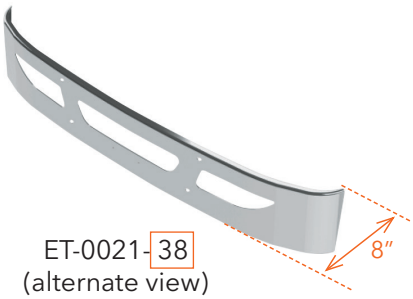

ET-0021-38
(alternate view)

EV 7000 SERIES MEDIUM DUTY / WORKSTAR YEARS 2006 & NEWER

AUTOMATIC MUST INCLUDE VENT HOLE
INCLUDES ONE SET LICENSE PLATE HOLES

EV-5001-38

EV-0001-38

EV-5000-38

EV-0000-38

EV-5001-38

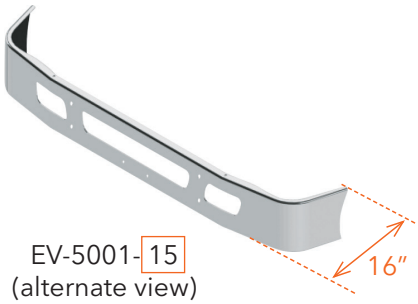

EV-5001-15
(alternate view)

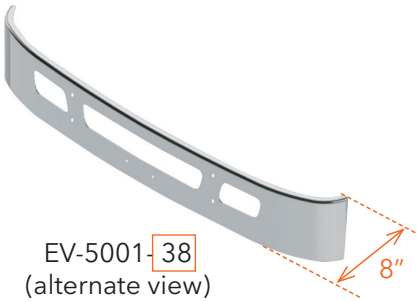

EV-5001-38
(alternate view)

KENWORTH BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

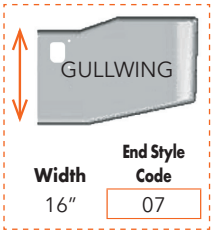

Width	End Style Code
16″	07

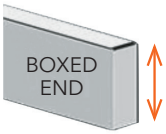

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

K100C CABOVER YEARS 1967-1983 — FA

FA-1110-02

FA-1100-02

FA-1010-02

FA-0110-02

FA-1000-02

FA-0100-02

FA-0010-02

FA-0000-02

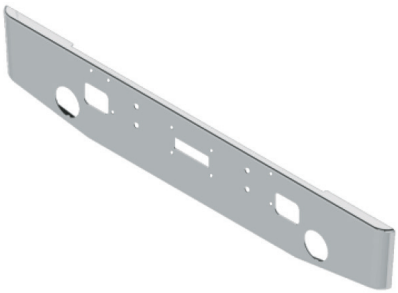

LOGGER YEARS 1967-1981 — FF

FF-1090-02

FF-1000-02

FF-0090-02

FF-0000-02

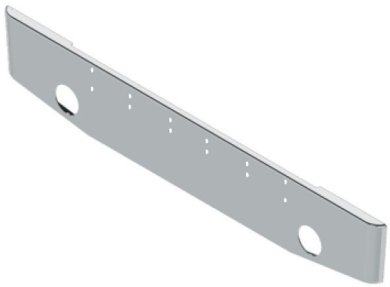

K100E YEARS 1984-1999 — FB

FB-2010-02

FB-2000-02

FB-0010-02

FB-0000-02

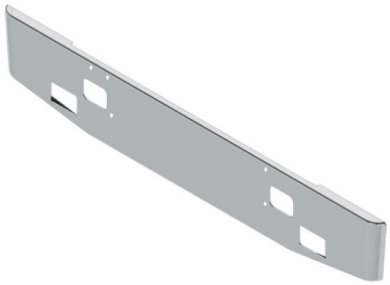

KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

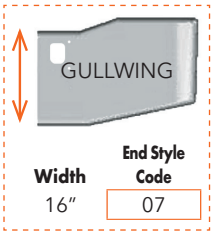

Width	End Style Code
16″	07

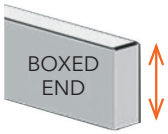

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

FD

W900A YEARS 1967-1981

FD-1210-07

FD-1200-07

FD-1010-07

FD-0210-07

FD-1000-07

FD-0200-07

FD-0010-07

VK120003
Tow Pin Covers (pair)
Fits FD,FE,FT & more

FD-0000-07

FE

W900B YEARS 1982-2010 • W900L YEARS 1982 & NEWER

FE-2210-02

FE-2200-02

FE-2010-02

FE-0210-02

FE-2000-02

FE-0200-02

FE-0010-02

FE-0210-02

FE-0000-02

FT

W900B YEARS 2011 & NEWER, DOES NOT FIT W900L

FT-2210-06

FT-2200-06

FT-2010-06

FT-0210-06

FT-2000-06

FT-0200-06

FT-0010-06

FT-2210-02

FT-0000-06

KENWORTH BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

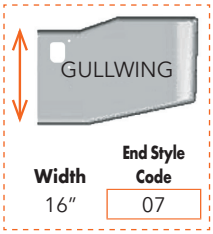

Width	End Style Code
16″	07

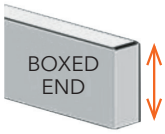

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

W900S YEARS 1989-2007

FJ

FJ-2010-01

FJ-2000-01

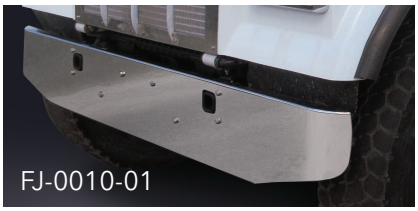

FJ-0010-01

FJ-0010-01

FJ-0000-01

W900S YEARS 2008 & NEWER

FQ

FQ-2210-02

FQ-2200-02

FQ-2010-02

FQ-0210-02

FQ-2000-02

FQ-0200-02

FQ-0010-02

FQ-0010-02

W990 YEARS 2018-2020

FW

FW-2210-06

FW-2000-06

FW-0210-06

FW-2010-06

FW-0010-06

FW-0210-06

FW-0000-06

KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	25
16″	13
18″	14

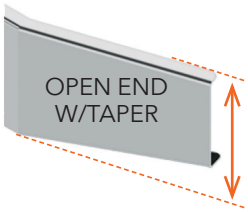

Width	End Style Code
14″	26
16″	132T
18″	142T

FG

T800 YEARS 1986-2003

46.5″

FG-2191-25

FG-2091-25

FG-2090-25

FG-0101-25

FG-0100-25

FG-0101-25

90″



FG-2190-25

FG-0191-25

FG-2001-25

FG-0091-25

FG-0090-25

FG-0000-25

FG-2101-25

FG-2100-25

FG-0190-25

FG-2000-25

FG-0001-25

FG-0101-26

FP

T800W WIDENOSE - YEARS 1988-2005

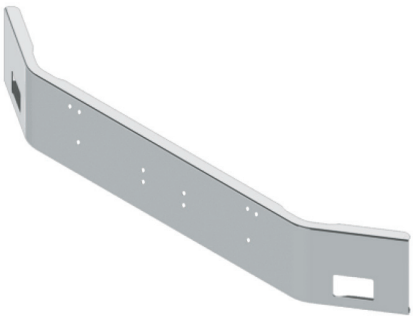

59.6″

FP-2090-25

FP-2000-25

89″



FP-0090-25

FP-0000-25

37.38″

KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	25
16″	13
18″	14

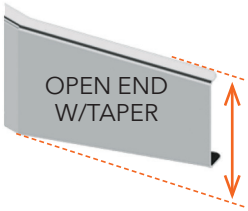

Width	End Style Code
14″	26
16″	132T
18″	142T

T800, T880 YEARS 2004 & NEWER

FN

48.5″

FN-2111-25

FN-2010-25

FN-2101-25

FN-0110-25

FN-0010-25

FN-2191-25

89.5″

FN-2110-25

FN-2001-25

FN-2000-25

FN-0101-25

FN-0001-25

FN-0000-25

FN-2100-25

FN-2011-25

FN-0111-25

FN-0011-25

FN-0100-25

FN-0090-25

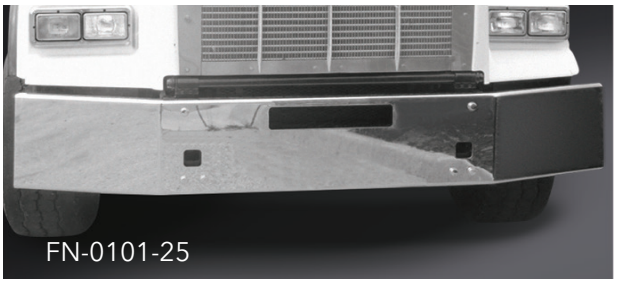

FN-0101-25

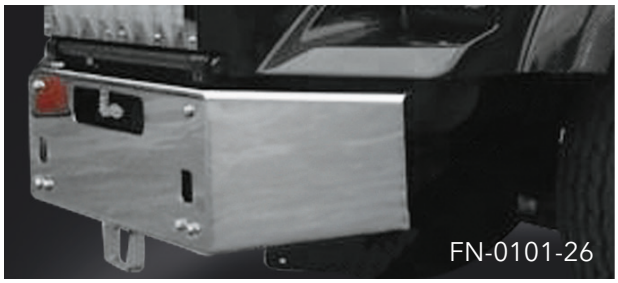

FN-0101-26

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	25
16″	13
18″	14

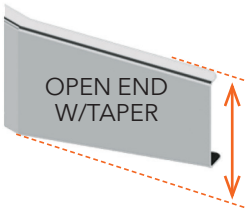

Width	End Style Code
14″	26
16″	132T
18″	142T

FK

T450B YEARS 1994-1997

SIMILAR BOLT PATTERN AS 'FG' SERIES BUT SHORTER BUMPER LENGTH

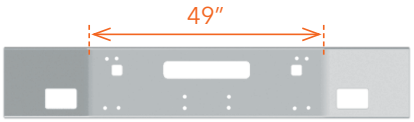

FK-2191-25

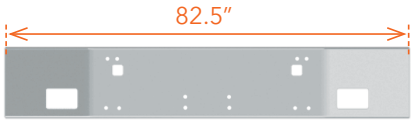

FK-2190-25

FK-2101-25

FK-2091-25

FK-0191-25

FK-2100-25

FK-2090-25

FK-2001-25

FK-0190-25

FK-0101-25

FK-0091-25

FK-2000-25

FK-0100-25

FK-0090-25

FK-0001-25

FK-0000-25

VALLEY CHROME PLATING

KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

FL

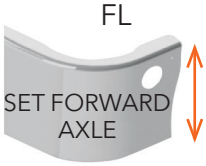

Width	End Style Code
13″	18
16″	19
18″	20
*20″	35

FS

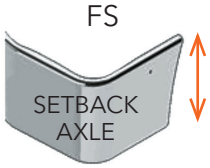

Width	End Style Code
16″	16

FU

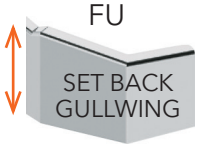

Width	End Style Code
15″	708
18″	709
*20″	711

* No warranty for 20″ wide bumpers

T300 SET FORWARD AXLE YEARS 1997-2008 — FL

MOUNTS TO FACTORY BRACKETS

LICENSE PLATE HOLES STANDARD



FL-0010-18

EXTERNAL STEP HOLES (STEP NOT INCLUDED)



FL-0000-18

T270, T370 SET BACK AXLE YEARS 2008 & NEWER — FS

ADAPTER BRACKETS INCLUDED. 16″ WIDTH ONLY.
NOW BOLTLESS

FS-2010-16

FS-2000-16

FS-0010-16

FS-0000-16

FS-0010-16

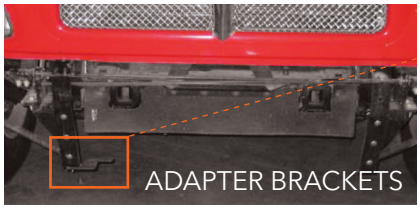

ADAPTER BRACKETS

NEW BOLTLESS
MOUNTING BRACKETS

T440 SET BACK AXLE YEARS 2011 & NEWER — FU

NOT AVAILABLE IN STAINLESS STEEL

FU-0011-708

FU-0010-708

FU-0001-708

FU-0000-708

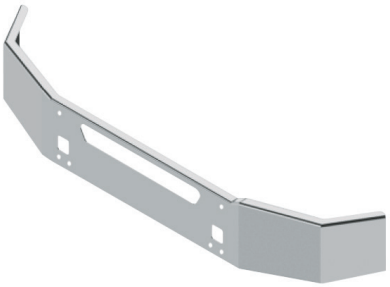

KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

FH

T600 YEARS 1987-2007

SPACERS INCLUDED. MUST INCLUDE VENT HOLES FOR WARRANTY.

FH-2011-15

FH-2001-15

FH-0011-15

FH-0001-15

FR

T660 YEARS 2008-2017

MOUNTING BRACKETS INCLUDED

FR-5011-15

FR-2011-15

FR-2001-15

FR-5001-15

FR-2000-15

FR-2010-15

FR-5010-15

FR-0010-15

FR-0011-15

FR-0001-15

FR-0000-15

REAR VIEW

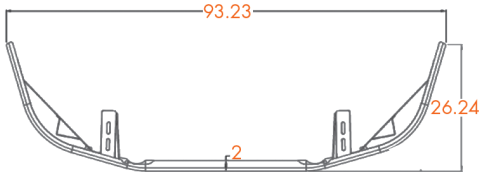

FM

T400 SET BACK AXLE YEARS 1989-2000

FM-2001-15

FM-0001-15

KENWORTH BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

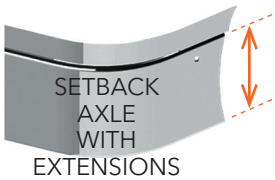

Width	End Style Code
14″	708
16″	709
18″	711
*20″	712

* No warranty for 20″ wide bumpers

T680 SET BACK AXLE YEARS 2013 & NEWER

FV

MOUNTING BRACKETS INCLUDED
(NOW IN -708 END STYLE (ONE-PIECE))

FV-5210-708
2 OEM fogs, step, tow pins

FV-0010-708-V4
Tow pins, radar accommodation

FV-0210-708
Step, tow pins

FV-5010-708
2 OEM fogs, tow pins

FV-0010-708
Tow pins

FV-0000-708
Mounting only

FV-0010-708-V4
Tow pins, radar accommodation

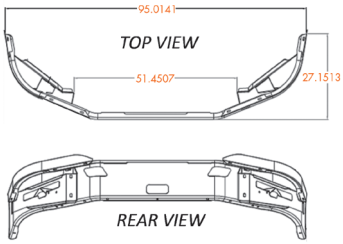

T680 GEN II SET BACK AXLE YEARS 2021 & NEWER

FX

MOUNTING BRACKETS INCLUDED
(NOW IN -708 END STYLE (ONE-PIECE))

FX-0000-708
Mounting only

FX-0010-708
Tow pins

FX-0010-708-V4
Tow pins, radar accommodation

FX-5210-708
2 OEM fogs, step, tow pins

FX-5010-708
2 OEM fogs, tow pins

FX-5011-708
Vent, 2 OEM fogs, tow pins

FX-0011-708
Vent, tow pins

FX-0210-708
Step, tow pins

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

12″	**18**
16″	19
18″	20
20″	35

* No warranty for 20″ wide bumpers

T280, T380 & T480 SET FORWARD AXLE YEARS 2021 & NEWER — FY

MOUNTS TO FACTORY BRACKETS FOR STEEL REPLACEMENT
(SEPARATE BRACKETS REQUIRED TO REPLACE FACTORY URETHANE)

FY-5000-18
Fog

FY-5001-18
Fog, Vent

FY-0000-18
Mount Only

FY-5001-18

FY-0001-18
Vent

W990 YEARS 2021 & NEWER — FZ

FZ-0000-117
Mount Only

FZ-0000-118
Mount Only

FZ-0010-117
Center Tow

FZ-0010-118
Center Tow

FZ-2010-117
Square Fog, Center Tow

FZ-2010-118
Square Fog, Center Tow

FZ-6010-117
OE Fog, Steps, Center Tow

FZ-6010-118
OE Fog, Steps, Center Tow

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

T880S SET FORWARD AXLE YEARS 2017-2023

FOA

FOA-0000- 02
Mount Only

FOA-0000- 06
Mount Only

FOA-0010- 02
Tow Pins

FOA-0010- 06
Tow Pins

T880 SETBACK AXLE YEARS 2014 & NEWER

FOB

FOB-0101- 15
Tow Pins, Vent

FOB-0101- 26
Tow Pins, Vent

MACK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

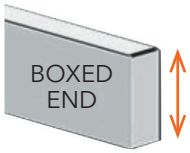

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

GA

R, RL, F, FL, FS

41.64″

GA-1201-02

GA-1200-02

GA-1001-02

GA-0201-02

GA-1000-02

GA-0200-02

GA-0001-02

GA-0000-02

GB

SUPERLINER, CRUISELINER

NOT AVAILABLE IN 12″ WIDTH

SUPERLINER NOT AVAILABLE IN GULLWING STYLE-07

49.62″

GB-1211-02

40.5″

GB-1210-02

GB-1201-02

GB-1011-02

GB-0211-02

GB-1200-02

GB-1010-02

GB-1001-02

GB-0210-02

GB-0201-02

GB-0011-02

GB-1000-02

GB-0200-02

GB-0010-02

GB-0001-02

TOW PIN HOLES

GB-0000-02

MACK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

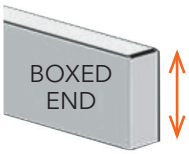

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

R-600, R-700

GC

ADD- GG TO END OF ANY 'GC' PART NUMBER FOR GRILLE GUARD HOLES

GC-1011-02

GC-1010-02

GC-1001-02

GC-0011-02

GC-1000-02

GC-0010-02

GC-0001-02

GC-0000-02-GG

GC-0000-02

GRILLE GUARDS

FIT OEM BUMPERS AND OUR BUMPERS GC, GH, GS, GV
DOES NOT FIT OUR 'GZ' BUMPERS (SEE PAGE 54)
STAINLESS STEEL ONLY

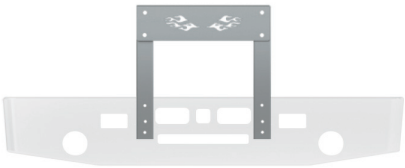

AC-GCGGS-FLAMES

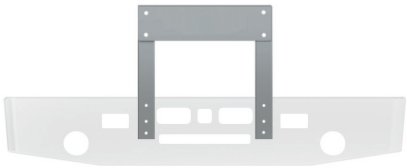

AC-GCGGS

F-600

GD

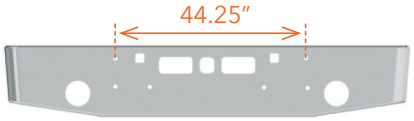

GD-1011-02

GD-1010-02

GD-1001-02

GD-0011-02

GD-1000-02

GD-0010-02

GD-0001-02

GD-0000-02

MACK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

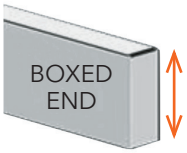

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

GE — VALUELINER, WESTCOAST

GE-1011-02

GE-1010-02

GE-1001-02

GE-0011-02

GE-1000-02

GE-0010-02

GE-0001-02

GE-0000-02

GF — F-700, INTERSTATE

GF-1011-02

GF-1010-02

GF-1001-02

GF-0011-02

GF-1000-02

GF-0010-02

GF-0001-02

GF-0000-02

GR — R600 YEARS 1965 TO 1976

GR-1011-02

GR-1010-02

GR-1001-02

GR-0011-02

GR-1000-02

GR-0010-02

GR-0001-02

GR-0000-02

MACK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

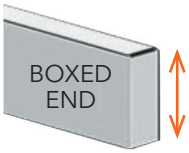

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

MH COE, SUPERLINER II, RW613

NOT AVAILABLE IN 12″ WIDTH

GG

GG-1110-02

GG-1100-02

GG-1010-02

GG-0110-02

GG-1000-02

GG-0100-02

GG-0010-02

GG-0000-02

WESTERN CONTRACTOR, RD688, RD690 YEARS 1989-2001

ADD-GG TO END OF ANY 'GH' PART NUMBER FOR GRILLE GUARD HOLES

GH

GH-1011-02

GH-1010-02

GH-1001-02

GH-0011-02

GH-1000-02

GH-0010-02

GH-0001-02

GH-0000-02-GG

GH-0000-02

GRILLE GUARDS

FIT OEM BUMPERS AND OUR BUMPERS GC, GH, GS, GQ, GV

DOES NOT FIT OUR 'GZ' BUMPERS (SEE PAGE 54)

STAINLESS STEEL ONLY

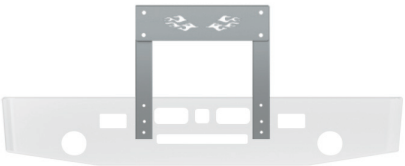

AC-GCGGS-FLAMES

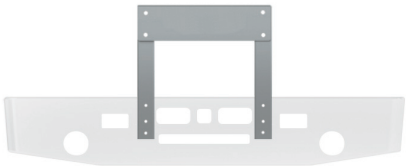

AC-GCGGS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
10″	27
12″	12
14″	25
16″	13
18″	14

GI

LOGGER

NOT AVAILABLE IN 10″ WIDTH (-27). NOTE LETTERS 'GI' IN PART NUMBER

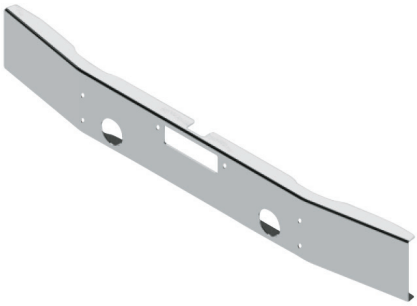

GI-1010-12

GI-0010-12

GI-1000-12

GI-0000-12

GS

RD SET BACK AXLE YEARS 1979-1988

GRILLE GUARD HOLES ARE STANDARD

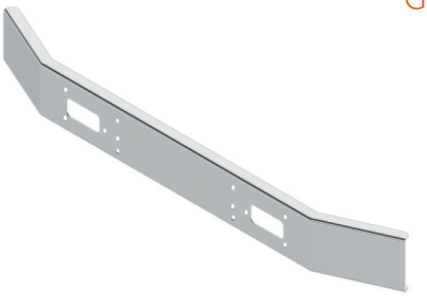



GS-0010-12

GS-0000-12

SEE PAGE 53 FOR GRILLE GUARDS

GP

MR, MRU, MD SERIES YEARS 2018 & OLDER

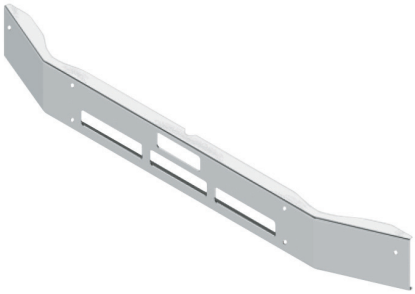

GP-0011-27

GP-0010-27

GP-0001-27

GP-0000-27

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
10″	27
12″	12
14″	25
16″	13
18″	14

CL SERIES YEARS 1994-2003

GN

GN-2010-25

GN-2020-25

OUTBOARD TOW PIN HOLES

GN-0010-25

CENTER TOW PIN HOLE

GN-0020-25

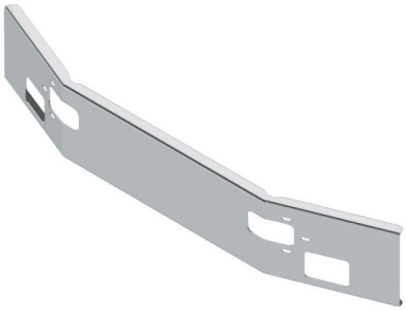

RD688, RD690 YEARS 1993-2003

GRILLE GUARD HOLES ARE STANDARD

GQ

SEE BELOW
FOR GRILLE GUARDS

GQ-0000-27

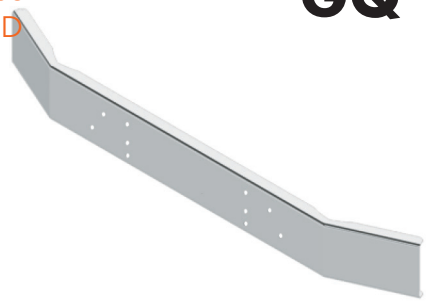

CV SERIES, RD688DM YEARS 2003-2007

GRILLE GUARD HOLES ARE STANDARD
SEE BELOW FOR GRILLE GUARDS

GV

GV-0010-12

GV-0000-12

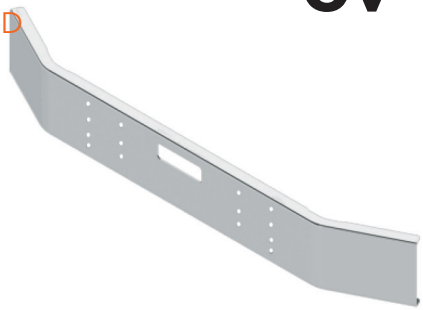

GRILLE GUARDS

FIT OEM BUMPERS AND OUR BUMPERS GC, GH, GS, GQ, GV
DOES NOT FIT OUR 'GZ' BUMPERS (SEE PAGE 54)
STAINLESS STEEL ONLY

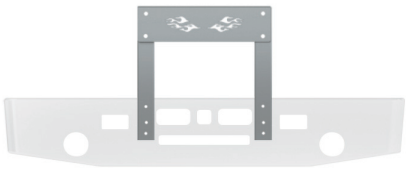

AC-GCGGS-FLAMES

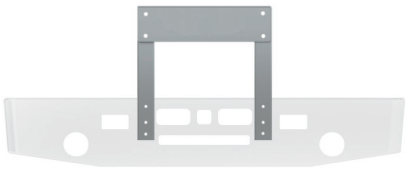

AC-GCGGS

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

GZ

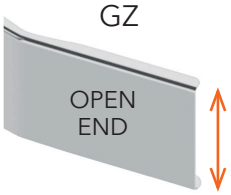

Width	End Style Code
10″	27
12″	12
14″	25
16″	13
18″	14

GT

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

GT

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

GZ

GRANITE, CTP713, GU713

YEARS 2007 & NEWER

GZ-2010-12

GZ-2020-12

GZ-0011-12

GZ-0010-12

GZ-0020-12

GZ-0000-12

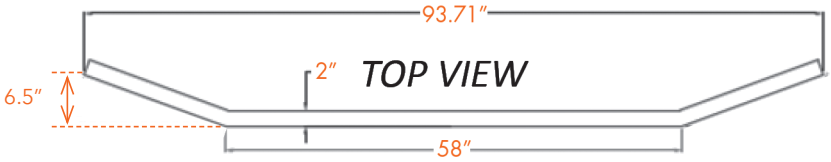

GRILLE GUARDS

FITS GZ BUMPERS AND
OEM EQUIVALENTS ONLY
STAINLESS STEEL ONLY
FOR OTHER MACK GRILLE
GUARDS SEE PAGE 53

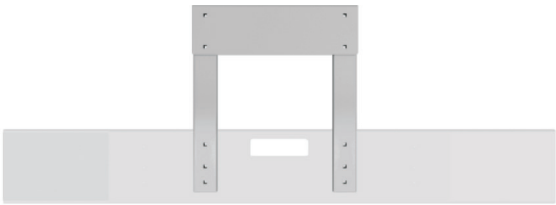

AC-GZGGS

GT

GRANITE, BRIDGE FORMULA

YEARS 2003-2007

GT-2210-02

GT-2200-02

GT-2010-02

GT-0210-02

GT-2000-02

GT-0200-02

GT-0010-02

GT-0000-02

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

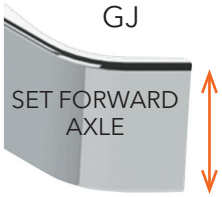

Width	End Style Code
13″	18
16″	19
18″	20
20″	35

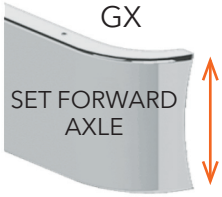

Width	End Style Code
17.5″	19

CH SERIES SET FORWARD AXLE YEARS 1994-2004 GJ

BRACKETS INCLUDED & BOLTED IN

GJ-2210-18

GJ-2200-18

GJ-2010-18

GJ-0210-18

GJ-2000-18

GJ-0200-18

GJ-0010-18

GJ-0000-18

REAR VIEW

GJ-2210-18

CH SERIES SET FORWARD AXLE YEARS 2005 & NEWER GX

ALSO FITS RAWHIDE

MOUNTS TO FACTORY BRACKETS, BRACKETS NOT INCLUDED. LICENSE PLATE HOLES INCLUDED.

GX-1211-19

GX-1210-19

GX-0210-19

GX-0211-19

GX-0010-19

GX-1000-19

GX-0200-19

GX-0000-19

GX-1211-19

REAR VIEW

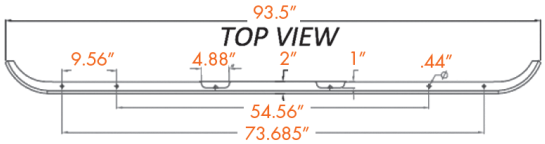

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

GM

CH SERIES SET BACK AXLE YEARS 1988-1993

BRACKETS INCLUDED & BOLTED IN

GM-2210-15

GM-2200-15

GM-2010-15

GM-0210-15

GM-2000-15

GM-0200-15

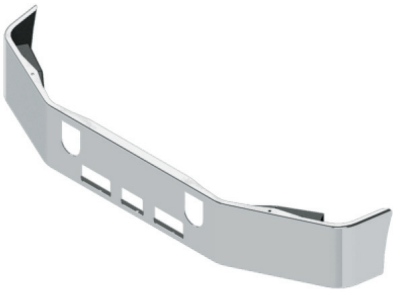



GM-0010-15



GM-0000-15

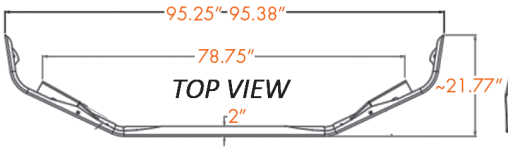

GL

CH SERIES SET BACK AXLE YEARS 1994-2004

BRACKETS INCLUDED & BOLTED IN

GL-2210-15

GL-2200-15

GL-2010-15

GL-0210-15

GL-2000-15

GL-0200-15

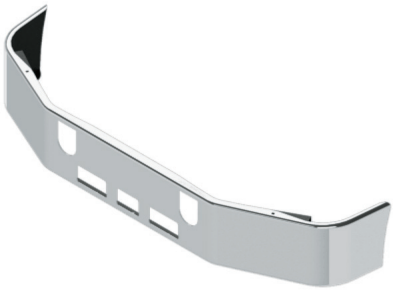

GL-0010-15

GL-0000-15

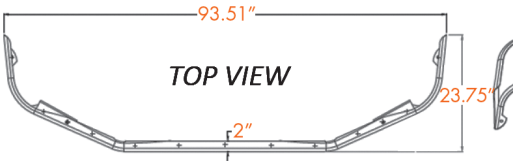

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

CX SERIES, VISION SET BACK AXLE YEARS 2001-2004

MOUNTING BRACKETS INCLUDED

GU

GU-2210-16

GU-2200-16

GU-2010-16

GU-0210-16

GU-2000-16

GU-0200-16

GU-0010-16

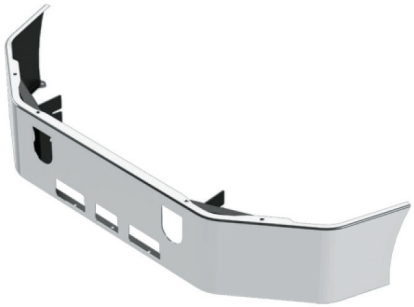

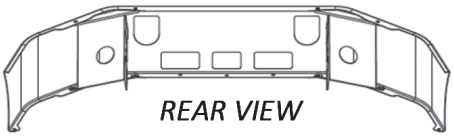

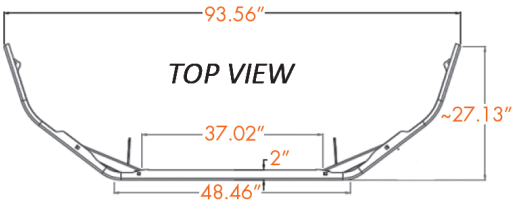

CXP, CXN SERIES SET BACK AXLE YEARS 2005 & NEWER

MOUNTING BRACKETS INCLUDED

ONE SET UPPER LICENSE PLATE HOLES INCLUDED

GW

GW-1210-16

GW-1200-16

GW-1010-16

GW-0210-16

GW-1000-16

GW-0010-16

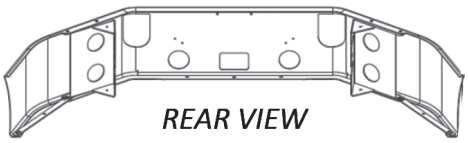

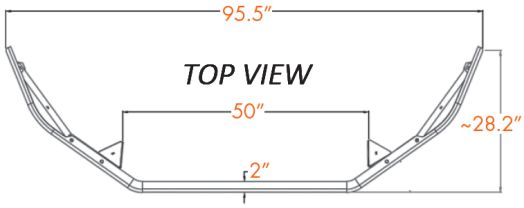

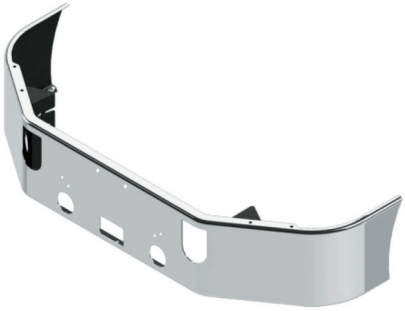

MACK BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

GY

CXU SERIES SET BACK AXLE YEARS 2008 & NEWER
BRACKETS NOT INCLUDED. REPLACES STAINLESS CLAD BUMPERS.
BRACKETS REQUIRED FOR URETHANE REPLACEMENT – SEE BELOW

ANTHEM SET BACK AXLE YEARS 2017 & NEWER
BRACKETS NOT INCLUDED – REPLACES STAINLESS CLAD BUMPERS ONLY

GY-1211-16
Round fogs, step, tow, vent holes

GY-1200-16
Round fogs, step holes

GY-0211-16
Step, tow, vent holes

GY-0210-16
Step, tow holes

GY-0010-16
Tow holes

GY-0200-16
Step hole

Brackets for CXU plastic replacement: **GY0116BK**

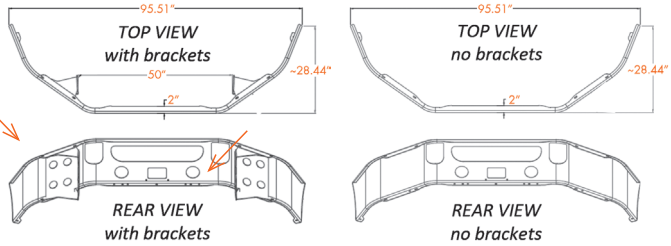

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	12
16″	13

MD6 & MD7 YEARS 2021 & NEWER MOUNTS TO FACTORY BRACKETS

GOA

GOA-0000-12
No Cutouts

GOA-0010-12
Center Tow

Width	End Style Code
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

ANTHEM SET BACK AXLE YEARS 2018 & NEWER BRACKETS INCLUDED – REPLACES URETHANE BUMPERS ONLY

GOB

GOB-0000-16
Mount Only

GOB-0001-16
Vent Hole

GOB-0010-16
Tow Holes

GOB-0011-16
Tow Holes, Vent Hole

GOB-0211-16
Center Step, Tow Holes, Vent Hole

GOB-2001-16
2 Square Fogs, Vent Hole

PETERBILT BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

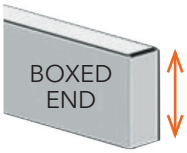

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

352 CABOVER YEARS 1967-1980
359 CONVENTIONAL YEARS 1967-1986

HA

HA-1010-02

HA-1000-02

HA-0010-02

HA-2010-02

HA-2000-02

HA-0000-02

LOGGER YEARS 1973-1986

HE

HE-1090-02

HE-1000-02

HE-0090-02

HE-0000-02

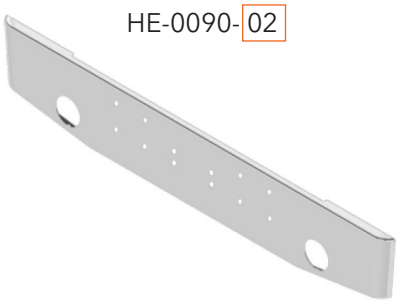

362 CABOVER YEARS 1981 & NEWER
NOT AVAILABLE IN 12″ WIDTH (-01,-04,-09,-91)

HK

HK-1110-02

HK-1100-02

HK-1010-02

HK-0110-02

HK-1000-02

HK-0100-02

HK-0010-02

HK-0000-02

PETERBILT BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

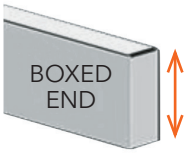

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

HD

375 CONVENTIONAL YEARS 1987-1994

HD-2011-02

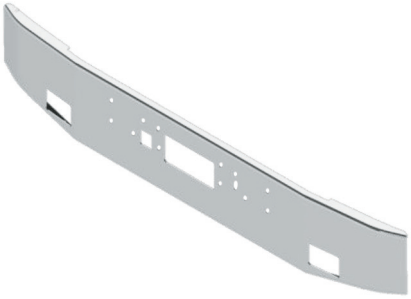

HD-2010-02

HD-0011-02

HD-0001-02

HD-2001-02

HD-0010-02

HD-0000-02

HC

379, 378, 357 YEARS 1987-2007

HC-2010-02

HC-0020-02

HC-2000-02

HC-0000-02

HC-0010-02

HC-0010-06

SEE PAGE 61 FOR SUPPORT BRACKETS

HF

LOGGER YEARS 1987-2007

HF-2090-02

HF-3090-01

HF-0090-02

HF-0090-01

BUMPER SUPPORT BRACKETS – MODEL 379

VP15-06333L-22

for 20″ to 22″ bumpers

VP15-06333L-20

for 16″ to 20″ bumpers

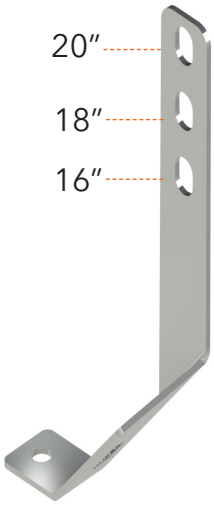

MARKED FOR DRIVER & PASSENGER SIDES

VP15-06333L-20
shown on 20″ bumper
(fasteners not included)

ADD THESE BRACKETS FOR A MORE RIGID INSTALLATION.
POWDER-COATED STEEL.
FASTENERS NOT INCLUDED.
SOLD AS A PAIR.

BUMPER SUPPORT BRACKETS – MODEL 389 & 589

VCN11-6061-22

for 20″ to 22″ bumpers

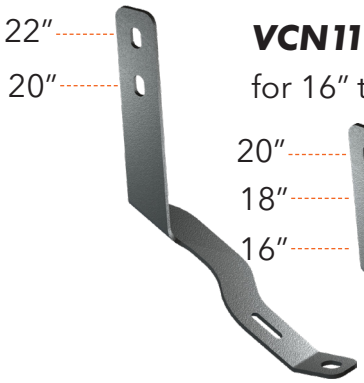

VCN11-6061-20

for 16″ to 20″ bumpers

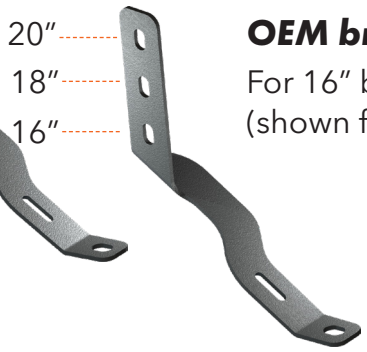

OEM bracket N11-6061

For 16″ bumpers
(shown for comparison)

VCN11-6061-20
shown on 20″ bumper
(fasteners not included)

SAME BRACKET USED FOR DRIVER & PASSENGER SIDES

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

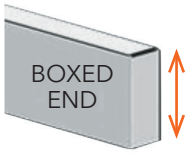

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

HV

365, 367, 388, 389, 567, YEARS 2007 & NEWER
589, YEARS 2024 & NEWER

HV-2210-02

HV-2200-02



HV-0090-02

HV-0010- 06

HV-2000-02

HV-0210-02

HV-0000-02

HV-0010-02

SEE PAGE 61 FOR SUPPORT BRACKETS

HOB

388 HIGH CLEARANCE YEARS 2007 & NEWER
NOTE LETTERS 'HOB' IN PART NUMBER

HOB-2090-01

HOB-2000-01

HOB-0090-01

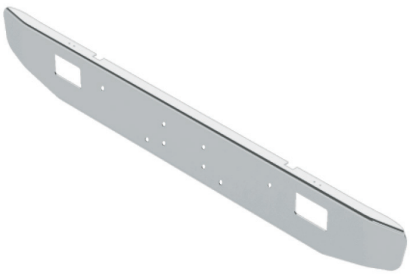

HOB-0010-01

HOB-0000-01

VALLEY CHROME PLATING

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
13″	18
16″	19
18″	20
20″	35

362E SET FORWARD AXLE

HQ

HQ-2210-18

HQ-2200-18

HQ-2010-18

HQ-0210-18

HQ-0010-18

HQ-0200-18

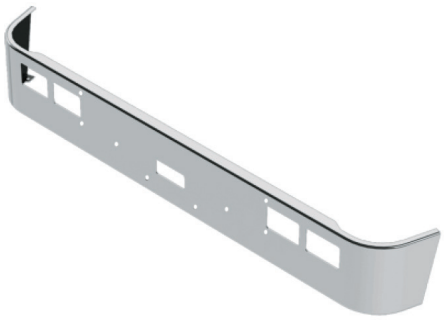

377 SET FORWARD AXLE YEARS 1987-1991

NOTE LETTERS 'HI' IN PART NUMBER

HI

HI-2010-18

HI-2000-18

HI-0010-18

HI-0000-18

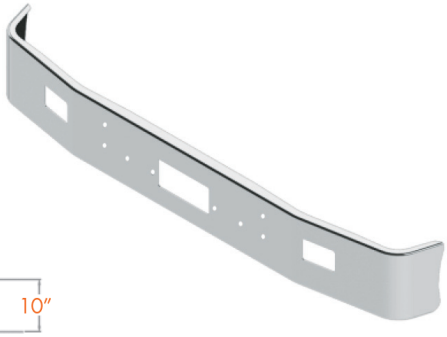

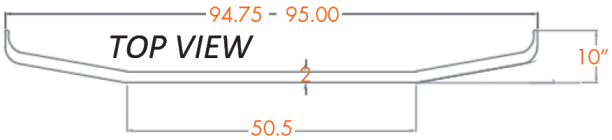

377AE, 375 SET FORWARD AXLE YEARS 1987 & NEWER

HJ

HJ-2010-18

HJ-2000-18

HJ-0010-18

HJ-0000-18

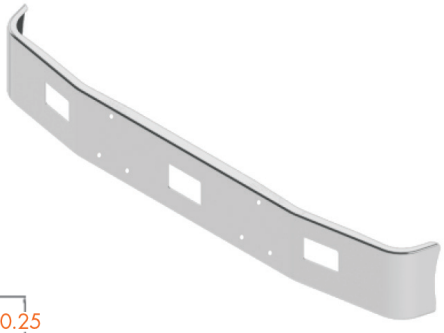



AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
10″	27
12″	12
14″	25
16″	13
18″	14

HG

357, 378 SETBACK AXLE YEARS 1987-2004

SEE BELOW FOR TOP FLANGE STEP PLATES
CHECK 'HOD' SERIES PRIOR TO ORDERING

TOP PLATES:

HG-VP-AD
ALUMINUM DIAMOND PLATE

HG-VP-SS
POLISHED STAINLESS

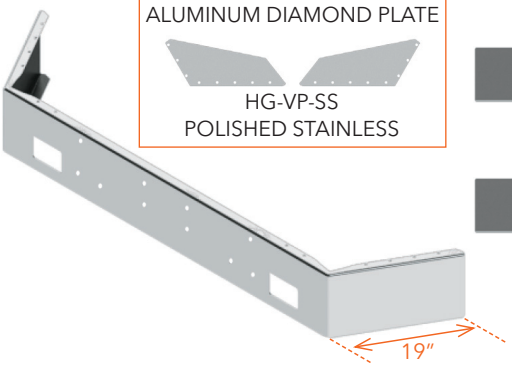

HG-2090-12

HG-2010-12

HG-2000-12

HG-0090-12

HG-0010-12

HG-0000-12

HM

320, 520 CABOVER YEARS 1990 & NEWER

AVAILABLE IN 14″ ONLY (-25)

HM-1011-25

HM-1012-25

HM-1010-25

HM-1001-25

HM-1002-25

HM-1000-25

HM-0011-25

HM-0012-25

HM-0010-25

HM-0002-25

HM-0000-25

HM-0001-25

CALL FOR HEATER HOLE OR
NAT. GAS CUTOUTS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

377 WITH 119″ BBC, SET BACK AXLE YEARS 1987-1997 — HH

377AE SET BACK AXLE YEARS 1990 & OLDER

MOUNTING BRACKETS **NOT** INCLUDED, CHECK 'HN' SERIES PRIOR TO ORDERING

FOG LIGHT BRACKETS INCLUDED WITH ELIGABLE BUMPERS

HH-2010-15

HH-2000-15

HH-0010-15

HH-0000-15

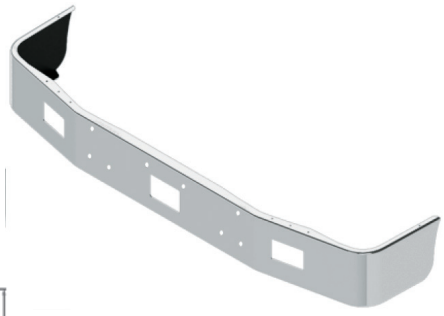

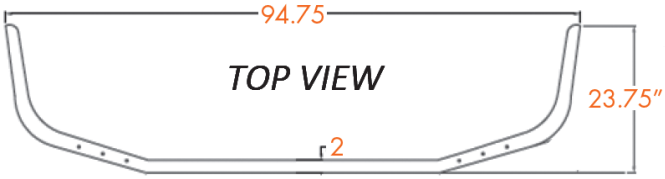

377 WITH 120″ BBC / 122″BBC, SET BACK AXLE — HN

385 WITH 120″ BBC, SET BACK AXLE YEARS 1997-2007

MOUNTING BRACKETS INCLUDED, CHECK 'HH' SERIES PRIOR TO ORDERING

HN-2010-15

HN-2000-15

HN-0010-15

HN-0000-15

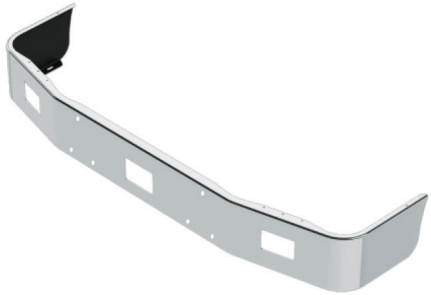

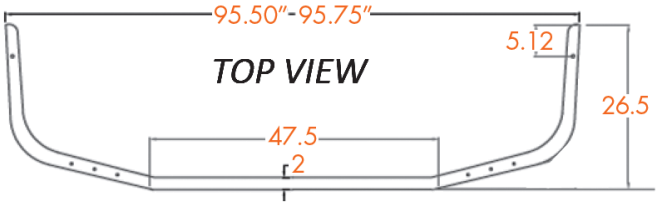

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

HL

385 WITH 112″ BBC, SET BACK AXLE YEARS 1995-2007

CHECK 'HY' SERIES PRIOR TO ORDERING

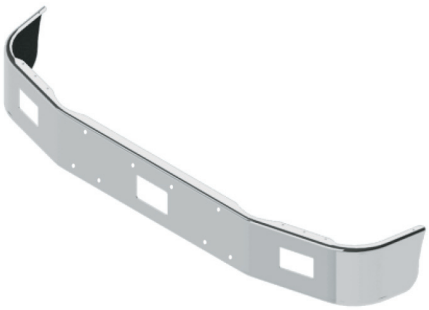

HL-2010-15

HL-2000-15

HL-0010-15

HL-0000-15

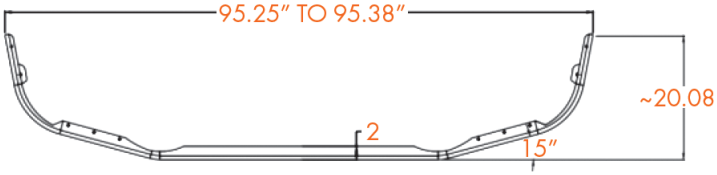

HY

385 WITH 120″ BBC, SET BACK AXLE YEARS 1995-2007

CHECK 'HL' SERIES PRIOR TO ORDERING

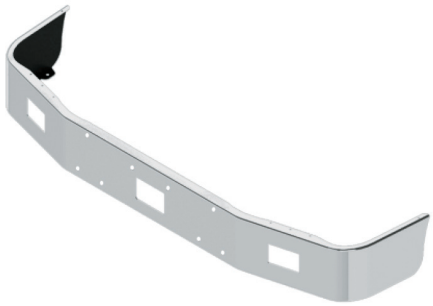

HY-2010-15

HY-2000-15

HY-0010-15

HY-0000-15

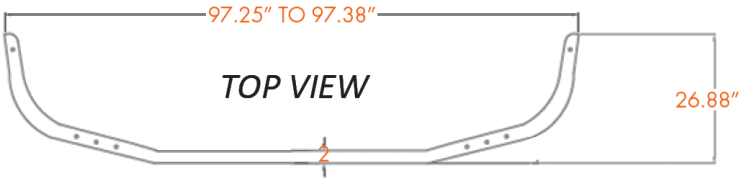

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

357, 378 SET BACK AXLE YEARS 2005-2007

HOD

NOTE LETTERS 'HOD' IN PART NUMBER
CHECK 'HG' SERIES PRIOR TO ORDERING

HOD-2090-15

HOD-2010-15

HOD-0090-15

HOD-0010-15

HOD-0000-15

HOD-2000-15

TOP PLATES:

HOD-VP-AD
ALUMINUM DIAMOND PLATE

HOD-VP-SS
POLISHED STAINLESS

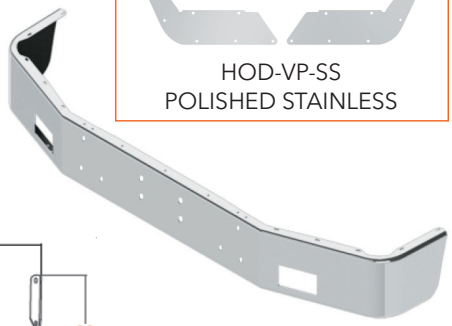



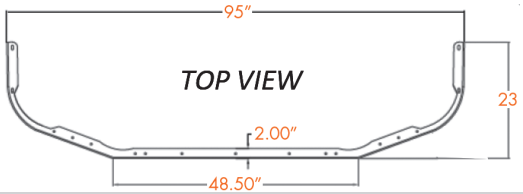

367, 567 SET BACK AXLE YEARS 2007 & NEWER

HX

MOUNTS TO FACTORY BRACKETS

*** FACTORY TOP PLATES DO NOT MOUNT TO VCP BUMPER ***

(TOP PLATES SOLD SEPARATELY)

HX-2090-15

HX-2010-15

HX-0090-15

HX-0010-15

HX-0000-15

HX-2000-15

TOP PLATES:

HX-VP-AD
ALUMINUM DIAMOND PLATE

HX-VP-SS
POLISHED STAINLESS

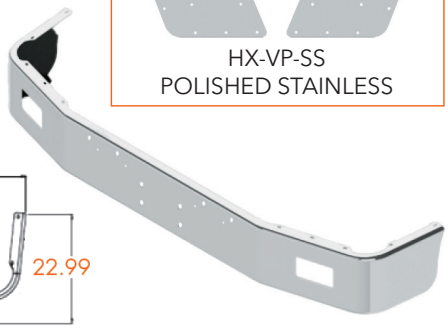

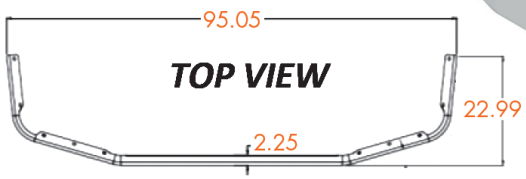

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

HP, HOF

Width	End Style Code
13″	18
16″	19
18″	20
20″	35

HT

Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

HP

330 SET FORWARD AXLE YEARS 1998-2005

12K/14K RATED FRONT AXLE
CHECK 'HOF' SERIES PRIOR TO ORDERING
ONE SET LICENSE PLATE HOLES INCLUDED

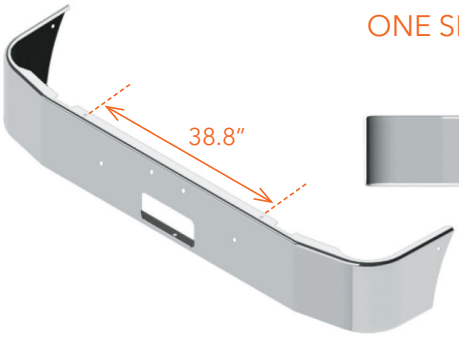

HP-0010-18

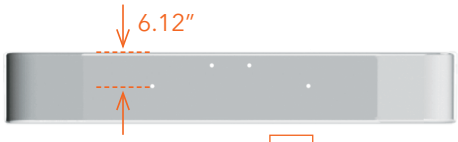

HP-0000-18

HOF

335HD, 340HD SET FORWARD AXLE YEARS 2006-2014

16K RATED FRONT AXLE
BRACKETS NOT INCLUDED. MOUNTS TO FACTORY BRACKETS.
NOTE LETTERS 'HOF' IN PART NUMBER. CHECK 'HP' SERIES PRIOR TO ORDERING.

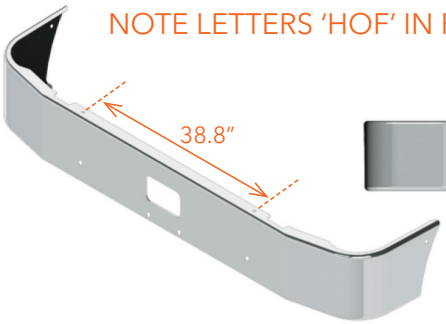

HOF-0010-18

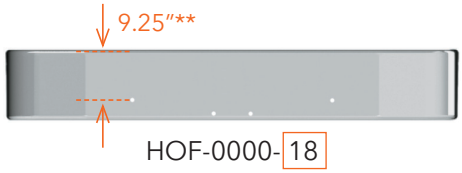

HOF-0000-18

**ALSO AVAILABLE WITH 8.38″ FLANGE TO BOLT DIMENSION - CALL

HT

330, 335, 337, 340, 348 SET BACK AXLE YEARS 2006-2014

12K/14K RATED FRONT AXLE
MOUNTING BRACKETS INCLUDED
CHECK 'HOC' SERIES PRIOR TO ORDERING. ONE SET LICENSE PLATE HOLES INCLUDED.

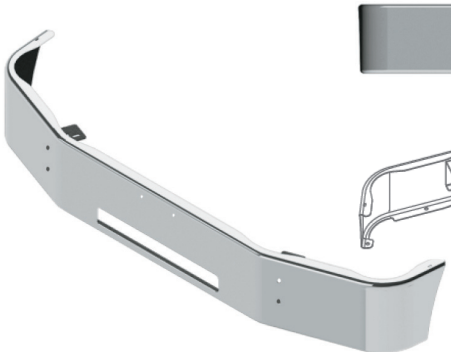

HT-0010-15

HT-0000-15

REAR VIEW

HT-0010-15

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	18
16″	19
18″	20
20″	35

337 SET FORWARD AXLE YEARS 2015 & NEWER

HOC

MOUNTING BRACKETS INCLUDED
NOTE LETTERS 'HOC' IN PART NUMBER
CHECK 'HT' SERIES PRIOR TO ORDERING

HOC-2010-18

HOC-2000-18

HOC-0010-18

HOC-0000-18

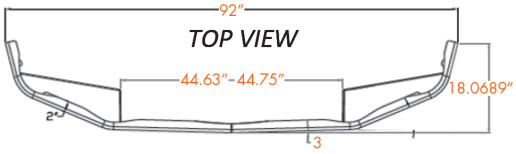

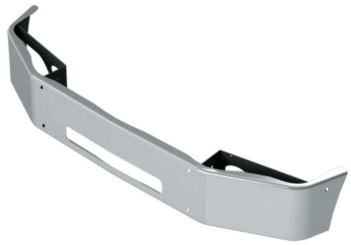

348 SET FORWARD AXLE YEARS 2010 & NEWER

HOE

NOTE LETTERS 'HOE' IN PART NUMBER

HOE-2010-18

HOE-2000-18

HOE-0010-18

HOE-0000-18

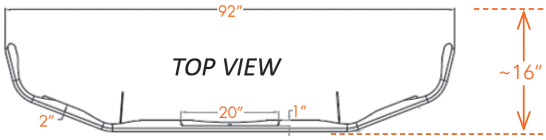

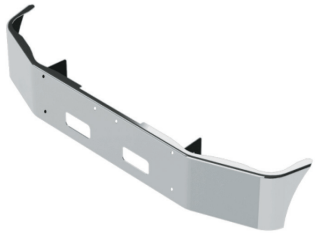

536 & 537 SET FORWARD AXLE YEARS 2021-NEWER

HOG

MOUNTS TO FACTORY BRACKETS FOR STEEL REPLACEMENT
(SEPARATE BRACKETS REQUIRED TO REPLACE FACTORY URETHANE)

HOG-0000-18

HOG-5000-18

HOG-0001-18

HOG-5001-18

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
16"	16
18"	17
20"	34
22"	36

* No warranty for 20" wide bumpers

HR

387 SET BACK AXLE YEARS 1999-2001
MOUNTING BRACKETS INCLUDED
AVAILABLE IN 16" TO 20" WIDTHS ONLY

HR-2210-16

HR-2200-16

HR-2010-16

HR-0210-16

HR-0200-16

HR-0010-16

HR-0210-16

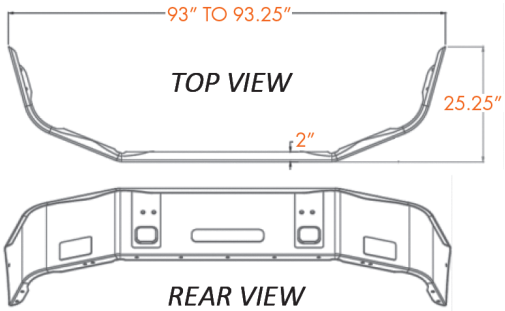

HR-0000-16


BRACKETS (2)

HS

387 SET BACK AXLE YEARS 2002-2011
MOUNTING BRACKETS INCLUDED
AVAILABLE IN 16" TO 20" WIDTHS ONLY

HS-2210-16

HS-2200-16

HS-2010-16

HS-0210-16

HS-0200-16

HS-0010-16

HS-2210-16

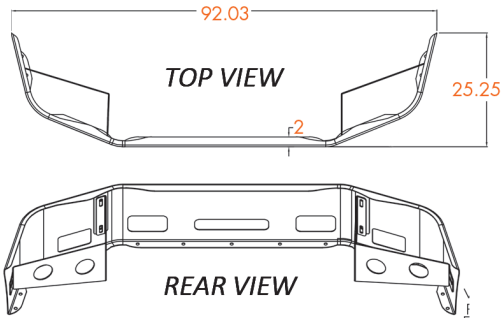

HS-0000-16

PETERBILT BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

SEE DESCRIPTIONS BELOW FOR AVAILABLE WIDTHS

* No warranty for 20″ wide bumpers

386 SET BACK AXLE YEARS 2006-2015

HU

REPLACES PLASTIC BUMPERS ONLY
MOUNTING BRACKETS INCLUDED
AVAILABLE IN 16″ TO 20″ WIDTHS ONLY

HU-2210-16

HU-2010-16

HU-2000-16

HU-0210-16

HU-0010-16

HU-0000-16

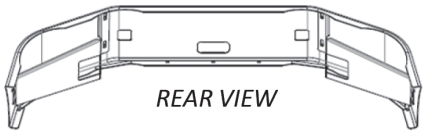

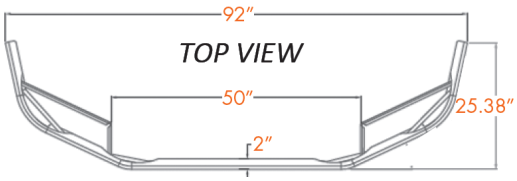

HU-0010-16

384 SET BACK AXLE YEARS 2008-2015

HW

REPLACES STAINLESS CLAD BUMPERS - MOUNTS TO CLAD BRACKETS
CLAD REPLACEMENT AVAILABLE IN 13″ WIDTH ONLY
PLASTIC REPLACEMENT REQUIRES MOUNTING BRACKETS:
HW0115BK (13″) OR HW0116BK (16″)

HW-2011-15

HW-2010-15

HW-2000-15

HW-0011-15

HW-0010-15

HW-0000-15

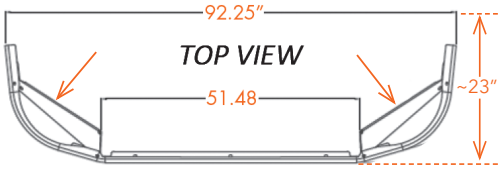

HW-0011-15

Brackets only for plastic bumper replacement.
Sold separately.

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
16.5″	16Y
18″	17Y

Width	End Style Code
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

HZ

579 SET BACK AXLE YEARS 2012-2020

MOUNTING BRACKETS INCLUDED

HZ-5110- 16Y -V4

HZ-5110- 16Y

HZ-5100- 16Y

HZ-0110- 16Y -V4

HZ-0110- 16Y

HZ-5010- 16Y

HZ-0110-16Y

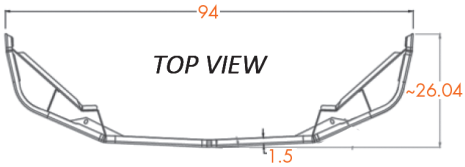

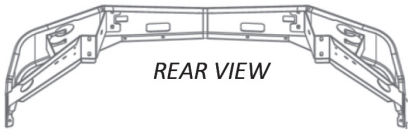

HOA

587 SET BACK AXLE YEARS 2012 & NEWER

NOTE LETTERS 'HOA' IN PART NUMBER. MOUNTING BRACKETS INCLUDED.

HOA-5110- 16

HOA-2110- 16

HOA-0110- 16

HOA-5100- 16

HOA-2100- 16

HOA-0010- 16

HOA-0100- 16

HOA-0210- 16

HOA-0000- 16

HOA-0010-16

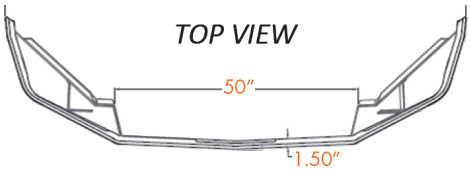

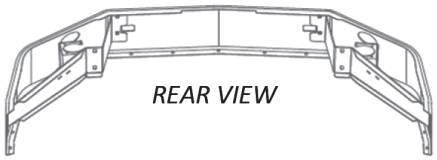

HZA

579 GEN II SET BACK AXLE

YEARS 2021 & NEWER
MOUNTING BRACKETS INCLUDED
SIMILAR OPTIONS AS 'HZ' SERIES ON PREVIOUS PAGE

HZA-0010- 16Y

HZA-0000- 16Y

HZA-5010- 16Y

HZA-5010-16Y-V4
(GEN II W/OEM FOGS)

HZA-0010-16Y-V4

579 GEN II SET BACK AXLE

YEARS 2021 & NEWER
GRILL INSERTS
(SET OF 2)

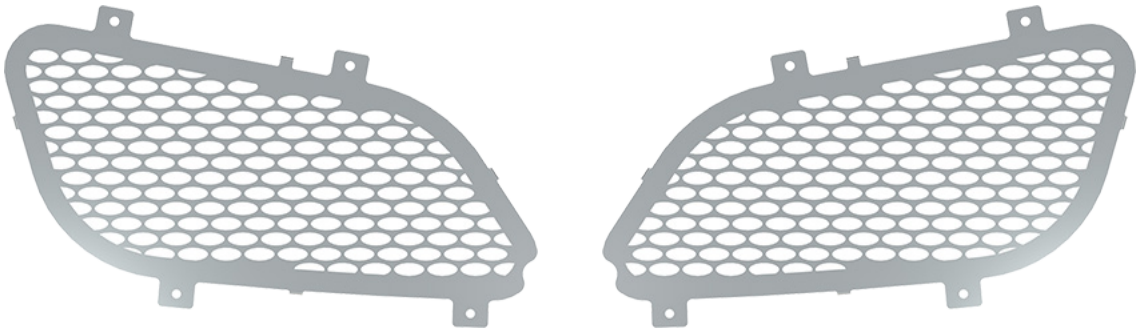

VP100200

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
13″	18
16″	19
18″	20
20″	35

LT7501 SET FORWARD AXLE YEARS 2000-2009

NA

ONE SET OF UPPER LICENSE PLATE HOLES COME STANDARD
3/4″ SPACERS INCLUDED

NA-2010-18

NA-2000-18

NA-0010-18

NA-0000-18

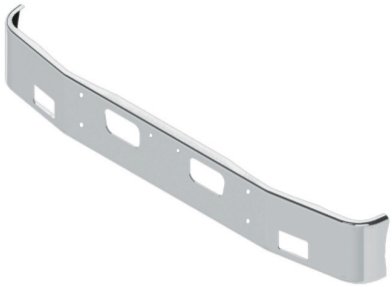

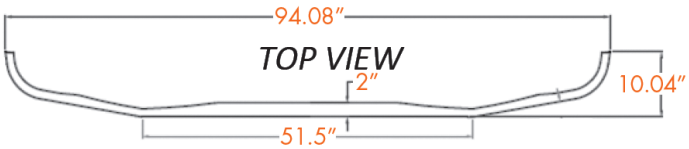

NA-0010-18

ACTERRA SET FORWARD AXLE YEARS 2000-2006

NB

MOUNTS TO OEM BRACKETS

NB-2200-18

NB-2000-18

NB-0200-18

NB-0000-18

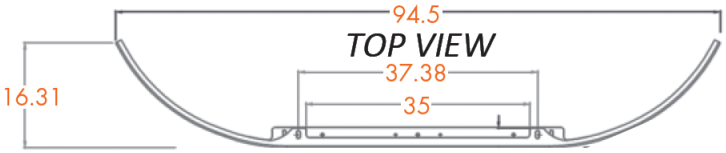

NB-2200-18

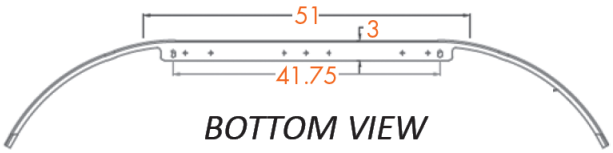

STERLING BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

NC

Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

ND

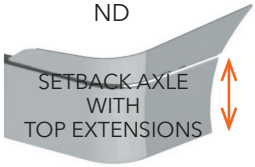

Width	End Style Code
12″	15X
16″	16X
18″	17X
*20″	34X

* No warranty for 20″ wide bumpers

NC

STERLING LT9500, LT9513, FORD L-SERIES

YEARS 1996-2009

MOUNTING BRACKETS INCLUDED. ONE SET LICENSE PLATE HOLES STANDARD.

NC-0010-15

NC-0000-15

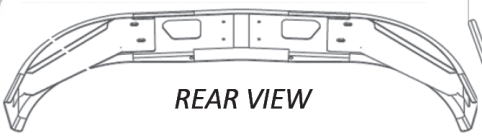

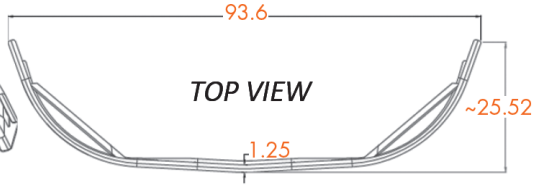

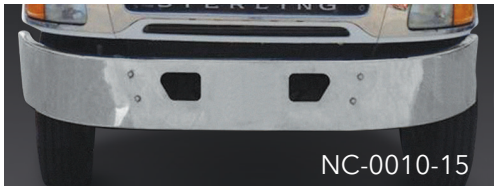

Add "P" to the end of our part number for a black powder coated bumper

ND

STERLING AT9500 YEARS 1996-2009

MOUNTING BRACKETS INCLUDED

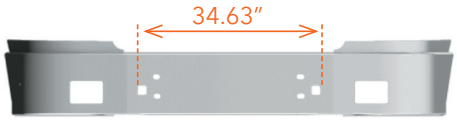

ND-2010-15X

ND-0010-15X

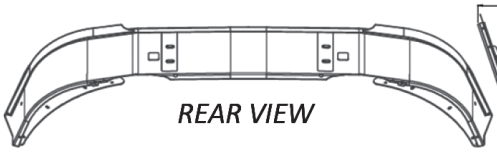

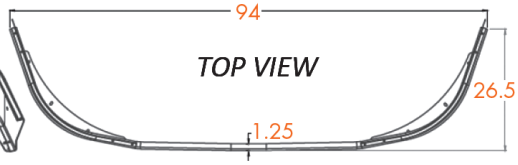

Add "P" to the end of our part number for a black powder coated bumper

VOLVO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	15
16″	16
18″	17
*20″	34

LA = 13″

* No warranty for 20″ wide bumpers

WA, WIA SET BACK AXLE YEARS 1988-1997

MOUNTING BRACKETS INCLUDED

LA



LG-0010-15

LG-0000-15

VNM SET BACK AXLE YEARS 1998-2003

MOUNTING BRACKETS INCLUDED

LD

LD-0011-15

LD-0010-15

LD-0001-15

LD-0000-15

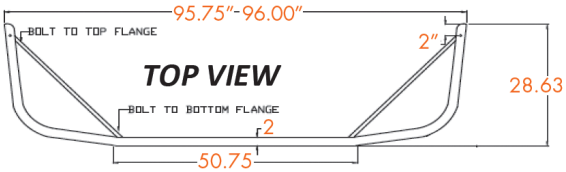

LD-0011-15

VNM SET BACK AXLE YEARS 2004-2017

MOUNTING BRACKETS INCLUDED

LG

LG-5011-15

LG-0011-15

LG-0010-15

LG-0000-15

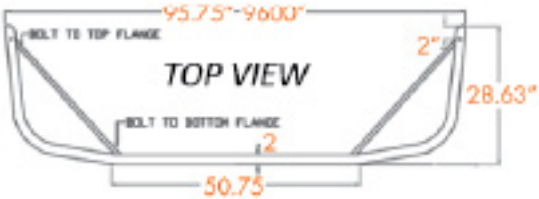

LG-0011-15

VOLVO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

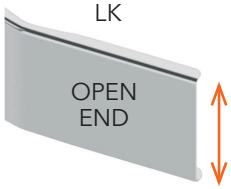

Width	End Style Code
12″	12
14″	25
16″	13
18″	14
20″	61

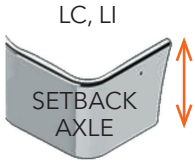

Width	End Style Code
13″	15
16″	16
18″	17
*20″	34

'LI' ONLY AVAILABLE IN - 17 & 34

* No warranty for 20″ wide bumpers

LK

WG DAYCAB SET FORWARD AXLE YEARS 1991-2001

SEE 'LC' SERIES FOR NON-DAYCAB

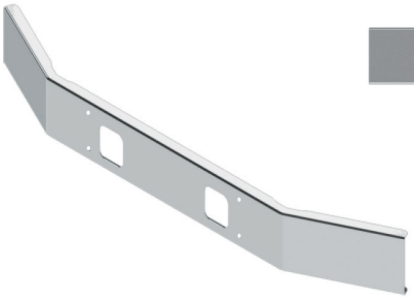

LK-0010-12



LK-0000-12

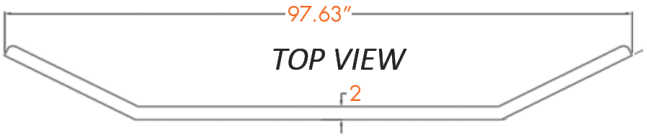

LC

WG SET BACK AXLE YEARS 1991-2001

MOUNTING BRACKETS INCLUDED

SEE 'LK' SERIES FOR DAYCAB



LC-0010-15

LC-0000-15

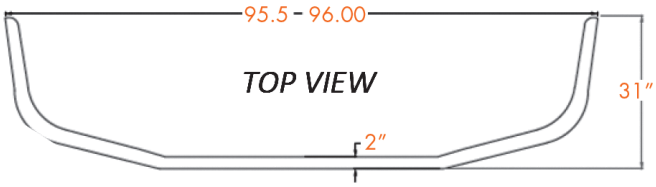

LI

VT SERIES SET BACK AXLE YEARS 2006-2008

NOTE LETTERS 'LI' IN PART NUMBER

ONLY AVAILABLE IN 18″ AND 20″ WIDTHS

ONE SET UPPER LICENSE PLATE HOLES COME STANDARD

LI-5010-17

LI-0010-17

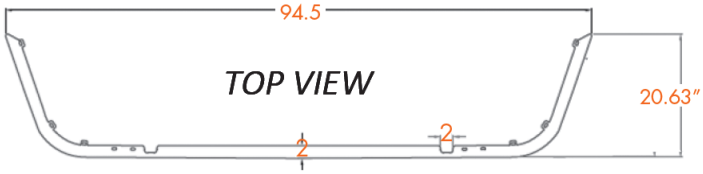

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
16″	02
18″	03
20″	31
22″	32

VOLVO WHITE WCA YEARS 1987-2001

LF

LF-0011-02

LF-0010-02

LF-0001-02

LF-0000-02

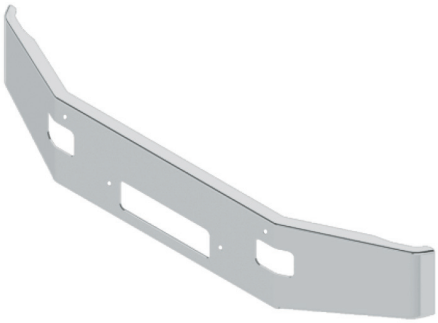

VHD SERIES SET FORWARD AXLE YEARS 2005-2021

LM

MOUNTING BRACKETS AND BLACK POWDER COATED GRILLE FILLER INCLUDED
NOT AVAILABLE WITHOUT VENT HOLES
FITS 14,600LB FRONT AXLE ONLY

LM-2011-02

LM-0011-02

LM-0011-02

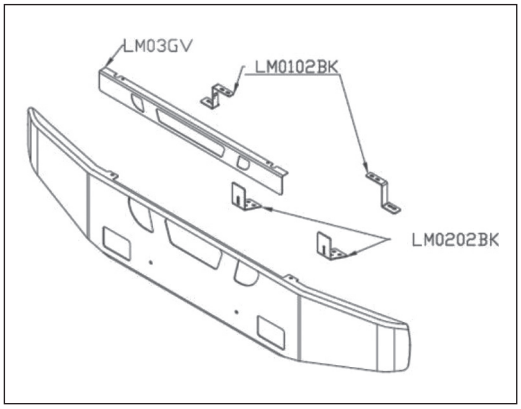

OPTIONAL STAINLESS GRILLE FILLER:

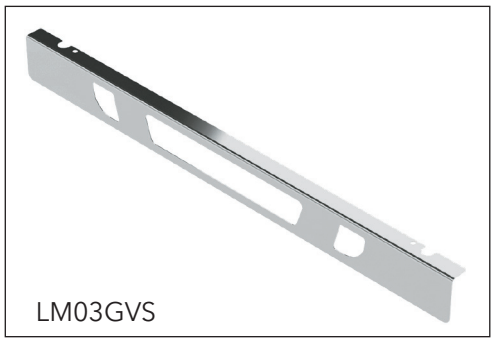

LM03GVS

VOLVO BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code	
12"-13"	15	← LB =13" / LE=12"
16"	16	
18"	17	
*20"	34	* No warranty for 20" wide bumpers

LB

VNL SET BACK AXLE YEARS 1996-2003

REPLACES PLASTIC/FIBERGLASS BUMPERS ONLY

MOUNTING BRACKETS INCLUDED

SEE 'LE' SERIES FOR REPLACING STAINLESS CLAD BUMPERS

MUST BE 16" (16) FOR FOG LIGHT OPTIONS

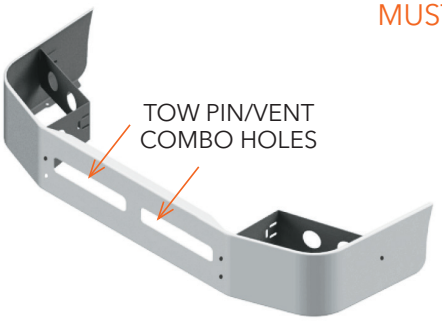

LB-0010-15

LB-0000-15

LB-4010-16

LB-2010-16

LB-0010-16

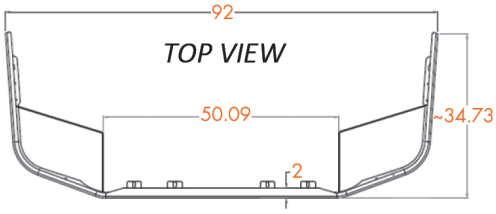

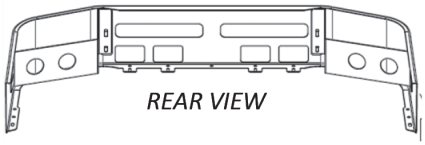

LE

VNL SET BACK AXLE YEARS 1996-2003

REPLACES STAINLESS CLAD BUMPERS ONLY

MOUNTING BRACKETS INCLUDED

SEE 'LB' SERIES FOR REPLACING PLASTIC/FIBERGLASS BUMPERS

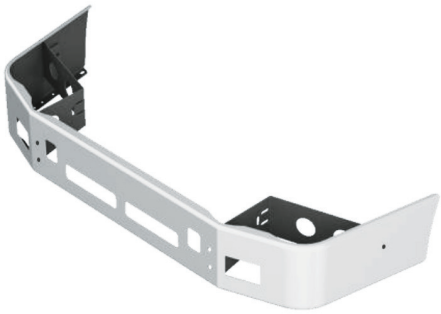

LE-2011-15

LE-2010-15

LE-0011-15

LE-0010-15

LE-2011-15

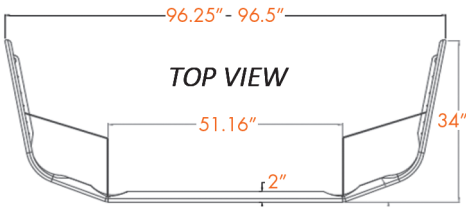

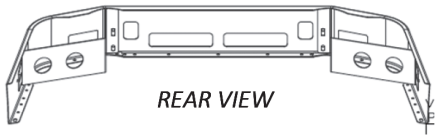

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

VNL SET BACK AXLE YEARS 2004-2017

MOUNTING BRACKETS INCLUDED

LH

LH-5011-15
OEM fog lights, tow pins, vent holes

LH-2011-15
Rectangular fog lights, tow pins, vent holes

LH-5010-15
OEM fog lights, tow pin holes

LH-2010-15
Rectangular fog lights, tow pin holes

LH-0011-15
Tow pin holes, vent hole

LH-0010-15
Tow pin holes

LH-0000-15
Mounting bolts only

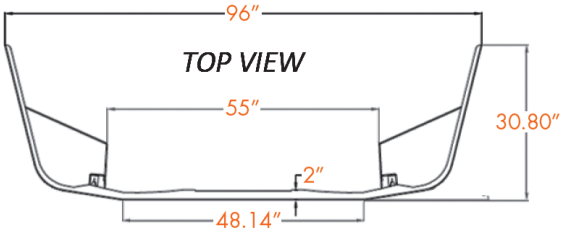

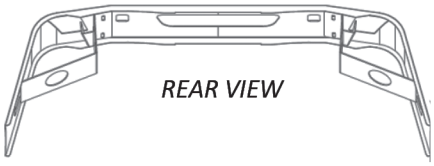

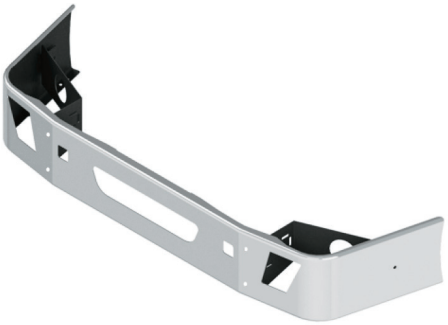

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	15
16″	16
18″	17
*20″	34

* No warranty for 20″ wide bumpers

LJ

VNR SET BACK AXLE YEARS 2018 & NEWER
MOUNTING BRACKETS INCLUDED

LJ-5011-15

LJ-5010-15

LJ-5001-15

LJ-0011-15

LJ-0010-15

LJ-0000-15

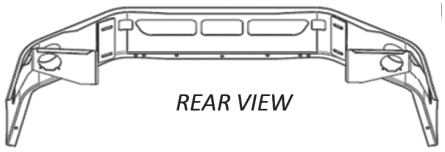

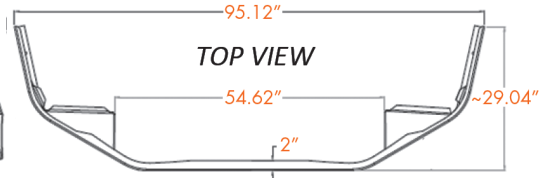

LL

VNL SET BACK AXLE YEARS 2018 & NEWER
MOUNTING BRACKETS INCLUDED

LL-5011-15

LL-5010-15

LL-5001-15

LL-0011-15

LL-0010-15

LL-0000-15

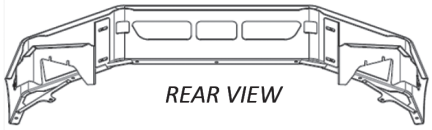

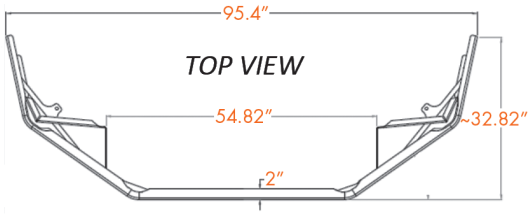

WESTERN STAR BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

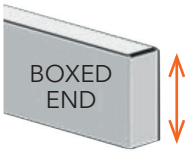

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

CABOVER YEARS 1977-1980 — IA

NOTE LETTERS 'IA' IN PART NUMBER
NOT AVAILABLE IN 12″ WIDTH

IA-1110-02

IA-1100-02

IA-1010-02

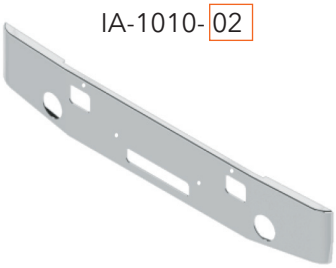

IA-0110-02

IA-0100-02

IA-0010-02

IA-0000-02

CONVENTIONAL YEARS 1967-1984 — IB

NOTE LETTERS 'IB' IN PART NUMBER



IB-1010-02

IB-1000-02

IB-0010-02

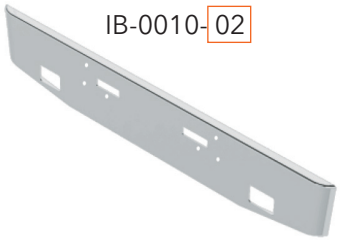

IB-2010-02

IB-0000-02

CONVENTIONAL YEARS 1985-1988 — IF

NOTE LETTERS 'IF' IN PART NUMBER

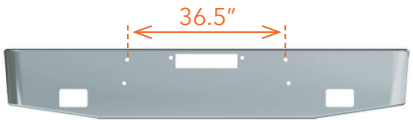

IF-2010-02

IF-2000-02

IF-0010-02

IF-0000-02

WESTERN STAR BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

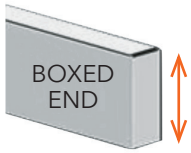

Width	End Style Code
12″	09
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
12″	04
16″	05
18″	06
20″	41
22″	42

IC 4900SF, 4900EX, CONSTELLATION, LOWMAXX, HERITAGE

YEARS 1989-2007 AND SIMILAR CHASSIS. NOTE LETTERS 'IC' IN PART NUMBER.

24.25″

IC-2010-02

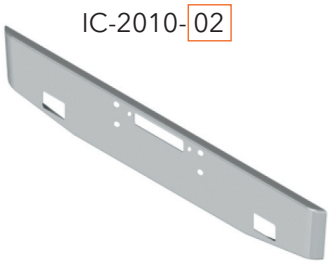

IC-2000-02

IC-2010-06

IC-0010-02

IC-0000-02

IH 4900SF YEARS 2008 & NEWER

NOT AVAILABLE IN 12″ WIDTH. NOTE LETTERS 'IH' IN PART NUMBER.

44″

IH-2110-06

IH-0010-06

IH-0110-06

IH-0010-06

IH-2010-06

IH-0000-06

IM 4700SF YEARS 2008 & NEWER

NOT AVAILABLE IN 12″ WIDTH. NOTE LETTERS 'IM' IN PART NUMBER.

44″

IM-2110-06

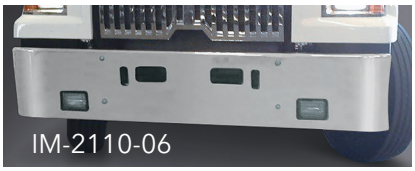

IM-2110-06

IM-2100-06

IM-0110-06

IM-2010-06

IM-0100-06

WESTERN STAR BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
14″	44
16″	45
18″	46
*20″	47
*22″	48

* No warranty for 20″ or 22″ wide bumpers

4900SA YEARS 1989-2007
NOTE LETTERS 'II' IN PART NUMBER

II

II-2010-44

II-0010-44

II-2000-44

II-0000-44

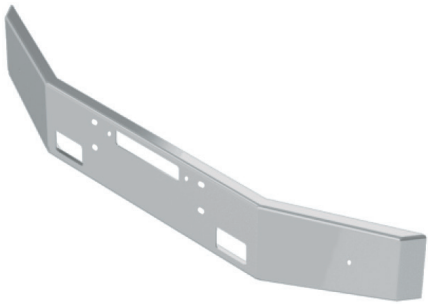

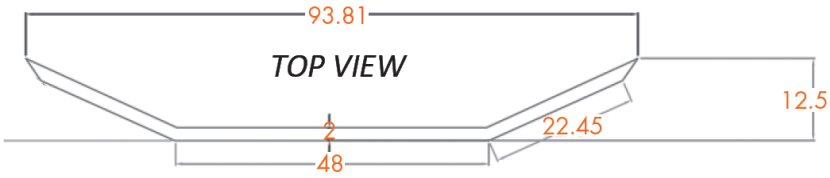

4900SA YEARS 2008 & NEWER
NOTE LETTERS 'IJ' IN PART NUMBER
ALSO CHECK 'IK' AND 'IL' SERIES PRIOR TO ORDERING

IJ

IJ-2010-44

IJ-0010-44

IJ-2000-44

IJ-0000-44

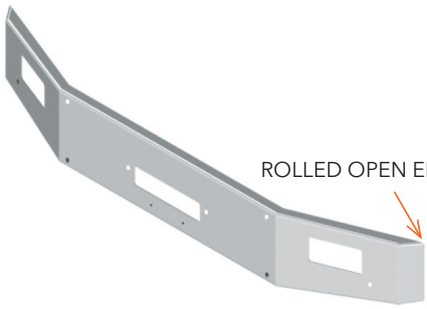

WESTERN STAR BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

IK, IL

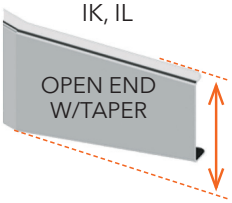

Width	End Style Code
14″	44
16″	45
18″	46
*20″	47
*22″	48

IN

Width	End Style Code
14″	15
16″	16
18″	17

* No warranty for 20″ or 22″ wide bumpers

IK

4900SA YEARS 2008 & NEWER
NOTE LETTERS 'IK' IN PART NUMBER
ALSO CHECK 'IJ' AND 'IL' SERIES PRIOR TO ORDERING

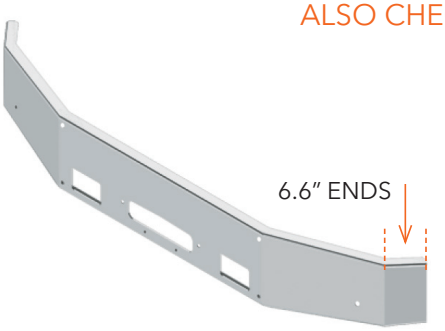

IK-2010-44



IK-0010-44

IK-2000-44

IK-0000-44

IL

4900SA YEARS 2008 & NEWER
NOTE LETTERS 'IL' IN PART NUMBER
ALSO CHECK 'IJ' AND 'IK' SERIES PRIOR TO ORDERING

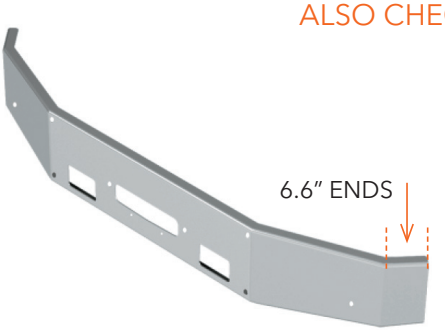

IL-2010-44



IL-0010-44

IL-2000-44

IL-0000-44

IN

4700SB YEARS 2013 & NEWER
NOTE LETTERS 'IN' IN PART NUMBER

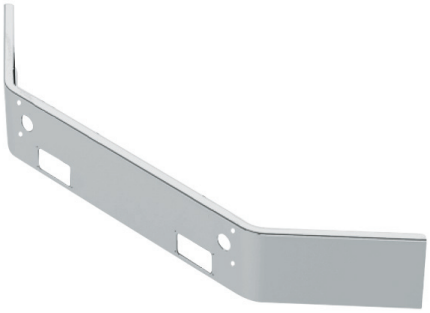

IN-2010-15

IN-0010-15

IN-0000-15

IN-0010-15

WESTERN STAR BUMPERS

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
16″	708
18″	709
*20″	711



* No warranty for 20″ wide bumpers

5700XE YEARS 2015 & NEWER — IO

ONLY FITS STANDARD WIDTH FRAMES WITH ~1400 SQ. INCH RADIATORS
MOUNTING BRACKETS AND TOP FLANGE STAINLESS EXTENSIONS INCLUDED
NOTE LETTERS 'IO' IN PART NUMBER

IO-5010-708 -V5
Fogs, tow pins, radar accommodation

IO-5000- 708 -V5
Fogs, radar accommodation

IO-0010- 708 -V5
Tow pins, radar accommodation

IO-0000- 708 -V5
Radar accommodation only

IO-0010-708
Tow pin holes

IO-0000-708
Mounting holes only





AVAILABLE STYLES FOR PRODUCTS IN THIS SECTION:

IR, IS

Width	End Style Code
14'	
16″	45
18″	46
*20″	47
*22″	48

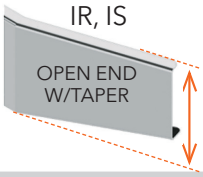

IQ, IT



Width	End Style Code
16″	05
18″	06
20″	41
22″	42

* No warranty for 20″ or 22″ wide bumpers

IQ, IT

Width	End Style Code
12″	01
16″	02
18″	03
20″	31
22″	32

47X SET FORWARD AXLE YEARS 2022-NEWER — IQ

IQ-0010-02

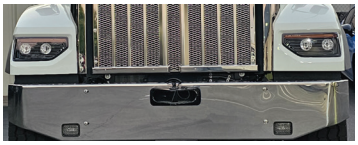



IQ-5210-02



IQ-0030-02

IQ-5330-02

49X SETBACK AXLE SD YEARS 2021-NEWER — IR

Only (-45) End Style Mounts to Factory Brackets

IR-0011-45

IR-5112-45

IR-3000-45

IR-3520-45

47X SETBACK AXLE YEARS 2022-NEWER — IS

Only (-45) End Style Mounts to Factory Brackets

IS-5110-45

IS-5030-45

IS-3520-45

IS-0520-45

WESTERN STAR BUMPERS

IT

AVAILABLE STYLES FOR THIS SERIES ALSO ON PREVIOUS PAGE

IQ, IT

Width	End Style Code
16″	92
18″	03
20″	31
22″	32

TAPER HAND FORM

49X SET FORWARD AXLE YEARS 2021-NEWER

* No warranty for 20″ or 22″ wide bumpers

IT

AMERICAN EAGLE BOXED END

WITH 8″ EARS

Width	End Style Code
16″	55
18″	56
20″	57
22″	58

IT-0000-92

IT-5330-92

IT-0220-92

IT-5221-92

AVAILABLE STYLES FOR PRODUCTS IN THIS SECTION:

Width	End Style Code
16″	708
18″	709
*20″	711



* No warranty for 20″ wide bumpers

IP

5700XE YEARS 2015 & NEWER

ONLY FITS WIDER FRAMES WITH HIGH-CAPACITY RADIATOR MOUNTING BRACKETS AND TOP FLANGE STAINLESS EXTENSIONS INCLUDED

NOTE LETTERS 'IP' IN PART NUMBER

IP-0000-708
Mounting holes only

IP-0010-708
With Tow Pin Holes

VALLEY CHROME PLATING

AVAILABLE STYLES FOR PRODUCTS ON THIS PAGE:

KA

Width	End Style Code
16″	02
18″	03
20″	31
22″	32

KA

Width	End Style Code
16″	05
18″	06
20″	41
22″	42

KB

Width	Bumper Length	End Style Code
12″	94″	22
12″	88″	22-88″

KA

ROAD BOSS 2, ROAD COMMANDER 2

YEARS 1972-1983

NOT AVAILABLE IN 12″ WIDTH

KA-1110-02

KA-1100-02

KA-1010-02

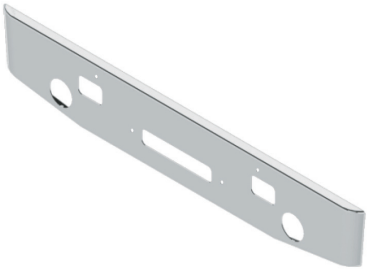

KA-0110-02



KA-1000-02

KA-0100-02

KA-0010-02

KA-0000-02

KB

XPEDITOR YEARS 2003-2010

NOTE OUTSIDE SHAPE & BOLT PATTERN PRIOR TO ORDERING

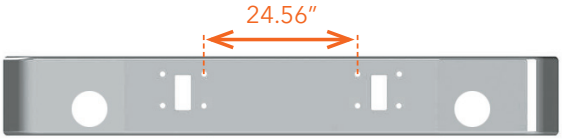

KB-1010-22

KB-0010-22

Add "P" to end of any bumper part number for black powder coated steel

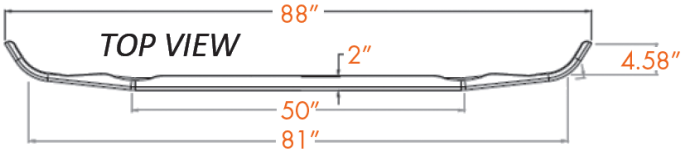

KB-0010-22P

"UNIVERSAL" MOUNT BLANK BUMPERS

EXAMPLE STYLES FOR PRODUCTS ON THIS PAGE:

Width	End Style Code
16″	02
18″	03
20″	31
22″	32

Width	End Style Code
16″	05
18″	06
20″	41
22″	42

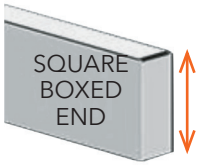

Width	End Style Code
16″	10
18″	11
20″	51
22″	52

Width	End Style Code
16″	112
18″	113
20″	114
22″	115

Width	End Style Code
16″	65
18″	66
20″	67
22″	68

Width	End Style Code
16″	55
18″	56
20″	57
22″	58

SEE MORE BUMPER STYLES ON PAGE 7

MULTIPLE MAKE & MODEL FIT

GO

NOTE LETTERS 'GO' IN PART NUMBER
EXAMPLE PARTS:

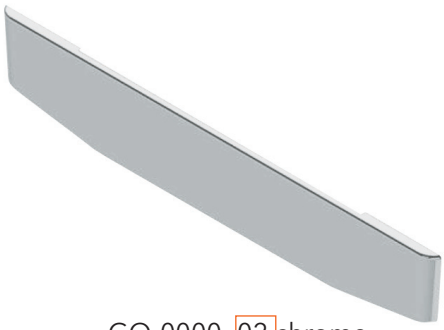

GO-0000- 02 chrome
GO-0000- 02S stainless

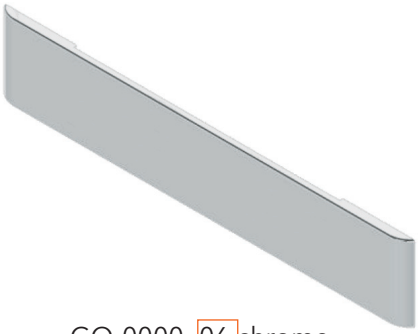

GO-0000- 06 chrome
GO-0000- 06S stainless

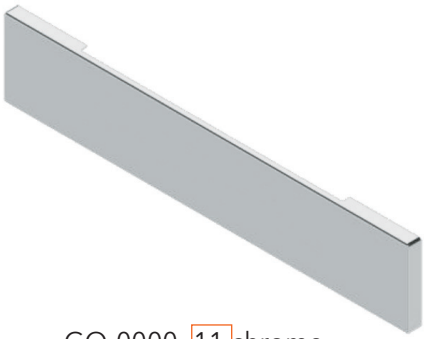

GO-0000- 11 chrome
GO-0000- 11S stainless

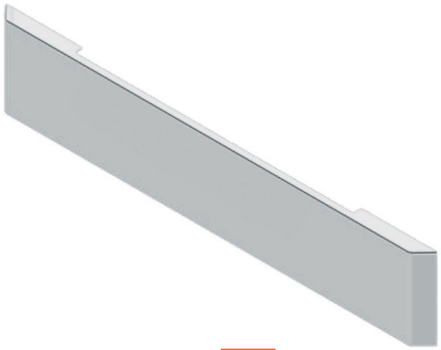

GO-0000- 113 chrome
GO-0000- 113S stainless

GO-0000- 66 chrome
GO-0000- 66S stainless

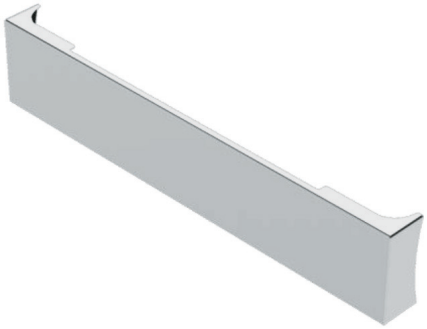

GO-0000- 56 chrome
GO-0000- 56S stainless

NOTE: DRILLING INTO A CHROME BUMPER IMMEDIATELY VOIDS ALL WARRANTIES.
WE RECOMMEND STAINLESS BUMPERS IF PLANNING TO DRILL INTO A BUMPER.

BLIND MOUNT BUMPERS

BLIND MOUNT BRACKETS:

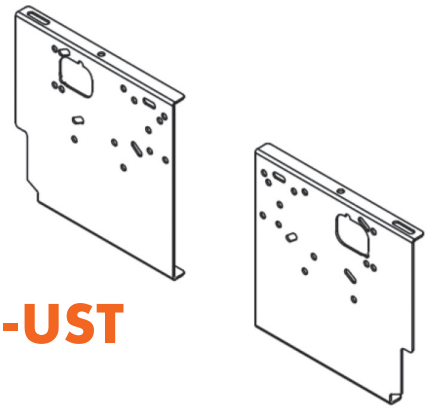

-UST

FITS THESE VALLEY CHROME MODEL CODES:
CB, CQ, FD, FE, HA, HC, GO

UST TOP FLANGE

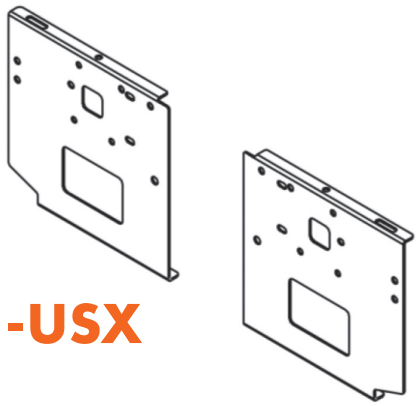

-USX

FITS THESE VALLEY CHROME MODEL CODES:
CU, CV, HC, HV, IC, GO

USX TOP FLANGE

HOW TO CREATE A BLIND MOUNT BUMPER:

1. IDENTIFY YOUR MAKE & MODEL CODE FROM OUR CATALOG (EXAMPLE: PETE 389= 'HV')
2. CHOOSE YOUR CUTOUTS:
   - XXXX = no cutouts/no mounting bolts will show
   - 2XXX = rectangular fog light cutouts only
   - 2X1X = rectangular fog light and tow pin cutouts only
   - XX1X = tow pin cutouts only
   - XX10 = tag hanger bolt holes only ('HC' Peterbilt 379 only)
3. PICK YOUR END STYLE FROM PAGE 7
4. ADD ANY LIGHT OPTION CODES, IF DESIRED (SEE PAGES 89-90)
5. ADD LICENSE PLATE OPTION CODES, IF DESIRED (SEE PAGE 89)
6. APPLY ' UST' OR ' USX' SUFFIX ACCORDING TO BRACKETS SHOWN IN SECTION ABOVE

EXAMPLE: **HV-XXXX-682T-UST**

1 2 3 4

FROM THE ORIGINATORS OF THE BOLTLESS LOOK!

HV- XXXX-682T-UST
on a Pete 389

BUMPER MARKER LIGHT OPTIONS

SOME POPULAR OPTIONS SHOWN
MIX & MATCH YOUR OWN COMBINATIONS
SEE PAGE 106 FOR LED LIGHT OFFERINGS

GRANITE EXAMPLES:

KITS INCLUDE LIGHTS, BEZELS, WIRE HARNESS

-9GCA

-8GCA

-6GCA

-4GCA

-9GA

-8GA

-6GA

GRANITE MINI EXAMPLES:

KITS INCLUDE LIGHTS, BEZELS, WIRE HARNESS

-25GMCA

-20GMCA

-8GMCA

-6GMCA

-25GMA

-20GMA

-8GMA

-6GMA

¾" BULLSEYE EXAMPLES:

KITS INCLUDE LIGHTS, BEZELS, WIRE HARNESS

-74BYCA

-46BYCA

-20BYCA

-6BYCA

-74BYA

-25BYA

-15BYA

-2BYA

'FRENCHED' INSET LICENSE PLATE BOX:

-FL01

STANDARD LICENSE PLATE HOLES:

-L01

-L02

TOP TWO LICENSE PLATE HOLES:

-L2

PLACEMENT DEPENDS ON BUMPER DESIGN

BUMPER MARKER LIGHT OPTIONS

SOME POPULAR OPTIONS SHOWN
MIX & MATCH YOUR OWN COMBINATIONS
SEE PAGES 106 FOR LED LIGHT OFFERINGS

OVAL LIGHT HOLE EXAMPLES:

LIGHT HOLE CUTOUTS ONLY

-009
(-011 MAX FOR BOXED END)

-008

-004

-002

SLOTTED RECESSED OVAL EXAMPLES:

LIGHT HOLE CUTOUTS ONLY

-BB9
-BB_ FOR SLOT HOLES ONLY, ADD YOUR OWN LIGHTS

-BB8

-BB6

-BB2

2" ROUND EXAMPLES:

LIGHT HOLE CUTOUTS ONLY

-R27

-R15

-R4

-R2

¾" LIGHT HOLE EXAMPLES:

LIGHT HOLE CUTOUTS ONLY

-25BYN

-2BYN

SLOTTED RECESSED OVAL EXAMPLES:

INCLUDES LIGHTS, 3M TAPE, WIRE HARNESS

-9SCA
CLEAR LENS/AMBER LEDs

-9SA
AMBER LENS/AMBER LEDs

4" ROUND EXAMPLES:

LIGHT HOLE CUTOUTS ONLY

-R13C

-R2C

WATERMELON EXAMPLES:

LIGHT HOLE CUTOUTS ONLY

-W4

-B1W
WATERMELON HOLES ON ANGLED ENDS
45° MITRED END ROADRUNNER BUMPER

BOXED END EXAMPLES:

LIGHT HOLE CUTOUTS ONLY

-B1L
5/8" HOLE

-B1
2" HOLE

-B1GM
GRANITE MINI

-B1BY
3/4" HOLE

-B5
2" HOLES
MAX ON -51

-B4GM
GRANITE MINI

COMBO PATTERN EXAMPLES:

LIGHT HOLE CUTOUTS ONLY

-A06-R8

-R2C-004

COMBO LIGHT NUMBERING PATTERN GOES FROM OUTSIDE OF BUMPER TO CENTER

BUMPER LASER-CUT TEXT OPTIONS

TEXT 1

TEXT 8

TEXT 2

TEXT 9

TEXT 3

TEXT 10

TEXT 4

TEXT 11

TEXT 5

TEXT 12

TEXT 6

TEXT 13

TEXT 7

TEXT 14

LIGHT BOXES TO MOUNT BEHIND YOUR GRAPHIC

LX-24 MOUNTED BEHIND DUPONT LOGO
- ACTUAL NASCAR HAULER -

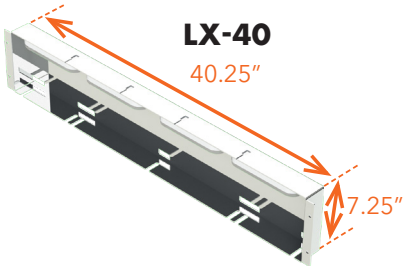

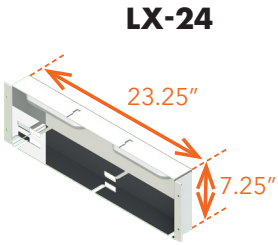

BUMPER MOUNTING BOLT KITS

'UNIVERSAL' HEX BOLT SERIES

PACKAGED FOR RETAIL
POLISHED STAINLESS STEEL BOLTS
SIZE: #12 - 1.75 x 50 PARTIAL THREAD
ZINC PLATED WASHERS AND LOCKNUTS
WHITE NYLON WASHERS PROTECT CHROME SURFACE AFTER INSTALLATION

VU190082 SHOWN PACKAGED

VU190080
4 PCS KIT

VU190081
6 PCS KIT

VU190082
8 PCS KIT

VU190085
NYLON WASHERS 25-PACK

PACCAR SERIES

PACKAGED FOR RETAIL
FITS PETERBILT 389 & KENWORTH W990 & SIMILAR CHASSIS
ZINC PLATED WASHERS AND LOCKNUTS
WHITE NYLON WASHERS PROTECT CHROME

VP190083

NOTES

UNIVERSAL ACCESSORIES SECTION

LED LIGHTING AND STAINLESS PARTS TO FIT MOST TRUCK MAKES

VALLEY CHROME PLATING

UNIVERSAL

FLAP WEIGHTS

WEIGHTS INCLUDE MOUNTING HARDWARE
EACH SOLD AS A PAIR

VU190000
UNIVERSAL FLAP WEIGHT
24" - BOTTOM - ANY MAKE
- 11GA. STAINLESS - GIRLS

VU190001
UNIVERSAL FLAP WEIGHT
24" - BOTTOM - ANY MAKE
- 11GA. STAINLESS

VU190002
UNIVERSAL FLAP WEIGHT
24" TOP - ANY MAKE
- 11GA. STAINLESS

VU190003
UNIVERSAL FLAP WEIGHT
- 24"- U SHAPED BOTTOM
- 11GA. STAINLESS

VU190102
UNIVERSAL FLAP WEIGHT
- 24" - BOTTOM - ANY MAKE
- 11GA. STAINLESS - STEER HEAD

VU190109
UNIVERSAL FLAP WEIGHT
- 24"- U SHAPED BOTTOM
- 11GA. STAINLESS - STEER HEAD

TANK STRAPS

VU190005
9.75" AIR TANK BANDS
(PB, KW, FL) - PAIR

VU190061
AIR TANK WRAP - FITS 9.75"
STAINLESS AIR TANK - 1 PC
COVER ONLY

VU190006
8.25" AIR TANK BANDS
(PB, KW, FL) - PAIR

TAG HANGERS

EACH INCLUDE MOUNTING HARDWARE,
FOAM PROTECTORS & TAG MOUNTING PLASTIC INSERTS

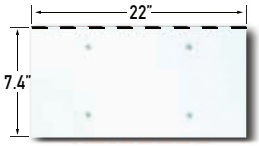

VP120000
HINGED 1 TAG HANGER
18 GA. STAINLESS
PETE 389

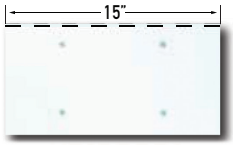

VP120001
HINGED 1 TAG HANGER
18 GA. STAINLESS
PETE 379 & SIMILAR

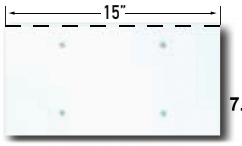

VP120017
HINGED 1 TAG HANGER
24 GA. STAINLESS
PETE 379 & SIMILAR



VU190007
HINGED 2 TAG HANGER (PB, KW, FL)

VU190035-2W
SINGLE TAGE HANGER
W/2 WATERMELON CUTOUTS

VU190035
TAG HANGER - SINGLE
TAG - 90 DEGREE
MOUNTS UNDER

VU190036
TAG HANGER - SINGLE
2 TAG - 90 DEGREE
MOUNTS UNDER

VU190037
TAG HANGER - SINGLE
3 TAG - 90 DEGREE
MOUNTS UNDER

VU190008
HINGED 3 TAG HANGER (PB, KW, FL)

TAG HANGERS WITH WATERMELONS INSTALLED

VU120001-2WA
SINGLE TAG HANGER
W/2 AMBER WATERMELONS

VU190007-2WA
DUAL TAG HANGER
W/2 AMBER WATERMELONS

VU190008-2WA
TRIPLE TAG HANGER
W/2 AMBER WATERMELONS

UNIVERSAL

PERMIT PANELS

HINGED PANELS
INCLUDES MOUNTING HARDWARE

VU190090
HINGED PERMIT PANEL
4 X 4

VU190091
HINGED PERMIT PANEL
4 X 8

VU190092
HINGED PERMIT PANEL
4 X 10

VU190093
HINGED PERMIT PANEL
4 X 12

VU190094
HINGED PERMIT PANEL
5 X 4

VU190095
HINGED PERMIT PANEL
5 X 8

VU190096
HINGED PERMIT PANEL
5 X 10

VU190097
HINGED PERMIT PANEL
5 X 12

FLAT PANELS
INCLUDE STRONG 3M DOUBLE SIDED TAPE

VU190098
FLAT PERMIT PANEL
4 X 4 - TAPE MOUNT

VU190099
FLAT PERMIT PANEL
4 X 8 - TAPE MOUNT

VU190103
FLAT PERMIT PANEL
4 X 10 - TAPE MOUNT

VU190104
FLAT PERMIT PANEL
4 X 12 - TAPE MOUNT

VU190105
FLAT PERMIT PANEL
5 X 4 - TAPE MOUNT

VU190106
FLAT PERMIT PANEL
5 X 8 - TAPE MOUNT

VU190107
FLAT PERMIT PANEL
5 X 10 - TAPE MOUNT

VU190108
FLAT PERMIT PANEL
5 X 12 - TAPE MOUNT

UNIVERSAL

RIDGED PERMIT PANELS

90-DEGREE BEND AT TOP, NO-HINGE
INCLUDES MOUNTING HARDWARE
CUSTOMER DRILLS TO FIT

VU190110
RIDGED PERMIT PANEL
4 X 4

VU190111
RIDGED PERMIT PANEL
4 X 8

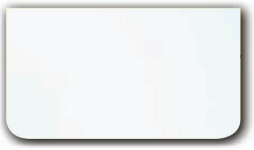

VU190112
RIDGED PERMIT PANEL
4 X 10

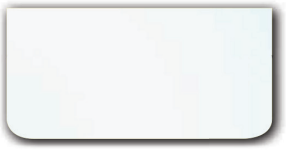

VU190113
RIDGED PERMIT PANEL
4 X 12

VU190114
RIDGED PERMIT PANEL
5 X 4

VU190115
RIDGED PERMIT PANEL
5 X 8

VU190116
RIDGED PERMIT PANEL
5 X 10

VU190117
RIDGED PERMIT PANEL
5 X 12

BEACON LIGHT BRACKETS

INCLUDES MOUNTING HARDWARE

VU190100
BECON LIGHT BRACKET
8" X 8" - PR

UNIVERSAL
AIRLINE BOXES

MOUNTING HARDWARE INCLUDED
AIR LINE BOXES ARE 32" LONG - CLOSED BACK
NOT AVAILABLE IN 430 STAINLESS

VU190015
AIR LINE BOX - STANDARD

VU190016R
AIR LINE BOX - 2-PLUG

VU190015R
AIR LINE BOX - STANDARD - ROUNDED

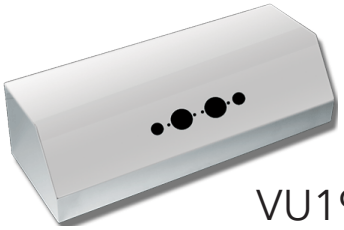

VU190016R
AIR LINE BOX - 2-PLUG - ROUNDED

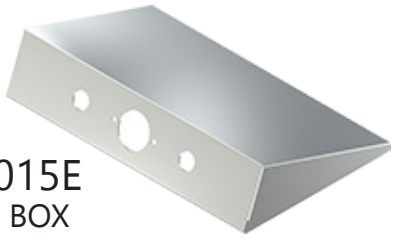

VU190015E
AIR LINE BOX

VU190015D
AIR LINE BOX - RECESSED

TO BUILD A LIGHT BOX

1. PICK BLANK PART NUMBER
2. PICK LIGHT TYPE (REFER TO PAGE 106-107)
3. PICK THE NUMBER OF LIGHTS

EXAMPLE: VU190016R-2CA

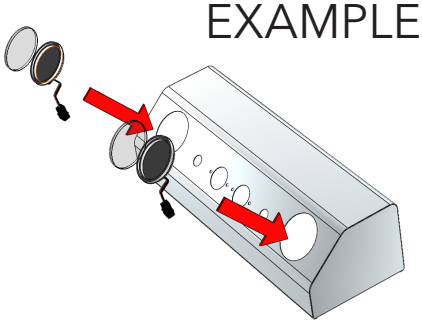

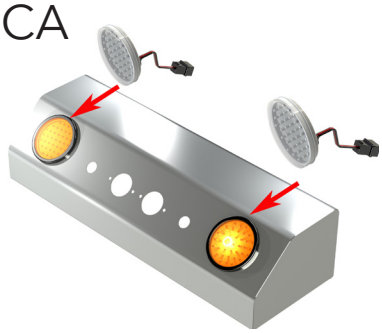

UNIVERSAL
DECK PLATES

VU190017
DECK PLATE - 36" X 34" - SMOOTH
STAINLESS - OVER FRAME RAILS

VU190018
DECK PLATE - 48" X 34" - SMOOTH
STAINLESS - OVER FRAME RAILS

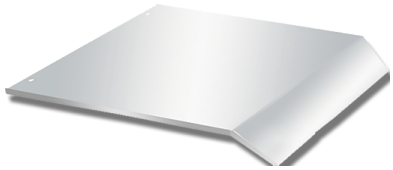

VU190017
REAR DECK PLATE - 29" X 34" - SMOOTH
ROLLED EDGES - OVER FRAME RAILS

VU192010
FRONT DECK PLATE - 83" X 27"
11G, SS - BETWEEN FRAME RAILS

VU192011
MID DECK PLATE - 44" X 27"
11G, SS - BETWEEN FRAME RAILS

VU192012
REAR DECK PLATE - 48" X 27"
11G, SS - BETWEEN FRAME RAILS

VU192022
MID DECK PLATE - 77" X 27"
11G, SS - BETWEEN FRAME RAILS

FRONT DECK PLATE TOOL BOX

VU192021
UNIVERSAL FRONT DECK PLATE TOOL BOX W/LOCK - 24" X 24"

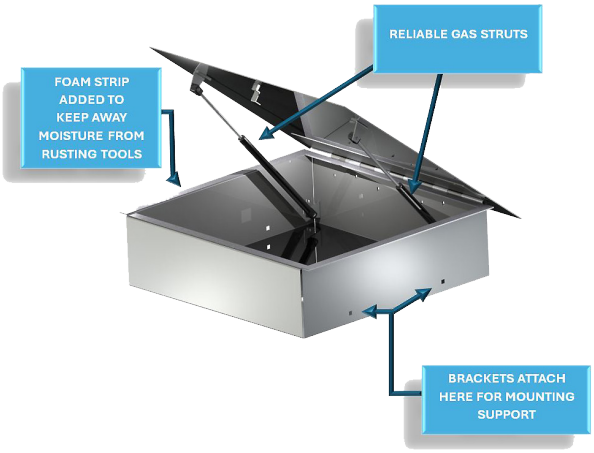

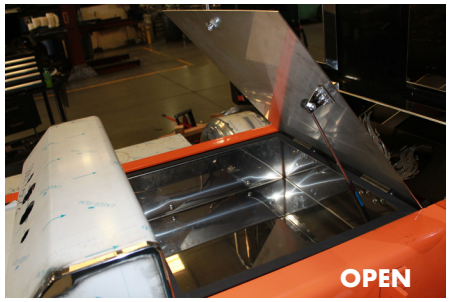

UNIVERSAL

REAR FRAME TOOL BOX

VP150119

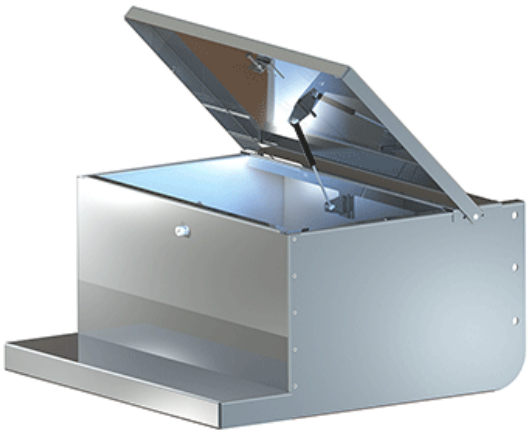

- Highly polished 304 non-directional stainless steel
- All makes fit, anywhere frame space and ground clearance is available
- Lock and keys included
- Direct raised lid with gas shock
- Brackets and hardware not included, fit to your custom location

VALLEY CHROME PLATING

UNIVERSAL
FRAME STEPS

INCLUDES SLIP RESISTANT GRIP TAPE

VU191103
FRAME STEPS - 12"
STAINLESS STEPS & SIDES

VU191104
FRAME STEPS - 18"
STAINLESS STEPS & SIDES

VU191105
FRAME STEPS - 24"
STAINLESS STEPS & SIDES

VU191106
FRAME STEPS - 12"
ALUMINUM STEPS & SIDES

VU191107
FRAME STEPS - 18"
ALUMINUM STEPS & SIDES

VU191108
FRAME STEPS - 24"
ALUMINUM STEPS & SIDES

MADE IN THE USA

UNIVERSAL

REAR WINDOW VISORS

NOT AVAILABLE ON DAYCAB

INCLUDES STRONG 3M DOUBLE-SIDED TAPE AND MOUNTING HARDWARE

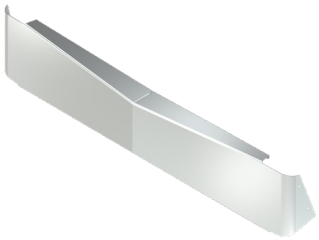

VU193020-BT
REAR VISOR GANGSTER-BOWTIE

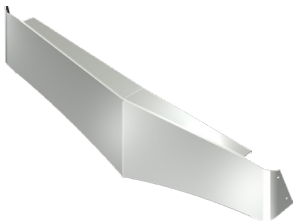

VU195020
REAR VISOR WICKED - ONE-PIECE

VU193020
REAR VISOR GANGSTER

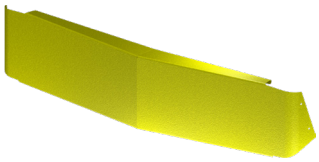

EXAMPLE
VU193020P
REAR VISOR GANGSTER

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE
RAW18 GAUGE STEEL
COLORS SHOWN EXAMPLES ONLY

EXAMPLE
VU193020P-BT
REAR VISOR - GANGSTER BOWTIE

REAR FRAME FILLERS

BOXES COME WITH VU190201 BACK COVER

18-GAUGE STAINLESS STEEL MOUNTING HARDWARE INCLUDED

VU190203
REAR FRAME FILLER
2, 4" RND LEDS & 3, GRANITE RED LEDS

VU190202
REAR FRAME FILLER
4, 4" RND LEDS

VU190203
REAR FRAME FILLER
4, 4" RND LEDS & 5, 2" RND

VU190204
REAR FRAME FILLER
12, 2" RND LEDS

VU190201
REAR FRAME FILLER
BACK COVER

VU190207
REAR FRAME FILLER
4, 4" RND LEDS & 5, 2" RND LEDS, W/STEERHEAD

BLANK BOXES AVAILABLE
(VU19200)

UNIVERSAL

REAR FRAME FILLERS

NOT AVAILABLE ON DAYCAB

INCLUDES STRONG 3M DOUBLE-SIDED TAPE AND MOUNTING HARDWARE

VU190208
REAR FRAME FILLER - 2 - 4" RD / 3 - GRANITE- LEDS - W / STEERHEAD

VU190209
REAR FRAME FILLER - 4 - 4" RD - LEDS - CLEAR LENS / EACH CORNER

VU190210
REAR FRAME FILLER - 4 - 4" RD / 5 - 2" RD - LEDS - CLEAR LENS



VU190211
REAR FRAME FILLER - 12 - 2" RD - LEDS - CLEAR LENS / OVAL

VU190212
REAR FRAME FILLER - 2 - 4" RD / 8 - 2" RD - LEDS - CLEAR LENS

VU190213
REAR FRAME FILLER - 2 - 4" RD / 3 - GRANITE - LEDS - CLEAR LENS

VU190214
REAR FRAME FILLER - 4 -4" RD / 5 - 2" RD - LEDS - CLEAR LENS - W / STEERHEAD

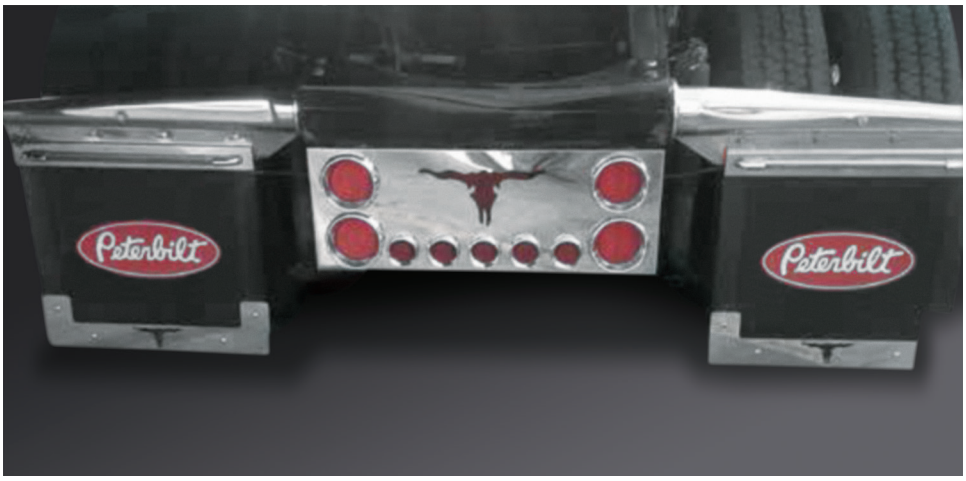

VU190214-4CR-5RR
(chrome light bezels not included)

Mud flap weights VU190109 also shown

UNIVERSAL

LOWER REAR FRAME FILLERS

VU199002
LOWER REAR FRAME FILLER - BLANK

VU199005
LOWER REAR FRAME FILLER - 379 - BLANK

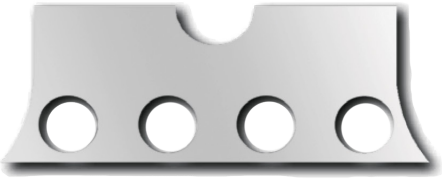

VU199002-4CN
LOWER REAR FRAME FILLER - 4 ROUND CUTOUTS

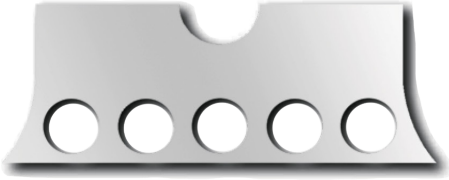

VU199002-5CN
LOWER REAR FRAME FILLER - 5 ROUND CUTOUTS

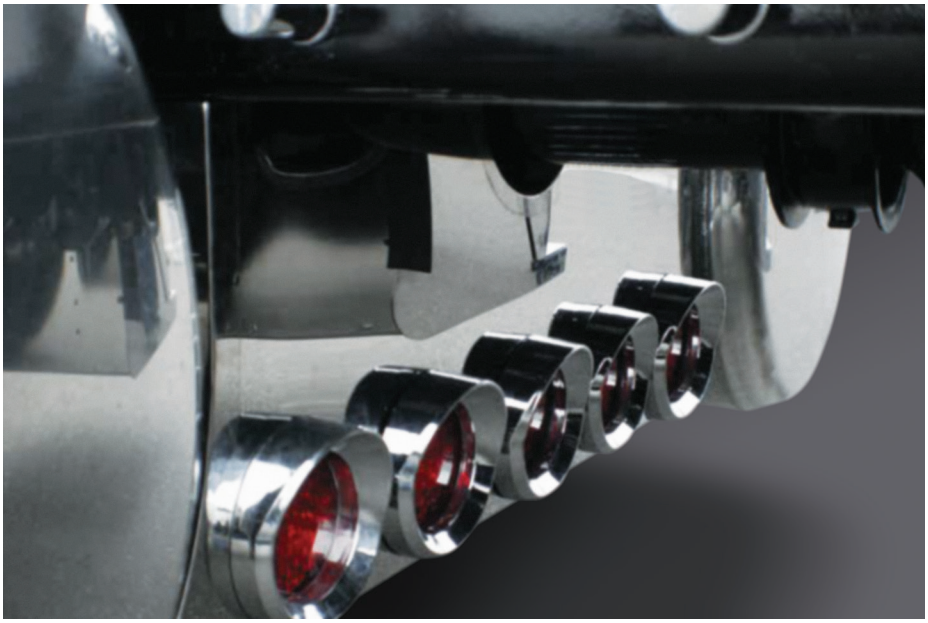

VU199002-5CR shown, includes lights and harness
CHROME LIGHT BEZELS NOT INCLUDED
WILL NOT WORK ON ALUMINUM FRAMES

UNIVERSAL

RETAIL DISPLAY - LEDs

For authorized distributors

2 PACKAGES AVAILABLE:
PART# VULIGHTKIT3 FOR 12 OF EACH LIGHT AND DISPLAY BOARD
PART# VULIGHTKIT4 FOR 24 OF EACH LIGHT AND DISPLAY BOARD

Actual light display board may vary from illustration above.

VALLEY CHROME PLATING

UNIVERSAL

LED LIGHT OPTION CHART

Use the following light chart to build your rear light bars, cab and sleeper panels, hood extension panels, and so on. Use the first letter in the name of the light and the form you wish the light to be.

Solid Accessory Part Number	Dash	Amount of Lights	Lights name - 1st letter	Lights Color		Complete Part Number with Lights
Vxxxxxxx	-	X	X	X	=	Vxxxxxxx-XXX
VP142007	-	7	G	CA	=	VP142007-7GCA

EXAMPLE:

VP142007-7GCA

Peterbilt 379 cab panel VP142007, with seven Granite clear lens amber LED light assemblies & wire harness

LIGHT OFFERINGS WITH LETTER AND LIGHT COLOR CODES:

OVAL 6"

Amber lens, Amber LEDs = O A
Clear lens, Amber LEDs = O CA
Red lens, Red LEDs = O R
Clear lens, Red LEDs = O CR

GRANITE

Amber lens, Amber LEDs = G A
Clear lens, Amber LEDs = G CA
Red lens, Red LEDs = G R
Clear lens, Red LEDs = G CR

GRANITE MINI

Amber lens, Amber LEDs = GM A
Clear lens, Amber LEDs = GM CA
Red lens, Red LEDs = GM R
Clear lens, Red LEDs = GM CR

ROUND 2"

Amber lens, Amber LEDs = R A
Clear lens, Amber LEDs = R CA
Red lens, Red LEDs = R R
Clear lens, Red LEDs = R CR

CORAL 4" ROUND

Amber lens, Amber LEDs = C A
Clear lens, Amber LEDs = C CA
Red lens, Red LEDs = C R
Clear lens, Red LEDs = C CR

BULLSEYE ¾" ROUND

Amber lens, Amber LEDs = BY A
Clear lens, Amber LEDs = BY CA
Red lens, Red LEDs = BY R
Clear lens, Red LEDs = BY CR

UNIVERSAL

BLANK LIGHT CUTOUT OPTIONS

Add your own lights to our accessories, but first get the correct cutouts:

Solid Accessory Part Number	Dash	Amount of Lights	Lights name - 1st letter	Lights Color		Complete Part Number with Lights
Vxxxxxxx	-	X	X	X	=	Vxxxxxxx-XXX
VP142007	-	10	BY	N	=	VP142007-10BYN

EXAMPLE:

VP142007-10BYN

Peterbilt 379 cab panel VP142007, with ten open ¾" light holes

CUTOUT CODES:



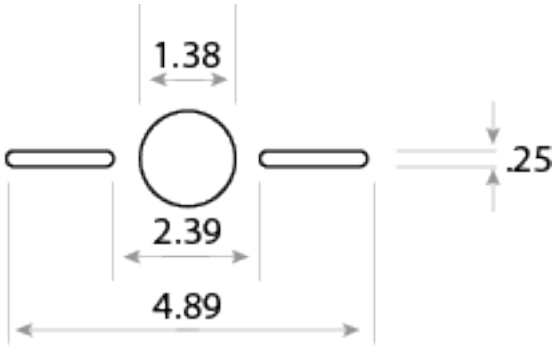

UNIVERSAL/COMBO

Fits a variety of lights on the market.
See cutout dimensions shown to the right.

SN

OVAL SLOTTED

Mount your 6" oval light with double-sided tape behind the cutout

RN

2" ROUND

BYN

¾ " ROUND

"N" LIGHT COLOR INDICATES NO LIGHTS/OPEN CUTOUT

UNIVERSAL
LED LIGHTS

3-YEAR WARRANTY

VU-860L

2" Round

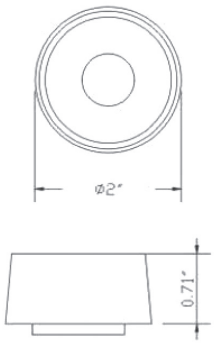

VU-860L-A shown

- 9 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes a rubber grommet when ordered as a kit with bumper or accessory

Part Numbers	Lens Color	LED Color
VU-860L-A	Amber	Amber
VU-860L-CA	Clear	Amber
VU-860L-R	Red	Red
VU-860L-CR	Clear	Red

3-YEAR WARRANTY

VU-924-1L

4" ROUND "CORAL"

- 40 LEDs
- IP67 Rated
- 12 volt or 24 volt
- Chrome reflector for brilliant light emission
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes a rubber grommet when ordered as a kit with bumper or accessory

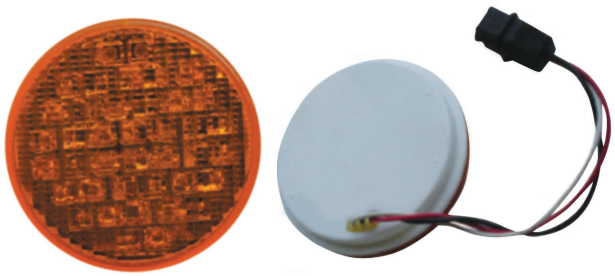

VU-924-1L-A shown

Part Numbers	Lens Color	LED Color
VU-924-1L-A	Amber	Amber
VU-924-1L-CA	Clear	Amber
VU-924-1L-R	Red	Red
VU-924-1L-CR	Clear	Red
VU-924-1L-CW	Clear	White

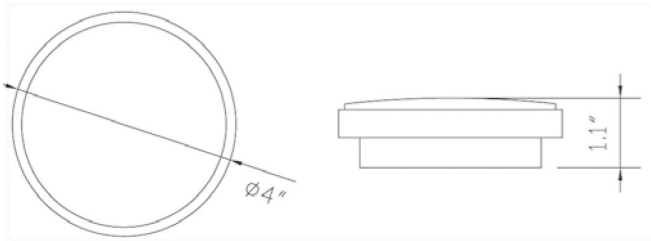

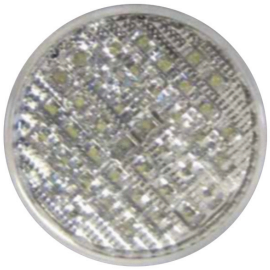

VU-924-1L-CW shown

UNIVERSAL

SIGNATURE MARKER LIGHTS

3-YEAR WARRANTY

VU-1080L
GRANITE

VU-1080L-A shown

Part Numbers	Lens Color	LED Color
VU-1080L-A	Amber	Amber
VU-1080L-CA	Clear	Amber
VU-1080L-R	Red	Red
VU-1080L-CR	Clear	Red

- 6 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel

VU-7160L
GRANITE MINI

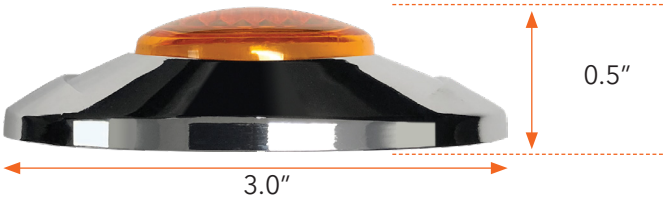

VU-7160L-A shown

3-YEAR WARRANTY

Part Numbers	Lens Color	LED Color
VU-7160L-A	Amber	Amber
VU--7160L-CA	Clear	Amber
VU--7160L-R	Red	Red
VU--7160L-CR	Clear	Red

- 3 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel

UNIVERSAL

SIGNATURE MARKER LIGHTS

3-YEAR WARRANTY

VU-1094L

GRANITE SLIM

Part Numbers	Lens Color	LED Color
VU-1094L-A	Amber	Amber
VU-1094L-CA	Clear	Amber
VU-1094L-R	Red	Red
VU-1094L-CR	Clear	Red

- 3 LEDs
- 12 volt
- Sonically sealed polycarbonate leans & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel
- IP67 rated

GRANITE COLLECTION COUNTERTOP DISPLAYS AVAILABLE

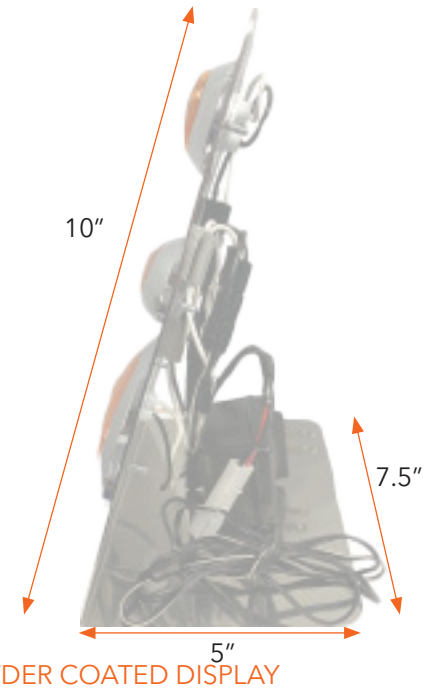

VU-LDG3-BK FOR BLACK POWDER COATED DISPLAY

VU-LDG3-SS FOR POLISHED STAINLESS STEEL DISPLAY

UNIVERSAL

LED LIGHTS

3-YEAR WARRANTY

VU-998-1L

¾″ ROUND "BULLSEYE"

- 3 LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel

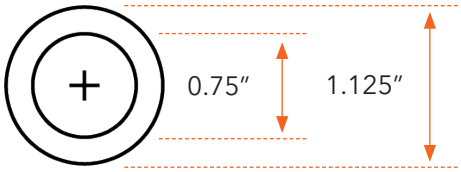

VU-998-1L-CA shown

Part Numbers	Lens Color	LED Color
VU-998-1L-A	Amber	Amber
VU-998-1L-CA	Clear	Amber
VU-998-1L-R	Red	Red
VU-998-1L-CR	Clear	Red

3-YEAR WARRANTY

VU-968-1L

6″ OVAL

- 21 Super LEDs
- IP67 Rated
- 12 volt
- Chrome reflector for brilliant light emission
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes an ABS plastic snap-ring and rubber grommet when ordered as a kit with bumper or accessory

Part Numbers	Lens Color	LED Color
VU-968-1L-A	Amber	Amber
VU-968-1L-CA	Clear	Amber
VU-968-1L-R	Red	Red
VU-968-1L-CR	Clear	Red
VU-968-1L-CW	Clear	White

VU-968-1L-R shown

(rear view)

VU-968-1L-A shown with ABS snap ring

VU-968-1L-CW shown

Dimensions with grommet:

UNIVERSAL

LED LIGHTS

3-YEAR WARRANTY

VU-949-1L-A shown

VU-949-1L

"TORPEDO" CAB MARKER

- 19 LEDs
- IP67 Rated
- 12 volt
- Chrome reflector for brilliant light emission
- Bright chrome outer housing
- Rubber mounting pad
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel

Part Numbers	Lens Color	LED Color
VU-949-1L-A	Amber	Amber
VU-949-1L-CA	Clear	Amber

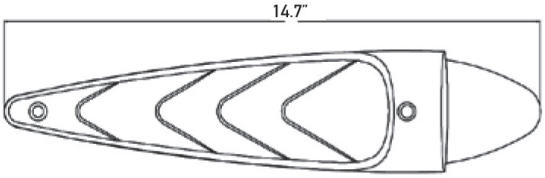

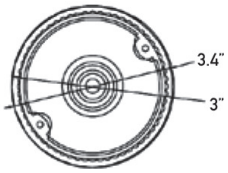

VU-855L-A shown

VU-855L

VINTAGE CAB MARKER

3-YEAR WARRANTY

- 36 LEDs
- IP67 Rated
- 12 volt
- Bright chrome outer housing
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light
- Includes chrome bezel

Part Numbers	Lens Color	LED Color
VU-855L-A	Amber	Amber
VU-855L-CA	Clear	Amber

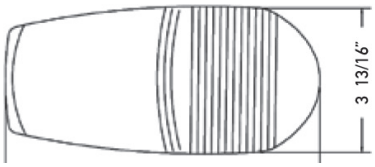

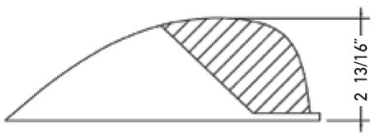

UNIVERSAL

3-YEAR WARRANTY

PETE TURN/PARK/CLEARANCE LIGHT

VU-951L

6″ x 5″ CLEARANCE

VU-951L-A shown

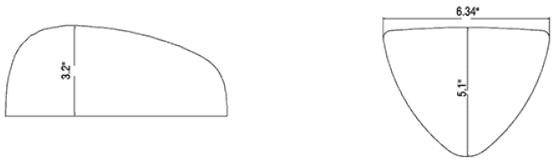

- 31 Super LEDs
- IP67 Rated
- 12 volt
- Sonically sealed polycarbonate lens & housing
- Epoxy encapsulated electronics and sealed wire entry prevent dirt and moisture from entering the light

Part Numbers	Lens Color	LED Color
VU-951L-A	Amber	Amber
VU-951L-CA	Clear	Amber

WATERMELON LIGHTS

Amber (VU-1110L-A)

Blue (VU-1110L-B)

Purple (VU-1110L-P)

Red (VU-1110L-R)

Clear (VU-1110L-C)

Green (VU-1110L-G)

UNIVERSAL
WATERMELON LIGHT BRACKETS

1-YEAR WARRANTY

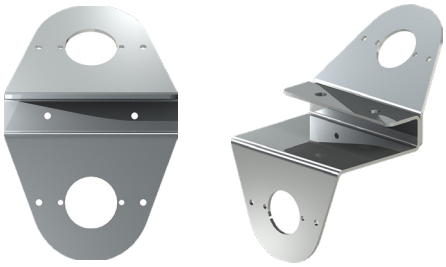

VU190123
DUAL WATERMELON FRAME BRACKET
CUTOUTS ONLY

VWM007
DUAL WATERMELON INTERIOR BRACKET
W/SWITCH HOLE (CUTOUTS ONLY)

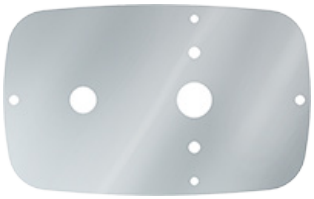

VWM008
SINGLE WATERMELON INTERIOR BRACKET
W/SWITCH HOLE (CUTOUTS ONLY)

VU190120
SINGLE WATERMELON MIRROR BRACKET
CUTOUTS ONLY

VWM011
SINGLE WATERMELON INTERIOR BRACKET
W/SWITCH HOLE (CUTOUTS ONLY)

VWM006
SINGLE WATERMELON INTERIOR BRACKET
W/SWITCH HOLE (CUTOUTS ONLY)

VWM002
SINGLE WATERMELON FRAME BRACKET
CUTOUTS ONLY

VWM014
SINGLE WATERMELON BUMPER BRACKET
UNIVERSAL

VU190129
SINGLE WATERMELON MIRROR BRACKET
UNIVERSAL

VU190121
UNIVERSAL UNDER-FRAME MOUNT
SINGLE WATERMELON LIGHT BRACKET

VU190128
SINGLE WATERMELON FRAME BRACKET
CUTOUTS ONLY

VU190130
DUAL WATERMELON FRAME BRACKET
CUTOUTS ONLY

UNIVERSAL
WATERMELON LIGHT BRACKETS
CONT'D

1-YEAR WARRANTY

VU190127
SINGLE WATERMELON ANGLED FRAME BRACKET
CUTOUTS ONLY

UNIVERSAL
WIRE HARNESSES

VU-877F

FEMALE HARNESS

- 2 female bullets
- 100 ft. length
- Available in 4", 6", 8" or 10" spacing – see part numbers

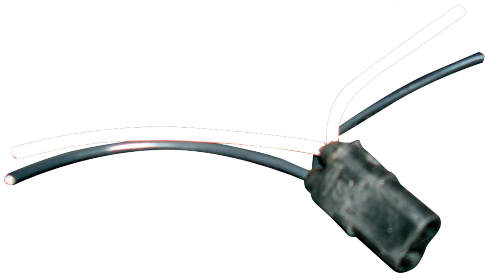

Part Numbers	Bullet spacing
VU-877F-4	4"
VU-877F-6	6"
VU-877F-8	8"
VU-877F-10	10"

VHMS3007

AIR CLEANER LIGHT BOX HARNESS

- See pages 126, 134, 166 for air cleaner light boxes
- One PACCAR female end
- Two PACCAR male ends

STAINLESS ACCESSORIES

MACK ANTHEM

VALLEY CHROME TRUCK PARTS

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

VISORS

VM130001-12
ANTHEM 12" FACTORY REPLACEMENT VISOR

STAINLESS ACCESSORIES

PETERBILT MODEL 359

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

PETERBILT MODEL 359

CAB PANEL 3.5"

MOUNTING HARDWARE INCLUDED

VP110235
PB CAB PANELS - 359 - STANDARD BLANK - PAIR

VP110238
PB CAB PANEL, EXT. PANEL FORMED 359 2PC. STANDARD WRAP BLANK - PAIR

VP110236
PB CAB PANELS - 359 - STANDARD WRAP BLANK - PAIR

VP110236 shown

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

HOOD EXTENSIONS

VP110319
PB - 359 HOOD EXTENSION PANEL - FACTORY

PETERBILT MODEL 359

MISC. TRIM PIECES

VP110023
PB 359 TOP OF DOOR TRIM - LOWERED LOOK - 359

CUSTOM HEIGHTS AVAILABLE

VP110023-P FOR PAINTABLE

VP110027
PB 359 WINDSHIELD WIPER ARM COVERS

VP120113
PB BUG SHIELD - STAINLESS
- 359
MOUNTING HARDWARE INCLUDED

VP120504
PB 359 FENDER SUPPORT
COVER - FRONT - BLANK

RUBBER TRIM AND MOUNTING
HARDWARE INCLUDED

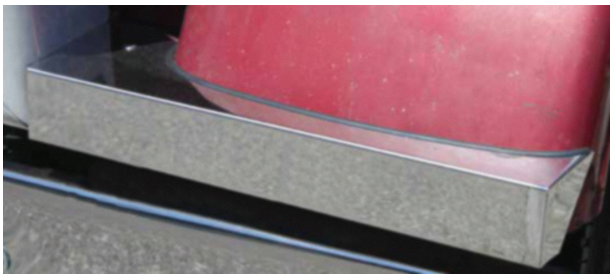

PETERBILT MODEL 359

STANDARD MOUNT STAINLESS VISORS

VP130001
PB - 359 12" DROP VISOR - ANY YEAR 359

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP130001-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

FOR MORE PETE VISORS SEE PAGES 198-201

GANGSTER STAINLESS VISORS

VP132001
PB - 12" GANGSTER VISOR - 359 2 PC

VP132001-BT
PB - 12" GANGSTER BOWTIE VISOR - 359 2 PC

VP132001-BF
PB - 12" GANGSTER BUTTERFLY VISOR - 359 2 PC

VP132001-RBF
PB - 12" GANGSTER VISOR - 359 2 PC, REVERSE BUTTERFLY

VP132001P-RBF
PB - 12" GANGSTER VISOR - 359 - PAINTABLE 2 PC, REVERSE BUTTERFLY

VP132001G-RBF
PB - 12" GANGSTER VISOR - 359 - 1 PC, REVERSE BUTTERFLY

WICKED VISORS

VP135001
PB - 12" WICKED - DROP VISOR - ANY YEAR 359 - 2 PC

PETERBILT MODEL 359
AIR DEFLECTORS

VP110016
PB 359 - 379, 389 WINDOW
AIR DEFLECTORS

VP110031
PB 359 - 379, 389 WINDOW
AIR DEFLECTORS W/LOWER
LOOKS(VP110017)WINDOW
TRIM 37.25" X 20.375"

FUEL TANK STRAP COVERS
BRACKETS & MOUNTING HARDWARE INCLUDED

VP150039
PB 359 - FUEL TANK STRAP
COVERS - 2PCS

MISC. TRIM PIECES

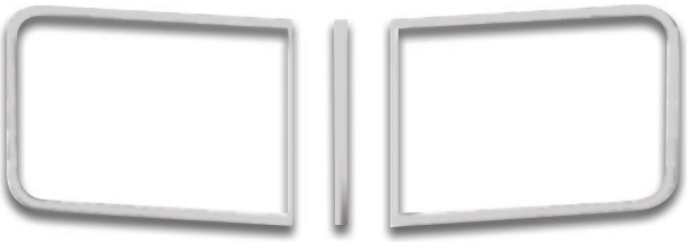

VP110024
PB WINDSHIELD TRIM - 3 PC 359 -
STANDARD - 430 STAINLESS

VP110012
359, 379 DOOR FLAME
TRIM - PAIR

STAINLESS ACCESSORIES

PETERBILT MODELS 365 & 367

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 365 & 367

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

VP110241
PB CAB PANELS - 2005 & NEWER - 367, 365 - BLANK WRAP - SET BACK ONLY

ADD LIGHT OPTIONS TO A PART NUMBER

EXAMPLE
VP110241 - 4 UN

EXAMPLE
VP110241 - 5 RN

EXAMPLE
VP110241 - 4 RA

EXAMPLE
VP110241 - 4 GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

PETERBILT MODEL 365 & 367

SLEEPER PANELS 4"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE

VP142064
PB SLEEPER PANELS - 367, 365 - 36"/44" - BLANK

VP142065
PB SLEEPER PANELS - 367, 365 - 48"/58" - BLANK

VP142066
PB SLEEPER PANELS - 367, 365 - 63"/72" - BLANK

VP142067
PB SLEEPER PANELS - 367, 365 - 70"/78" - BLANK

ADD LIGHT OPTIONS:

EXAMPLE
VP142065 - 5 UN

EXAMPLE
VP142065– 5 RN

EXAMPLE
VP142067 – 8 RA

EXAMPLE
VP142065 – 4 GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

VALLEY CHROME PLATING

PETERBILT MODEL 365 & 367

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

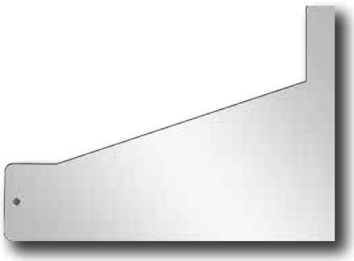

VP142101
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 384, 379, 388, 389 - 63"/72" - BLANK, 365, 367

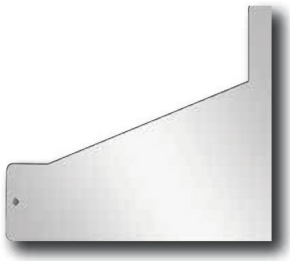

VP142103
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 384, 379, 388, 389 - 70"/78" - BLANK, 365, 367

ADD LIGHT OPTIONS:

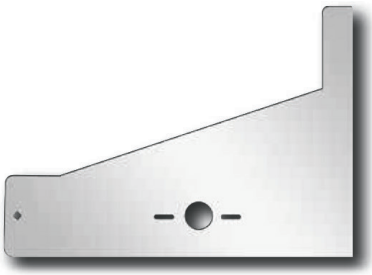

EXAMPLE
VP142101-1UN

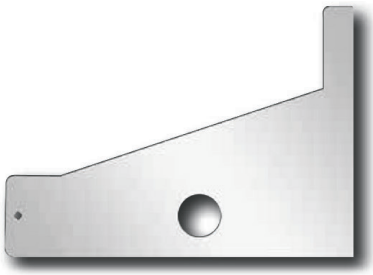

EXAMPLE
VP142101-1RN

EXAMPLE
VP142101-1GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 365 & 367

AIR CLEANER LIGHT BOXES

CONNECTS TO AIR CLEANER STRAP

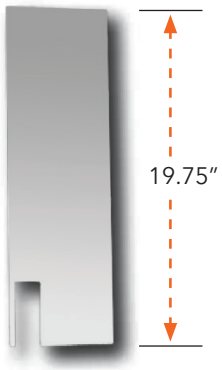

VP112118
PB - AIR CLEANER LIGHTS - BLANK - 367, 365 - 2005 & NEWER - SET BACK AXLE ONLY - PAIR

CUSTOM EXAMPLE:

VP112118-4RA
PB - AIR CLEANER LIGHTS - 4 ROUND AMBERS - 367, 365 - 2005 & NEWER - SET BACK AXLE ONLY - PAIR

Don't Forget the Light Harness:

VHMS3007
1 - PACCAR - FEMALE 2 - PACCAR - MALE - FOR CONNECTING FRONT & REAR AIR CLEANER LIGHTS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

BUG SHIELDS

VP120110
PB BUG SHIELD - STAINLESS - 367, 388, 389

MOUNTING HARDWARE INCLUDED

VALLEY CHROME PLATING

PETERBILT MODELS 379 & 389

1	**VP132002P**	Gangster visor, 12", paintable
2	**VP110018**	Windshield trim kit -large
3	**VP120502**	Front blinker bars (pair) with LEDs Similar: VP120501 for model 379
4	**VP110228**	Cab panels –extended wrap Shown with four slotted light holes (VP110228-4S)
5	**VP110308**	Hood extension panel – wide replacement Shown with three slotted light holes (VP110308-3S)
6	**VP150011R**	Fuel tank fairings (pair), rounded style, 64" long
7	**VP142000**	4" sleeper panels (pair) for 63"/72" sleeper Shown with five slotted light holes (VP142000-5S), 6" wide also available
8	**VP150109R**	Rear tool box with locks, smooth stainless, rounded look
9	**911**	Turbowing for flat top / cabover
10	**HV-XXXX-58-6BB-L01-UST**	Front chrome bumper, boltless, 22" American Eagle, 6 slotted light hole Multiple other stock & custom bumpers available

SEE PAGES 155-177 FOR MODEL 389 ACCESSORIES

PETERBILT MODEL 379

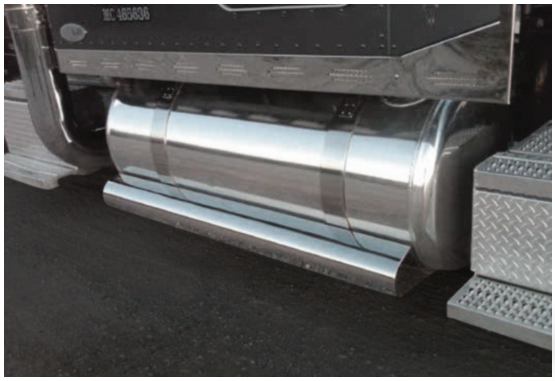

VALLEY CHROME PLATING

PETERBILT MODEL 379
ONE-PIECE CAB/HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VP116401
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 379 - 4" - BLANK

VP116402
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - WRAP -379 - 4" - BLANK

VP116201
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 379 - 6" - BLANK

VP116202
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - WRAP - 379 - 6" - BLANK

PETERBILT MODEL 389
ONE-PIECE CAB/HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VP110368
PB 389, NO DEF, WIDE HOOD PANEL ('08-NEW)

PETERBILT MODEL 379

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

VP110203
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR

VP110207
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR

VP110227
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR

VP110228
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED WRAP- BLANK - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

CAB PANELS 6"

MOUNTING HARDWARE INCLUDED

VP110250
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR

VP110251
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR

VP110254
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED WRAP - BLANK - PAIR

VP110253
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR

ADD LIGHT OPTIONS:

EXAMPLE
VP110207 - 4 UN

EXAMPLE
VP110207 - 5 RN

EXAMPLE
VP110203 - 4 RA

EXAMPLE
VP110203 - 4 GA

PETERBILT MODEL 379

HOOD EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED (excl. VP110310)

VP110300
PB 379 - HOOD EXTENSION PANEL - FACTORY REPLACEMENT

VP110310
PB 379 - HOOD EXTENSION PANEL - FACTORY LAYOVER TAPE MOUNT

VP110301
PB 379 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR

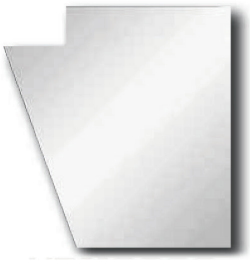

VP110303
PB 379 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

HOOD EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

VP110350
PB 379 - HOOD EXTENSION PANEL - FACTORY REPLACEMENT

VP110352
PB 379 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR

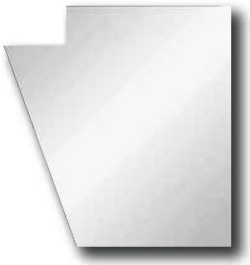

VP110358
PB 379 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - PAIR

ALL NOTCHED HOOD EXTENSION PANELS TAKE A STANDARD CAB PANEL
ALL WIDE HOOD EXTENSION PANELS TAKE AN EXTENDED CAB PANEL

PETERBILT MODEL 379

SLEEPER PANELS 4"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE

VP142004
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR

VP142007
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48"/58" - BLANK - PAIR

VP142000
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR

VP142002
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK - PAIR

ADD LIGHT OPTIONS

EXAMPLE
VP142002 – 8 RA

8"

10"

EXAMPLE
VP142007 – 4 GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS 6"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE

VP142050
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR

VP142051
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48" - BLANK - PAIR

VP142052
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR

VP142053
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/80" - BLANK - PAIR

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 379

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

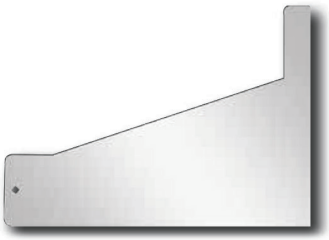

VP142101
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

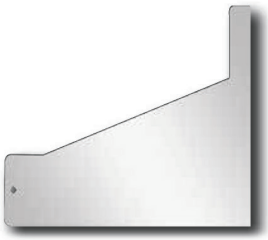

VP142103
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

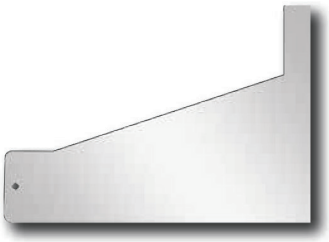

VP142150
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

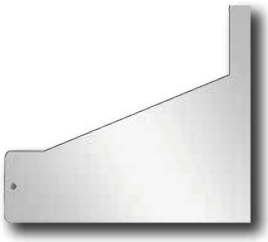

VP142151
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 379

AIR CLEANER LIGHT BOXES VORTOX

CONNECT TO AIR CLEANER STRAPS:

VP110109
PB - AIR CLEANER LIGHTS - BLANK - 377, 378, 379 - 1987 & NEWER - PAIR - VORTOX - FRONT

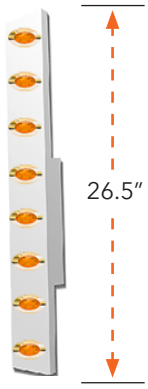

VP113108
PB - AIR CLEANER LIGHTS - REAR - BLANK - 377, 378, 379 - 1987 & NEWER- PAIR - VORTOX - REAR

FOR STRAPLESS LOOK:

VP112209
PB - AIR CLEANER SUPPORT - BLANK - 379, 388, 389 - 2007 & NEWER - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE

VP110109-8RA
PB - AIR CLEANER LIGHTS - 8 ROUND AMBERS - 377, 378, 379 - 1987 & NEWER - PAIR - VORTOX

VP110109-8GMA shown

Don't Forget the Light Harness:

VHMS3007
1 - PACCAR - FEMALE 2 - PACCAR - MALE - FOR CONNECTING FRONT & REAR AIR CLEANER LIGHTS

PETERBILT MODEL 379

MIRROR LIGHT BOXES

VP114011
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - BLANK

ADD -SM WITH BUILT IN SPOT MIRRORS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLES:

VP114011-2GA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 2 - GRANITE - AMBER LEDS

VP114011-5RCA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 5 - 2" ROUNDS - CLEAR AMBER LEDS

VP114011-2SCA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 2 - SLOTTED - CLEAR AMBER LEDS

VP114011-5RA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 5 - 2" ROUNDS - AMBER LEDS

PETERBILT MODEL 379

BUMPER & GRILLE TRIM

VP120001
PB 1 TAG HANGER
INCLUDES HARDWARE, FOAM PROTECTORS AND PLASTIC LICENSE PLATE BOLT INSERTS

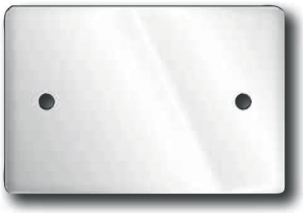

VP120004
PB TOW PIN COVER - 378, 379 - 1987 & NEWER
MOUNTING HARDWARE INCLUDED

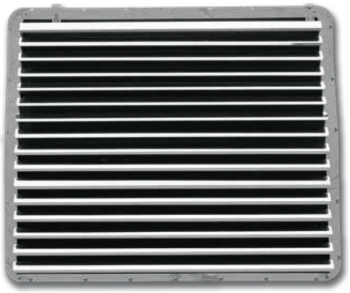

VP120201
PB 379 LONG NOSE GRILL - HORIZONTAL - RIVETED
MOUNTING HARDWARE INCLUDED

VP120012
PB SIDE GRILL DEFLECTOR
379, 388, 389

SEE PAGE 95 FOR MORE TAG HANGERS

FENDER GUARDS

VP120005
PB FENDER GUARDS - FITTED - 379 - 1987 & NEWER - 2PC

VP120006
PB FENDER GUARDS - ROLLED, BOLT - THROUGH - 379 - 1987 & NEWER - 2PC

VP120007
PB FENDER GUARDS - PLAIN - 378, 379 - 1987 & NEWER

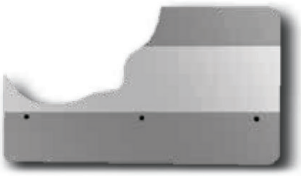

VP120009
PB FENDER GUARDS - PLAIN - 378, 379 - 1987 & NEWER W/JJ CUTOUT

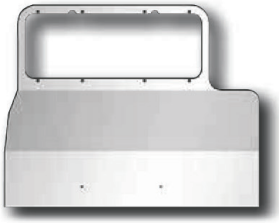

VP120010
PB FENDER GUARDS - PB - DOUBLE HEAD LIGHT MOUNT - 378, 379 - 1987 & NEWER - 2PC

VP120011
PB FENDER GUARDS-SINGLE HEAD LIGHT MOUNT - 378, 379 - 1987 & NEWER

PETERBILT MODEL 379

BUG SHIELDS

MOUNTING HARDWARE INCLUDED

VP120103
PB BUG SHIELD TRIM ONLY
(HIGHLIGHT) - 379 ONLY
STAINLESS STEEL

VP120105
PB BUG SHIELD TRIM ONLY
(FLAMES) - 379 ONLY
STAINLESS STEEL

VP120106
PB BUG SHIELD - STAINLESS -
379 - LONG HOOD

VP120107
PB BUG SHIELD - STAINLESS
- 357, 378, 385, 379 -
SHORT HOOD

PETERBILT MODEL 379

BLINKER BARS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED

VP120501
PB 379 FRONT BLINKER BARS
- W/ LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD CUSTOM

VP100501
PB 379 REAR BLINKER BARS -
- W/ LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD CUSTOM

VP120501BL
PB 379 FRONT BLINKER BARS
- W/ LEDS - PAIR
NO LIGHT HOLES
ADD LIGHTS TO YOURS,
SEE PAGES 106 -107

FENDER SUPPORT COVERS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED

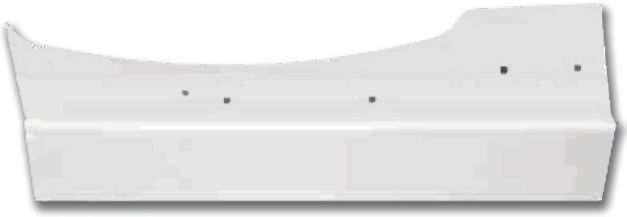

VP120505
PB 379 FENDER SUPPORT
COVER - FRONT - BLANK

PETERBILT MODEL 379

SLEEPER FILLER PANELS

MOUNTING HARDWARE INCLUDED

VP140021
PB SPEEPER REAR CORNER FILLER PANELS 70" ONLY - 379, 389 - 4 - 4" LEDS - PAIR

SLEEPER SHOCK COVERS

RUBBER STRIP & HARDWARE INCLUDED

VP140034
PB SLEEPER SHOCK COVERS - 379, 389 - 2 PCS (L+R) ANGLED
TAPE MOUNT

VP140022
PB 379, 389 SLEEPER SHOCK COVERS - 2 PAIR
TAPE MOUNT

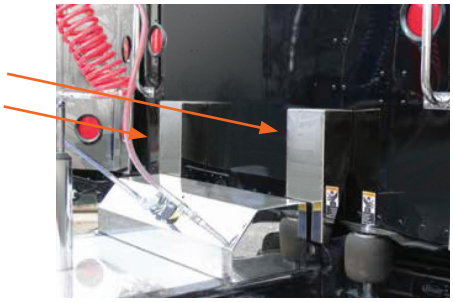

VP140032
PB SLEEPER SHOCK COVERS - 379,389 - 1 LG FULL COVER
TAPE MOUNT

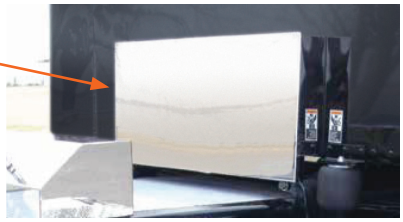

VP140035
PB SLEEPER SHOCK COVER - 379,389 ANGLED FULL COVER

VP140033
PB SLEEPER SHOCK COVERS - 379,389 - 1 LG CURVED FULL COVER

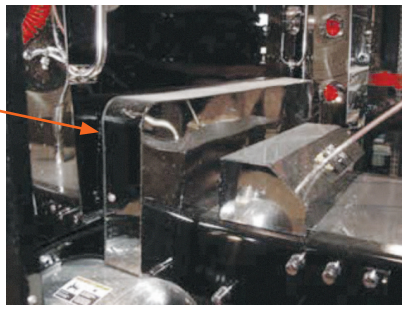

RUBBER STRIP & HARDWARE INCLUDED

PETERBILT MODEL 379

AIR DEFLECTORS

VP110016
PB 359 - 379, 389 WINDOW AIR DEFLECTORS
TAPE MOUNT

VP110031
PB 359 - 379, 389 WINDOW AIR DEFLECTORS W/LOWER LOOKS(VP110017)WINDOW TRIM 37.25" X 20.375"
TAPE MOUNT

FUEL TANK STRAP COVERS

BRACKETS & MOUNTING HARDWARE INCLUDED

VP150020
PB - FUEL TANK STRAP COVERS - 4PCS

VP150029
PB - FUEL TANK STRAP COVERS - 2PCS
NOT 359

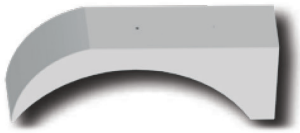

VP150029R
PB - FUEL TANK STRAP COVERS - ROUND - 2PCS
ALL BUT 359

VALLEY CHROME PLATING

PETERBILT MODEL 379

FUEL TANK FAIRINGS

BRACKETS & HARDWARE INCLUDED
NOT AVAILABLE 430 STAINLESS

60″ 64″ 66″

VP150010
PB - FUEL TANK FAIRINGS 60″
379 - 1987 & NEWER - PAIR

VP150011
PB - FUEL TANK FAIRINGS 64″
379 - 1987 & NEWER - PAIR

VP150012
PB - FUEL TANK FAIRINGS 66″
379 - 1987 & NEWER - PAIR

STANDARD

VP150010R
PB - FUEL TANK FAIRINGS
60″ 379 - 1987 & NEWER - PAIR
ROUND

VP150011R
PB - FUEL TANK FAIRINGS
64″ 379 - 1987 & NEWER - PAIR
ROUND

VP150012R
PB - FUEL TANK FAIRINGS
66″ 379 - 1987 & NEWER - PAIR
ROUND

ROUND

VP150010W
PB - FUEL TANK FAIRINGS
60″ 379 - 1987 & NEWER - PAIR -
WING LOOK

VP150011W
PB - FUEL TANK FAIRINGS
64″ 379 - 1987 & NEWER - PAIR -
WING LOOK

VP150012W
PB - FUEL TANK FAIRINGS
66″ 379 - 1987 & NEWER - PAIR -
WING LOOK

WING LOOK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE:

VP150012-5GA

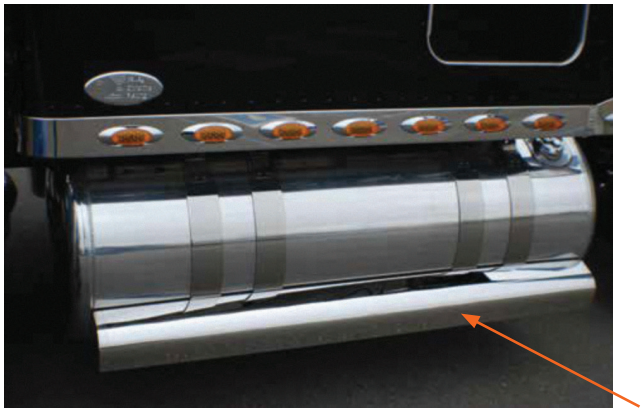

PETERBILT MODEL 379

EMBLEMS

VP100009
EMBLEM ACCENT PB 379
RACING STRIPE - 2PC

VP100028
EMBLEM ACCENT PB 379 -
RACING STRIPE - LONG - PAIR

MISC. TRIM PIECES

VP100021
PB 379 FENDER TRIM
INNER WELL - 2PC

VP100020
PB LOWER HOOD PANEL
EXTENDED HOOD - 379 1987
& NEWER - 2PC

VP100025
PB 379 CENTER HOOD TRIM
EXTENDED HOOD

VP100026
PB 379 FENDER TRIM - 2PC

VP110012
359, 379 DOOR FLAME
TRIM - PAIR

VP110018
PB WINDSHIELD TRIM - 5 PC
379, 389 - LARGE

VP110015
PB CENTER EX T WINDSHIELD
TRIM - 377, 378, 379

PETERBILT MODEL 379

MISC TRIM PIECES

VP110022
PB 379 TOP OF DOOR TRIM - LOWERED LOOK - 73-04 - DOOR MOUNTED MIRRORS - PR
TAPE MOUNT

CUSTOM HEIGHTS AVAILABLE

VP110022P FOR PAINTABLE

VPTFI8021
PB OUTER FENDER TRIM - 379
INCLUDES SET SCREWS
SOLD AS SET OF 3 PAIR

VPTFI8021S
FOR ONE PAIR

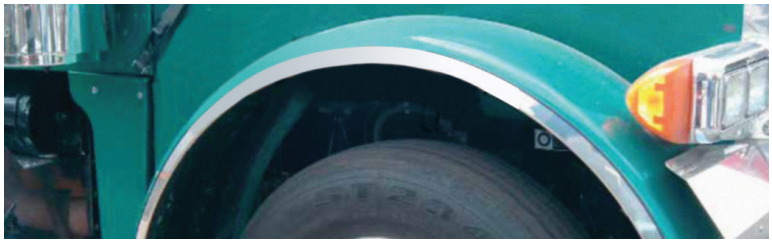

VP110025
PB 379, 388, 389 WINDSHIELD WIPER ARM COVERS
TAPE MOUNT

PETERBILT MODEL 379

BATTERY BOXES & TOOL BOXES

STANDARD WIDTH 30" / CUSTOM WIDTHS AVAILABLE UP TO 48"

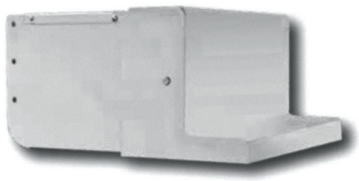

VP150112 - PB - 379,388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - ROUNDED MOULDED LID

VP150113 - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - ROUNDED MOULDED LID

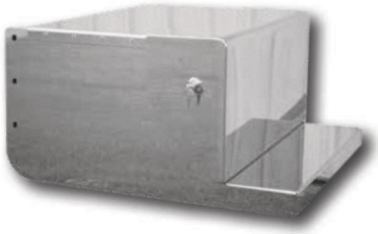

VP150109R - PB - 379, 388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK

VP150110R - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK

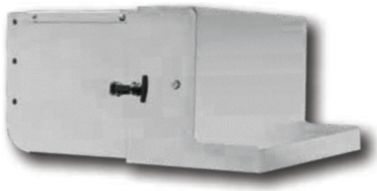

VP150115 - PB - 379,388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - MOULDED LID

VP150116 - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - MOULDED LID

VP150116TM - PB - 379, 388, 389 BATT, BOX - STAINLESS W/TIE DOWNS - 18" TALL MOLDED LID

ADD -36 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 36" BOX
ADD -48 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 48" BOX

VP150103
PB - 379, 388, 389 BATTERY BOX - ALUMINUM

VP150104
PB - 379, 388, 389 BATTERY BOX - ALUMINUM

BOX STEP HIGHLIGHTS/PROTECTORS

VP150030
PB TOOL BOX/BATTERY BOX - STEP PROTECTOR-(18") - WICKED PR

VP150031
PB TOOL BOX/BATTERY BOX - STEP PROTECTOR- (30") WICKED PAIR

PAINTED OPTIONS SHOWN

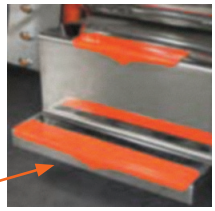

PETERBILT MODEL 379
TOOL & BATTERY BOX COVERS

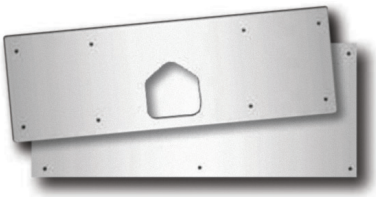

VP150002
PB TOOL & BATTERY BOX COVER 1993 & NEWER - 2 PC.

VP150003
PB BATTERY BOX COVER 378, 379 - 12" X 30" - 1993 & NEWER

VP150004
PB TOOL BOX COVER 378, 379 - 10" X 30" - 1993 & NEWER

VP150015
PB TOOL BOX COVER - W/ 1" LIP ON TOP - 378, 379

VP150016
PB 379 BATTERY BOX COVER - W/ 1" LIP ON TOP

PETERBILT MODEL 379
TAG & LICENSE PLATE HANGERS
ALSO FITS MODEL 389

VP120021

PB WIDE TAG/LIC PLATE HANGER
INCLUDES HARDWARE, FOAM PROTECTORS & PLASTIC LICENSE PLATE BOLT INSERTS

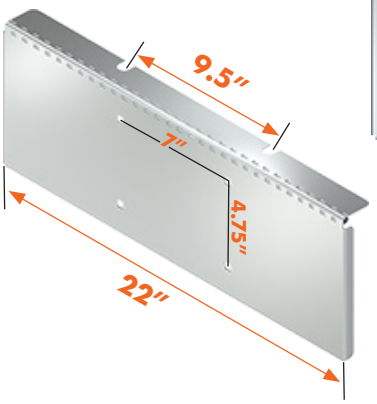

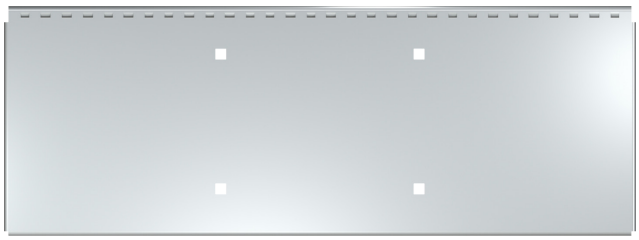

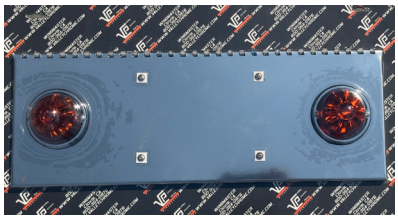

AVAILABLE WITH 2 WATERMELON LIGHTS INSTALLED
(VP120021-2WA SHOWN)

STAINLESS ACCESSORIES

PETERBILT MODEL 384

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 384

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

VP110338
PB CAB PANELS - 384 - STANDARD - BLANK - WRAP PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

CAB PANELS 6"

MOUNTING HARDWARE INCLUDED

VP110252
PB CAB PANELS - 384 - STANDARD - BLANK - PAIR

VP110353
PB CAB PANELS - 384 - STANDARD - BLANK - WRAP - PAIR

ADD LIGHT OPTIONS:

EXAMPLE
VP110252 - 4 UN

EXAMPLE
VP110252 - 5 RN

EXAMPLE
VP110252 - 4 RA

EXAMPLE
VP110252 - 3 GA

PETERBILT MODEL 384

SLEEPER PANELS 4"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE

VP142060
PB SLEEPER PANELS - 384 - 36"/44" - NOTCHED FOR EXHAUST - BLANK

VP142061
PB SLEEPER PANELS - 384 - 48"/58" - NOTCHED FOR EXHAUST - BLANK

VP142062
PB SLEEPER PANELS - 384 - 63"/72" - NOTCHED FOR EXHAUST - BLANK

VP142063
PB SLEEPER PANELS - 384 - 70"/78" - NOTCHED FOR EXHAUST - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS 6"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE

VP142160
PB SLEEPER PANELS - 384 - 36"/44" - NOTCHED FOR EXHAUST - BLANK

VP142161
PB SLEEPER PANELS - 384 - 48"/58" - NOTCHED FOR EXHAUST - BLANK

VP142162
PB SLEEPER PANELS - 384 - 63"/72" - NOTCHED FOR EXHAUST - BLANK

VP142163
PB SLEEPER PANELS - 384 - 70"/78" - NOTCHED FOR EXHAUST - BLANK

ADD LIGHT OPTIONS

EXAMPLE
VP142063 – 8 RA

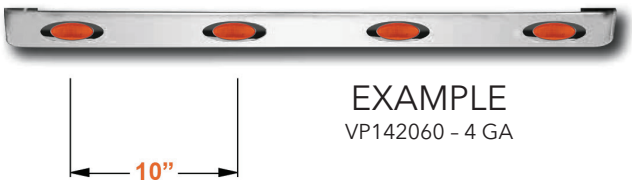

EXAMPLE
VP142060 – 4 GA

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 384

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

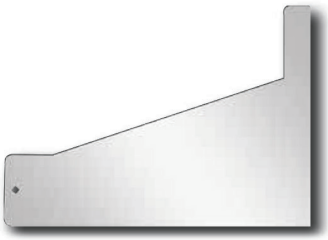

VP142101
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

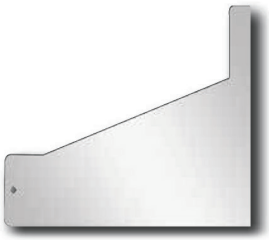

VP142103
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

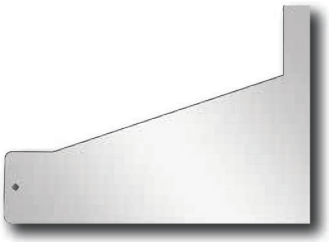

VP142150
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

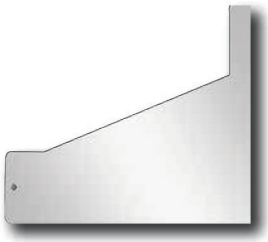

VP142151
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

BUG SHIELDS

VP120111
PB BUG SHIELD - STAINLESS - 384
MOUNTING HARDWARE INCLUDED

STAINLESS ACCESSORIES

PETERBILT MODEL 386

Bumpers and Stainless Accessories made in the USA

Valley Chrome Plating
QUALITY TRUCK PARTS

www.valleychrome.com

PETERBILT MODEL 386

CAB PANELS 2.5"

MOUNTING HARDWARE INCLUDED

VP110200
PB CAB PANELS - 2005 &
NEWER - 386 - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXHAUST FILLER PANEL 2.5"

MOUNTING HARDWARE INCLUDED

VP110205
PB EX HAUST FILLER PANEL -
386 - BLANK - PAIR

ADD LIGHT OPTIONS:

EXAMPLE
VP110205 - 3 GA

EXAMPLE
VP110205 - 3 PA

EXAMPLE
VP110205 - 3 UN

386 PANELS ARE ONLY 2.5" WIDE AND CAN ONLY USE GRANITE, PETERBILT AND UNIVERSAL CUT OUTS.

PETERBILT MODEL 386

SLEEPER PANELS 2.5"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON NEXT PAGE

VP142008
PB SLEEPER PANELS - 1987 & NEWER - 386 - 36"/44" - BLANK - PR

VP142009
PB SLEEPER PANELS - 1987 & NEWER - 386 - 48"/58" - BLANK - PR

VP142010
PB SLEEPER PANELS - 1987 & NEWER - 386 - 63"/72" - BLANK - PR

VP142011
PB SLEEPER PANELS - 1987 & NEWER - 386 - 70"/78" - BLANK - PR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

ADD LIGHT OPTIONS

EXAMPLE
VP142009 – 4 GA

386 PANELS ARE ONLY 2.5" WIDE AND CAN ONLY USE GRANITE, PETERBILT AND UNIVERSAL CUT OUTS.

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 386

SLEEPER EXTENSION PANELS 2.5"

MOUNTING HARDWARE INCLUDED

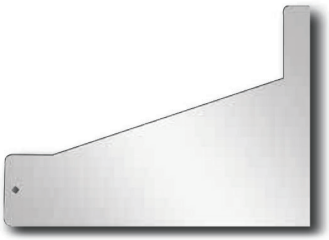

VP142111
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 386 - 2.5" WIDE - 70"/78" - BLANK

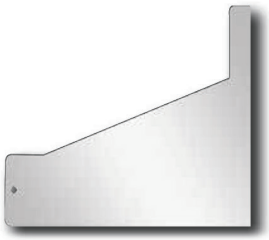

VP142112
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 386 - 2.5" WIDE - 36,48,63"/72" - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

ADD LIGHT OPTIONS

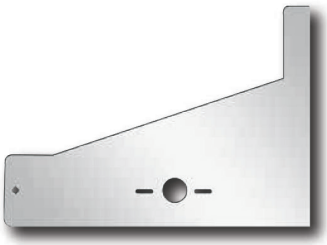

EXAMPLE
VP142112-1UN

EXAMPLE
VP142112-1GA

EXAMPLE
VP142112-1PA

386 PANELS ARE ONLY 2.5" WIDE AND CAN ONLY USE GRANITE, PETERBILT AND UNIVERSAL CUT OUTS.

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

BUG SHIELDS

VP120112
PB BUG SHIELD - STAINLESS - 384/386
MOUNTING HARDWARE INCLUDED

PETERBILT MODELS 388 & 389

FOR 388 & 389 VISORS SEE PAGES 198-201

PETERBILT MODEL 388 & 389

FORMED CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

4" WIDE DRIVER SIDE, ALSO AVAILABLE IN 6" WIDTH
2.25" ONLY ON PASSENGER SIDE

VP114207
PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED - BLANK - PR

VP114228
PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED WRAP- BLANK - PR

VP114267
PB CAB PANELS - 389 - 2010 & NEWER - FORMED EXTENDED - W / UREA SYSTEM - 2.1/4" PASSANGER SIDE - 4" DRIVERS SIDE - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

FORMED CAB PANELS 6"

VP114251
PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED - BLANK - PR

VP114253
PB CAB PANELS - 1987 & NEWER - 388, 389 - FORMED EXTENDED WRAP- BLANK - PR

ADD LIGHT OPTIONS:

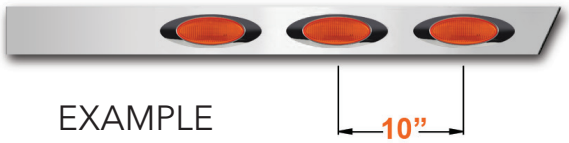

EXAMPLE
VP114251-3GA

PETERBILT MODEL 388 & 389

ONE-PIECE CAB/HOOD EXTENSION PANELS, NO DEF SYSTEM

MOUNTING HARDWARE INCLUDED

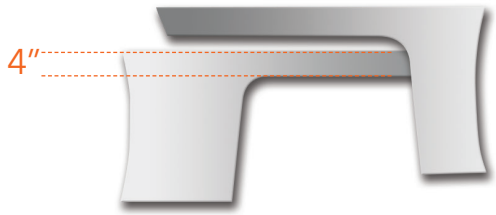

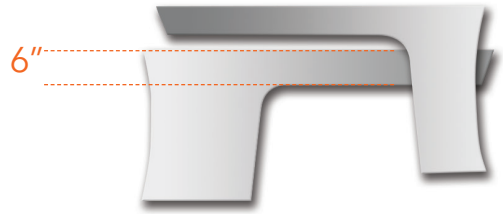

VP116400
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4″ CAB PANELS - BLANK

VP116411
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4″ CAB PANELS - WRAP - BLANK

VP116200
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6″ CAB PANELS - BLANK

VP116211
PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6″ CAB PANELS - WRAP - BLANK

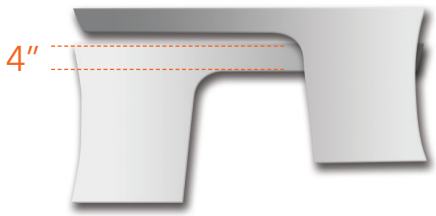

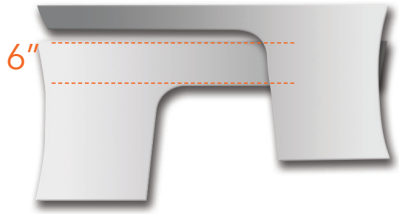

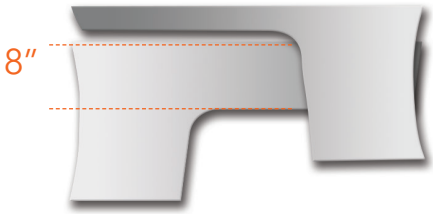

VP116420
PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - ONE PIECE - 389 2008 - NON UREA - 4″ CAB PANELS - BLANK

VP116420-6
PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - ONE PIECE - 389 2008 - NON UREA - 6″ CAB PANELS - BLANK

VP116420-8
PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - ONE PIECE - 389 2008 - NON UREA - 8″ CAB PANELS - BLANK

2008-2010 WITH CAT ENGINES USE WIDE PANELS BOTH SIDES
2009-2010 CUMMINS ENGINES USE WIDE DRIVER SIDE, NARROW PASSENGER

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

VP116411-8GA shown

PETERBILT MODEL 388 & 389

ONE-PIECE CAB/HOOD EXTENSION PANELS DEF SYSTEM

MOUNTING HARDWARE INCLUDED

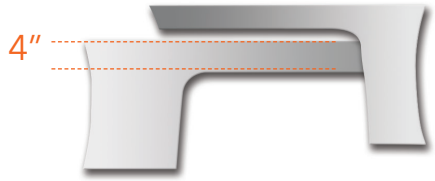

VP116421

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 - 2010 & NEWER W/UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4″ CAB PANEL DRIVERS SIDE - 4″ CAB PANEL PASSENGERS SIDE - BLANK

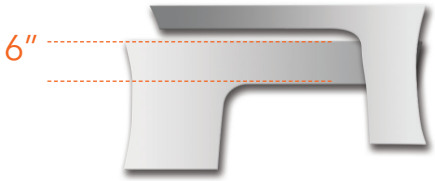

VP116425

PB CAB & WIDE REPLACEMENT PANEL - ONE PIECE - 389 - 2010 & NEWER W/ UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4″ CAB PANEL DRIVERS SIDE - 6″ CAB PANEL PASSENGERS SIDE - BLANK

2008-2010 WITH CAT ENGINES USE WIDE PANELS BOTH SIDES
2009-2010 CUMMINS ENGINES USE WIDE DRIVER SIDE, NARROW PASSENGER

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

ONE-PIECE CAB/HOOD EXTENSION PANELS, NO DEF SYSTEM

FORMED PANELS • HARDWARE INCLUDED

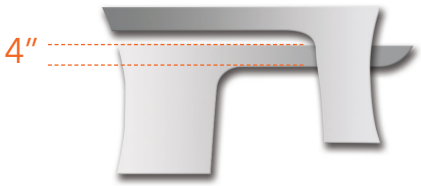

VP114400

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4″ CAB PANELS - BLANK

VP114411

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 4″ CAB PANELS - WRAP - BLANK

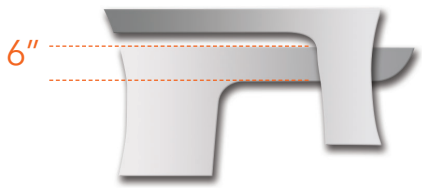

VP114200

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6″ CAB PANELS - BLANK

VP114211

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 2009-2011 - NON UREA - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 6″ CAB PANELS - WRAP - BLANK

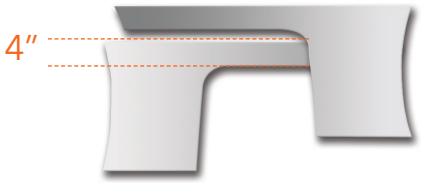

VP114420

PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - FORMED ONE PIECE - 389 2008 - NON UREA - 4″ CAB PANELS - BLANK

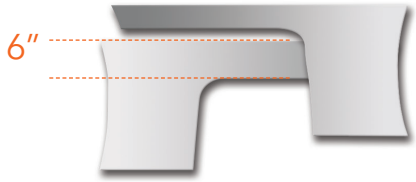

VP114420-6

PB CAB & WIDE REPLACEMENT PANEL BOTH SIDES - FORMED ONE PIECE - 389 2008 - NON UREA - 6″ CAB PANELS - BLANK

PETERBILT MODEL 388 & 389

ONE-PIECE CAB/HOOD EXTENSION PANELS DEF SYSTEM

FORMED PANELS • HARDWARE INCLUDED

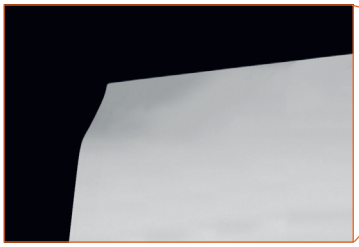

CORNER FOLLOWS CONTOUR OF TRUCK

VP114421

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 - 2010 & NEWER W/ UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4" CAB PANEL DRIVERS SIDE - 4" CAB PANEL PASSENGERS SIDE - BLANK

VP114422

PB CAB & WIDE REPLACEMENT PANEL - FORMED - ONE PIECE - 388, 389 - 2010 & NEWER W/ UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSANGERS SIDE - 4" CAB PANEL DRIVERS SIDE - 2.1/4" CAB PANEL PASSANGERS SIDE - WRAPPED - BLANK

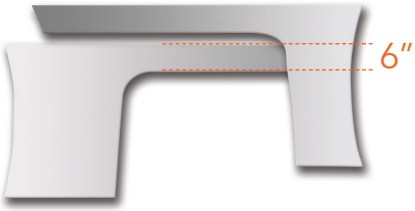

VP114425

PB CAB & WIDE REPLACEMENT PANEL - FORMED ONE PIECE - 389 - 2010 & NEWER W/ UREA SYSTEM - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSENGERS SIDE - 2.1/4" CAB PANEL DRIVERS SIDE - 6" CAB PANEL PASSENGERS SIDE - BLANK

VP114426

PB CAB & WIDE REPLACEMENT PANEL - FORMED - ONE PIECE - 388, 389 - 2014 & NEWER W/ UREA SYSTEM AND DYNAFLEX KIT - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSANGERS SIDE - 4" CAB PANEL DRIVERS SIDE - 2.1/4" CAB PANEL PASSANGERS SIDE - BLANK

VP114427

PB CAB & WIDE REPLACEMENT PANEL - FORMED - ONE PIECE - 388, 389 - 2014 & NEWER W/ UREA SYSTEM AND DYNAFLEX KIT - WIDE REPLACEMENT DRIVERS SIDE - SMALL REPLACEMENT PASSANGERS SIDE - 4" CAB PANEL DRIVERS SIDE - 2.1/4" CAB PANEL PASSANGERS SIDE - WRAPPED - BLANK

2008-2010 WITH CAT ENGINES USE WIDE PANELS BOTH SIDES
2009-2010 CUMMINS ENGINES USE WIDE DRIVER SIDE, NARROW PASSENGER

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

PETERBILT MODEL 388 & 389

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

VP110203
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR

VP110207
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR

VP110227
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR

VP110228
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED WRAP- BLANK - PAIR

CAB PANELS 6"

MOUNTING HARDWARE INCLUDED

VP110250
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD - BLANK - PAIR

VP110251
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - EXTENDED - BLANK - PAIR

VP110254
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR

VP110253
PB CAB PANELS - 1987 & NEWER - 379, 388, 389 - STANDARD WRAP - BLANK - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

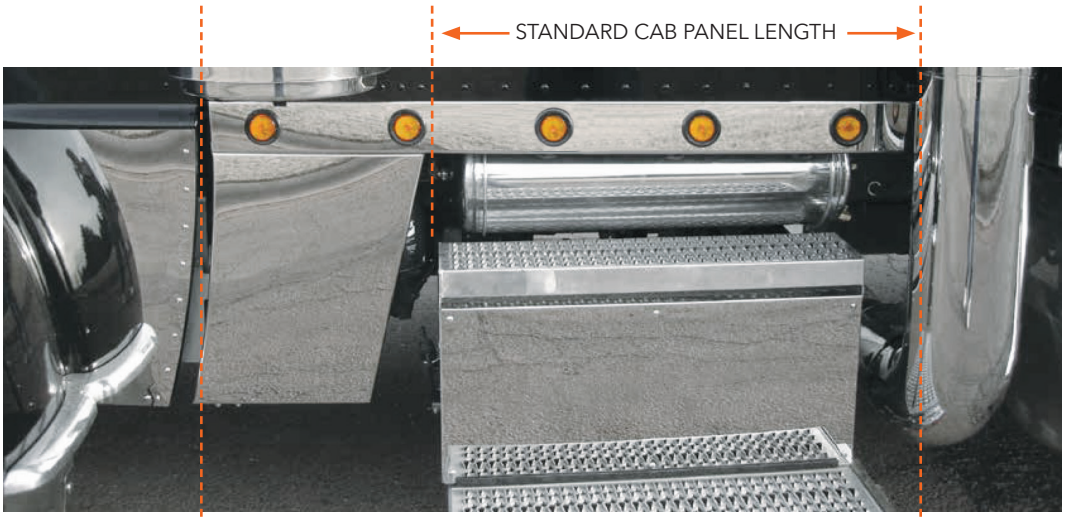

(EXTENDED CAB PANEL VP110227-5RA SHOWN)

PETERBILT MODEL 388 & 389

CAB PANELS NO DEF SYSTEM

MOUNTING HARDWARE INCLUDED

VP113890
PB CAB PANELS - 1987 & NEWER - 389 - STANDARD - BLANK - PR - 44.38" LONG

VP113891
PB CAB PANELS - 1987 & NEWER - 389 - STANDARD WRAP - BLANK - PR

CAB PANELS DEF SYSTEM

MOUNTING HARDWARE INCLUDED

VP110263
PB CAB PANELS - 388,389 - 2010 & NEWER - STANDARD - W / UREA SYSTEM - 2.1/4" PASSENGER SIDE - 4" DRIVERS SIDE - BLANK

VP110264
PB CAB PANELS - 388,389 - 2010 & NEWER - WRAP - W / UREA SYSTEM - 2.1/4" PASSENGER SIDE - 4" DRIVERS SIDE - BLANK

VP110267
PB CAB PANELS - 389 - 2010 & NEWER - EXTENDED - W / UREA SYSTEM - 2.1/4" PASSENGER SIDE - 4" DRIVERS SIDE - BLANK

4" WIDE DRIVER SIDE, ALSO AVAILABLE IN 6" WIDTH
2.25" ONLY ON PASSENGER SIDE

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

PETERBILT MODEL 388 & 389

SLEEPER PANELS 4"

MOUNTING HARDWARE INCLUDED
MATCH TO SLEEPER EXTENSION PANELS ON PAGE 165

VP142004
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR

VP142007
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48"/58" - BLANK - PAIR

VP142000
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR

VP142002
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS 6"

MOUNTING HARDWARE INCLUDED

VP142050
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 36"/44" - BLANK - PAIR

VP142051
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 48"/58" - BLANK - PAIR

VP142052
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK - PAIR

VP142053
PB SLEEPER PANELS - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK - PAIR

ADD LIGHT OPTIONS

EXAMPLE
VP142002 – 8 RA

EXAMPLE
VP142007 – 4 GA

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

PETERBILT MODEL 388 & 389

HOOD EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED (EXCEPT VP110314 TAPE MOUNT)

VP110313
PB 389 - HOOD EXTENSION PANEL - FACTORY REPLACEMENT - PAIR

VP110314
PB 389 - HOOD EXTENSION PANEL - FACTORY LAYOVER - PAIR, TAPE MOUNT

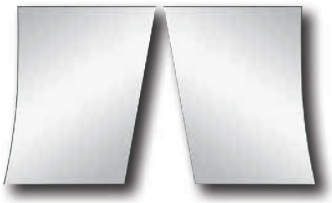

VP110308
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR

VP110309
PB 389 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - PAIR

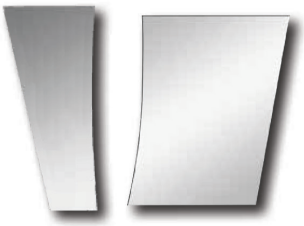

VP110311
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - W/DEF - PAIR

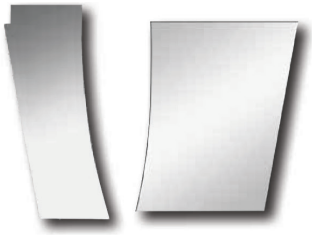

VP110312
PB 389 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - W/DEF - PAIR

HOOD EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

VP110364
PB 389 - HOOD EXTENSION PANEL - FACTORY REPLACEMENT - PAIR

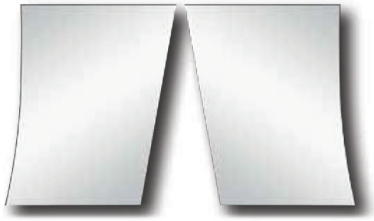

VP110366
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR

VP110367
PB 389 - HOOD EXTENSION PANEL -WIDE REPLACEMENT NOTCHED - BLANK - PAIR

PETERBILT MODEL 388 & 389

HOOD EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

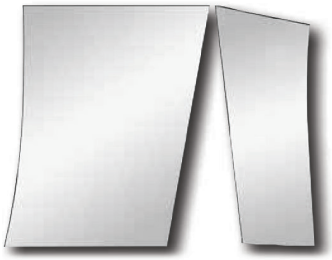

VP110307
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - W/PICKETT EXHAUST ELBOWS - PAIR

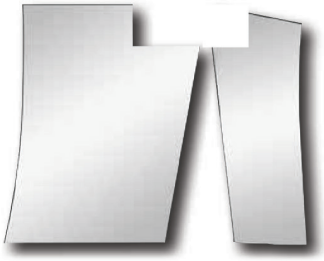

VP110397
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - NOTCHED- BLANK - W/ PICKETT EXHAUST ELBOWS - PAIR

HOOD EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

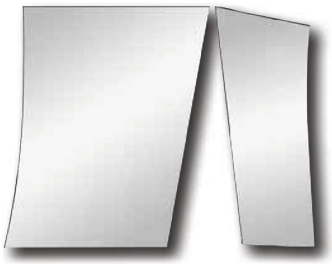

VP110379
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - W/PICKETT EXHAUST ELBOWS - PAIR

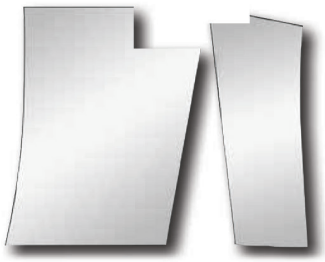

VP110398
PB 389 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - NOTCHED- BLANK - W/ PICKETT EXHAUST ELBOWS - PAIR

ADD LIGHT OPTIONS

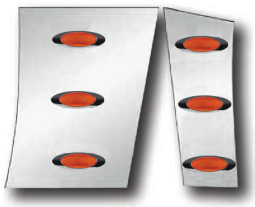

EXAMPLE
VP110307-3GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

PETERBILT MODEL 388 & 389

388 CAB PANEL DEF SYSTEM

MOUNTING HARDWARE INCLUDED

VP110229
2012 AND NEWER 388 W/DEF
WITH VERTICAL EXHAUST
PASSENGER SIDE 35", DRIVER SIDE 40"

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

PETERBILT MODEL 388 & 389

DEF BOX LOWERING KIT

(VP150123)

PETERBILT MODEL 388 & 389

SLEEPER EXTENSION PANELS 4"

MOUNTING HARDWARE INCLUDED

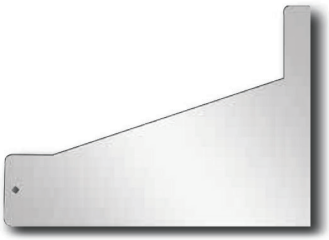

VP142101
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

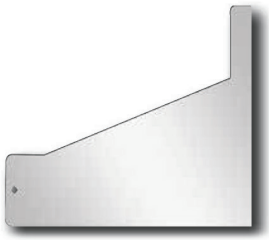

VP142103
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK

SLEEPER EXTENSION PANELS 6"

MOUNTING HARDWARE INCLUDED

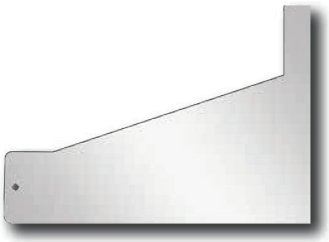

VP142150
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 63"/72" - BLANK

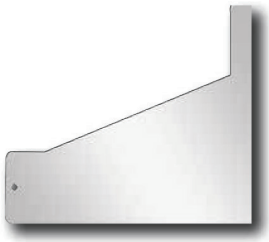

VP142151
PB SLEEPER EXTENSION PANEL - 1987 & NEWER - 379, 388, 389 - 70"/78" - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
365, 367, 379, 384, 386, 388, 389	36"	44"
	48"	58"
	63"	72"
	70"	78"

EXAMPLE
VP142101-1GA

PETERBILT MODEL 388 & 389

AIR CLEANER LIGHT BOXES DONALDSON

CONNECT TO AIR CLEANER STRAPS:

VP112109
PB - AIR CLEANER LIGHTS - BLANK - 388, 389 - 2007 & NEWER - PR - DONALDSON/PREMIUM - FRONT

VP113109
PB - AIR CLEANER LIGHTS - BLANK - REAR - 388, 389 - 2007 & NEWER - PR - DONALDSON/PREMIUM - REAR

FOR STRAPLESS LOOK:

VP112209
PB - AIR CLEANER SUPPORT - BLANK - 379, 388, 389 - 2007 & NEWER - PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

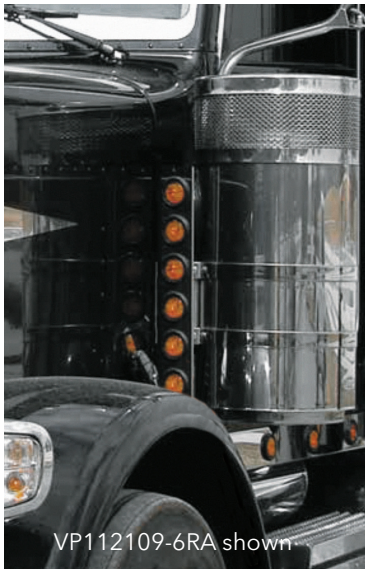
VP112109-6RA shown

VP112109-7RA
PB - AIR CLEANER LIGHTS - 8 ROUND AMBERS - 388, 389 - 2007 & NEWER - PAIR - DONALDSON/PREMIUM

VP113122
379/389 - 22"
AIR CLEANER LIGHT BAR

VP112108
PB - BLANK REAR AIR CLEANER BRACKET 388, 389 - 2007 & NEWER - PAIR - DONALDSON/PREMIUM

VP112129
PETERBILT 388/389 (2007-NEWER) BLANK AIR CLEANER LIGHT BAR

Don't Forget the Light Harness:

VHMS3007
1 - PACCAR - FEMALE 2 - PACCAR - MALE - FOR CONNECTING FRONT & REAR AIR CLEANER LIGHTS

PETERBILT MODEL 388 & 389

MIRROR LIGHT BOXES

VP114011
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - BLANK

ADD -SM WITH BUILT IN SPOT MIRRORS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLES:

VP114011-2GA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 2 - GRANITE - AMBER LEDS

VP114011-5RCA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 5 - 2" ROUNDS - CLEAR AMBER LEDS

VP114011-2SCA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 2 - SLOTTED - CLEAR AMBER LEDS

VP114011-5RA
MIRROR LIGHT BOXES - 379, 388, 389 - CAB MOUNTED MIRRORS - 5 - 2" ROUNDS - AMBER LEDS

PETERBILT MODEL 388 & 389

BUMPER & GRILLE TRIM

VP120000
PB TAG HANGER
(388, 389)
INCLUDES HARDWARE, FOAM
PROTECTORS AND PLASTIC
LICENSE PLATE BOLT INSERTS

VK120003
TOW PIN COVER FITS 389

VP120012
PB SIDE GRILL
DEFLECTOR 379, 388, 389

SEE PAGE 95 FOR MORE TAG HANGERS

FENDER GUARDS

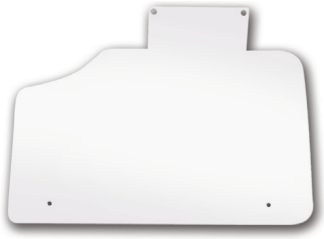

VP120013
PB FENDER GUARDS -
HEAD LIGHT MOUNT - 388,
389 - 2007 & NEWER

VP120014
PB FENDER GUARDS - PB -
HEAD LIGHT MOUNT
- 389 - W/BLINKER BAR – PR

BUG SHIELDS

VP120110
PB BUG SHIELD - STAINLESS
- 367, 388, 389
MOUNTING HARDWARE INCLUDED

PETERBILT MODEL 388 & 389

EMBLEMS

VP100032
PB 389 EMBLEM ACCENT - RACING STRIPE - LONG HOOD
INCLUDES MOUNTING HARDWARE

VP100033
PB 389 EMBLEM ACCENT - RACING STRIPE - SHORT HOOD
TAPE MOUNT

VP100040
PB 389 HOOD LATCH GUARD - PAIR
INCLUDES MOUNTING HARDWARE

FENDER TRIM

VP100123
PB 389 FENDER TRIM - INNER WELL - 2PC
TAPE MOUNT

VP100122
PB389 FENDER TRIM - 2PC
TAPE MOUNT

HOOD TRIM

VP100124
PB 389 CENTER HOOD TRIM
2PC FLAME

VP100121
PB CENTER HOOD TRIM - 389
SCREW ON

VP100125
PB 389 CENTER HOOD TRIM
3PC FLAME (VP100121, VP100124)

PETERBILT MODEL 388 & 389

BLINKER BARS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED

VP120502
PB 389 FRONT BLINKER BARS
- W/LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD AS CUSTOM

VP100502
PB 389 REAR BLINKER BARS -
- W/LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD AS CUSTOM

VP120506M
PB 389 FRONT BLINKER BARS
- W/LEDS - PAIR
NOTE: ALREADY HAS SLOTTED
LIGHT HOLES AND LIGHTS, NO
NEED TO BUILD AS CUSTOM

FENDER SUPPORT COVERS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED

VP120503
PB 389 FENDER SUPPORT
COVER - FRONT
TOO NARROW FOR LIGHT OPTIONS

VP100503
PB 389 FENDER SUPPORT
COVER - REAR
TOO NARROW FOR LIGHT OPTIONS

VP120502

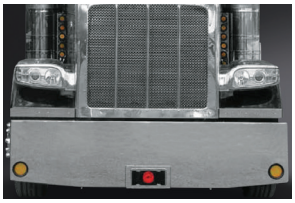

PETERBILT MODEL 388 & 389

STAINLESS VISORS

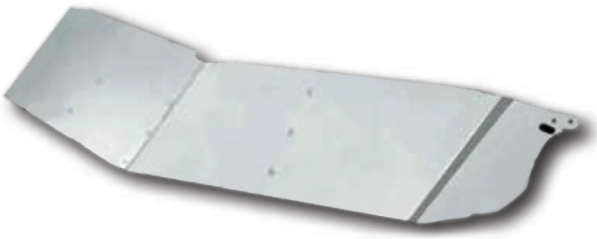

VP130013
PB - 389 14" - DROP VISOR - 2007 - NEWER STANDARD W/ CAB MTD. MIRRORS CURVED WINDOW, ONE PIECE WINDSHIELD
ALSO FITS MODEL 348

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP130013-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

FOR MORE PETE VISORS SEE PAGES 198-201

SLEEPER FILLER PANELS

MOUNTING HARDWARE INCLUDED

VP140021
PB SPEEPER REAR CORNER FILLER PANELS 70" ONLY - 379, 389 - 4 - 4" LEDS - PAIR

PETERBILT MODEL 388 & 389

MISC. TRIM PIECES

VP101001
PB 389 LOWER HOOD PANEL -
2007 & NEWER - PAIR

VP100038
PB - 389 FRONT FLAP
WEIGHTS - 11GA – PAIR

VP110018
PB WINDSHIELD TRIM - 5 PC
379, 389 - LARGE

VPTFI8022
PB OUTER FENDER
TRIM - 389
DOES NOT FIT 388
SOLD AS A SET OF 3 PAIR

VPTFI8022S
FOR ONE PAIR

VP110017
PB 388/389 TOP OF DOOR TRIM - LOWERED LOOK - PAIR
WILL ONLY FIT DOORS WITHOUT VENT WINDOW

VP110017P

ADD -P FOR PAINTABLE

PETERBILT MODEL 388 & 389

MISC. TRIM PIECES

VP110020
PB - OUTSIDE DOOR TRIM -
389 - 2-PCS
TAPE MOUNT

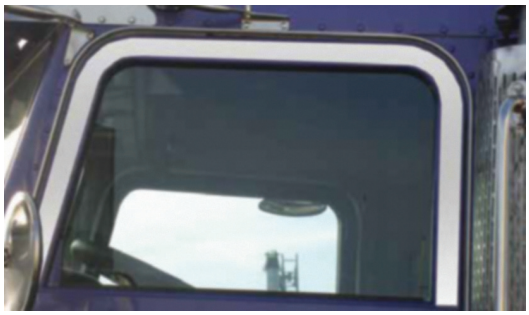

VP110025
PB 379, 388, 389 WINDSHIELD WIPER
ARM COVERS
TAPE MOUNT

VP110019
PB 389 OUTSIDE DOOR TRIM -
CORNER ANGLE - PAIR
TAPE MOUNT

VP110090
PB EXHAUST SHIELDS -
388, 389 - W/NO LOGO
BRACKETS & HARDWARE INCLUDED

PETERBILT MODEL 388 & 389

SLEEPER SHOCK COVERS

VP140034
PB SLEEPER SHOCK COVERS
- 379, 389 - 2 PCS (L+R)
ANGLED
TAPE MOUNT

VP140022
PB 379, 389 SLEEPER SHOCK
COVERS - 2 PAIR
TAPE MOUNT

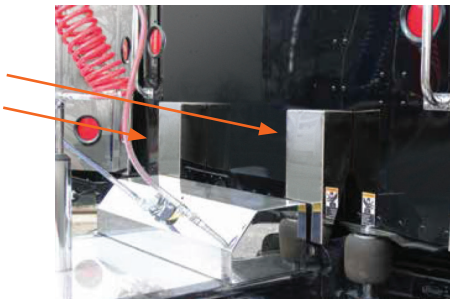

VP140032
PB SLEEPER SHOCK COVERS
- 379,389 - 1 LG FULL COVER
TAPE MOUNT

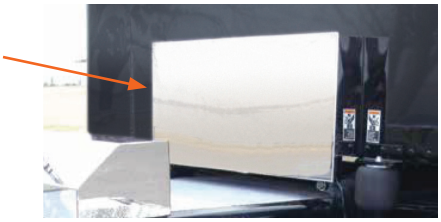

VP140035
PB SLEEPER SHOCK COVER -
379,389 ANGLED FULL COVER

VP140033
PB SLEEPER SHOCK COVERS
- 379,389 - 1 LG CURVED FULL COVER

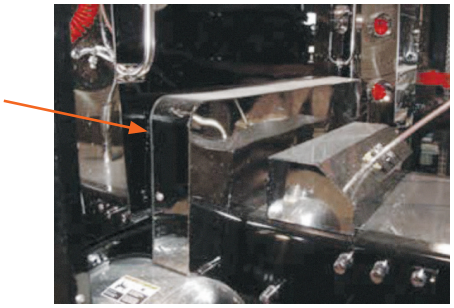

RUBBER STRIP & HARDWARE INCLUDED

AIR DEFLECTORS

VP110016
PB 359 - 379, 389 WINDOW
AIR DEFLECTORS
TAPE MOUNT

VP110031
PB 359 - 379, 389 WINDOW
AIR DEFLECTORS W/LOWER
LOOKS(VP110017)WINDOW
TRIM 37.25" X 20.375"
TAPE MOUNT

PETERBILT MODEL 388 & 389

FUEL TANK STRAP COVERS

BRACKETS & MOUNTING HARDWARE INCLUDED

VP150020
PB - FUEL TANK STRAP COVERS - 4PCS

VP150029
PB - FUEL TANK STRAP COVERS - 2PCS
NOT 359

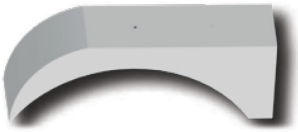

VP150029R
PB - FUEL TANK STRAP COVERS - ROUND - 2PCS
ALL BUT 359

EXHAUST COVERS

VP150021
PB - 389 EXHAUST COVER - PASSENGER SIDE - FITS 06
FITS 06 - JULY 07

VP150022
PB - 389 EXHAUST COVER - DRIVERS SIDE - FITS 06 - JULY
FITS 06 - JULY 07

VP150023
PB - 388, 389 EXHAUST COVER - PASSENGER & DRIVERS SIDE
FITS 06 - JULY 07

VALLEY CHROME PLATING

PETERBILT MODEL 388 &389

TOOL & BATTERY BOX COVERS

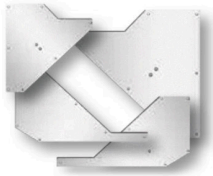

VP150000
PB BATTERY BOX STAINLESS COVER KIT - 389 - 2013-OLDER - 4 PCS

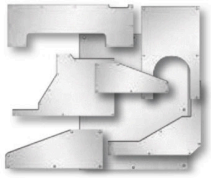

VP150009
PB TOOL BOX STAINLESS COVER KIT - 389 - 2013-OLDER - CATALYTIC COVER PASS SIDE - 7 PCS

VP150005
PB TOOL BOX COVER - 389

VP150006
PB BATTERY BOX COVER - 389 WITH 1" LIP

VP150007
PB TOOL & BATTERY BOX COVERS - 389 WITH 1" LIP - 2 PCS

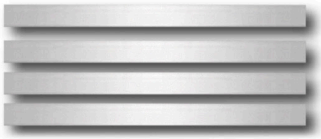

VP150008
PB TOOL & BATTERY BOX STEP TRIMS - 389 - 4 PCS

VP150014
PB 389 TOOL BOX FILLER BLOCK FOR BOTTOM STEP

VP150018
PB 389 BATTERY BOX COVER MOLDED - 3PCS

VP150019
PB 389 BATTERY BOX LOWER STEP COVER W/SIDES - 3PCS

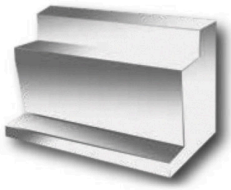

VP150024
PB - 389 UREA CATALYTIC COVER 3PC COVER - '12 AND OLDER

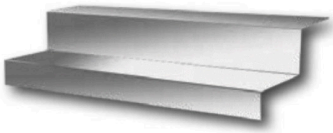

VP150025
PB - 389 UREA CATALYTIC COVER HIGHLIGHT - UPPER - '12 AND OLDER

VP150042
PB - 389 - 2014 UREA CATALYTIC COVER HIGHLIGHT - SIDES - 2PCS

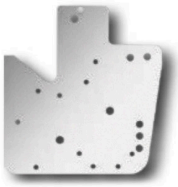

VP150027
PB - 389 - 2013-OLDER UREA CATALYTIC COVER HIGHLIGHT - SIDES - 2PCS

VP150026
PB - 389 UREA CATALYTIC COVER HIGHLIGHT - LOWER

ADD "P" FOR PAINTABLE

PETERBILT MODEL 388 & 389

BATTERY BOXES & TOOL BOXES

STANDARD WIDTH 30" / CUSTOM WIDTHS AVAILABLE UP TO 48"

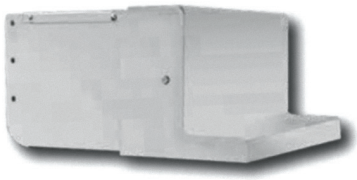

VP150112 - PB - 379,388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - MOULDED LID

VP150113 - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - MOULDED LID

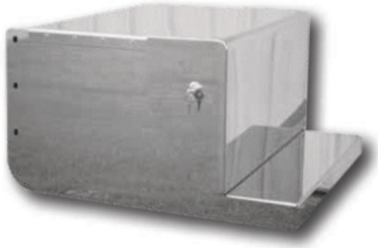

VP150109R - PB - 379, 388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK

VP150110R - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - ROUNDED SMOOTH LOOK

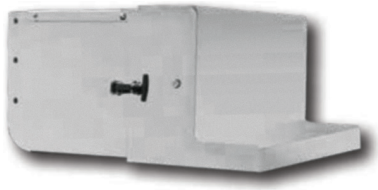

VP150115 - PB - 379,388, 389 REAR TOOL BOX - STAINLESS W/LOCKS - MOULDED LID

VP150116 - PB - 379, 388, 389 BATTERY BOX - STAINLESS W/LOCKS - MOULDED LID

VP150116TM - PB - 379, 388, 389 BATT, BOX - STAINLESS W/TIE DOWNS - 18" TALL MOLDED LID

ADD -36 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 36" BOX
ADD -48 TO ANY STAINLESS TOOL BOX PART NUMBER FOR A 48" BOX

VP150103
PB - 379, 388, 389 BATTERY BOX - ALUMINUM

VP150104
PB - 379, 388, 389 BATTERY BOX - ALUMINUM

BOX STEP HIGHLIGHTS/PROTECTORS

VP150030
PB TOOL BOX/BATTERY BOX - STEP PROTECTOR-(18") - WICKED PR

VP150031
PB TOOL BOX/BATTERY BOX - STEP PROTECTOR- (30") WICKED PAIR

PAINTED OPTIONS SHOWN

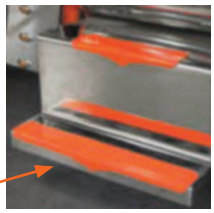

STAINLESS ACCESSORIES

PETERBILT MODEL 567

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

PETERBILT MODEL 567

CAB PANEL

MOUNTING HARDWARE INCLUDED

VP110277
PB CAB PANELS - 567 - BLANK

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED

VP140283
PB SLEEPER PANELS - 567 - 80" - BLANK W/REAR EXHAUST

VP142079
PB SLEEPER PANELS - 567 & 579 - 80" - EXAUST BEHIND SLEEPER

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
567, 579	36"	44"
	63"	72"
	(N/A)	80"

HOOD EXTENSION PANELS

VP110401
PB 567 - HOOD EXTENSION PANEL - FILLER PANEL

VP110402
PB 567 - HOOD EXTENSION PANEL - FACTORY LAYOVER TAPE MOUNT

VP110403
PB 567 - HOOD EXTENSION PANEL - WIDE REPLACEMENT - BLANK - PAIR

FENDER GUARDS

VP120019
PB FENDER GUARD - 567 FITTED 4PCS. UPPER & LOWER

PETERBILT MODEL 567

BUG SHIELDS

VP120114
PB BUG SHIELD - STAINLESS
567, 579
MOUNTING HARDWARE INCLUDED

FUEL TANK STRAP COVERS

BRACKETS & MOUNTING HARDWARE INCLUDED

VP150048
PB - 567 FUEL TANK STRAP
COVERS - 4PCS

VALLEY CHROME PLATING

PETERBILT MODEL 567

STAINLESS VISORS

VP130007
PB - 12" - DROP VISOR 2013 579 DAY CAB
ALSO FITS MODEL 567

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END
FOR PAINTABLE. EXAMPLE:

VP130007P
RAW 18 GAUGE STEEL

PAINTABLE CUSTOM VISOR SHOWN
VP130007P-16-10BYA

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

FOR MORE PETE VISORS SEE PAGES 198-201

VALLEY CHROME PLATING

STAINLESS ACCESSORIES

PETERBILT MODEL 579

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

STAINLESS ACCESSORIES

PETERBILT MODEL 579

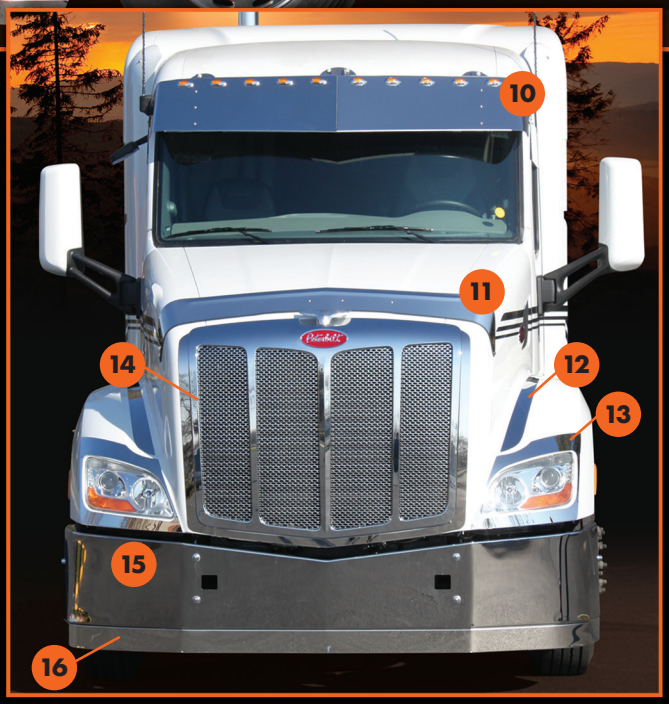

1	**VP110028**	Top of door trim – "lowered" look
2	**VP140029**	Sleeper door handle outer trim with fire extinguisher cutout
3	**VP142077**	Sleeper panels – driver & pass. sides (shown with optional light cutouts)
4	**VP150112-21**	Tool box 21"
5	**VP150032**	Fuel tank fairing upper highlight trim
6	**VP150034**	Kick panel trim
7	**VP110271**	Cab panel with heater plug cutout (shown with optional light cutouts)
8	**VP110029**	Lower door highlight trim
9	**VP100127**	Fender highlight trim (4 pcs driver & passenger sides)
10	**VP130008**	Visor (VP130008-10GMA shown)
11	**VP120114**	Bug shield
12	**VP100126**	Fender highlight, 2 pcs (inner well)
13	**VP120018**	Fender guards
14	**VP100034**	Front hood bug guards (3 pcs.)
15	**HZ-0010-16Y**	Front bumper (other options available)
16	**HZ-SP**	Front bumper air dam

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

PETERBILT MODEL 579

CAB PANELS

MOUNTING HARDWARE INCLUDED
ULTRA AND ULTRA LOFT CABS USE SAME PANELS

VP110270
PB CAB PANELS - 579 - BLANK - 2 PCS

VP110271
PB CAB PANELS - 579 - BLANK W/HEATER PLUG HOLE - 2 PCS

VP110276
PB CAB PANELS - 579 - BLANK - SHORT HOOD - 2016

VP110272
PB CAB PANELS - 579 DAY CAB OR VERT EXHAUST BLANK - 2 PCS

VP110273
PB CAB PANELS - 579 DAY CAB OR VERT EXHAUST- BLANK W/HEATER PLUG HOLE - 2 PCS

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED

VP142075
PB SLEEPER PANELS - 579 - 36"/44" - EXAUST BEHIND SLEEPER

VP142077
PB SLEEPER PANELS - 579 - 63"/72" - BLANK

VP142078
PB SLEEPER PANELS - 579 - 80" - BLANK W/FRONT EXHAUST

VP142079
PB SLEEPER PANELS - 579 - 80" - EXAUST BEHIND SLEEPER

Peterbilt Truck Models	Original Sleeper Length Designation	New Sleeper Length Designation
567, 579	36"	44"
	63"	72"
	(N/A)	80"

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

VP110271-4GMA

PETERBILT MODEL 579

DEF SYSTEM PANELS

BRACKETS & MOUNTING HARDWARE INCLUDED

VP150043
PB - 579 DEF CATALYTIC
COVER HIGHLIGHT - UPPER

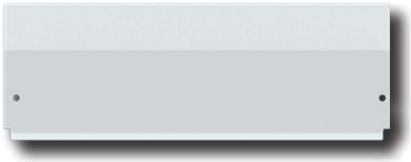

VP150044
PB - 579 DEF CATALYTIC
COVER HIGHLIGHT - LOWER

VP150045W
PB - 579 DEF CATALYTIC
LOWER STEP COVER - WING STYLE

VP150046
PB - 579 DEF CATALYTIC
EXHAUST COVER -
DYNAFLEX EXHAUST

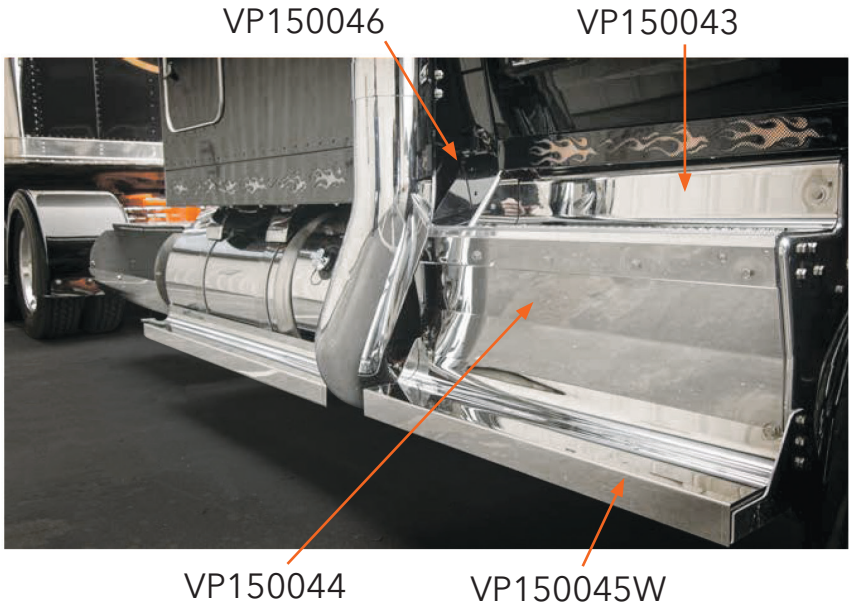

VALLEY CHROME PLATING

PETERBILT MODEL 579

MISC. TRIM PIECES

VP100126
PB 579 FENDER
HIGHLIGHT - INNER WELL 2 PCS
TAPE MOUNT

VP100127
PB 579 FENDER
TRIM DS/PS - 4PC
TAPE MOUNT

VP100034
PB 579 FRONT HOOD GRILLE SURROUND
TAPE MOUNT

VP110028
PB 579 TOP OF DOOR TRIM -
LOWERED LOOK - PAIR
TAPE MOUNT

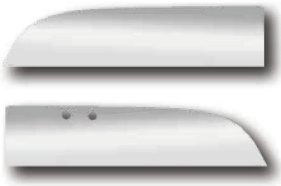

VP110030
PB 579 TOP OF DOOR TRIM -
LOWERED LOOK - PAIR - W/MIRROR
HOLES PASS. SIDE

PETERBILT MODEL 579

MISC. TRIM PIECES

VP110029
PB - 579 LOWER DOOR
HIGHLIGHT - 2PC

VP120018
PB FENDER GUARD - 579
FITTED 4PCS. UPPER &
LOWER

VP120114
PB BUG SHIELD - STAINLESS
567,- 579
MOUNTING HARDWARE INCLUDED

PETERBILT MODEL 579

STAINLESS VISORS

VP130007
PB - 12" - DROP VISOR 2013 TO 2019 579 DAY CAB ONLY
ALSO FITS MODEL 567, DOES NOT FIT ULTRA LOFT

VP130008
PB - 14" - DROP VISOR 2013 TO 2019 579 RAISED ROOF ULTRACAB
NOTE: MOUNTS TO EXISTING FACTORY VISOR BRACKETS
NO OTHER MOUNTING BRACKETS PROVIDED

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END
FOR PAINTABLE. EXAMPLE:

VP130008-P
RAW 18 GAUGE STEEL

VP130008-10GMA SHOWN

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

VP132008
PB - 18" GANGSTER VISOR - FITS 579
ULTRA CAB ONLY, DOES NOT FIT ULTRA LOFT

VP132008-BF
PB - 18" GANGSTER VISOR -
BUTTERFLY - FITS 579
ULTRA CAB ONLY, DOES NOT FIT ULTRA LOFT

VP130014
PB - 16" STD MOUNT DROP VISOR
579 ULTRA LOFT ONLY

FOR MORE PETE VISORS SEE PAGES 198-201

PETERBILT MODEL 579

SLEEPER SHOCK COVERS

VP140036
PB SLEEPER BREATHER
COVERS - 579 - 2 PCS ANGLED
TAPE MOUNT

VP140037
PB SLEEPER SHOCK/
BREATHER COVER - 579 FULL COVER
RUBBER STRIP & MOUNTING
HARDWARE INCLUDED

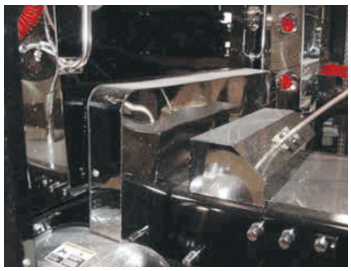

VP140038
PB SLEEPER SHOCK COVER -
579 FULL COVER
RUBBER STRIP & MOUNTING
HARDWARE INCLUDED

TANK FAIRING HIGHLIGHT

VP150032
PB - 579 FUEL TANK FAIRING
UPPER HIGHLIGHT - 2PCS
TAPE MOUNT

KICK PANEL TRIM

VP150034
PB - 579 DOOR ENTRY KICK
PANELS - 2PCS

STAINLESS ACCESSORIES

PETERBILT MODEL 587

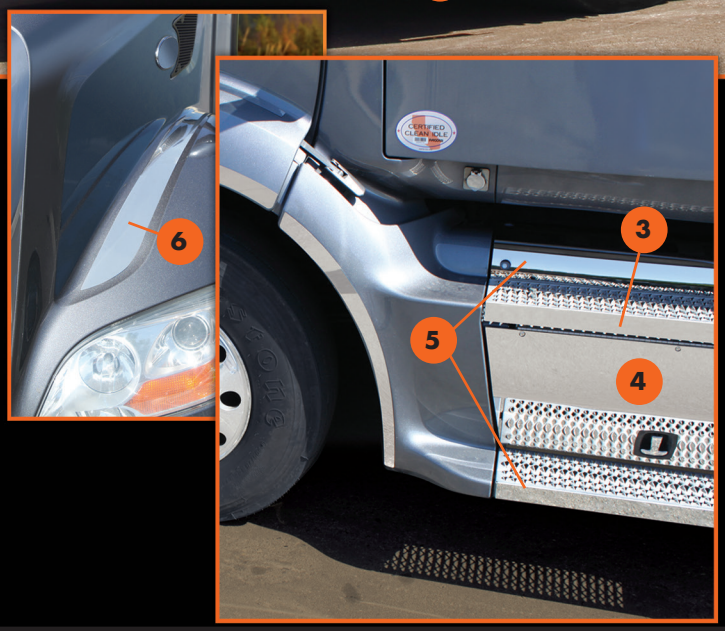

1	**VP13011**	Drop visor, 16", for raised roof
2	**VP100129**	Outer fender trim kit (4 pieces – driver & pass. sides)
3	**VP150036**	Door entry kick panels (2 pieces – driver & pass. sides)
4	**VP150037**	Tool box / battery box cover (One pair – driver & pass. sides)
5	**VP150038**	Step highlights, upper & lower (4 pieces – driver & pass. sides)
6	**VP100128**	Fender inner highlight (2 pieces – driver & pass. sides)
7	**HOA-0010-16**	Chrome bumper, 16" wide (other options available)
8	**HOA-SP**	Stainless air dam for bumper

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

PETERBILT MODEL 587

FENDER TRIM

VP100128
PB 587 FENDER
HIGHLIGHT DS/PS - 2PC

VP100129
PB 587 FENDER
TRIM DS/PS - 4PC

STAINLESS VISORS

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END
FOR PAINTABLE. EXAMPLE:

VP130011P
RAW 18 GAUGE STEEL

VP130011
PB - 587 16" DROP VISOR - 2011 AND NEWER RAISED ROOF

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

PETERBILT MODEL 587

MISC. TRIM PIECES

VP150036
PB - 587 DOOR ENTRY KICK PANELS - 2PCS

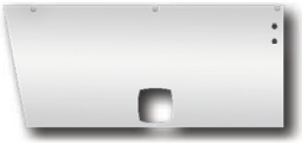

VP150037
PB - 587 TOOL/BATTERY BOX COVER - 2 PCS

VP150038
PB - 587 0 STEP HIGHLIGHTS - 4 PCS

PETERBILT MODEL 589

1. VP130017 - 12" DROP VISOR (MOUNTS TO FACTORY BRACKETS)

2. VP112120 - 7GSCA FRONT AIRCLEANER LITE BAR W/7 GRANITE SLIM CLEAR AMBERS

3. VP110420 - 4GSCA HOOD EXTENSION W/4 GRANITE SLIM CLEAR AMBERS

4. VP110221 - 3GSCA DRIVER-SIDE CAB PANEL W/3 GRANITE SLIM CLEAR AMBERS

5. VP113120 - 7GSCR REAR AIRCLEANER LITE BAR W/7 GRANITE SLIM CLEAR REDS

6. VP142045 - 5GSCA 63" SLEEPER PANEL W/5 GRANITE SLIM CLEAR AMBERS

PETERBILT MODEL 589

FENDER GUARDS, AIR CLEANER LIGHT BARS, CAB & SLEEPER PANELS

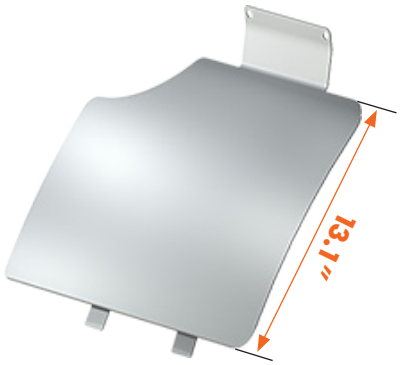

VP120020
PB BLIND MOUNT FENDER GUARD

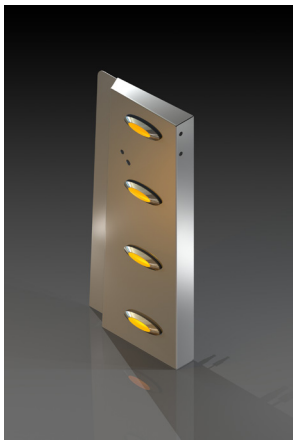

VP110420-4GSCA
PB HOOD EXTENSION
W/4 GRANITE SLIM CLEAR AMBERS

VP113120-7GSCR
PB REAR AIRCLEANER LITE BAR
W/7 GRANITE SLIM CLEAR REDS

VP142045-5GSCA
PB 63" SLEEPER PANEL
W/5 GRANITE SLIM CLEAR AMBERS

VP112121
PB FRONT AIRCLEANER LITE BAR
(NO CUTOUTS)

VP112120-7GSCA
PB REAR AIRCLEANER LITE BAR
W/7 GRANITE SLIM CLEAR AMBERS

VP110221-3GSCA
PB DRIVER-SIDE CAB PANEL
W/3 GRANITE SLIM CLEAR AMBERS

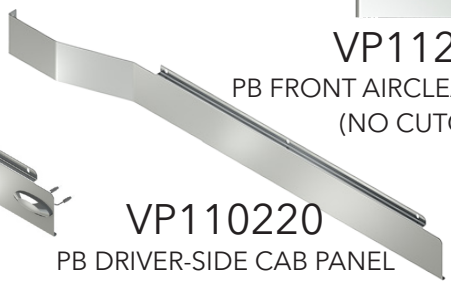

VP110220
PB DRIVER-SIDE CAB PANEL
(NO CUTOUTS)

VP110421
PB FACTORY HOOD PANEL REPLACEMENT

VP150054
PB FUEL TANK WRAP

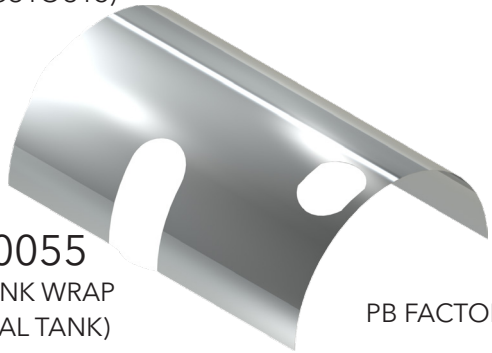

VP150055
PB FUEL TANK WRAP
(FITS 100GAL TANK)

PETERBILT MODEL 589 YEARS 2024 & NEWER
VISORS

VP133017
12" WICKED VISOR
(FITS TRUCKS W/FACTORY VISOR)

VP135017
12" WICKED VISOR
(FITS TRUCKS W/FACTORY VISOR)

PETERBILT
WATERMELON LIGHT BRACKETS & PLATES

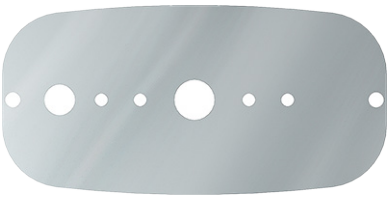

VWM005
SINGLE WATERMELON INTERIOR PLATE W/SWITCH HOLE
(389 CENTER DOME LIGHT)

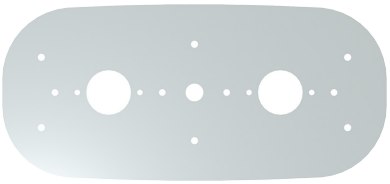

VP170106
DUAL WATERMELON INTERIOR PLATE W/SWITCH HOLE
(389 DOME LIGHT)

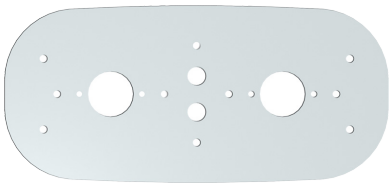

VP170107
DUAL WATERMELON INTERIOR PLATE W/2 SWITCH HOLE
(389 DOME LIGHT)

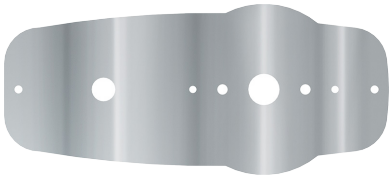

VWM009
SINGLE WATERMELON INTERIOR PLATE W/SWITCH HOLE

VWM012
SINGLE WATERMELON FRAME BRACKET CUTOUTS ONLY

VU-1110L-A
AMBER WATERMELON LIGHT
(EXPLODED VIEW)
(SOLD SEPARATELY)

ACCESSORIES FOR ALL PETERBILT MODELS

VALLEY CHROME PLATING

ALL PETERBILT MODELS

HOOD EMBLEMS

PETERBILT LOGO EMBLEM NOT INCLUDED

VP100004
EMBLEM ACCENT PB
TEAR DROP - 2PC
TAPE MOUNT

VP100005
EMBLEM ACCENT PB
TEAR DROP W/CUTOUTS - 2PC
TAPE MOUNT

VP100006
EMBLEM ACCENT PB
ELLIPSE W/CUTOUT - PAIR
INCLUDES MOUNTING HARDWARE

VP100007
EMBLEM ACCENT PB
SKULL & CROSSBONES - PAIR
TAPE MOUNT

VP100008
EMBLEM ACCENT PB
CHECKERED FLAG - PAIR
INCLUDES MOUNTING HARDWARE

VP100010
EMBLEM ACCENT PB
WILD FIRE - PAIR
TAPE MOUNT

VP100011
EMBLEM ACCENT PB
FLAMES - 2PC
INCLUDES MOUNTING HARDWARE

VP100013
EMBLEM ACCENT PB
OVAL - PAIR
TAPE MOUNT

VP100012
EMBLEM ACCENT PB
CHEVRON - PAIR
TAPE MOUNT

ALL PETERBILT MODELS

HOOD EMBLEMS

PETERBILT LOGO EMBLEM NOT INCLUDED

VP100014
EMBLEM ACCENT PB
OVAL - W/CUTOUTS - PAIR
INCLUDES MOUNTING
HARDWARE

VP100015
EMBLEM ACCENT PB
OVAL - W/SPADES - PAIR
TAPE MOUNT

VP100016
EMBLEM ACCENT PB
OVAL - W/2-EXTENSIONS - PAIR
TAPE MOUNT

VP100017
EMBLEM ACCENT PB
OVAL - W/3-EXTENSIONS - PAIR
TAPE MOUNT

VP100018
EMBLEM ACCENT PB
SWIRL - 2PC
INCLUDES MOUNTING
HARDWARE

VP100027
EMBLEM ACCENT PB -
FISH - PAIR
INCLUDES MOUNTING
HARDWARE

VP100029
EMBLEM ACCENT PB -
FLAMES - 2PCS.
INCLUDES MOUNTING
HARDWARE

VP100019
EMBLEM ACCENT PB
SWIRL - W/CUTOUTS - 2PC
INCLUDES MOUNTING
HARDWARE

HOOD LATCH GUARDS

VP100022
PB HOOD LATCH TRIM
STANDARD HOOD - 2PC

VP100024
PB HOOD LATCH TRIM
EXTENDED HOOD - 2 PC

VU190011
PB, FL, KW, HOOD LATCH
ACCENT TRIM - PAIR

ALL PETERBILT MODELS

KEY GUARDS

STRONG 3M DOUBLE-SIDED TAPE INCLUDED

VP110001
PB KEY GUARD
FLAME - PAIR

VP110002
PB KEY GUARD
TEAR DROP- PAIR

VP110003
PB KEY GUARD
CHECKERED FLAG - PAIR

VP110004
PB KEY GUARD
TRIANGLE - PAIR

VP110005
PB KEY GUARD
OVAL -PAIR

VP110006
PB KEY GUARD
ELLIPSE W/CUTOUT - PAIR

VP110007
PB KEY GUARD
WILDFIRE - PAIR

VP110008
PB KEY GUARD - FISH

MISC. TRIM PIECES

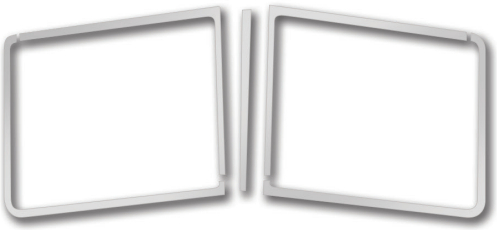

VP110014
PB WINDSHIELD TRIM 3 PC

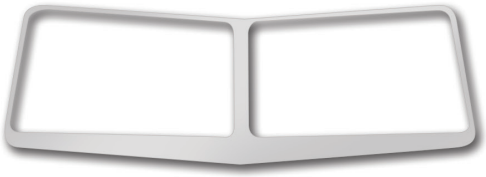

VP110021
PB WINDSHIELD TRIM 5 PC

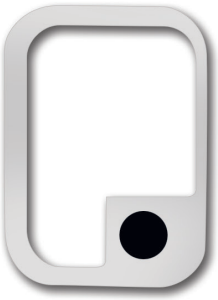

VP110011
PB CAB MOUNTED MIRRORS
DOOR LATCH/KEY HOLE
COVERS - 2PC

ALL PETERBILT MODELS

BUG SHIELD – MODEL 387

VP120108
PB BUG SHIELD - STAINLESS
PETE - 387
MOUNTING HARDWARE INCLUDED

WINDOW TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

VP140001
PB RECTANGULAR VIEW WINDOW TRIM RING

VP140002
PB 70" SLEEPER WINDOW TRIM - PAIR

VP140003
PB SLEEPER/DAY CAB REAR WINDOW TRIM 37.25" X 20.375"

VP140014
PB 70" SLEEPER WINDOW TRIM - LOWERED LOOK PR

SLEEPER WINDOW LOWER LOOKS

VP140117
PB TOP OF DOOR TRIM - LOWERED LOOK - PR
WILL ONLY FIT DOORS WITHOUT VENT WINDOW

ADD -P FOR PAINTABLE

PETERBILT SUN VISORS BY CAB TYPE

STANDARD MOUNT STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING

VP130000
PB-14"- DROP VISOR 1996-98 ULTRA CAB

VP130001
PB - 359 12" DROP VISOR - ANY YEAR 359

VP130005

VP130002
PB-14" - DROP VISOR - STANDARD CAB 2005 & OLDER WITH DOOR MOUNTED MIRRORS

VP130002-16
PB - 16" - DROP VISOR - STANDARD CAB 2005 & OLDER, NOTE 04 AND OLDER DOOR MNT MIRRORS

VP130003
PB - 14" - DROP VISOR - 1999-2001 ONLY, ULTRACAB

VP130003-16
PB-16" - DROP VISOR 1999 - 2001 ULTRACAB

VP130004
PB - 14" - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS

VP130004-16
PB - 16" - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS

VP130005
PB - 14" - DROP VISOR - 2005 - NEWER ULTRACAB - W/CAB MOUNTED MIRRORS

VP130005-16
PB - 16" - DROP VISOR - 2005 - NEWER ULTRACAB W/CAB MOUNTED MIRRORS

VP130006
PB - 13.5" - DROP VISOR - 2005 - NEWER STANDARD CAB W/CAB MOUNTED MIRRORS, ALSO FITS MODEL 348

VP130006-16
PB - 16" - DROP VISOR - 2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS ALSO FITS MODEL 348

VP130017
PB-12"- DROP VISOR 2025-NEW

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP130002-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

PETERBILT SUN VISORS BY CAB TYPE

BOLTLESS MOUNT STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING

VP131002
PB-14" - BOLTLESS - DROP VISOR - STANDARD CAB 2005 & OLDER - DOOR MOUNTED MIRRORS - 1PC

VP131002-16
PB-16" - BOLTLESS - DROP VISOR - STANDARD CAB 2005 & OLDER - DOOR MOUNTED MIRRORS - 1PC

VP131003
PB-14" - BOLTLESS - DROP VISOR - 1999 - 2001 - ULTRACAB - 1PC

VP131003-16
PB-16" - BOLTLESS - DROP VISOR - 1999 - 2001 - ULTRACAB - 1PC

VP131004
PB - 14" - BOLTLESS - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS - 1 PC

VP131004-16
PB - 16" - BOLTLESS - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS - 1 PC

VP131005
PB - 14" - BOLTLESS DROP VISOR 2005 + ULTRACAB ONE PIECE W/CAB MT MIRRORS

VP131005-16
PB - 16" - DROP VISOR 2005 + ULTRACAB ONE PIECE W/CAB MT MIRRORS

VP131006
PB - 14" - BOLTLESS - DROP VISOR - 2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS - 1 PC

VP131006-16
PB - 16" - BOLTLESS DROP VISOR - 2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS - 1 PC

VP130005

COOL BOLTLESS LOOK!

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VP131002-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

PETERBILT WICKED VISORS

BOLTLESS STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING

VP135000
PB - 15" WICKED - DROP VISOR 1996-98 ULTRA CAB - 2 PC

VP135001
PB - 12" WICKED - DROP VISOR - ANY YEAR 359 - 2PC

VP135002
PB - 15" WICKED - DROP VISOR -STANDARD CAB 2005 & OLDER W/DOOR MOUNTED MIRRORS - 2 PC

VP135003
PB - 15" WICKED - DROP VISOR 1999-2001 ULTRA CAB - 2PC

VP135004
PB - 15" WICKED - DROP VISOR - 2002 - 2005 ULTRACAB WITH DOOR MOUNTED MIRRORS - 2 PC

VP135005
PB - 15" WICKED - DROP VISOR - 2005 - NEWER ULTRACAB W/CAB MOUNTED MIRRORS - 2 PC

VP135006
PB - 15" WICKED - DROP VISOR - 2005 - NEWER STANDARD W/CAB MOUNTED MIRRORS - 2 PC

VP136002
PB - 13" WICKED GANGSTER VISOR - FITS ANY - 370 SERIES & 380 SERIES - 2 PC

VP135006

YOU SAY
WICKED
LIKE IT'S A BAD THING

COOL BOLTLESS LOOK!

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

PETERBILT SUN VISORS

GANGSTER STAINLESS VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
MADE WITH 16 GAUGE GRADE 430

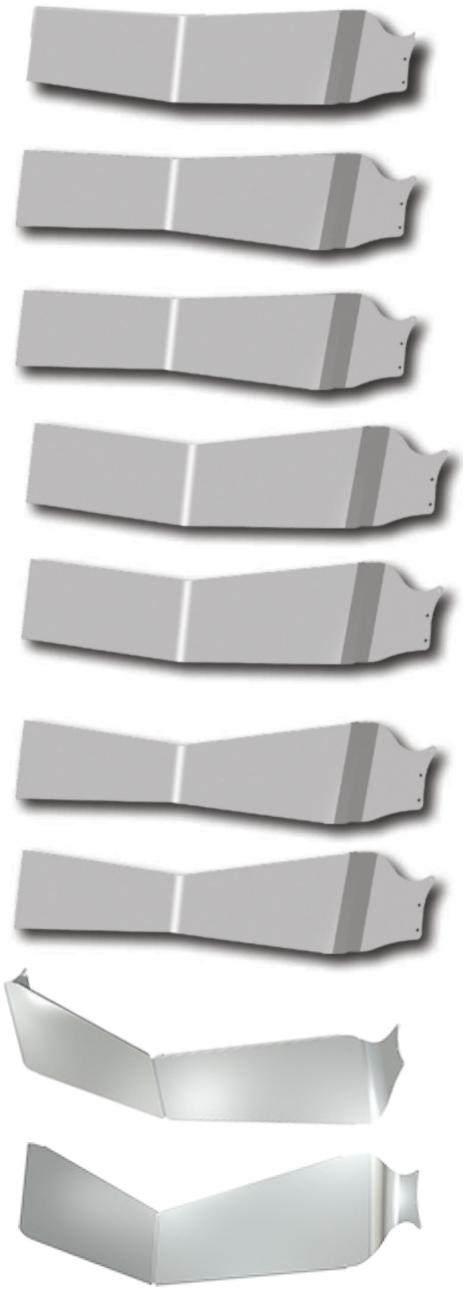

VP132002
PB - 12" GANGSTER VISOR - FITS ANY - 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002-BF
PB - 12" GANGSTER BUTTERFLY VISOR - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002P-BF
PB - 12" GANGSTER BUTTERFLY VISOR PAINTABLE - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002-RBF
PB - 12" GANGSTER REVERSE BUTTERFLY VISOR - FITS ANY - 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002P-RBF
PB - 12" GANGSTER REVRSE BUTTERFLY VISOR PAINTABLE - FITS ANY - 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002-BT
PB - 12" GANGSTER BOWTIE VISOR - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132002P-BT
PB - 12" GANGSTER BOWTIE VISOR PAINTABLE - FITS ANY 370 SERIES & 380 SERIES 2 PC WITH SPLIT WINDSHIELD

VP132017
PB-14" - GANGSTER REVERSE BOWTIE VISOR - FITS ULTRA CAB

VP132018
PB-14" - BOLTLESS - GANGSTER FLAT BOTTOM VISOR - FITS ULTRA CAB

VP132002P-BT shown

VALLEY CHROME PLATING

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE

RAW 18 GAUGE STEEL
COLORS SHOWN EXAMPLES ONLY

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

PETERBILT STAINLESS TRIM

SLEEPER WRAPS

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

VP140005
PB SLEEPER WRAP - FLAG - LG

VP140006
PB SLEEPER WRAP - FLAG - SM - UNIBILT STAND-UP

VP140007
PB SLEEPER WRAP - FLAMES - LG

VP140008
PB SLEEPER WRAP - FLAMES - SM - UNIBILT STAND-UP

VP140009
PB SLEEPER WRAP - STEER HEAD - LG

VP140010
PB SLEEPER WRAP - STEER HEAD - SM - UNIBILT STAND-UP

VP140023
PB SLEEPER WRAP - GIRLS - LG

VP140024
PB SLEEPER WRAP - GIRLS - SM - UNIBILT STAND-UP

VP140018
PB SLEEPER WRAP - PLAIN - LG - FLAT TOP CAB

VP140019
PB SLEEPER WRAP - PLAIN - SM - ULTRA CAB

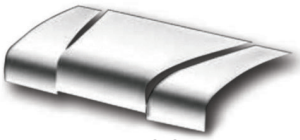

VP140011
PB SLEEPER WRAP - PLAIN - LG - FLAT TOP - 3PC

VP140012
PB SLEEPER WRAP - PLAIN - SM - 3PC - UNIBILT STAND-UP

VP140015
PB SLEEPER WRAP - PLAIN - SM - SIDES - 2PCS

VP140016
PB SLEEPER WRAP - PLAIN - LG - SIDES - 2PCS

REAR FRAME COVERS

MOUNTS USING EXISTING FRAME BOLTS

VP160001
PB - REAR FRAME COVER - 379

VP160003
PB - REAR FRAME COVER - WILDFIRE



VP160004
PB - REAR FRAME COVER - ELLIPSE



VP160005
PB - REAR FRAME COVER - OVAL - W/CUTOUTS

WILL NOT WORK WITH ALUMINUM FRAMES

VP160006
PB - REAR FRAME COVER - STEER HEAD

VP160007
PB - REAR FRAME COVER - GIRLS

PETERBILT STAINLESS TRIM

DEF TANK COVERS

MOUNTS TO EXISTING HARDWARE

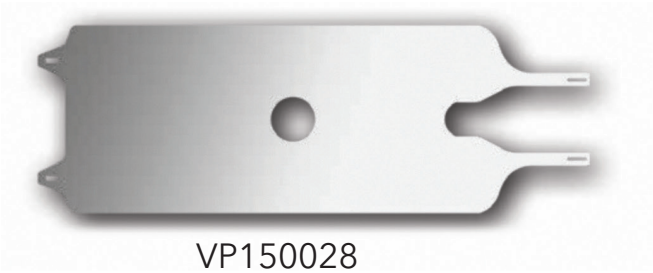

VP150028
DEF FUEL TANK COVER - STAINLESS

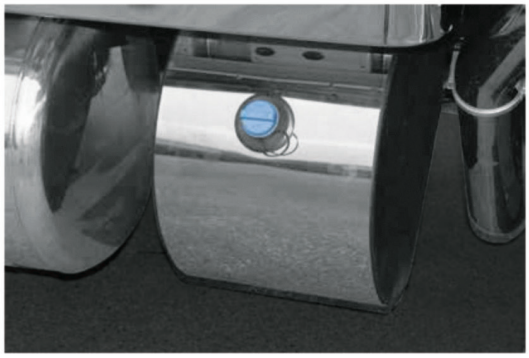

FUEL TANK WRAPS

MOUNTS BEHIND FUEL TANK STRAPS
STRONG 3M DOUBLE-SIDED TAPE ALSO INCLUDED

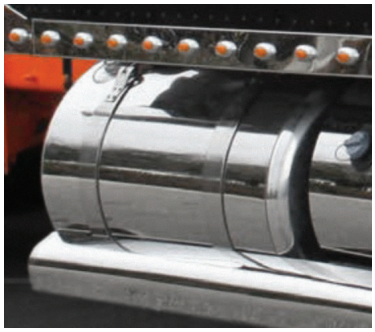

VP150041
DRIVER SIDE
PB -2012 FUEL TANK WRAP - 75 GALLON

VP150041-PS
PASSENGER SIDE
PB -2012 FUEL TANK WRAP - 75 GALLON

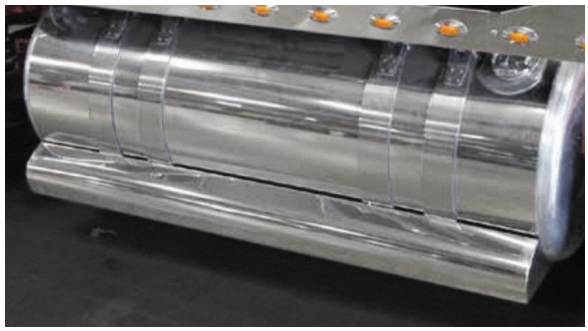

VP150040
DRIVER SIDE
PB - 2012 FUEL TANK WRAP - 150 GALLON

VP150040-PS
PASSENGER SIDE
PB - 2012 FUEL TANK WRAP - 150 GALLON

SPECIFY TANK LENGTH, INSIDE WELD TO INSIDE WELD WHEN ORDERING

STAINLESS ACCESSORIES

KENWORTH W900

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

KENWORTH W900

CAB PANELS

MOUNTING HARDWARE INCLUDED

VK110205
W900L - 2014 - HIGHLIGHT - BLANK - 2 PCS

VK110206
W900L - 2014 - HIGHLIGHT - BLANK - W/ LIGHT HOLE - HEATER PLUG HOLE

VK110200
W900L - AEROCAB - CAB PANELS - 50.25" - BLANK

VK110216
W900L - AEROCAB - CAB PANELS - 50.25" - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE
VK110200-4UN

EXAMPLE
VK110200-5RN

EXAMPLE
VK110200-4RA

EXAMPLE
VK110200-4GA

VK110200-3GA shown

KENWORTH W900

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED

VK142035
KW SLEEPER PANELS - T600 (1995 & NEWER, NO FAIRINGS) T800 (1986 & NEWER), W900 (1986 & NEWER) - 42" - BLANK

VK142008
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 60" - BLANK - 1995 & NEWER
WRAPS ON BOTH ENDS

VK142015
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 72" - BLANK

VK142023
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 86" – BLANK

VK142030
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING, PASS SIDE NOTCHED FOR EXH - T600, T800, W900 - 62"- BLANK

VK142100
KW SLEEPER PANELS - AEROCAB - W/EXHAUST - W900 L - 62" - BLANK

VK142101
KW SLEEPER PANELS - AEROCAB - W/EXHAUST - W900 L - 72" - BLANK

VK142105
KW SLEEPER PANELS - AEROCAB - W/FUEL DOOR - W900 L - 86" - BLANK

VK142200
KW SLEEPER PANELS - 2014 AEROCAB - 62" - BLANK - 2 PCS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE
VK142008-3UN

EXAMPLE
VK142008-5RA

EXAMPLE
VK142023-8GA

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VK143001
SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK - 1992 - 2012

EXAMPLE
VK143001-1GA

KENWORTH W900

HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VK110300
HOOD EXTENSION PANELS - W900L - BLANK - 1997-2004 - 2 PCS

VK110305
HOOD EXTENSION PANELS - W900L - BLANK - 2014 - 2 PCS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE
VK110300-3UN

EXAMPLE
VK110300-4GA

KENWORTH W900
AIR CLEANER LIGHT BOXES

MOUNTING HARDWARE INCLUDED

ADD LIGHTS TO YOUR PANEL
SEE PAGES 106-107

VK113000
AIR CLEANER LIGHT BOXES - W900 - FRONT - BLANK

26″

VK113001
AIR CLEANER LIGHT BOXES - W900 - CENTER MOUNT - FRONT - BLANK

24″

21″

VK110020
AIR CLEANER LIGHT BOXES - W900 - REAR - BLANK

VK112209
KW - AIR CLEANER SUPPORT - BLANK - W900L - 2014 - PAIR

VK113000-8RA
AIR CLEANER LIGHT BOXES - W900 - FRONT - 8 ROUND AMBERS

VK113002
AIR CLEANER LIGHT BAR - BLANK

KENWORTH W900 &W990
BUMPER SUPPORT BRACKETS



VK15-06333L-18
SUPPORT BRACKET FOR 18″ BUMPERS

VK15-06333L-22
SUPPORT BRACKET FOR 22″ BUMPERS

VK15-06333LW-18
SUPPORT BRACKET FOR 18″ BUMPERS (WITH WATERMELON LIGHT CUTOUT)

VK15-06333LW-20
SUPPORT BRACKET FOR 20″ BUMPERS (WITH WATERMELON LIGHT CUTOUT)

VK15-06333LW-22
SUPPORT BRACKET FOR 22″ BUMPERS (WITH WATERMELON LIGHT CUTOUT)

KENWORTH W900

AIR CLEANER FAIRINGS

VK100013
AIR CLEANER FAIRING W9L PR

VK100020
AIR CLEANER FAIRING W9L
PR 2014

VK100022
AIR CLEANER FAIRING W9L PAIR
2014 - SLIM VERSION

KENWORTH W900

EXTERIOR WINDOW TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

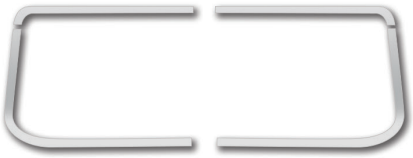

VK110021
2014 KW WINDSHIELD TRIM - 4 PC - W900 CURVED WINDSHIELD

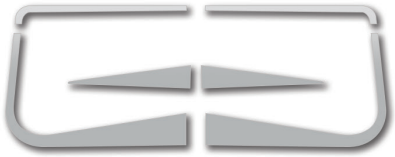

VK110018
2014 KW WINDSHIELD TRIM - 6 PC - W900 - CURVED WINDSHIELD - LARGE

EXHAUST SHIELDS

BRACKETS AND MOUNTING HARDWARE INCLUDED

VK110090
KW EXHAUST SHIELD W/NO LOGO W900B

VALLEY CHROME PLATING

BUG SHIELDS

MOUNTING HARDWARE INCLUDED

VK120023
KW BUGSHIELD TRIM - W900L - HIGHLIGHT ONLY STAINLESS HIGHLIGHT

VK120024
KW BUGSHIELD TRIM - W900L - FLAME - ONLY STAINLESS HIGHLIGHT

VK120009
KW STAINLESS BUG SHIELD - 900L

VK120010
KW STAINLESS BUG SHIELD - 900B

KENWORTH W900

BLINKER BARS

RUBBER TRIM AND MOUNTING HARDWARE INCLUDED

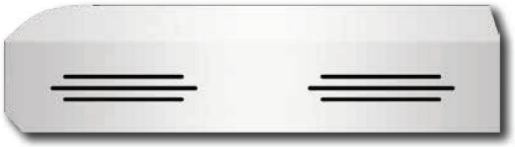

VK120501
KW - W900L FRONT BLINKER BARS W/LIGHTS

VK100501
KW - W900L REAR BLINKER BARS W/LIGHTS

VK120501BL
KW - W900L FRONT BLINKER BARS BLANK

ADD LIGHTS TO YOUR BLINKER BAR – SEE PAGES 106-107

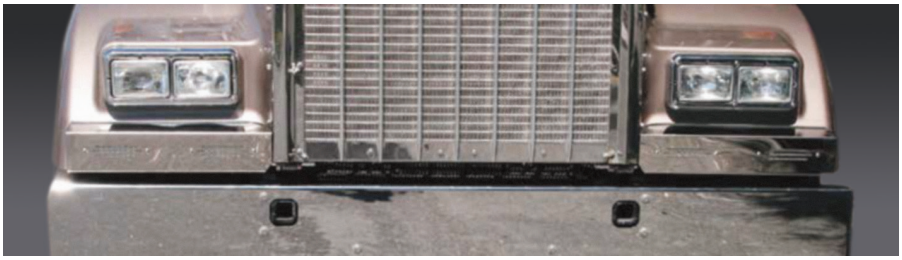

FLAP WEIGHTS

VK190001
2014 W900 L - FRONT FENDER FLAP WEIGHTS - 2 PCS

KENWORTH W900

FENDER GUARDS

VK120019

VK120016
KW - FENDER GUARDS - W900L - 1989 & NEWER - PAIR

VK120017
KW - FENDER GUARDS - W900L - FLUSH MOUNT 1989 & NEWER - PAIR

VK120019
KW - FENDER GUARDS - W900B - FLUSH MOUNT 1989 & NEWER - PAIR

BATTERY & TOOL BOX COVERS

VK150004
KW - BATTERY BOX COVER - T600, T800, W900 - 39.5" X 9.0"

VK150005
KW - BATTERY BOX COVER - T600, T800, W900 - 45" X 9"

VK150006
KW - TOOL BOX COVER - T600, T800, W900 - 39.5" X 8.5"

VK150007
KW - TOOL BOX COVER - T600, T800, W900 - 45" X 8.5"

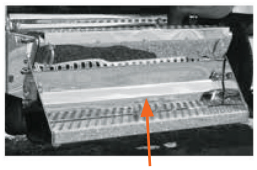

VK150030
2014- W900 L - BATTERY BOX STEP COVER

VK150031
2014- W900 L - BATTERY COVER HIGHLIGHT - 2 PCS

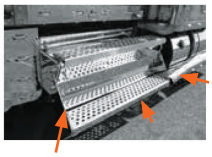

VK150032
2014- W900 L - BATTERY BOX STEP HIGHLIGHT - 5 PCS

KENWORTH W900

HOOD & GRILLE TRIM

VK120002
W9L LOWER GRILL FILTER TRIM

VK120001
W900L TOP GRILL DEFLECTORS - PAIR

11151
HOOD WING - POWER STYLE

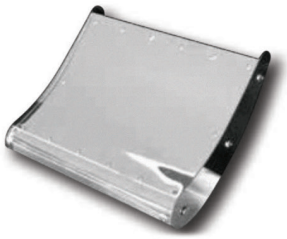

11191
FENDER WINGS - POWERSTYLE

22281
SIDE HOOD WINGS

VK120007
KW SIDE GRILL DEFLECTOR - FULL LENGTH - W900L

VK120008
KW SIDE GRILL DEFLECTOR - FOR USE WITH BLINKER BAR - W900L

VK120004
KW SIDE GRILL DEFLECTORS

VK120008

KENWORTH W900

STAINLESS SUN VISORS

MOUNTING HARDWARE INCLUDED

VK130001
VK-13" - DROP VISOR - W900 AEROCAB CURVED - 1995 - 2006

VK131001
KW - 13" - DROP VISOR - W900 AEROCAB CURVED 1995 & 2006 - 1PC - BOLTLESS

VK130001

VK130002
KW - 13" - DROP VISOR - W900 - CABS W/ SPLIT FLAT WINDSHIELDS 1984 TO 1998

VK131002
KW - 13" - DROP VISOR - W900 - CABS W/ SPLIT FLAT WINDSHIELDS 1984 TO 1998 - 1PC - BOLTLESS

VK130002

VK130003
KW - 11" - DROP VISOR - (W900 2007-2013) - (T660, T800 2007-2024)- CURVED WINDSHIELD

VK131003
KW - 11" - DROP VISOR - W900 - T660 - CURVED WINDSHIELD - 2007 & NEWER - 1PC - BOLTLESS

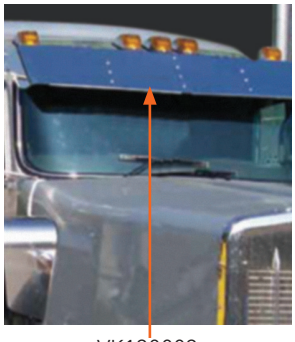

VK130003

VK130004
KW - 13" - DROP VISOR - W900 - CABS W/ SPLIT FLAT WINDSHIELD 1999 TO 2004

VK131004
KW - 13" - DROP VISOR - W900 - CABS W/ SPLIT FLAT WINDSHIELD 1999 TO 2004 - 1PC - BOLTLESS

KENWORTH W900

GANGSTER VISORS

MOUNTING HARDWARE INCLUDED

VK132001
GANGSTER VISOR - DROP
W900 - CURVED WINDSHIELD
1995 - 2006 - 2 PC

VK132003
GANGSTER VISOR - DROP
W900, T660, T800
CURVED WINDSHIELD
2007 - NEWER - 2 PC

VK132001P
GANGSTER VISOR
PAINTABLE - DROP - W900
CURVED WINDSHIELD
1995-2006 - 2 PC
RAW 18-GAUGE STEEL

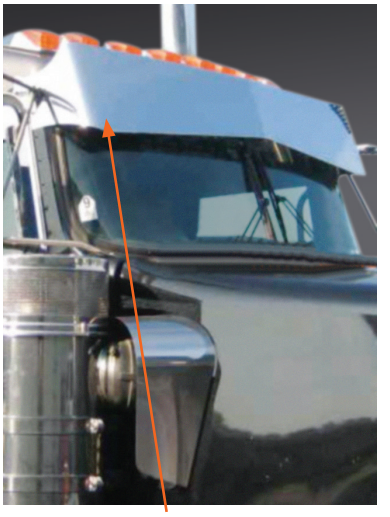

VK132003-BF

VK132001-BF
GANGSTER BUTTERFLY
VISOR - DROP - W900
CURVED WINDSHIELD
1995 - 2006 - 2 PC

VK132001P-BF
GANGSTER BUTTERFLY
VISOR PAINTABLE - DROP - W900 -
CURVED WINDSHIELD - 1995 - 2006- 2 PC
RAW 18-GAUGE STEEL

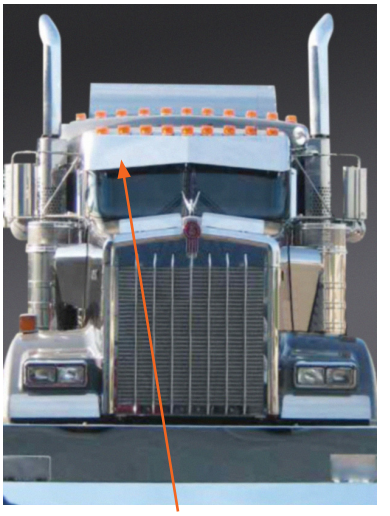

VK132003-BF

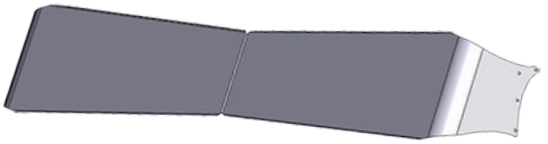

VK132010
12" GANGSTER DROP VISOR
2007-NEWER (2 PIECE)
(FITS TRUCKS WITH CURVED WIND-
SHIELD)

VK132010G
12" GANGSTER DROP VISOR
2007-NEWER (1 PIECE)
(FITS TRUCKS WITH CURVED WIND-
SHIELD)

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107 FOR LIGHT OPTIONS

KENWORTH W900

BOLTLESS WICKED VISORS

MOUNTING HARDWARE INCLUDED

VK135001
KW - 13" - WICKED - DROP - W900 AEROCAB CURVED 1995-2006 - 2 PIECE

VK135002
KW - 13" - WICKED - DROP - W900 - CABS W/ SPLIT FLAT WINDSHIELDS 1984 TO 1998 - 2 PIECE

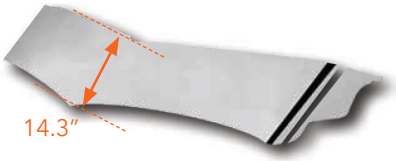

VK135003
KW - 14" - WICKED - DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PIECE

VK135004
KW - 13" - WICKED - DROP - W900 - CABS W/ SPLIT FLAT WINDSHIELD 1999 & NEWER - 2PIECE

VK136001
KW - 14" - WICKED GANGSTER - W900 - CURVED WINDSHIELD - 1995-2006 - 2 PIECE

VK136003
KW - 14" - WICKED GANGSTER - W900, T660, T800 - CURVED WINDSHIELD - 2007-NEWER - 2 PIECE

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VK135002-P
RAW 18 GAUGE STEEL

COOL BOLTLESS LOOK!

VK135001

YOU SAY
WICKED
LIKE IT'S A BAD THING

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

KENWORTH W900

CATALYTIC SYSTEM BOX HIGHLIGHT

VK150020
2014- W900 L - CATALYTIC STEP COVER

VK150021
2014- W900 L - CATALYTIC COVER HIGHLIGHT - 2 PCS

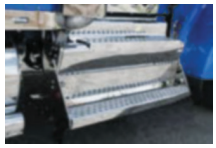

VK150022
2014- W900 L - CATALYTIC STEP HIGHLIGHTS - 5 PCS

DEF TANK COVER

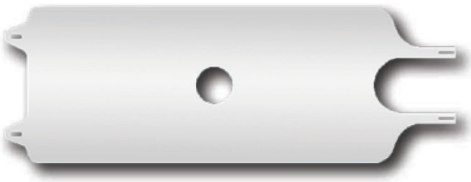

VK150028
KW - 2014 W900 L - DEF TANK COVER

STAINLESS DECK PLATES

VK192010
FRONT DECK PLATE FLUSH MOUNT - W/ AIR LINE BOX CUTOUT - 2014 W900 L

VK192011
MID DECK PLATE FLUSH MOUNT - 2014 W900 L - 66"X27"

VK192012
REAR DECK PLATE - FLUSH MOUNT - 2014 W900 L

KENWORTH W900

FUEL TANK FAIRINGS

BRACKETS & MOUNTING HARDWARE INCLUDED
NOT AVAILABLE IN 430 STAINLESS
FAIRINGS FOR STANDARD WIDTH TANK STRAPS SHOWN

60″

VK150001
KW - FUEL TANK FAIRINGS 60″ - W900 - 1998 & NEWER - PAIR

66″

VK150002
KW - FUEL TANK FAIRINGS 66″ - W900 - 1998 & NEWER - PAIR

73″

VK150003
KW - FUEL TANK FAIRINGS 73″- W900 - 1998 & NEWER - PAIR

STANDARD

VK150001R
KW - FUEL TANK FAIRINGS 60″ - ROUND - W900 - 1998 & NEWER

VK150002R
KW - FUEL TANK FAIRINGS 14″ 66″ - ROUND - W900 - 1998 & NEWER

VK150003R
KW - FUEL TANK FAIRINGS 73″ - ROUND - W900 - 1998 & NEWER

ROUNDED

CUSTOM FAIRINGS FOR WIDE STRAPS SHOWN - CALL FOR YOUR CUSTOM SETUP

EXAMPLE

VK150003-5GA

ADD LIGHTS TO YOUR FAIRING – SEE PAGES 106-107

VALLEY CHROME PLATING

KENWORTH W900

LOWER HOOD PANELS

KENWORTH LOGO NOT INCLUDED

VK100016
KW - LOWER HOOD PANELS -
W900 1989 & NEWER - PR

CENTER HOOD TRIM

VK100021
KW - W900L CENTER
HOOD TRIM
TAPE MOUNT

STAINLESS ACCESSORIES

KENWORTH T600

Photo submitted by Tony St Bernard

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

KENWORTH T600

SLEEPER PANELS

VK142035
KW SLEEPER PANELS - T600 (1995 & NEWER, NO FAIRINGS) T800 (1986 & NEWER), W900 (1986 & NEWER) - 42" - BLANK

VK142008
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 60" - BLANK - 1995 & NEWER

VK142015
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 72" - BLANK

VK142023
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 86" – BLANK

VK142030
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING , PASS SIDE NOTCHED FOR EXH - T600, T800, W900 - 62" - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE
VK142008-3UN

EXAMPLE
VK142008-5RA

EXAMPLE
VK142023-8GA

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VK143001
SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK - 1992 - 2012

EXAMPLE
VK143001-1GA

KENWORTH T600

STAINLESS GRILLES

MOUNTING HARDWARE INCLUDED

VK120600
KW GRILL T600B -
HORIZONTAL - RIVETED

BUG SHIELDS

MOUNTING HARDWARE INCLUDED

VK120012
KW STAINLESS BUG SHIELD
- T600

VALLEY CHROME PLATING

KENWORTH T600

BATTERY & TOOL BOX COVERS

VK150004
KW - BATTERY BOX COVER - T600, T800, W900 - 39.5" X 9.0"

VK150005
KW - BATTERY BOX COVER - T600, T800, W900 - 45" X 9"

VK150006
KW - TOOL BOX COVER - T600, T800, W900 - 39.5" X 8.5"

VK150007
KW - TOOL BOX COVER - T600, T800, W900 - 45" X 8.5"

SIDE MARKER TRIM

VK140001
T600 SIDE MARKER LIGHT ACCENT TRIM - PAIR

VALLEY CHROME PLATING

STAINLESS ACCESSORIES

KENWORTH T660

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

KENWORTH T660

CAB PANELS

MOUNTING HARDWARE INCLUDED

VK110201
T660 - CAB PANELS - BLANK"

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

BUG SHIELDS

MOUNTING HARDWARE INCLUDED

VK120015
KW STAINLESS BUG SHIELD
- T660

STAINLESS SUN VISORS

MOUNTING HARDWARE INCLUDED

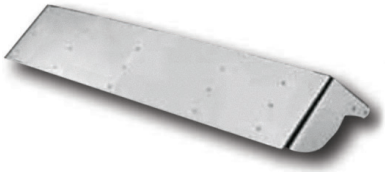

VK130003
KW - 13" - DROP VISOR - (W900 2007-2013) - (T660, T800 2007-2015)- CURVED WINDSHIELD

VK131003
KW - 13" - DROP VISOR - W900 - T660 - CURVED WINDSHIELD - 2007 & NEWER - 1PC - BOLTLESS

KENWORTH T660

GANGSTER VISORS

MOUNTING HARDWARE INCLUDED

VK132003
KW - 12" - GANGSTER VISOR
DROP - W900, T660, T800 - CURVED
WINDSHIELD - 2007 & NEWER - 2 PC

VK132003 - BF
KW - 12" - GANGSTER VISOR - BUTTERFLY
DROP - W900, T660, T800 - CURVED
WINDSHIELD - 2007 & NEWER - 2 PC

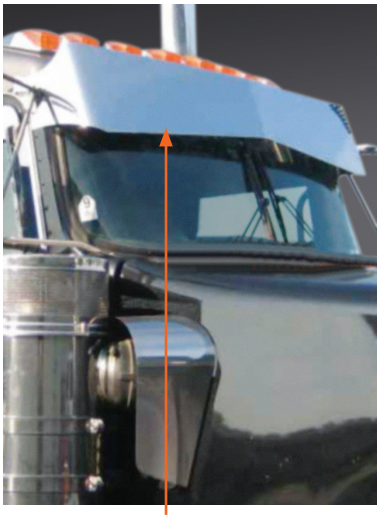

VK132003-BF

ABOVE VISORS ARE ONLY AVAILABLE IN 12"

BOLTLESS WICKED VISORS

MOUNTING HARDWARE INCLUDED

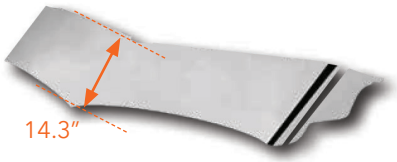

VK135003
KW - 14" - WICKED -
DROP - W900, T660, T800
- CURVED WINDSHIELD -
2007 & NEWER - 2 PIECE

COOL BOLTLESS LOOK!

VK136003
KW - 14" - WICKED
GANGSTER - W900,
T660, T800 - CURVED
WINDSHIELD -
2007-NEWER - 2 PIECE

YOU SAY
WICKED
LIKE IT'S A BAD THING

KENWORTH T660

BATTERY & TOOL BOX COVERS

VK150008
T660 DAY CAB BATTERY BOX
HIGHLIGHT

KENWORTH T680

1	VK110028	Top of door trim – "lowered" look
2	VK110209	Cab Panel – Blank (VK110209-3GA shown)
3	VK150029	DEF Tank Cover
4	VK120101	Bug shield
5	VK130007	12" drop visor
6	FV-0010-708	Chrome front bumper (other options available)

KENWORTH T680

CAB & COWEL PANELS

MOUNTING HARDWARE INCLUDED

VK110209
2015 T680 - CAB PANELS - BLANK"
VERTICAL EXHAUST ONLY

VK110210
2016 T680 - CAB PANELS - BLANK

VK110211
2016 T680 - CAB PANELS - BLANK
W/HEATER PLUG HOLE

VK110210
(ALTERNATE VIEW)

VK110308
2021-2023 COWEL PANEL
(FITS HIGH-ROOF TRUCKS)

VK110308-4GSCA
2021-2023 COWEL PANEL
W/4 GRANITE SLIM CLEAR AMBER LIGHTS
(FITS HIGH-ROOF TRUCKS)

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VK143001
SLEEPER EXTENSION PANELS
- T600, T800, W900 - BLANK -
1992 - 2012

DOOR AND WINDOW TRIM

VK110222
KW - T680 DOOR ENTRY KICK
PANELS - 4PCS UPPER &
LOWER

VK110028
KW T680 LOWERED LOOK - 2015

KENWORTH T680

BUG SHIELDS

MOUNTING HARDWARE INCLUDED

VK120101
KW STAINLESS BUG SHIELD - T680

VK120104
KW STAINLESS BUG SHIELD
- T680
(FITS TRUCKS W/O HOOD MIRRORS

FENDER GUARDS

VK120018
KW - T680 FENDER GUARDS
- FITTED - 4PCS. UPPER &
LOWER

STAINLESS SUN VISORS

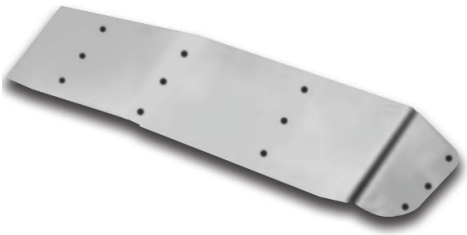

VK130007
KW - 13" - DROP - T680, T880 -
CURVED WINDSHIELD - 2015
REPLACES FACTORY VISOR ONLY

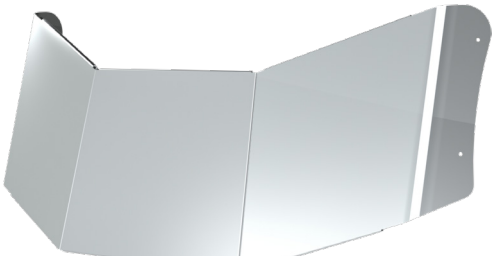

VK130008
KW - 15" DROP VISOR T680
MID-ROOF STANDUP SLEEPER
WITH NO EXISTING FACTORY VISOR
(ADD -16 TO END OF PN FOR 16")

KENWORTH T680

DEF TANK COVER

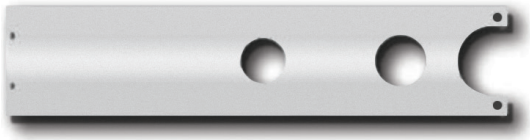

VK150029
KW - UREA TANK COVER 2015
T680

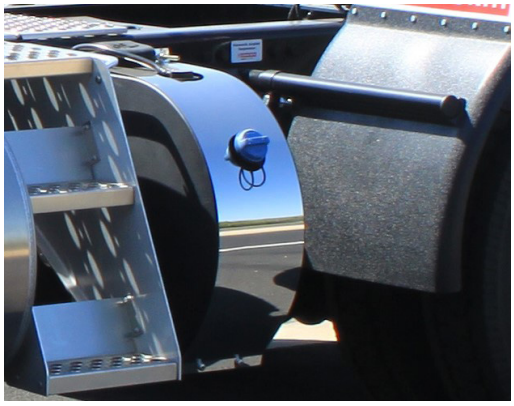

VALLEY CHROME PLATING

STAINLESS ACCESSORIES

KENWORTH T800 & T880

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

KENWORTH T800 & T880

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED

VK142035
KW SLEEPER PANELS - T600 (1995 & NEWER, NO FAIRINGS) T800 (1986 & NEWER), W900 (1986 & NEWER) - 42" - BLANK

VK142008
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 60" - BLANK - 1995 & NEWER

VK142015
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 72" - BLANK

VK142023
KW SLEEPER PANELS - AEROCAB - NO SIDE FAIRING - T600, T800, W900 - 86" – BLANK

VK142039
T880, 76" SLEEPER PANEL (FITS TRUCKS W/O VERT EXHAUST)

VK110216
T880 CAB PANEL 33.75" - BLANK

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE
VK142008-3UN

EXAMPLE
VK142008-5RA

EXAMPLE
VK142023-8GA

SLEEPER EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VK143001
SLEEPER EXTENSION PANELS - T600, T800, W900 - BLANK - 1992 - 2012

EXAMPLE
VK143001-1GA

VK142037
40" SLEEPER PANEL T880 - BLANK

KENWORTH T800 & T880

BUG SHIELDS

MOUNTING HARDWARE INCLUDED

VK120013
KW STAINLESS BUG SHIELD
- T800

FENDER GUARDS

VK120022
KW - FENDER GUARDS - T-800
AERO CAB -1996 & NEWER - PAIR

STAINLESS SUN VISORS

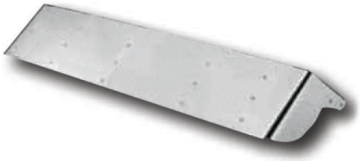

VK130003
KW - 13" - DROP VISOR - (W900 2007-2013) - (T660, T800 2007-2015)- CURVED WINDSHIELD
MOUNTING HARDWARE INCLUDED

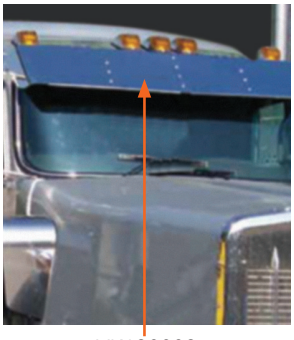

VK130003

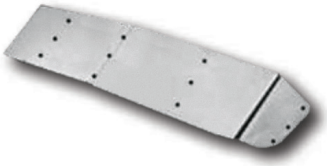

VK130007
KW - 13" - DROP - T680, T880 -
CURVED WINDSHIELD - 2015
DAY CAB ONLY
NO MOUNTING HARDWARE INCLUDED
REPLACES FACTORY VISOR ONLY

VK120700
T880 BEHIND BUMPER TRIM

KENWORTH T800 & T880

GANGSTER VISORS

MOUNTING HARDWARE INCLUDED

VK132003
KW - 12" - GANGSTER VISOR - DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC

VK132003 - BF
KW - 12" - GANGSTER VISOR - DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PC

ABOVE VISORS ARE ONLY AVAILABLE IN 12"

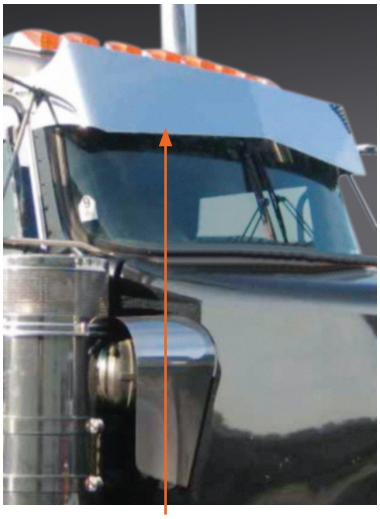

VK132003-BF

BOLTLESS WICKED VISORS

MOUNTING HARDWARE INCLUDED

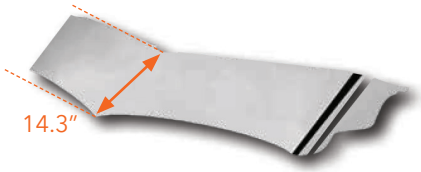

VK135003
KW - 14" - WICKED - DROP - W900, T660, T800 - CURVED WINDSHIELD - 2007 & NEWER - 2 PIECE

COOL BOLTLESS LOOK!

VK136003
KW - 14" - WICKED GANGSTER - W900, T660, T800 - CURVED WINDSHIELD - 2007-NEWER - 2 PIECE

YOU SAY
WICKED
LIKE IT'S A BAD THING

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

KENWORTH T800 & T880

BATTERY & TOOL BOX COVERS

VK150004
KW - BATTERY BOX COVER - T600, T800, W900 - 39.5" X 9.0"

VK150005
KW - BATTERY BOX COVER - T600, T800, W900 - 45" X 9"

VK150006
KW - TOOL BOX COVER - T600, T800, W900 - 39.5" X 8.5"

VK150007
KW - TOOL BOX COVER - T600, T800, W900 - 45" X 8.5"

ALL KENWORTH MODELS

EXTERIOR WINDOW TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

VK110002
KW DAYLIGHT DOOR OUTER TRIM - 6PC

VK110012
KW EXTERIOR WINDOW TRIM - PASSENGER DOOR VIEW - DAYLIGHT DOOR

VK110013
KW EXTERIOR WINDOW TRIM PASSENGER DOOR VIEW

DOOR HANDLE TRIM

VK110003
PB, KW STAINLESS DOOR HANDLE TRIM - PAIR

AIR DEFLECTORS

VK110001
T300 T600 T800 W900 WINDOW AIR DEFLECTORS PAIR

LOWER LOOK

VK110017
KW WINDOW LOWERED LOOK 4.5" FITS DAYLIGHT DOOR ONLY

VK110030
KW WINDOW LOWERED LOOK FITS T680 & T880 TRUCKS W/PAS-SENGER MIRROR

VK120101
KW BUG SHIELD FITS T680 & T880 TRUCKS

FENDER TRIM

VK120020
T480 FENDER TRIM

ALL KENWORTH MODELS

EMBLEM ACCENTS

KENWORTH LOGO NOT INCLUDED

VK100001
EMBLEM ACCENT
OLD GLORY - PAIR
TAPE MOUNT

VK100002
EMBLEM ACCENT
3 POINT SLOTTED - PAIR
HARDWARE INCLUDED -PAIR

VK100003
EMBLEM ACCENT
FLAMES - PAIR
TAPE MOUNT

VK100004
EMBLEM ACCENT
HIGH LIGHT - PAIR
HARDWARE INCLUDED

VK100005
EMBLEM ACCENT
3 POINT - PAIR
HARDWARE INCLUDED

VK100006
EMBLEM ACCENT
SATURN - PAIR
HARDWARE INCLUDED

VK100007
EMBLEM ACCENT
SHORT SATURN - PAIR
HARDWARE INCLUDED

VK100008
EMBLEM ACCENT
3-D LOOK - PAIR
HARDWARE INCLUDED

VK100009
EMBLEM ACCENT
VICTORY LANE - PAIR
HARDWARE INCLUDED

VK100012
EMBLEM ACCENT
U SHAPED UNDERLINE
HARDWARE INCLUDED

VK100015
EMBLEM ACCENT
OVAL W/ UPWARD FLAME
TAPE MOUNT

HOOD LATCH GUARDS

VK100017
KW - HOOD LATCH GUARDS
T222, T800, W900 1989 &
NEWER - PAIR

VK100018
KW - HOOD LATCH GUARDS
ALL MODELS W/ BALL LATCH
1968 -1989 - PAIR

VU190011
PB, FL, KW, HOOD LATCH
ACCENT TRIM - PAIR

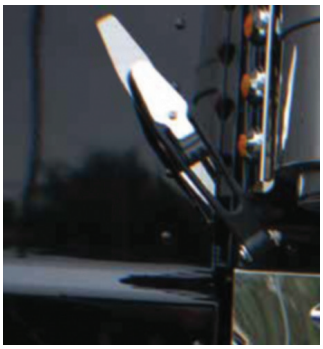

ALL KENWORTH MODELS

SLEEPER WINDOW TRIM

VK140002
W9L SLEEPER
WINDOW TRIM - PAIR

VK140003
KW 72" SLEEPER
UPPER WINDOW TRIM
(SLIDING OR SWING) PAIR

VK140004
KW 86" STUDIO SLEEPER UPPER
SLIDING WINDOW TRIM PAIR

REAR FRAME COVERS

VK160001
KW - REAR FRAME COVER -
1992 & NEWER

VK160002
KW - REAR FRAME COVER -
STEER HEAD - 1992 & NEWER

STAINLESS FUEL TANK WRAPS

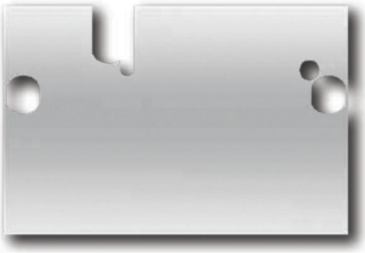

VK150040
KW - 2014 FUEL TANK -
HYDRAULIC TANK COMBO
WRAP - 72"

VK150041
KW - 2014 FUEL TANK WRAP -
75 GALLON - 57"

FREIGHTLINER FLD/CLASSIC

FREIGHTLINER FLD / CLASSIC

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

VF110015
FL - CAB PANEL - BLANK -
PAIR – 1991 NEWER CLASSIC

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

EXAMPLE
VF110015-3UN

EXAMPLE
VF110015-4GA

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED

VF142003
2001 CLASSIC XL INTEGRAL SLEEPER NO AERO
WINGS - 48" SLEEPER PANELS - PAIR- BLANK

FREIGHTLINER FLD / CLASSIC

HOOD LATCH GUARDS

VF100001
FL - HOOD LATCH GUARDS - CLASSIC 1993 & NEWER - PAIR

VF100005
FL - HOOD LATCH GUARDS - CLASSIC X L - 1993 & NEWER - PAIR

VU190011
PB, FL, KW, HOOD LATCH ACCENT TRIM - PAIR

HOOD TRIM

VF100010
FL CLASSIC FRONT SIDE OF HOOD
TRIM W/ FLAMES PAIR

VF100011
FL - LOWER HOOD PANELS - CLASSIC X L - 1993 & NEWER - PAIR

LOWERED LOOK WINDOW PANELS

VF110018
FLD & CLASSIC 5.75" LOWERED LOOK WINDOW PANELS

FREIGHTLINER FLD / CLASSIC

MISC. TRIM PIECES

VF110013
FL- DOOR LATCH TRIM - CENTURY / COLUMBIA / CLASSIC FLD - PAIR

VF114001
FREIGHTLINER CLASSIC - HOOD EXTENSION PANEL - LAY-OVER - PAIR

AIR CLEANER LIGHT BOXES

VF112001
FL - CLASSIC - FRONT - AIR CLEANER LIGHT BOXES - BLANK - PAIR

VF113001
FL - CLASSIC - REAR - AIR CLEANER LIGHT BOXES - BLANK - PAIR

ADD LIGHTS TO YOUR LIGHT BOX – SEE PAGES 106-107

FREIGHTLINER FLD / CLASSIC

FENDER GUARDS

VF120003
FL CLASSIC & X L UPPER FENDER GUARDS (SHORT & LONG HOOD) PAIR

VF120004
FL - FENDER GUARDS - EXTENDED HOOD - CLASSIC - 1993 & NEWER - PAIR

VF120007
FL - FENDER GUARDS - FLD 120 - 1989 & NEWER

STAINLESS TRIM FOR PLASTIC BUMPERS

VF120001
FLD SETBACK AXLE BUMPER TRIM KIT W/ 1 TOW PIN & FOG LIGHT HOLES 3 PC

ALSO CHECK OUT OUR EXTENSIVE LINE OF FULL METAL REPLACEMENT BUMPERS:
CLASSIC, PAGES 11-13
FLD SETBACKS, PAGES 15-18

FREIGHTLINER FLD / CLASSIC

BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED

VF120010
FL - BUG SHIELD - STAINLESS
- CLASSIC & CLASSIC XL

VF120011
FL - BUG SHIELD - STAINLESS
- FLD 120

VALLEY CHROME PLATING

FREIGHTLINER FLD / CLASSIC

SUN VISORS

VF130001
FL - 18" DROP VISOR - CLASSIC RAISED ROOF CONDO - 9 - 2" ROUND - NO LIGHTS INCLUDED

VF130002
FL - 18" DROP VISOR - CLASSIC MID ROOF - 9 - 2" RD - NO LIGHTS INCLUDED

VF130006
FL-13" - DROP VISOR - CLASSIC XL FLAT TOP - REPLACES FACTORY STAINLESS ONLY - DOES NOT REPLACE FIBERGLASS.
DOES NOT WORK WITH TRUCKS WITHOUT EXISTNG VISOR.

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VF130001P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

VF132001G-RBF
FL -

FREIGHTLINER FLD / CLASSIC

WICKED BOLTLESS VISORS

VF135001
FL - 18" - WICKED - DROP VISOR - CLASSIC RAISED ROOF CONDO - 9 - 2" ROUND - NO LIGHTS INCLUDED - 2 PC

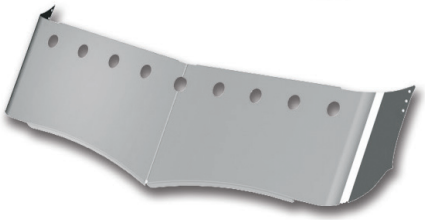

VF135002
FL - 18" - WICKED - DROP VISOR - CLASSIC MID-ROOF - 9 - 2" RD - NO LIGHTS INCLUDED - 2 PC

VF135006
FL - 13" - WICKED - DROP VISOR - CLASSIC XL - FLAT TOP UP TO 2001 REPLACES STAINLESS FACTORY VISOR - 2 PC

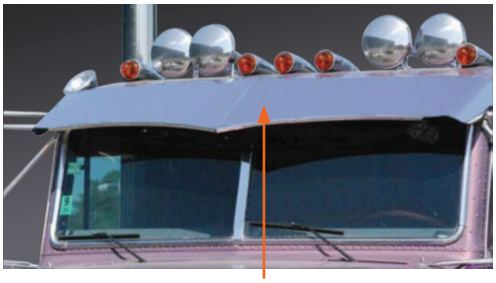

VF135006

YOU SAY
WICKED
LIKE IT'S A BAD THING

COOL BOLTLESS LOOK!

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

VALLEY CHROME PLATING

STAINLESS ACCESSORIES

FREIGHTLINER CENTURY & COLUMBIA

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

FREIGHTLINER CENTURY & COLUMBIA

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

VF110020
FL - CAB PANEL - 4" - 2005
AND NEWER CENTURY/COLUMBIA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS

VF140020
2005 AND NEWER CENTURY/
COLUMBIA SLEEPER PANEL +
EXTENSION - 1PC - 70" - BLANK

MISC. TRIM PIECES

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

VF110013
FL- DOOR LATCH TRIM -
CENTURY / COLUMBIA /
CLASSIC FLD - PAIR

VF110014
FL - VIEW WINDOW TRIM RING
- CENTURY / COLUMBIA

VF110019
FL - CENTURY / COLUMBIA UPPER CAB
HIGHLIGHT - 2PCS

FREIGHTLINER CENTURY & COLUMBIA

STAINLESS TRIM FOR PLASTIC BUMPERS

VF120002
FL CENTURY PLASTIC BUMPER TRIM
03-OLDER - 3 PC
TAPE MOUNT

ALSO CHECK OUT OUR EXTENSIVE LINE OF FULL METAL REPLACEMENT BUMPERS:
CENTURY, PAGES 19-20
COLUMBIA, PAGES 19-20

BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED

VF120013
FL - BUG SHIELD - STAINLESS - CENTURY

VF120014
FL - BUG SHIELD - STAINLESS – COLUMBIA

VALLEY CHROME PLATING

FREIGHTLINER CENTURY & COLUMBIA

SUN VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING

VF130003
FL-18" - DROP VISOR - RAISED ROOF CENTURY - 2003 & OLDER - 10 - 2" ROUND - HOLES - NO LIGHTS INCLUDED ALSO FITS 2009 & OLDER CORONADO

VF130007
FL-18" DROP VISOR - RAISED ROOF CENTURY & COLUMBIA - 2004 & NEWER - 10 - 2" RD HOLES - NO LIGHTS INCLUDED

VF130014
FL - 14" DROP VISOR - 04 CORONADO DAY CAB 06 - NEWER & COLUMBIA- NO LIGHTS
ONLY FOR TRUCKS WITHOUT EXISTING FACTORY VISOR

VF130016
FL - 16" DROP VISOR - 04 CENTURY/05 COLUMBIA MID ROOF - NO LIGHTS

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END FOR PAINTABLE. EXAMPLE:

VF130003P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

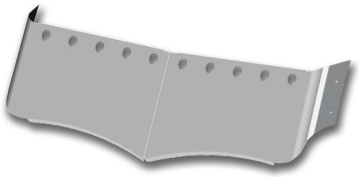

VF135003
FL - 18" - WICKED - DROP VISOR - CENTURY-RAISED ROOF - UP TO 2003 - 2 PC

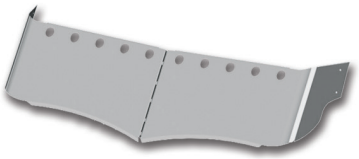

VF135007
FL- 18" - WICKED - DROP VISOR - CENTURY & COLUMBIA 2004 - NEWER - 2 PC - 10 2" ROUND HOLES NO LIGHTS INCLUDED

VF135016
FL - 16" WICKED - DROP VISOR - 04 CENTURY/05 COLUMBIA MID ROOF - NO LIGHTS

YOU SAY
WICKED
LIKE IT'S A BAD THING

COOL BOLTLESS LOOK!

STAINLESS ACCESSORIES

FREIGHTLINER CORONADO 2002-2009 & GLIDER KITS

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

FREIGHTLINER CORONADO 2002-2009/GLIDERS

BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED

VF120012
FL - BUG SHIELD - STAINLESS - CORONADO

SUN VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING

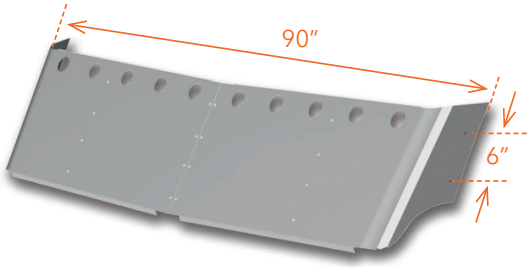

VF130003
FL-18" - DROP VISOR - RAISED ROOF CENTURY - 2003 & OLDER - 10 - 2" ROUND - HOLES - NO LIGHTSINCLUDED ALSO FITS 2009 & OLDER CORONADO

VF130014
FL - 14" DROP VISOR - 04 CORONADO DAY CAB 06 - NEWER & COLUMBIA- NO LIGHTS

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

STAINLESS ACCESSORIES

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

CAB PANELS 4"

MOUNTING HARDWARE INCLUDED

VF110200
CAB PANEL 4" - CASCADIA - BLANK PAIR

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED

VF140010
CASCADIA SLEEPER PANEL 48"

VF142101
FL SLEEPER EXTENSION PANEL - CASCADIA - 48" - BLANK

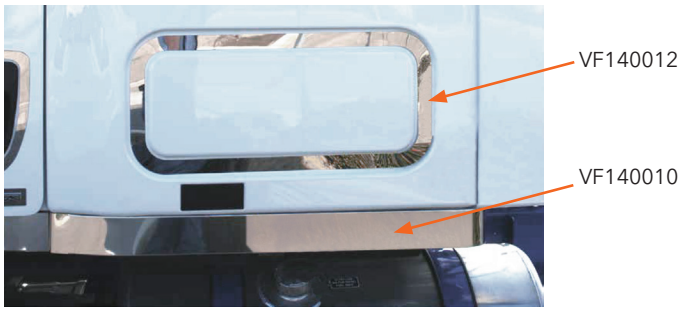

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

FAIRING PANELS

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

MID FAIRING KIT:

VF142009
2008 CASCADIA MID FAIRING PANELS - 6 PCS - BLANK

LOWER FAIRING KIT:

VF142012
2008 CASCADIA LOWER FAIRING PANELS - 6 PCS - BLANK

UNDER FAIRING KIT:

VF142014
2008 CASCADIA MID FAIRING PANELS - 6 PCS - BLANK

UNDER FAIRING INDIVIDUAL PIECES:

VF142014-1
2008 CASCADIA UNDER FAIRING PANEL - FRONT PASS SIDE

VF142014-2
2008 CASCADIA UNDER FAIRING PANEL - MIDDLE PASS SIDE

VF142014-3
2008 CASCADIA UNDER FAIRING PANEL - REAR PASS SIDE

VF142014-4
2008 CASCADIA UNDER FAIRING PANEL - FRONT DRIVERS SIDE

VF142014-5
2008 CASCADIA UNDER FAIRING PANEL - MIDDLE DRIVERS SIDE

VF142014-6
2008 CASCADIA UNDER FAIRING PANEL - REAR DRIVERS SIDE

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

FENDER TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

VF100012
FL - CASCADIA FENDER TRIM - 2PC

VF100013
FL - CASCADIA FENDER TRIM EXT. - 2PC

HOOD & DOOR TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

VF100016
FL - HOOD LIGHT TRIM - PAIR

VF100015
FL - CASCADIA AIR VENT ACCENT

VF110016
CASCADIA DOOR
HANDLE TRIM

LOWERED LOOK WINDOW PANELS

VF110017
CASCADIA LOWERED LOOK
WINDOW PANELS
ALSO FITS 2018 & NEWER P4 MODEL CASCADIAS

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

STAINLESS TRIM FOR PLASTIC BUMPERS

VF120017
CASCADIA FENDER TRIM - ABOVE BUMPER - PAIR

VF120006
CASCADIA FT BUMPER TRIM - 4PC - TAPE MOUNT

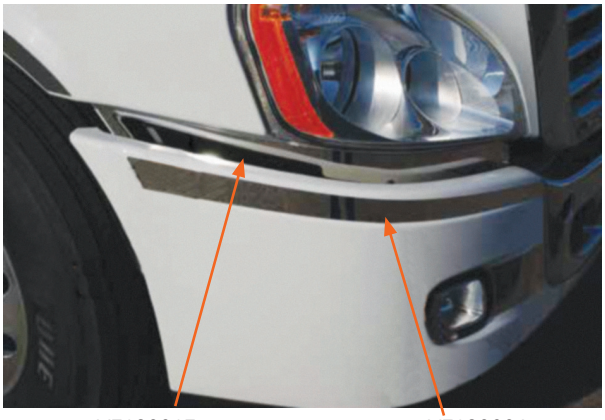

ALSO CHECK OUT OUR EXTENSIVE LINE OF FULL METAL CASCADIA REPLACEMENT BUMPERS: PAGE 21-22

BUG SHIELDS

RUBBER TRIM & MOUNTING HARDWARE INCLUDED

VF120015
FL - BUG SHIELD - STAINLESS - CASCADIA

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

SUN VISORS

BRACKETS AND MOUNTING HARDWARE INCLUDED
AVAILABLE IN 304 STAINLESS STEEL – CALL FOR PRICING

VF130017
FL – 18" STD MOUNT DROP VISOR
CASCADIA "P3" YRS. 2017 OLDER
CONDO/MID SLEEPER
FOR TRUCKS WITH OR WITHOUT FACTORY VISOR

PAINTABLE VISORS AVAILABLE

JUST ADD "P" TO THE END
FOR PAINTABLE. EXAMPLE:

VF130017-P
RAW 18 GAUGE STEEL

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

VF135017
FL - 18" WICKED DROP VISOR - 2PC
CASCADIA "P3" YRS. 2017 & OLDER
CASCADIA "P4" YRS. 2018 & NEWER
CONDO, MID ROOF
REPLACES FACTORY VISOR

COOL BOLTLESS LOOK!

VF130017BF
FL - 18" STD MOUNT BUTTERFLY VISOR
CASCADIA "P3" YRS. 2017 & OLDER
CONDO, MID ROOF
FOR TRUCKS WITH OR WITHOUT FACTORY VISOR

VF131017
FL - CASCADIA, 18" 1-PIECE VISOR (2010-2017) (FITS CONDO SLEEPER)

FREIGHTLINER CASCADIA 2017 & OLDER "P3"

FUEL TANK COVERS

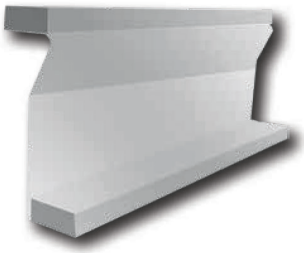

VF150006
FL - CASCADIA FUEL TANK COVER W/STEPS - PASS SIDE

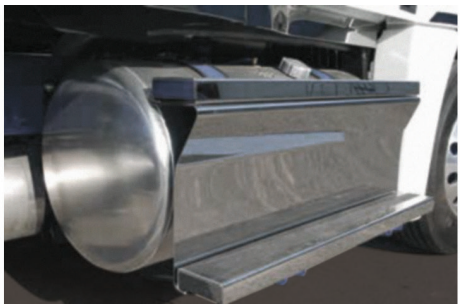

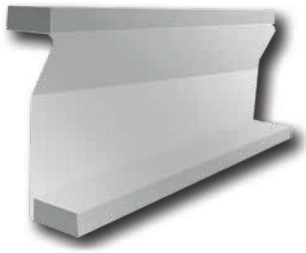

VF150007
FL - CASCADIA BATTERY BOX/ FUEL TANK COVER - 2011 DAY CAB 34"

BATTERY BOX COVERS & STEPS

VF150000
FL - CASCADIA BATTERY BOX COVER

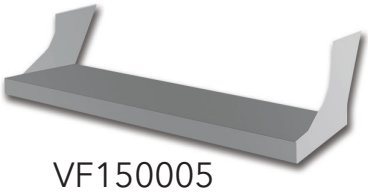

VF150005
FL - CASCADIA UNDER BATTERY BOX STEP- 3PC.

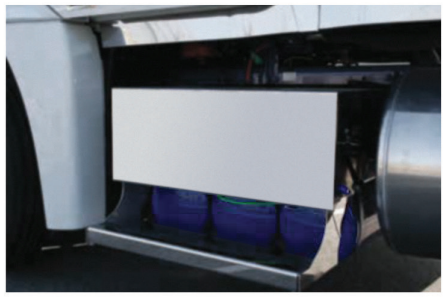

VF150010
FL - CASCADIA BATTERY BOX UPPER - 2011 DAY CAB 34"

VF150011
FL - CASCADIA BATTERY BOX UPPER - 2011 DAY CAB 40"

CATALYTIC COVERS

VF150008
FL - CASCADIA CATALYTIC COVER - LOWER 2011 DAY CAB 40"

VF150009
FL - CASCADIA CATALYTIC COVER - UPPER 2011 DAY CAB 40"

FREIGHTLINER ACCESSORIES - ALL MODELS

EMBLEM ACCENTS

VF100002
FL - EMBLEM ACCENTS -
W/ CUTOUTS - PAIR
INCLUDES MOUNTING HARDWARE

VF100004
FL - EMBLEM ACCENTS -
16" - PAIR
TAPE MOUNT

PERMIT PANELS

VF110007
FL - PERMIT PANEL - EMBLEM
& CUTOUT - LEFT -
1998 & NEWER

VF110008
FL - PERMIT PANEL - PLUG
CUTOUT - LEFT -
1998 & NEWER



VF110009
FL - PERMIT PANEL - EMBLEM
CUTOUT - LEFT -
1998 & NEWER

VF110010
FL - PERMIT PANEL - BLANK -
LEFT - 1998 & NEWER

VF110011
FL - PERMIT PANEL - EMBLEM
CUTOUT - RIGHT -
1998 & NEWER

VF110012
FL - PERMIT PANEL - BLANK -
RIGHT - 1998 & NEWER

FUEL TANK FAIRING

BRACKETS AND MOUNTING HARDWARE INCLUDED
NOT AVAILABLE IN 430 STAINLESS

VF150001
FL - FUEL TANK FAIRINGS -
82" - PAIR

VF150002
FL - FUEL TANK FAIRINGS -
87" - PAIR

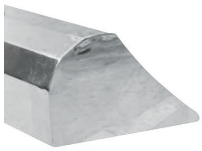

STAINLESS ACCESSORIES

INTERNATIONAL

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

INTERNATIONAL

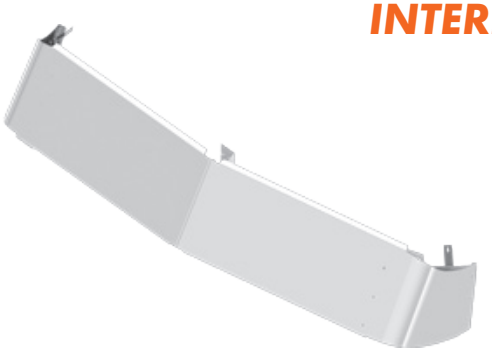

VI130003
INTL - 12" DROP VISOR 2PC
FITS PROSTAR & LONESTAR

VI135003
INTL - 12" TAPERED TO 16" IN CENTER
WICKED DROP VISOR - 2PC
FITS PROSTAR & LONESTAR

VI135003-10BYCA

ADD LIGHTS TO YOUR VISOR OR PANEL – SEE PAGES 106-107

VI120107
INTL - BUG SHIELD FITS MODEL 9900
STAINLESS STEEL
RUBBER TRIM & MOUNTING HARDWARE INCLUDED

VI110200
INTL - CAB PANELS - FITS MODELS 9200,9300,9400
STAINLESS STEEL

STAINLESS ACCESSORIES

VOLVO VNL

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

VOLVO VNL

HOOD & FENDER TRIM

VV120002
FENDER GUARD - UPPER - 780 SERIES
TAPE MOUNT

VV100003
FENDER GUARD - UPPER - 780 SERIES
TAPE MOUNT

BUG SHIELD

MOUNTING HARDWARE INCLUDED

VV120107
BUG DEFLECTOR 630, 670,780, 830, 880 SERIES

STAINLESS TRIM FOR FACTORY VISORS

VV130000
VISOR INSERT - 700, 800 SERIES

VOLVO VNL

FAIRING HIGHLIGHTS

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

VV121000
FRONT FAIRING UPPER
STEP PANEL - PAIR

VV121001
FRONT FAIRING UPPER
STEP HIGHLIGHT
2PCS

VV121002
FRONT FAIRING LOWER
STEP PANEL - PAIR

VV121003
FRONT FAIRING LOWER
STEP HIGHLIGHT

VV121004
FRONT FAIRING LOWER
STEP BOTTOM HIGHLIGHT

VV121005
REAR FAIRING UPPER
STEP HIGHLIGHT

VV121006
REAR FAIRING LOWER
STEP PANEL

VV121007
REAR FAIRING LOWER
STEP HIGHLIGHT

VV121008
REAR FAIRING LOWER
STEP BOTTOM HIGHLIGHT

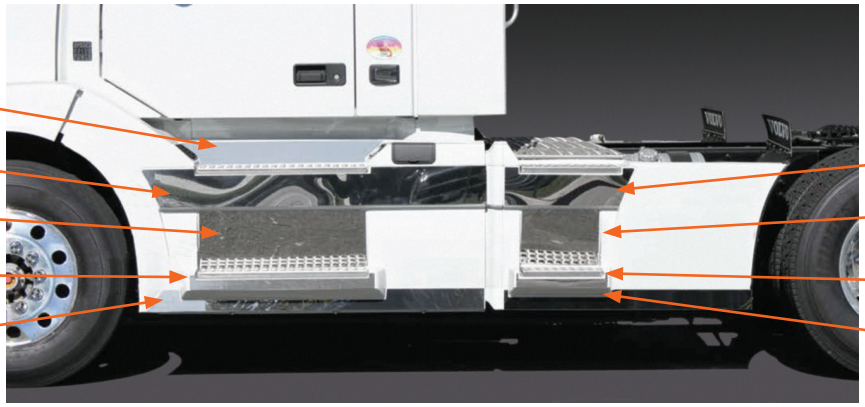

STAINLESS ACCESSORIES

VOLVO VT SERIES

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

VOLVO VT SERIES

CAB PANELS

MOUNTING HARDWARE INCLUDED

VV112000
CAB PANELS 880/830 - BLANK
- NO SIDE FAIRING

EXAMPLE
VV112000-4GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

SLEEPER PANELS

MOUNTING HARDWARE INCLUDED

VV143000
SLEEPER PANELS - BLANK -
WITH NO SIDE FAIRINGS

EXAMPLE
VV143000 - 5UN

EXAMPLE
VV143000– 5RN

EXAMPLE
VV143000 – 7RA

EXAMPLE
VV143000 – 4GA

VOLVO VT SERIES

HOOD EXTENSION PANELS

MOUNTING HARDWARE INCLUDED

VV110300
HOOD EXTENSION PANEL
- BLANK

EXAMPLE
VV110300-4GA

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

HOOD & FENDER TRIM

VV100000
HEADLIGHT TRIM - SIDE -
830, 880 SERIES
TAPE MOUNT

VV100001
TOP FENDER TRIM - 830,
880 SERIES
TAPE MOUNT

VOLVO VT SERIES

HOOD & FENDER TRIM

MOUNTS WITH STRONG 3M DOUBLE-SIDED TAPE

VV120000
FENDER GUARD - UPPER -
830, 880 SERIES

VV120001
FENDER GUARD - LOWER -
830, 880 SERIES

BUG SHIELD

MOUNTING HARDWARE INCLUDED

VV120107
BUG DEFLECTOR 630, 670,780,
830, 880 SERIES

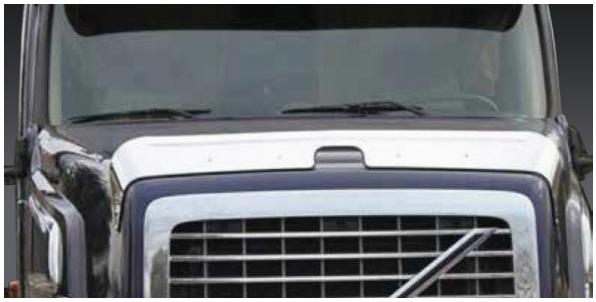

SUN VISORS

MOUNTING HARDWARE INCLUDED

VV130005
DROP VISOR - 830 MID-ROOF

VOLVO VT SERIES

BATTERY BOX COVER

VV150000
BATTERY BOX COVER - 830
VOLVO - 8PCS

FUEL TANK FAIRINGS

VV150001
FUEL TANK FAIRINGS - 68"

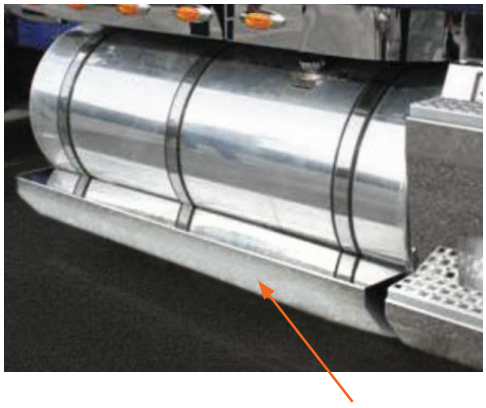

VALLEY CHROME PLATING

STAINLESS ACCESSORIES

WESTERN STAR 4700SF

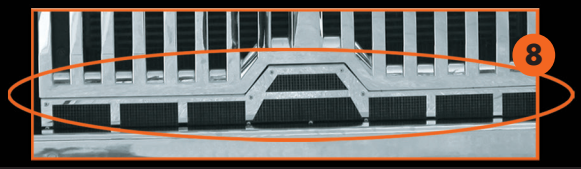

PARTS LIST:

1	IM-2110-06	Chrome Bumper (Call for Options & Price)
2	VW120005	Fender Guards (Fitted)
3	VW120006	Upper Fender Guards (Rolled)
4	VW110200-8GMA	Cab Panel Line (Cab Panels with Granite Amber Lights Shown)
	VW110200	Blank Cab Panels w/Heater Plug Holes (Not Pictured)
	VW110201	Blank Cab Panels (Not Pictured)
5	VW130001	12" Visor - 2013 & Newer
6	VW120010	Bug Shield - Stainless Steel
7	VW120011	Bug Shield - Stainless Steel - "W" Look
8	VW120201	Lower Radiator Rock Guard

Bumpers and Stainless Accessories made in the USA

VALLEY CHROME PLATING

www.valleychrome.com

WESTERN STAR 4700SF YEARS 2013 & NEWER

CAB PANELS

MOUNTING HARDWARE INCLUDED

VW110200
WS CAB PANELS - 2013 AND NEWER - 4700 SF - BLANK W/ HEATER PLUG HOLE

VW110201
CAB PANELS - BLANK - NO SIDE FAIRING - 4PCS

ADD LIGHTS TO YOUR PANEL – SEE PAGES 106-107

FENDER GUARDS

VW120005
WS FENDER GUARDS - FITTED - 4700 SF 2013 AND NEWER HARDWARE INCLUDED

VW120006
WS UPPER FENDER GUARD - FITTED 4700 SF 2013 AND NEWER TAPE MOUNT

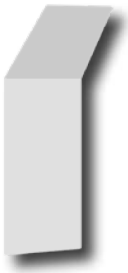

BUG SHIELDS

BRACKETS & MOUNTING HARDWARE INCLUDED

VW120010
PB BUG SHIELD - STAINLESS - 4700 SF 2013 AND NEWER

VW120011
WS BUG SHIELD - "W" STYLE - STAINLESS - 4700 SF 2013 AND NEWER

RADIATOR ROCK GUARD



VW120201
WS LOWER RADIATOR GUARD - 2013 AND NEWER 4700 SF

SUN VISORS

BRACKETS & MOUNTING HARDWARE INCLUDED

VW130001
WS 12" VISOR 2013 AND NEWER 4700 SF

5700XE YEARS 2015 & NEWER

SUN VISORS

BRACKETS & MOUNTING HARDWARE INCLUDED

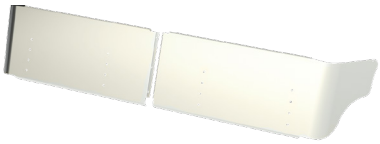

VW130002
WS SUNVISOR - 13.5" WIDE
5700XE STAINLESS

ADD LIGHTS TO YOUR VISOR – SEE PAGES 106-107

For more info on bumpers for this model, see page 85

BUG SHIELDS

MOUNTING HARDWARE INCLUDED

VW120014
WS BUGSHIELD
5700XE STAINLESS

VALLEY CHROME PLATING

47X/49X SETBACK AXLE YEARS 2021-NEWER
VISORS

VW130003
12" DROP VISOR

VW130004
15" DROP VISOR

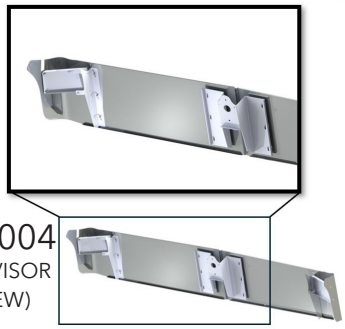

VW130004
15" DROP VISOR
(REAR VIEW)

49X SETBACK AXLE YEARS 2022-NEWER
SLEEPER EXTENSION PANEL

VW142100
SLEEPER EXTENSION
PANEL
ISO VIEW

VW142100
SLEEPER EXTENSION
PANEL

49X SETBACK AXLE YEARS 2022-NEWER
AIR INTAKE SCREEN

VW100000
AIR INTAKE SCREEN
ISO VIEW

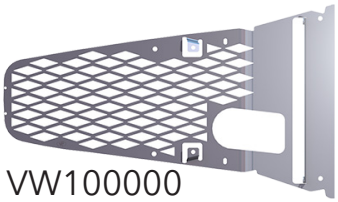

VW100000
AIR INTAKE SCREEN

49X SETBACK AXLE YEARS 2021 & NEWER
CAB PANELS

VW110202
CAB PANELS - BLANK
(FITS TRUCKS WITH CAB MOUNTED EXHAUST)

VW142000
60" SLEEPER PANEL - BLANK
(FITS TRUCKS WITH CAB MOUNTED EXHAUST)

VW110203
COWEL PANEL

THE ORIGINAL
TURBOWING
BY

VALLEY CHROME PLATING

TURBOWING

THE TURBOWING ADVANTAGE

"The Original Turbowing" is the Grand-Daddy of all air deflectors. This size, shape and design is today's air deflector of choice and will be for another 30 years. Impeccable over the road performance records make it one of the most popular accessories in the industry today, because Turbowing works. Proven efficiency saves truckers thousands of dollars in fuel costs each year. Get started today!

DURABILITY:

Turbowing "Tough" is the term unmatched in the trucking industry today. A rugged over-the-road environment remains a real-life "Tell-tale" test for big rig accessories. Some air deflectors are giving in to this harsh reality, Turbowings remain solid and continue to prove their worth, trip after trip!

FUNCTIONAL:

Testimonials from owner operators have shown consistent fuel savings of approximately ***10% up to 19%***. for the average owner/operator, this means payback for their Turbowing investment in less than six months.

EXAMINE THIS LIST OF FEATURES OFFERED ONLY BY STAINLESS COMPANY:

- Highest quality materials and hardware.
- Pre-formed body panels to reduce undue stress on rivets.
- Sleeper specific brackets attach to the strongest points of the sleeper at the factory-built supports.
- Fixed angle brackets ensure the correct angle for deflection of air, no fooling around.
- Full application range to fit all popular sleeper sizes in flat-top and raised roofs.
- Paccar approved, one of the only wing-styled air deflectors available through Paccar's parts division.
- Tested and proven so you gain every time.

TURBOWING

PICKUP TRUCK WINGS

HIGHLIGHTS OF THE STAINLESS LINE OF AIR DEFLECTORS

- 30% reduction in drag.
- Wings are available in mirror polished stainless steel.
- Reduced "bug splatter" on the front of the trailer.
- Enhances stability in windy situations.
- Increased towing speed.
- The ability to pass other large vehicles without getting bogged down or blown around from on-coming wind.
- No drilling required with easy on and off clip mount system. (For most full size domestic pickup trucks 3/4 ton and up)

DESIGNED TO IMPROVE YOUR TOW PACKAGE

Towing a 5th wheel trailer, gooseneck race car trailer with a pickup truck or big rig semi truck means you are fighting the wind. STAINLESS builds a stylish wing to deflect air over the trailer and maximize fuel economy every time you tow.

Going camping? Want to get better fuel mileage towing on the way to and from your destination but just want the most economical way to save fuel? Use STAINLESS air deflectors.

TURBOWING UNIVERSAL CLIP-ON/BOLT-ON WING

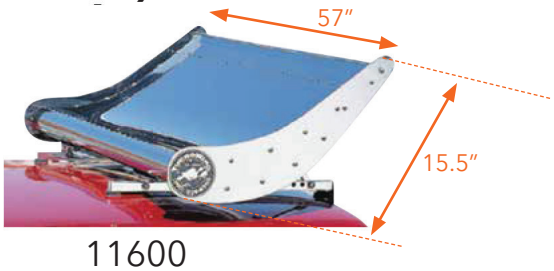

11600
DODGE, CHEVY, FORD - POWER
*SEE UNIVERSAL MOUNTING KITS

HIGH PROFILE UPGRADE KIT

11603
11600 UPGRADE KIT, MINI WING, END PLATES, BOLT KITS

APPLICATION	CAB STYLE	CLIP-ON KIT	BOLT-ON KIT
2001 - 2006 Chevy & GMC (2500-3500)	Extended w/4-door	10244	11703
2001 - 2006 Chevy & GMC (2500-3500)	Extended w/ small door	10244	11703
2001 - 2006 Chevy & GMC (2500-3500)	Crew cab	10249	11704
2007 & Newer Chevy & GMC (2500-3500)	Extended cab	17249	11703
2007 & Newer Chevy & GMC (2500-3500)	Crew cab	17249	11704
2010-2014 Chevy	Crew cab	10258	(N/A)
2015 Chevy	Crew cab	10256	(N/A)
1980 -1997 Ford	All cabs w/rain gutters	11230	CALL
1998 & Newer Ford Standard,	Extended w/4-door, Crew	10237	10601
2015 Ford 3/4 ton to 1 ton	Super Crew	10257	(N/A)
1994-2002 Dodge (1500-3500)	All cabs	10251	(N/A)
2003-2010 Dodge	All cabs	10252	11706
2013 & Newer Dodge	All cabs	10254	(N/A)

TURBOWING

AEROLIGHT 700 SERIES

- 38″ Rail
- 76″L X 26″D X 20″H
- Ideal size and function for all stand-up high-roof sleepers
- Downsized, identical design/function as the Turbowing 1.
- Conforms to industry height restrictions.
- Preset wing angle for optimum performance.
- Polished stainless bracketry.
- Polished stainless available for most standups.

900 SERIES

The Turbowing 900 Series was originally developed for the lower roof flat-top style sleepers where the height of the trailer was significantly taller than the roof of the truck. This design boasts bold, sharp looks, and works extremely well at increasing fuel mileage.

Standard 900 Series

- Weight 125 lbs.
- 76″L X 30″D X 30″H
- Wing body: mirror polished stainless
- Brackets: polished stainless steel
- Adjustment: preset per sleeper/trailer height
- Fuel mileage increase: approx. 10%
- Drag/wing resistance reduction: 30%
- For most flat-top sleepers
- Warranty: 3 year limited

TURBOWING

PETERBILT WINGS

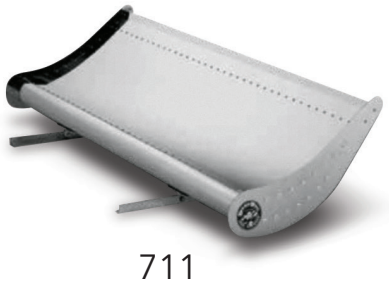

711
HIGH ROOF/STANDUP SLEEPERS

911
FLAT TOP/ C/O CABOVER

MOUNTING KITS

AEROLIGHT 700 - PETERBILT

48700
48" HR - HIGH ROOF/
STANDUP SLEEPER

63700
63"/72" HR - HIGH ROOF/
STANDUP SLEEPER

70700
70" HR - HIGH ROOF/STANDARD OR
UNIBILT SLEEPER

AEROLIGHT 900 - PETERBILT

63900
63"/72" STD FT - STANDARD
FLATTOP NON-UNIBILT

50900
48" STD FT - STANDARD
NON-UNIBILT

36900
36" STD FT - STANDARD
NON-UNIBILT

63900U
63"/72" STD FT - STANDARD
FLATTOP UNIBILT

90900
90" C/O CAB OVER

VU190021
TURBOWING BRACKET
STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS

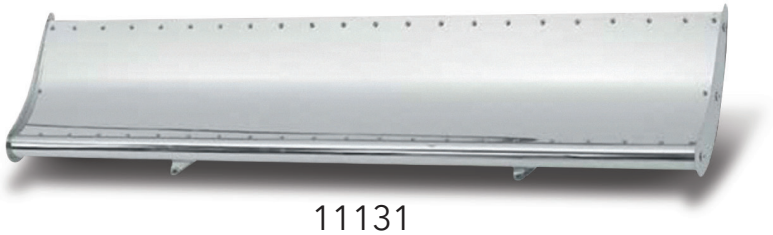

11131
HOOD WINGS - POWER STYLE -
UNIVERSAL (EXCEPT KW) 42" X 9" X 6"

TURBOWING

KENWORTH WINGS

711
ALL HIGH ROOF SLEEPERS

911
AEROCAB INTEGRAL/ STANDARD FLATTOP/ CAB OVERS

MOUNTING KITS

AEROLIGHT 700 - KENWORTH

KW700
ALL HR - HIGH ROOF SLEEPERS
60", 62", 72", 74", & 86" AERODYNE I, II, STUDIO SLEEPERS & STAND UP AEROCAB

AEROLIGHT 900 - KENWORTH

62900
62" ING - AEROCAB INTEGRAL FLATTOP

60900
60" STD FT - STANDARD FLATTOP

42900
42" STD FT - STANDARD FLATTOP

72900
72" ING - AEROCAB INTEGRAL FLATTOP

49900
50" STD FT - STANDARD FLATTOP

37900
36" STD FT - STANDARD FLATTOP

VU190021
TURBOWING BRACKET
STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS

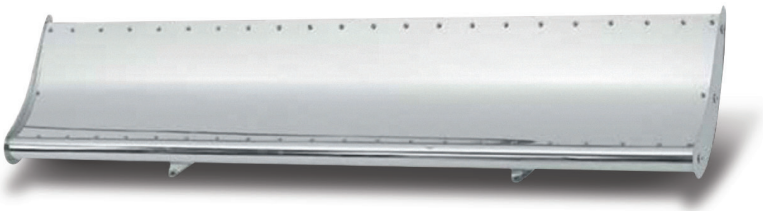

11151
HOOD WINGS POWER STYLE
42" X 9" X 3"

TURBOWING

FREIGHTLINER WINGS

711
HI-STYLE/STANDARD RAISED
ROOF/MID ROOF INTEGRAL

911
STANDARD INTEGRAL/STANDARD
FLATTOP/CAB OVER

MOUNTING KITS

AEROLIGHT 700 - FREIGHTLINER

FX711
BUSINESS CLASS FL50, FL60, FL70, FL80, FL106, FL112, M2(72") WING & BRKTS SOLD TOGETHER

56700
58" MR ING - MID ROOF INTEGRAL

69700
70" MR ING - MID ROOF INTEGRAL

TURBOWING 900 - FREIGHTLINER

70900
70" ING - STANDARD INTEGRAL
SLEEPER CAB

47900
48" ING - STANDARD INTEGRAL
SLEEPER CAB

49900
50" STD FT - STANDARD FLATTOP
SLEEPER BOX

57900
58" ING - STANDARD INTEGRAL
SLEEPER CAB

58900
60" STD FT - STANDARD FLATTOP
SLEEPER BOX

39900
40" STD FT - STANDARD FLATTOP
SLEEPER BOX

86900
86" C/O - CAB OVER

VU190021
TURBOWING BRACKET
STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS

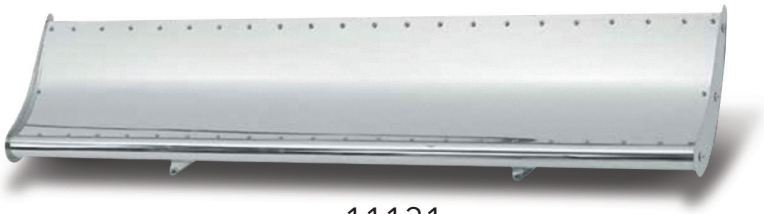

11131
HOOD WINGS - POWER STYLE -
UNIVERSAL (EXCEPT KW) 42" X 9" X 6"

TURBOWING

INTERNATIONAL WINGS

711
HIGH ROOF/STANDUP SLEEP-
ERS

911
FLAT TOP/ C/O CABOVER

MOUNTING KITS

51700
51" H/R - HI-RISE INTEGRAL
PRO SLEEPER

72700
72" H/R - HI-RISE INTEGRAL
PRO SLEEPER

TURBOWING 900 - INTERNATIONAL

73900
72" ING - LO-ROOF INTEGRAL
PRO SLEEPER

59900
60" STD FT -
STANDARD FLATTOP

41900
42" STD FT -
STANDARD FLATTOP

51900
51" ING - LO-ROOF
INTEGRAL PRO SLEEPER

48900
48" STD FT -
STANDARD FLATTOP

86900
86" C/O - CAB OVER

10900
110" C/O - CAB OVER

HOOD WINGS

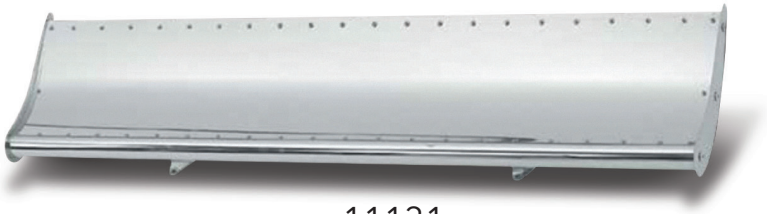

11131
HOOD WINGS - POWER STYLE - UNI-
VERSAL (EXCEPT KW) 42" X 9" X 6"

TURBOWING

WESTERN STAR WINGS

AEROLIGHT 700 - WESTERN STAR

WESTERN STAR WINGS HAVE DIFFERENT C-C DIM. 60" SOLID WING & MOUNTING

WC711

70" CONST - CONSTELLATION SERIES

VU190021

TURBOWING BRACKET
STAND-UP SLEEPERS (PB, KW, FL)

HOOD WINGS

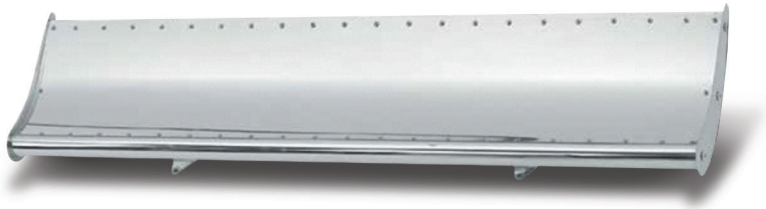

11131

HOOD WINGS - POWER STYLE -
UNIVERSAL (EXCEPT KW) 42" X 9" X 6"

VALLEY CHROME PLATING

TURBOWING

PRO TAIL WINGS

VU194000
PRO TAIL 72" X 18" HIGH ROOF FLAT TOPS ONLY

VU194001
PRO TAIL 70" X 11" HIGH ROOF FLAT TOPS ONLY

VU194002
PRO TAIL 70" X 19" - WING VERSION FLAT TOPS ONLY

WARRANTY & RETURNS

Thank you for choosing Valley Chrome bumpers and STAINLESS, a division of Valley Chrome Plating, Inc., as your source for chrome and stainless steel custom truck accessories. Our family of products is fully guaranteed for fit, appearance and quality. Our mission is to provide you with the finest products at a fair price. Our reputation has been built in the trucking industry on our commitment to you, the trucking industry professional.

LIMITED WARRANTY

STAINLESS extends a warranty against defects in material and workmanship for a period of one year. LED light assemblies come with a three year limited warranty. This warranty is void by damage or defects in appearance due to accident, abuse, alterations to the product, improper installation, corrosive environments or any other abnormal conditions. This warranty applies only to the original purchaser of the product and covers only the defective part, whether it is a single item or component part of a purchased group. The warranty year begins upon purchase of the product by the end user. All requests for warranty must include the original invoice. Serial numbers must be provided for bumpers, wings and any other serialized parts. There is no warranty for setback axle bumpers ("break-backs") 20" and wider. Flat bumpers 20" and wider may require additional brackets and bracing (not included) to avoid cracking, and may not be warranted if our company determines the bracing is insufficient.

RETURN POLICY

Products must be returned to our Clovis, Ca. facility with a Returned Goods Authorization number, freight prepaid. Items sent without an R.G.A. number or freight collect will be refused. STAINLESS reserves the right to repair or replace the item at our discretion. Warranted items will be returned freight prepaid upon acceptance of our responsibility of the defect. Please contact our customer service staff for the R.G.A. number. Items may not be returnable due to age or stored condition, which is at our company's discretion.

FREIGHT POLICY

All freight is F.O.B. from our Clovis, Ca. facility unless prepaid conditions are met.

Dealers/Distributors: see your published price list for the freight policy that applies to you. Bumpers, Turbowings, battery boxes and tool boxes can be combined to achieve prepaid status.

Accessories may be combined with bumper and/or wing orders at our discretion.

IMAGES IN THIS CATALOG

The images shown in this catalog are best representations of our products, however, they are representative only and may sometimes not match actual product. Add-on items shown in images, such as external tow apparatus, fog lamps and other non-Valley Chrome/STAINLESS items attached to bumpers and accessories are not included in the product offered.

UPDATED INFORMATION

Information in this catalog, when printed by our company, is made as accurate as possible at the time of printing. For the most current information, including error corrections, see the most current catalog posted on our website. Because of the truck and automotive industry's aftermarket publishing inconsistencies, some model years and vehicle models indicated in this publication may vary slightly from the actual model. Obtain product drawings and photos from our customer service staff to verify product fit prior to ordering.

VALLEY CHROME TRUCK PARTS

Call for a Dealer Near You 1.800.354.0976

www.valleychrome.com • 1028 HOBLITT AVE. • CLOVIS, CA 93612 • USA

Bumpers & STAINLESS
Stainless Accessories are...

FOLLOW US

MADE IN THE USA